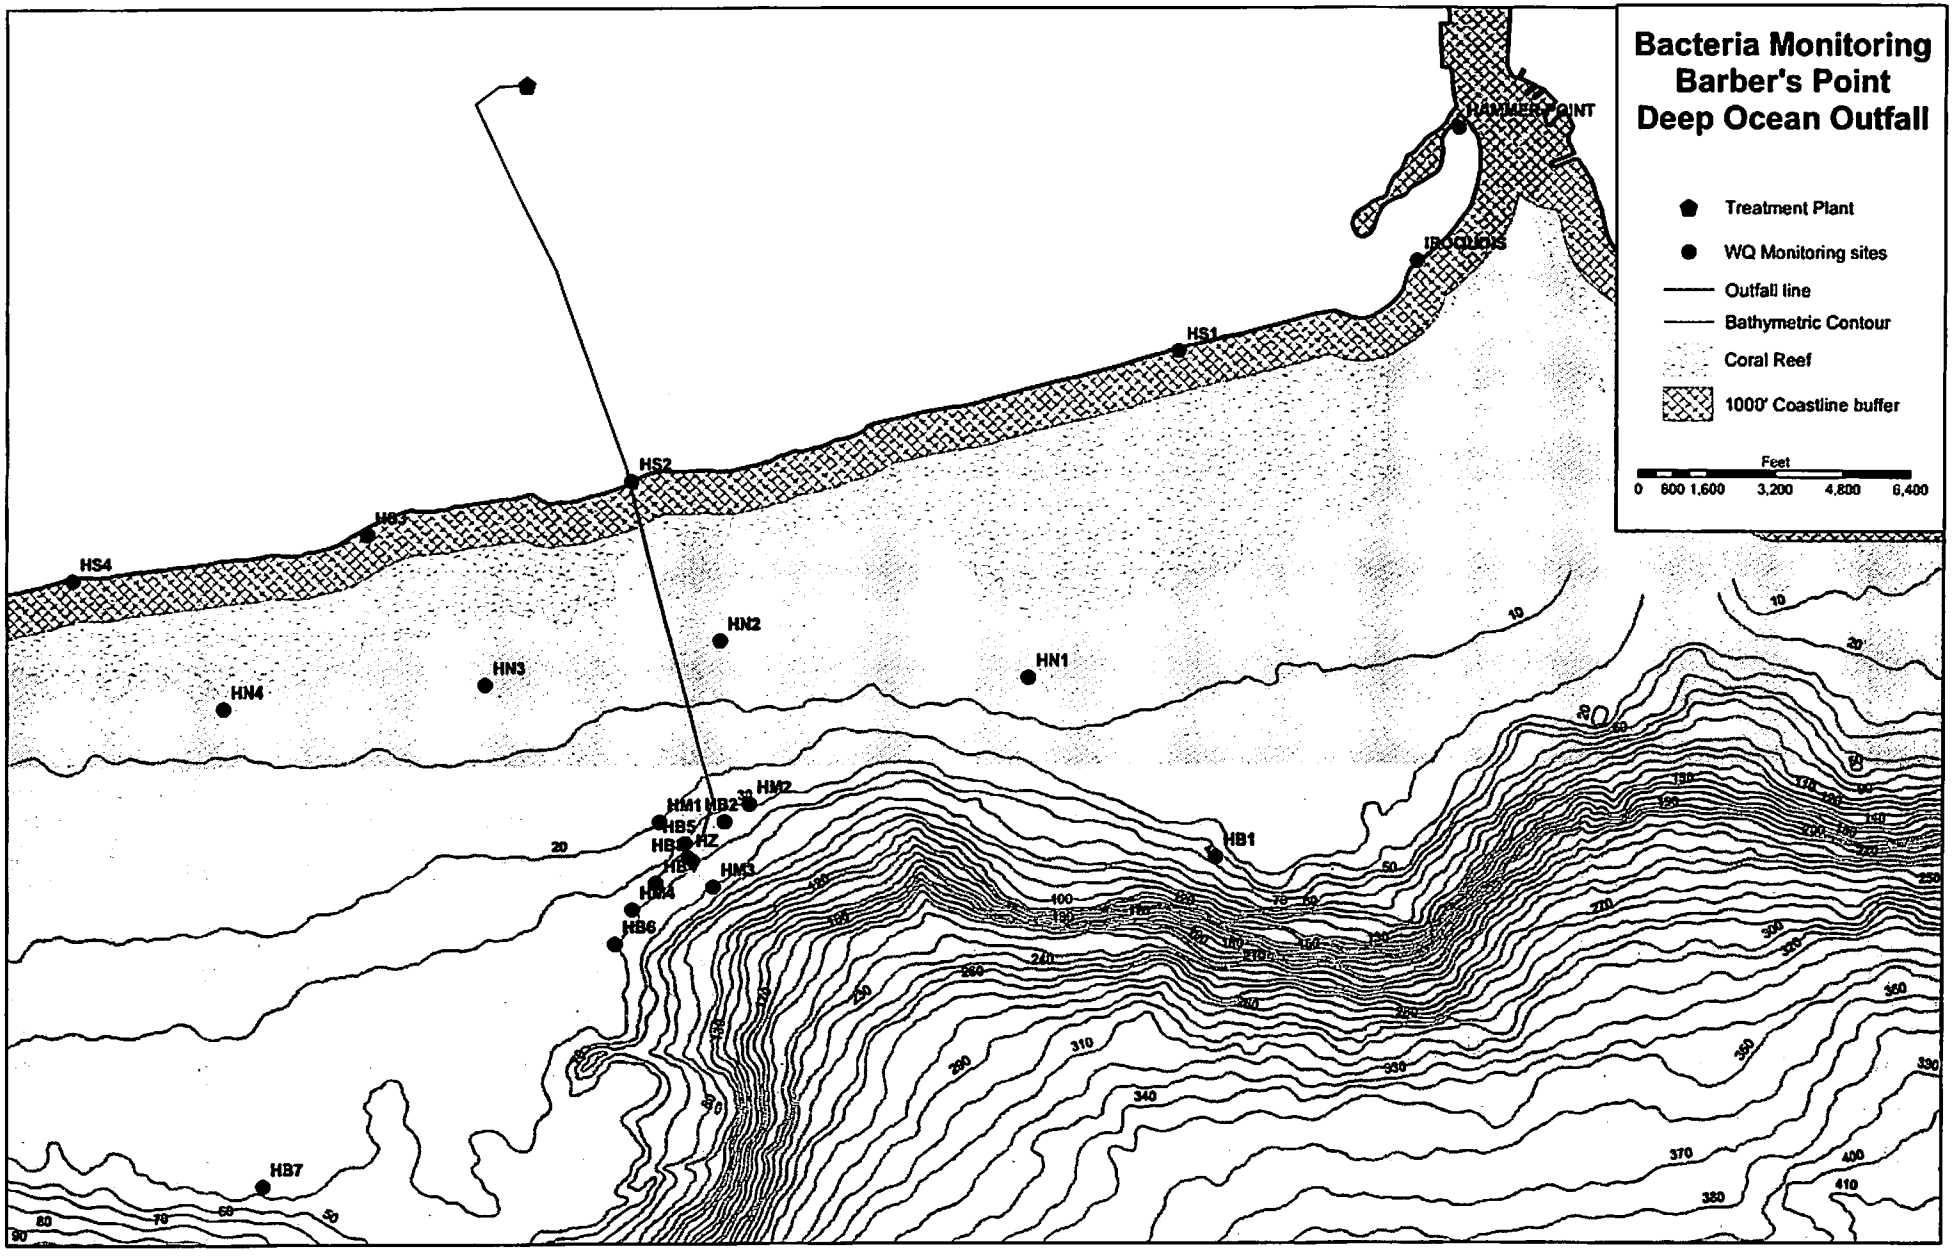
Bacteria Monitoring
Barber's Point
Deep Ocean Outfall
Treatment Plant
WQ Monitoring sites
Outfall line
Bathymetric Contour
Coral Reef
1000' Coastline buffer
Feet
0 800 1,600 3,200 4,800 6,400
HAMMER POINT
IROQUOIS
HS1
HS2
HS3
HS4
HN1
HN2
HN3
HN4
HM1
HM2
HM3
HM4
HB1
HB2
HB5
HB6
HB7
HZ