




GOODWIN & BROMS, INC.

CONSULTING ENVIRONMENTAL ENGINEERS

400 BRUNS LANE
SPRINGFIELD, ILLINOIS 62702-4617

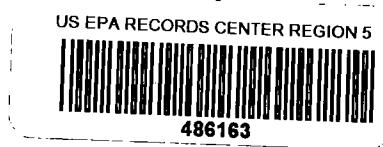

TELEPHONE (217) 698-0222
FAX (217) 698-0422

August 12, 1998
CERTIFIED MAIL

Mr. Richard Johnson, Assistant Regional Manager
Ms. Karen Nelson, Regional Geologist
Mr. John Wells, Environmental Protection Engineer
Illinois Environmental Protection Agency
4500 South Sixth Street
Springfield, IL 62703

L.K.

AUG 20 1998

RE: Eagle Zinc Company
218 Industrial Drive
Hillsboro, Illinois

Dear Mr. Johnson, Ms. Nelson, and Mr. Wells:

This letter is in response to Ms. Nelson's June 4, 1998 memo regarding the "Monitoring Well Installation and Sampling Plan" for the Eagle Zinc property. Ms. Nelson's comments were provided to us by James Richardson of the IEPA in a letter dated July 9, 1998. The following are GBI's responses. The item numbers correlate to Ms. Nelson's comments.

1. The Agency states more than five monitoring wells are required to adequately determine direction of ground water flow and for adequate chemical monitoring. The IEPA requested five more monitoring wells be installed in this phase of the work, resulting in a total of ten wells. The locations of the wells recommended by the IEPA are shown in the attached Figure 1.

GBI acknowledges IEPA's concerns that five wells cannot adequately determine the direction of ground water flow at a site of this size. Based on the size of this site and its topography, ground water flow direction is suspected to be variable locally. A high ground water table is also expected to be present, therefore, it may not be possible to place the monitoring well screens so that they intercept the ground water table surface. As a result, accurate elevation measurements of the ground water table surface may not be able to be taken in all the wells. The primary objective of the work plan was to monitor the chemical concentrations in ground water at areas that are downgradient from the residue and where ground water is expected to be flowing offsite. Emphasis was given to the south side of the property because of the vicinity to the residue, and based on topography and site observations, ground water near the residue is expected to be flowing offsite to the south in this area.

Based on descriptions in Ms. Nelson's June 4, 1998 memo, the locations of the monitoring wells IEPA recommended are shown on the attached Figure 1. As recommended by the IEPA, Eagle

Zinc agrees to install a monitoring well (identified on Figure 1 as monitoring well A) southwest of the intermittent stream between monitoring wells MW1 and MW2. This well will not be a replacement for the alternate upgradient well location to MW1 (in the northeast corner of the site) proposed in the work plan, as is suggested in the IEPA's letter. Eagle Zinc also agrees to install the monitoring well (monitoring well B on Figure 1) that IEPA recommended on the south side of the property east of MW4 on Figure 1.

We consider that at this time, three additional monitoring wells recommended by the IEPA on the west side of the property are unlikely to lead to significant additional information. The IEPA stated: "If the ground water flows northeast, many of the units where hazardous samples were collected in Areas 3 and 4 could go largely unmonitored with the current well configuration. The areas west of Areas 3 and 4 must also be monitored." A topographic low runs from the southwest corner of the property (at the pond) toward the northeast to about the center of the property. This is clearly evident on the topographic map and can also be seen on aerial photographs. An intermittent drainage way in this topographic low is also visible onsite. Based on the topography, the monitoring wells (monitoring wells C and D on Figure 1) the IEPA recommended along the west side of the property are upgradient to the site and Areas 3 and 4 (see Figure 2). The topography suggests ground water near Areas 3 and 4 would flow to the surface pond at the southwest corner of the site. The monitoring well (monitoring well E on Figure 1) the IEPA recommended west of MW1 is also in an upgradient location. Therefore, the three additional wells the IEPA recommended to be installed along the west side of the property would result in four upgradient monitoring wells, which is excessive. Eagle Zinc agrees to install one monitoring well along the west side of the property boundary in an area east of the end of Brailey Street. The proposed wells will not be installed in swampy or boggy areas (See Figure 3). These are not preferred locations and access and drilling in these types of environments would be problematic for the drill rig. As the IEPA indicated in a later point in Item 19, the plan is a preliminary step. If soil or ground water results from the eight monitoring wells (as proposed in this modified plan and as shown in Figure 3) indicate additional monitoring wells are required, their locations and numbers will be discussed.

2. The IEPA "Cross-section of a Typical Monitoring Well" will be considered for the well construction. In addition to the well construction details that are discussed in the work plan, this will include the use of vented caps and a maximum of 6 inches of very fine sand above the sand pack. Well completion reports for the monitoring wells will also be completed. A typical GBI well completion report is attached.

3. The concrete surface seals will be sloped away from the casing to allow for the drainage of surface water away from the wells.

4. The monitoring wells will be named using the four digit code the IEPA requested. Monitoring well MW1 will be named G101, monitoring well MW2 will be named G102, and so on.

5. Pre-hydrated bentonite will be used in the unsaturated zone.

6. GBI proposed a minimum of a 1 foot bentonite seal for the construction of the monitoring wells because a high ground water table is suspected. A one-foot seal would allow an additional foot for the placement of the well screen to intercept the ground water table surface. If the Agency prefers,

two feet of bentonite seal will be used. However, if the ground water surface in a well is less than approximately 4 ½ feet below ground surface (allowing for 2 feet bentonite, 1 foot sand pack, ½ foot fine sand, and 1 foot cement seal), the true elevation of the ground water table will not be able to be measured.

7. The monitoring wells will not be developed until a minimum of 48 hours after the monitoring well installation work has been completed.

8. All monitoring wells will be fitted with a vented cap.

9. The drummed water produced from developing and purging the monitoring wells will be blended with feedstock material which is used by Eagle Zinc in their zinc oxide production process. The feedstock material has an acceptable moisture range of 5% to 10%, and the water will be easily absorbed into the feedstock material at those levels.

10. Based on past and current land use and practices, there is no reason to believe the organic or all of the inorganic parameters listed in 35 Ill. Admin. Code 620 are present. Rather than sample for those compounds which are not expected to be found, we propose to expand the list of parameters originally proposed (from cadmium, zinc, and lead) to include the toxicity characteristic RCRA metals (arsenic, barium, cadmium, chromium, lead, mercury, selenium, and silver) plus zinc, sulfates, TDS, and pH. In review of your comment and based on past data, we consider this expanded list to be appropriate for the site.

11. The monitoring wells will be purged slowly and not to dryness.

12. USEPA Method 200.8 for dissolved elements specifies samples are to be filtered in the field or as soon thereafter as practically possible. Because of the proximity of the site to GBI offices and the laboratory, the samples can be delivered to the laboratory for filtration and the filtrate acid preserved within 24 hours of sample collection. Filtering and acidifying the samples within a controlled laboratory setting will avoid hazards of transport of acid and use of strong acids in the field, and will provide better control and data than field methods. This methodology is consistent with Sample Collection, Preservation, and Storage described in Method 200.8.

13. The ground water samples will be placed in a cooler with ice or a blue-ice pack immediately upon collection for preservation of the samples to 4°C. If the samples are not able to be delivered to the laboratory at the end of the sampling day, the samples will be transferred to a refrigerator, and returned to a cooler with ice or blue-ice when delivered to the laboratory.

14. The analytical method USEPA Method 200.8 proposed in the plan is an SW-846 method (Method 6020). Prairie Analytical Systems has described this as the best method for the analysis of metals. It uses an inductively coupled plasma mass spectrometer for elemental analysis, has low reporting levels, and allows for speciation of isotopes. A copy of Method 6020 from SW-846 is provided, and a copy of the USEPA manual for the method is also provided (without pages 32 through 57 which consist of various tables). The analytical method and the Practical Quantitation Limits for the parameters to be analyzed are also provided in an attached list.


15. Decontamination of the drilling equipment will occur on a concrete pad located near the zinc oxide operations near the center of the plant. This concrete pad is used to store feedstock for the zinc oxide production. The pad is approximately 70 x 100 feet, and is surrounded by a concrete wall except for two cut-out areas that provide for vehicle drive through. The cuttings and water will be recycled as described above in Item 9.
16. Ground water at the site is presently considered to be Class II, based on our current understanding of the regulations and ground water conditions. Because the defining criteria to distinguish between Class I and Class II are ground water depth and yield, we will measure depth to ground water and conduct permeameter or slug tests, in accordance with 35 IAC 620.210, to confirm classification of groundwater.
17. The Illinois State Geological Survey and The Illinois State Water Survey will be contacted to determine the presence and locations of any private wells within 200 feet of the site, to determine if there are any setback zones near the site.
18. The ground water analytical data will be compared to both Class I and Class II groundwater standards. A report will be prepared and provided to the IEPA. The report will describe the procedures and methodologies of the work, summarize the soil and ground water analytical results in tabular format, provide the ground water elevation measurements, and provide a discussion of the data and any conclusions or recommendations that can be made.
19. We agree that the purpose of the plan was for the installation of monitoring wells and evaluation of ground water and it was not meant to address further actions. When the results are known, appropriate actions will be proposed.
20. The IEPA's Springfield Region will be notified at least two weeks in advance of any drilling, monitoring well installation, or ground water sampling. Because the IEPA did not have any comments on the residue portion of the work plan (Section 4.0), that work will proceed as proposed. As modified, GBI expects the monitoring wells installation work will require two days, the residue sampling will take one day, and ground water sampling will take one day.

Cordially,
GOODWIN & BROMS, INC.

Nancy E. Mackiewicz, P.G.
Project Manager

NEM:mp
Attachments

cc: Trish Diamond
Lois Kimbol
Joe Freudenberg
Tom Youngless
Chris Zeman

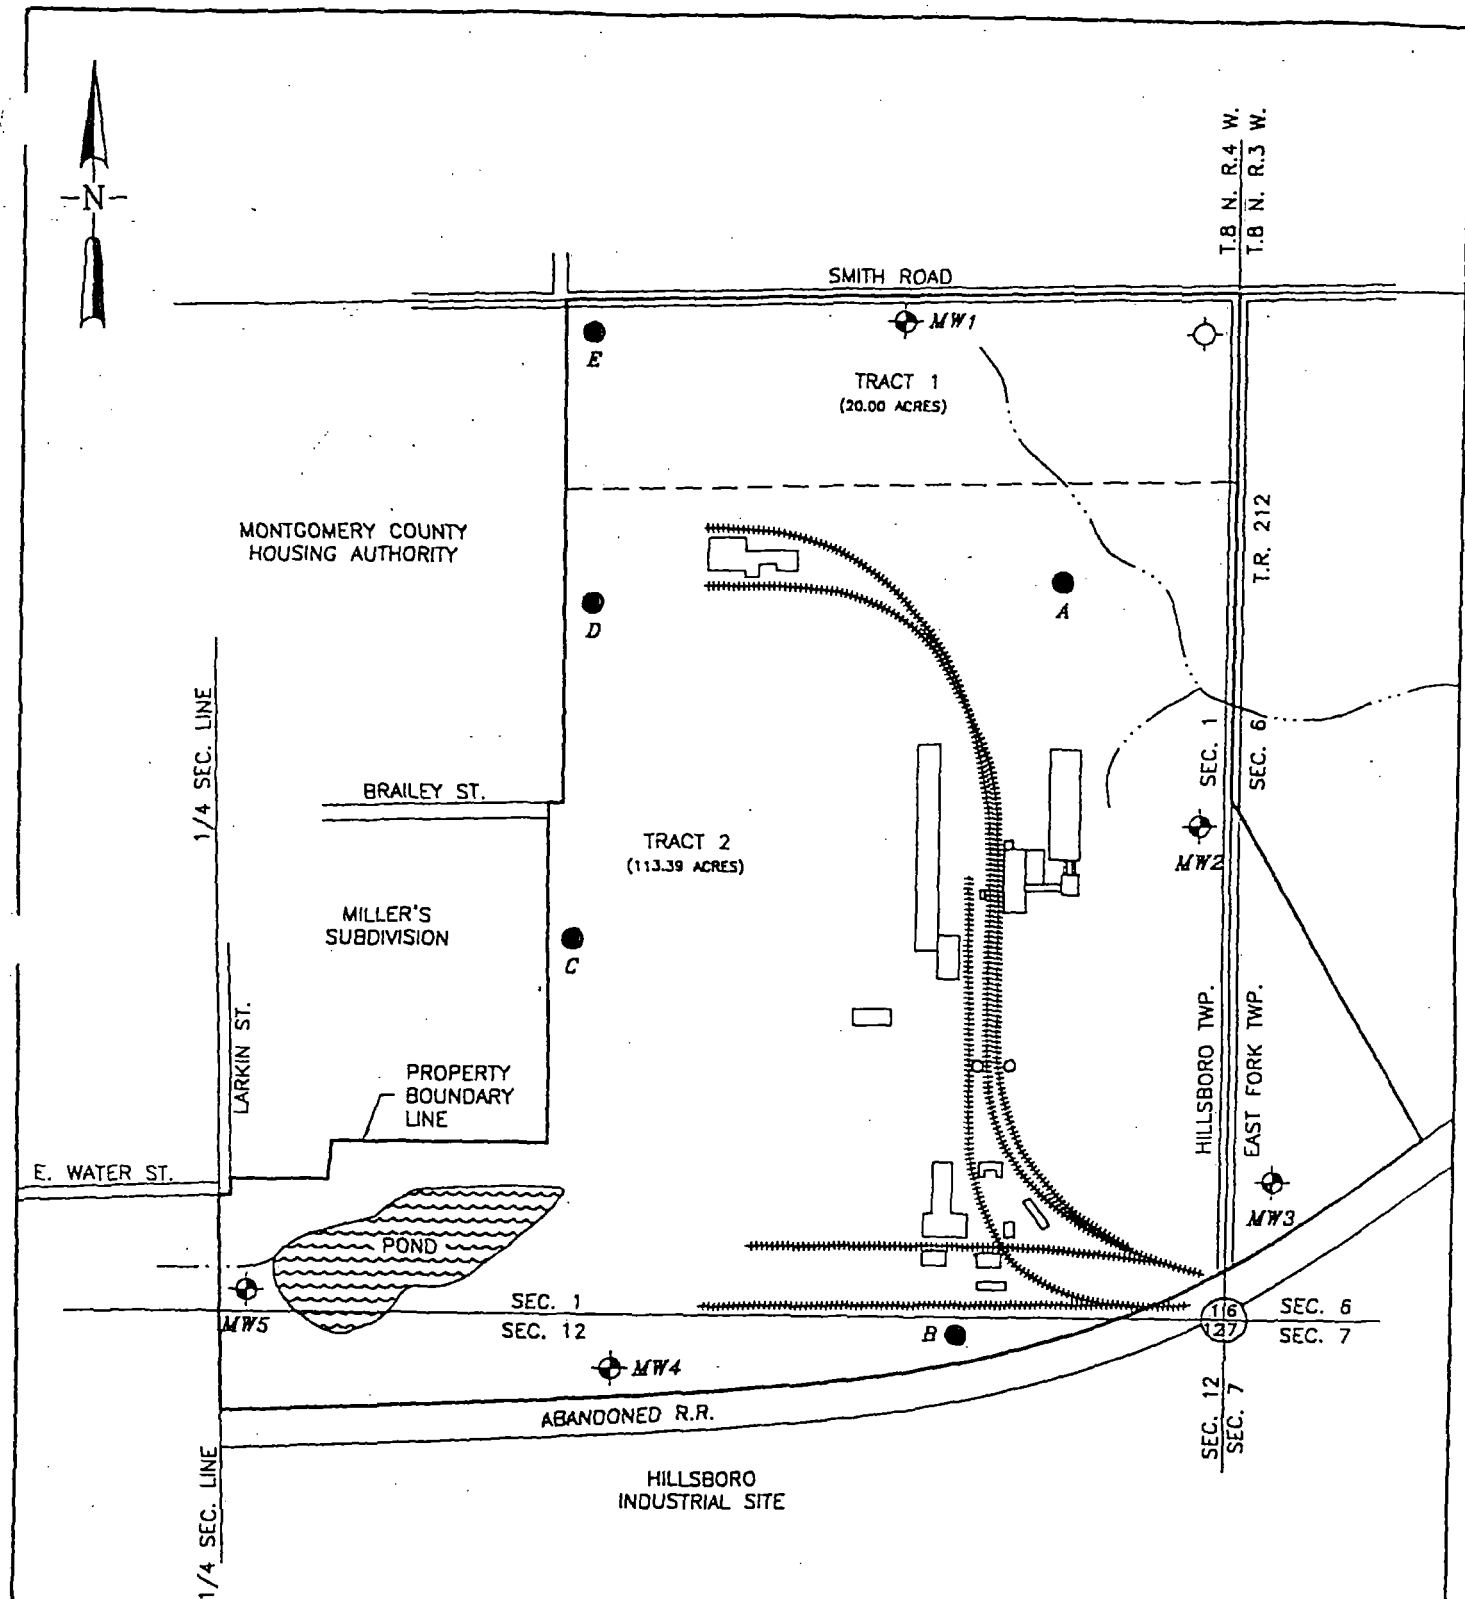

LEGEND

- ⊗ PROPOSED MONITORING WELL LOCATION
- ⊙ ALTERNATE LOCATION FOR MW1
- IEPA RECOMMENDED WELL LOCATION

500 0 500
SCALE IN FEET

SITE PLAN IS BASED ON A PLAT PROVIDED BY
HURST-ROSCHE ENGINEERS, INC.


FIGURE 1: SITE MAP SHOWING IEPA
PROPOSED MONITORING WELL LOCATIONS


DRAWN BY: BAE DATE: 5/21/98 REVISED: REVISED:

EAGLE ZINC / HILLSBORO, ILLINOIS

GOODWIN & BROMS, INC.
CONSULTING ENVIRONMENTAL ENGINEERS

DRAWING NUMBER
97-246

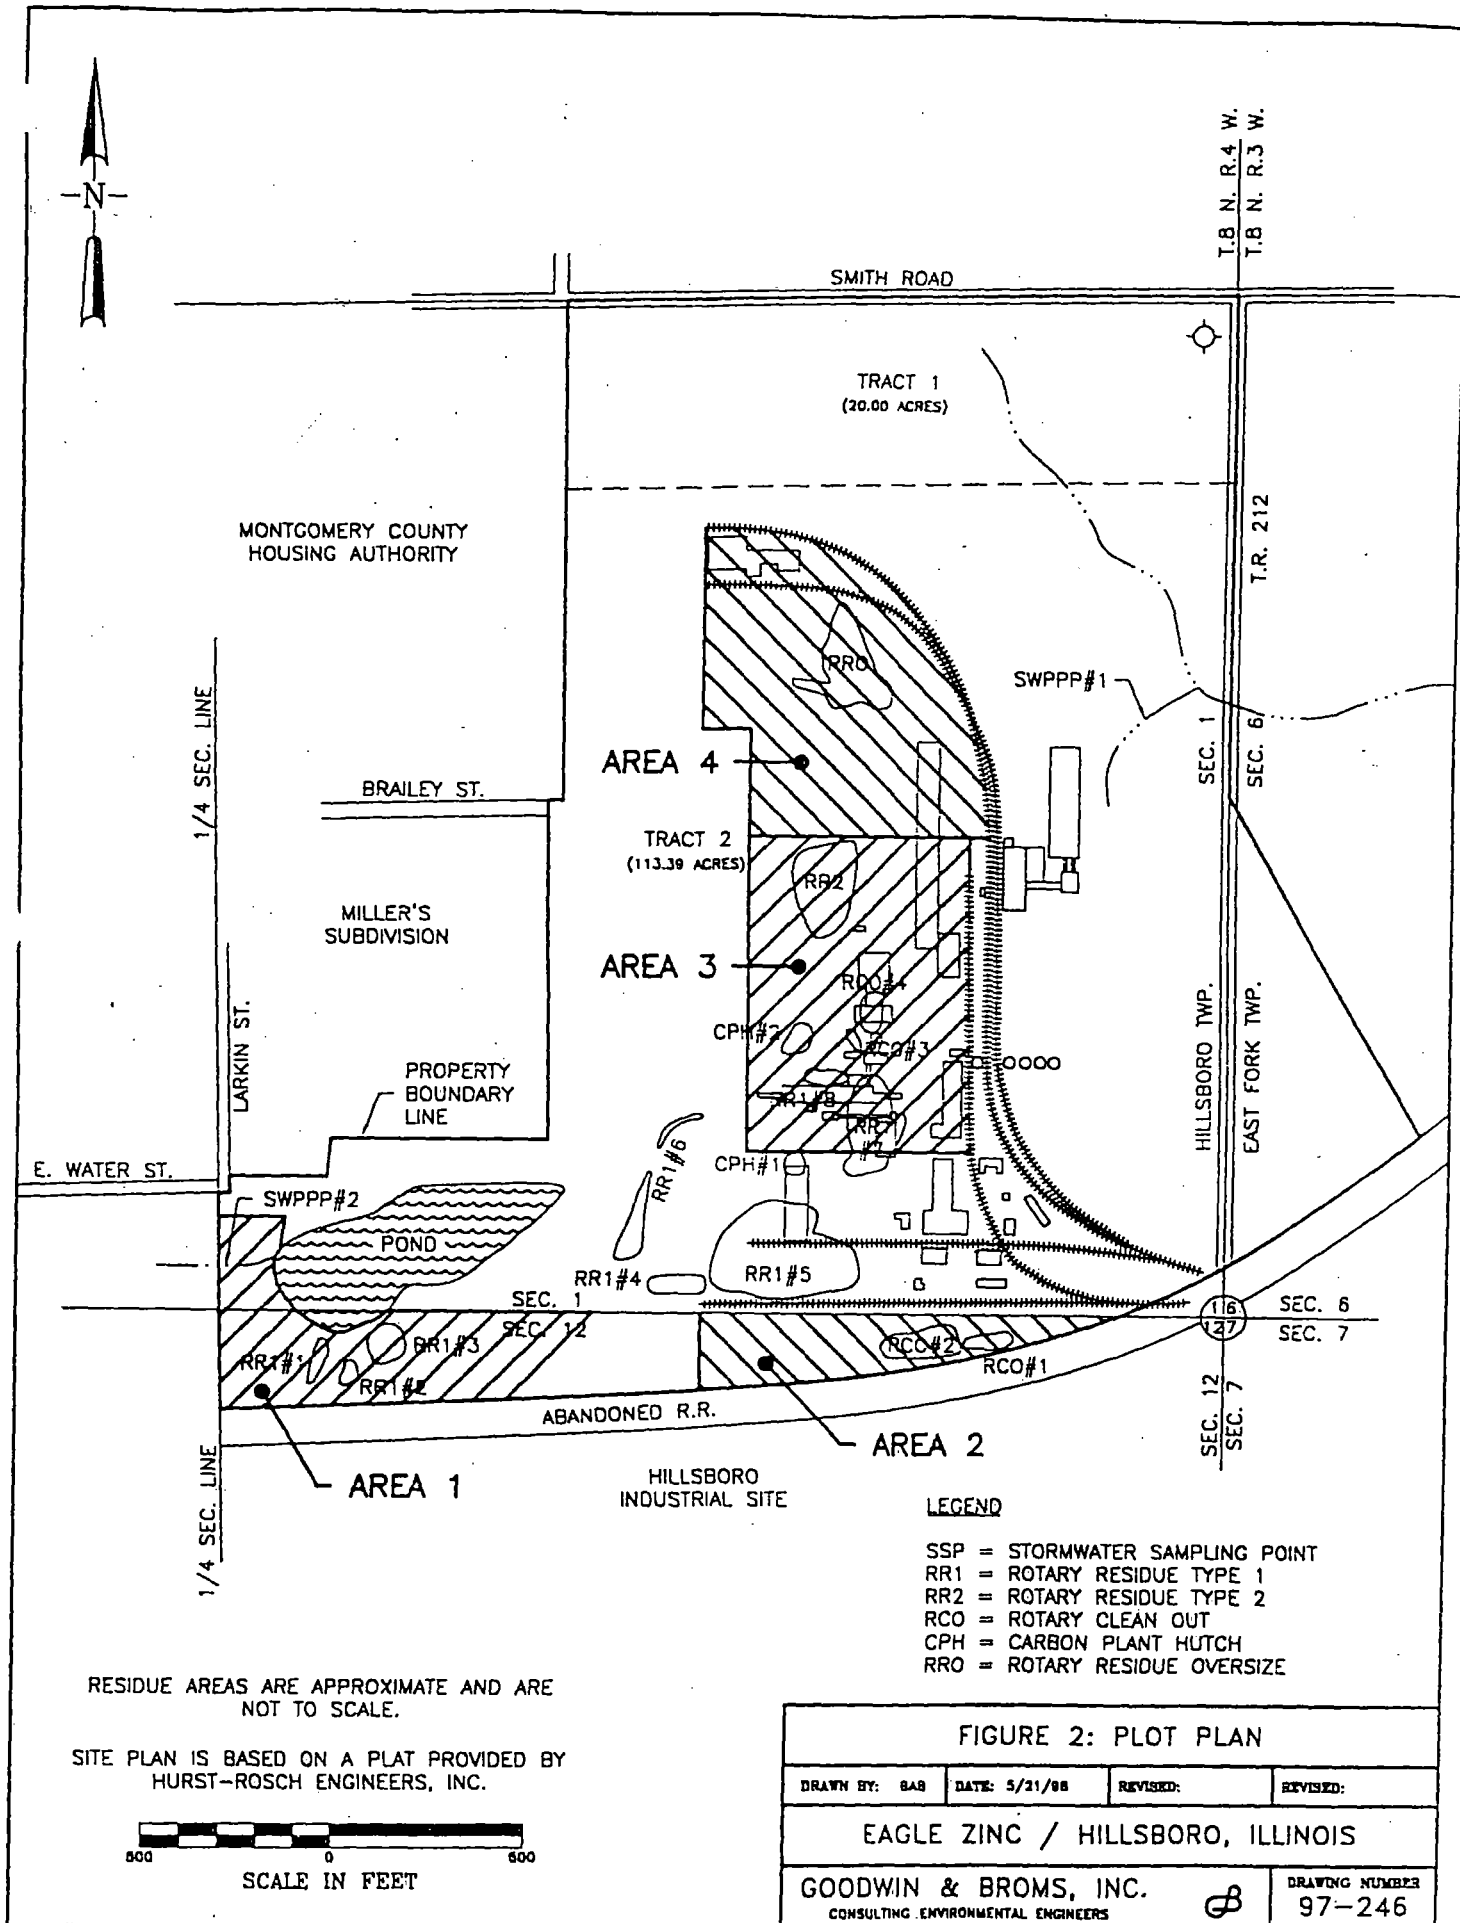

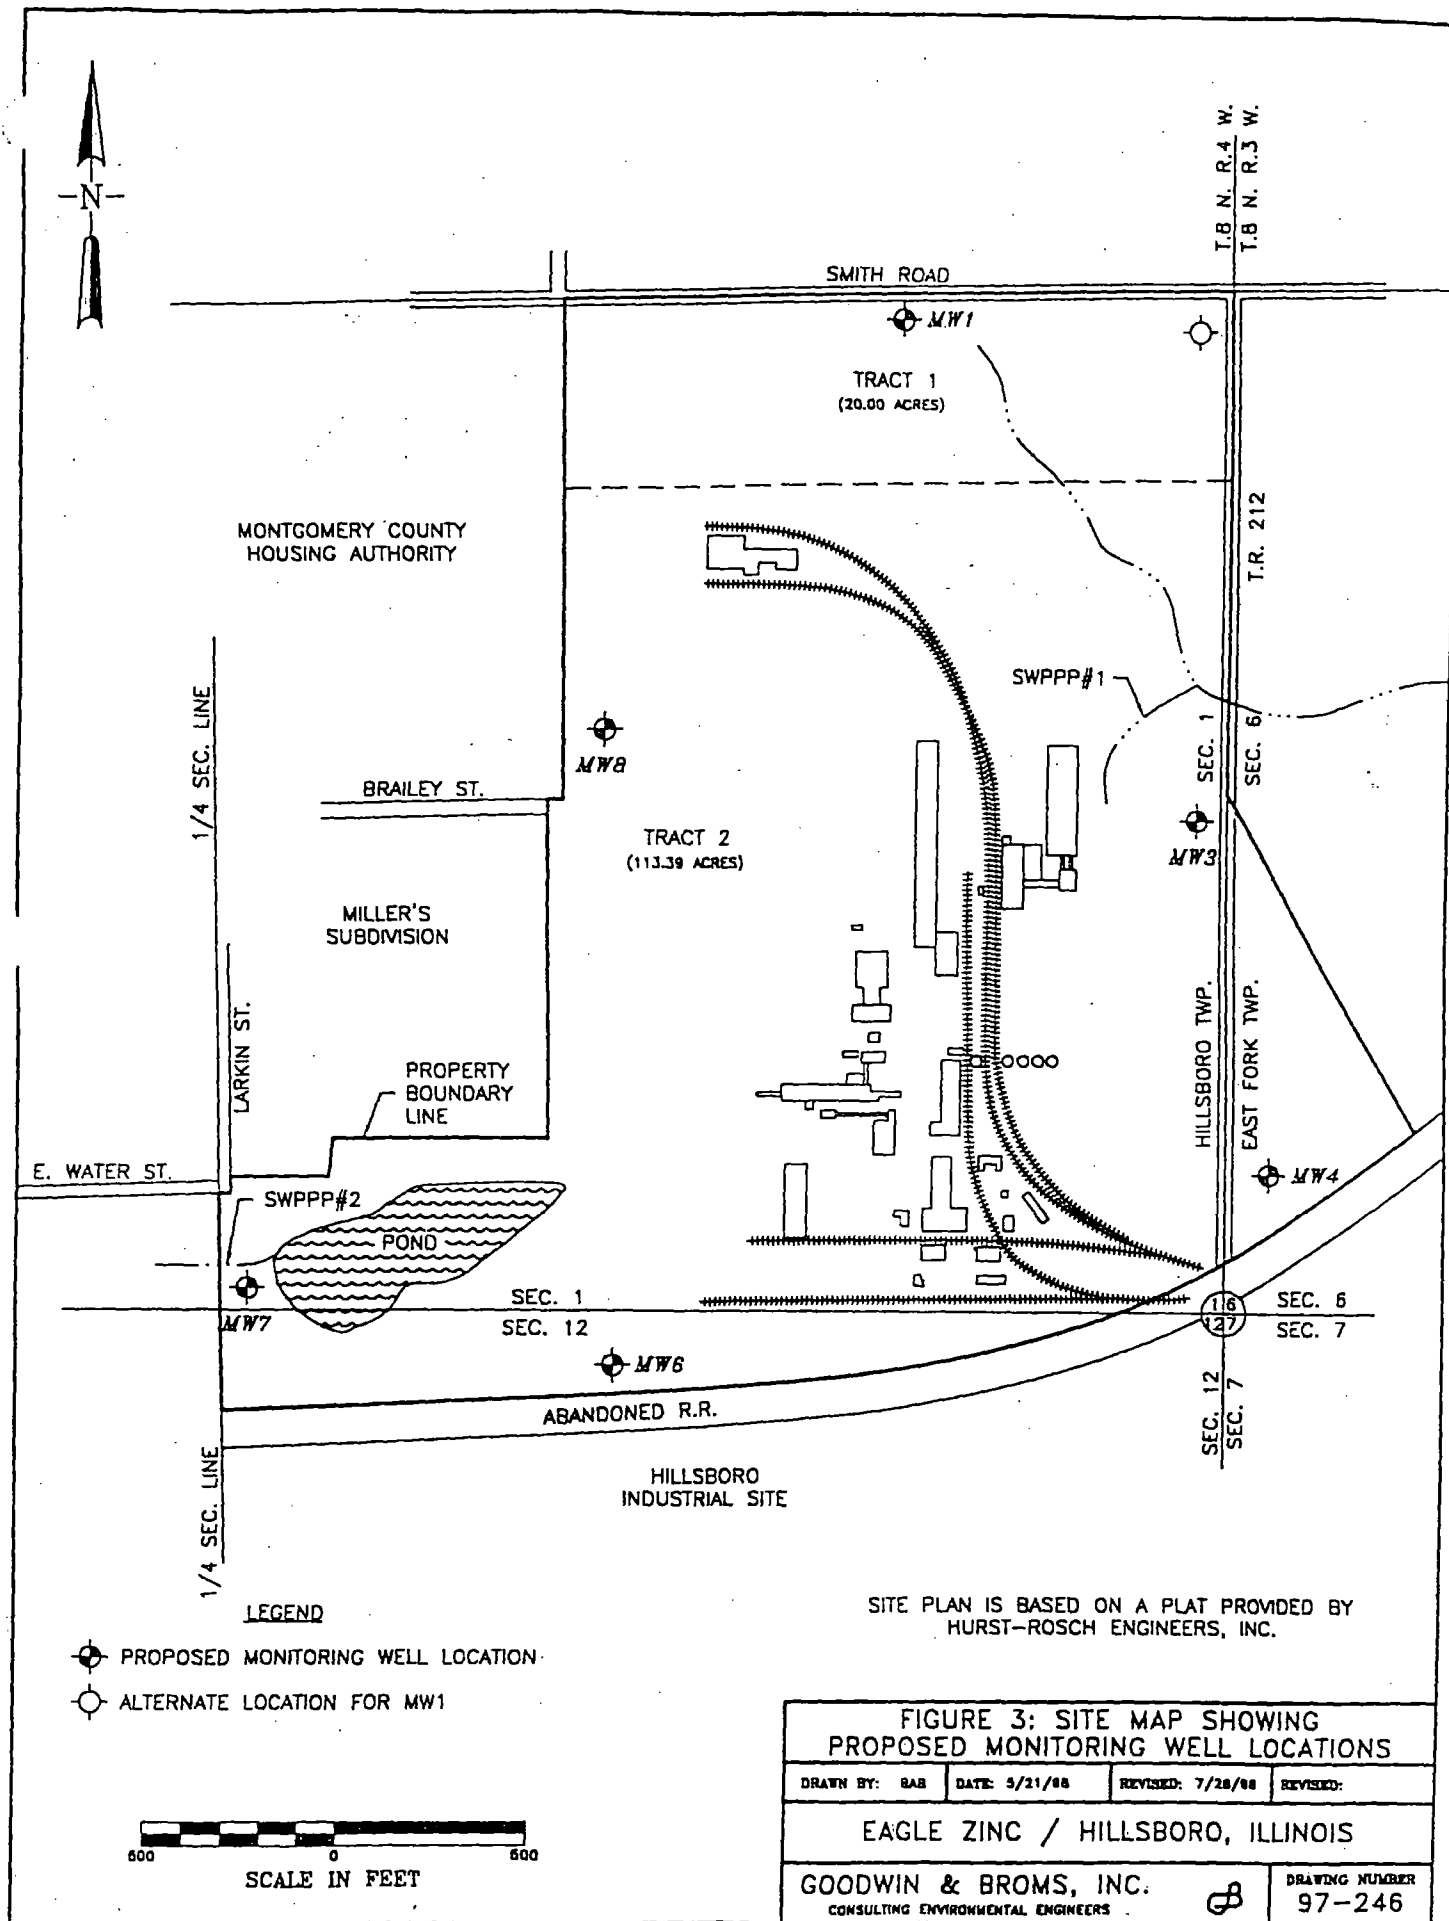

GBI Well Completion Report

Well No: **G101**
Borehole No: *None*

Site Name: _____
Site Address: _____
Site LPC No.: _____

Drilling Contractor: _____
Driller: _____
Drilling Method: _____
Sampling Method: _____

Date Completed: _____
Geologist: _____
Technician: _____
Surveyed by: _____

Annular Space Details

Type of Surface Seal: _____
Type of Annular Sealant: _____
No of bags: _____ lbs per bag: _____
Installation Method: _____
Type of Bentonite Seal: _____
No of bags: _____ lbs per bag: _____
Installation Method: _____
Type of Sand Pack: _____
No of bags: _____ lbs per bag: _____
Installation Method: _____
Grain size: _____

Elevations (AMSL) Depths (BGS) (to 0.01 feet)



_____ Top of Protective Casing
_____ Top of Riser
_____ Ground Surface
_____ Top of Annular Seal
_____ Top of Bentonite Seal
_____ Top of Sand
_____ Top of Screen
_____ Ground water
_____ Bottom of Screen
_____ Bottom of Borehole

Well Construction Materials	Stainless Steel	PVC	Other
Protective casing			
Riser pipe			
Screen			
Coupling joint			

Measurements (to 0.01 feet)

Riser pipe length	ft.
Screen/Riser diameter	in.
Screen length (first to last slot)	ft.
Screen slot size	in.
Total casing length	in.
Ground Water Measurement Date	
Depth to ground water	ft.

**Method of Analysis, Practical Quantitation Limit (PQL), and Regulatory Level
for Inorganic Parameters to be Analyzed**

Inorganic Parameter	Method	PQL (in mg/L)	Regulatory Level (in mg/L)
Arsenic	200.8	0.001	5.0
Barium	200.8	0.001	100.0
Cadmium	200.8	0.001	1.0
Chromium	200.8	0.001	5.0
Lead	200.8	0.001	5.0
Mercury	200.8	0.0001	0.2
Selenium	200.8	0.001	1.0
Silver	200.80	0.001	5.0
Sulfate ¹	SM4110	0.10	400
Total Dissolved Solids (TDS) ²	SM2540C	1.0	1,200
Zinc ¹	200.8	0.001	10

¹ 35 IAC 742: Appendix B. Table E. Tier 1 Groundwater Remediation Objectives for the Groundwater Component of the Groundwater Ingestion Route, Class II Groundwater.

² 35 IAC 620.420: Groundwater Quality Standards for Class II: General Resource Groundwater.

METHOD 6020

INDUCTIVELY COUPLED PLASMA - MASS SPECTROMETRY

1.0 SCOPE AND APPLICATION

1.1 Inductively coupled plasma-mass spectrometry (ICP-MS) is applicable to the determination of sub- $\mu\text{g/L}$ concentrations of a large number of elements in water samples and in waste extracts or digests [1.2]. When dissolved constituents are required, samples must be filtered and acid-preserved prior to analysis. No digestion is required prior to analysis for dissolved elements in water samples. Acid digestion prior to filtration and analysis is required for groundwater, aqueous samples, industrial wastes, soils, sludges, sediments, and other solid wastes for which total (acid-leachable) elements are required.

1.2 ICP-MS has been applied to the determination of over 60 elements in various matrices. Analytes for which EPA has demonstrated the acceptability of Method 6020 in a multi-laboratory study on solid wastes are listed in Table 1. Acceptability of the method for an element was based upon the multi-laboratory performance compared with that of either furnace atomic absorption spectroscopy or inductively coupled plasma-atomic emission spectroscopy. It should be noted that the multi-laboratory study was conducted in 1986. Multi-laboratory performance data for the listed elements (and others) are provided in Section 9. Instrument detection limits, sensitivities, and linear ranges will vary with the matrices, instrumentation, and operating conditions. In relatively simple matrices, detection limits will generally be below $0.02 \mu\text{g/L}$.

1.3 If Method 6020 is used to determine any analyte not listed in Table 1, it is the responsibility of the analyst to demonstrate the accuracy and precision of the Method in the waste to be analyzed. The analyst is always required to monitor potential sources of interferences and take appropriate action to ensure data of known quality (see Section 8.4).

1.4 Use of this method is restricted to spectroscopists who are knowledgeable in the recognition and in the correction of spectral, chemical, and physical interferences in ICP-MS.

1.5 An appropriate internal standard is required for each analyte determined by ICP-MS. Recommended internal standards are ^6Li , ^{45}Sc , ^{89}Y , ^{103}Rh , ^{115}In , ^{159}Tb , ^{163}Ho , and ^{209}Bi . The lithium internal standard should have an enriched abundance of ^6Li , so that interference from lithium native to the sample is minimized. Other elements may need to be used as internal standards when samples contain significant amounts of the recommended internal standards.

2.0 SUMMARY OF METHOD

2.1 Prior to analysis, samples which require total ("acid-leachable") values must be digested using appropriate sample preparation methods (such as Methods 3005 - 3051).

2.2 Method 6020 describes the multi-elemental determination of analytes by ICP-MS. The method measures ions produced by a radio-frequency inductively coupled plasma. Analyte species originating in a liquid are nebulized and the resulting aerosol transported by argon gas into the plasma torch. The ions produced are entrained in the plasma gas and introduced, by means of an interface, into a mass spectrometer. The ions produced in the plasma are sorted according to their mass-to-charge ratios and quantified with a channel electron multiplier. Interferences must be assessed and valid corrections applied or the data flagged to indicate problems. Interference correction must include compensation for background ions contributed by the plasma gas, reagents, and constituents of the sample matrix.

3.0 INTERFERENCES

3.1 Isobaric elemental interferences in ICP-MS are caused by isotopes of different elements forming atomic ions with the same nominal mass-to-charge ratio (m/z). A data system must be used to correct for these interferences. This involves determining the signal for another isotope of the interfering element and subtracting the appropriate signal from the analyte isotope signal. Since commercial ICP-MS instruments nominally provide unit resolution at 10% of the peak height, very high ion currents at adjacent masses can also contribute to ion signals at the mass of interest. Although this type of interference is uncommon, it is not easily corrected, and samples exhibiting a significant problem of this type could require resolution improvement, matrix separation, or analysis using another verified and documented isotope, or use of another method.

3.2 Isobaric molecular and doubly-charged ion interferences in ICP-MS are caused by ions consisting of more than one atom or charge, respectively. Most isobaric interferences that could affect ICP-MS determinations have been identified in the literature [3.4]. Examples include ArCl^+ ions on the ^{75}As signal and MoO^+ ions on the cadmium isotopes. While the approach used to correct for molecular isobaric interferences is demonstrated below using the natural isotope abundances from the literature [5], the most precise coefficients for an instrument can be determined from the ratio of the net isotope signals observed for a standard solution at a concentration providing suitable (<1 percent) counting statistics. Because the ^{35}Cl natural abundance of 75.77 percent is 3.13 times the ^{37}Cl abundance of 24.23 percent, the chloride correction for arsenic can be calculated (approximately) as follows (where the $^{36}\text{Ar}^{37}\text{Cl}^+$ contribution at m/z 75 is a negligible 0.06 percent of the $^{40}\text{Ar}^{35}\text{Cl}^+$ signal):

corrected arsenic signal (using natural isotopes abundances for coefficient approximations) =

$(m/z\ 75\ \text{signal}) - (3.13) (m/z\ 77\ \text{signal}) + (2.73) (m/z\ 82\ \text{signal})$,
(where the final term adjusts for any selenium contribution at 77 m/z).

NOTE: Arsenic values can be biased high by this type of equation when the net signal at m/z 82 is caused by ions other than $^{82}\text{Se}^+$. (e.g., $^{81}\text{BrH}^+$ from bromine wastes [6]).

Similarly,

corrected cadmium signal (using natural isotopes abundances for coefficient approximations) =

$(m/z\ 114\ \text{signal}) - (0.027)(m/z\ 118\ \text{signal}) - (1.63)(m/z\ 108\ \text{signal})$.
(where last 2 terms adjust for any tin or MoO⁻ contributions at m/z 114).

NOTE: Cadmium values will be biased low by this type of equation when ⁹²ZrO⁻ ions contribute at m/z 108, but use of m/z 111 for Cd is even subject to direct (⁹⁴ZrOH⁻) and indirect (⁹⁰ZrO⁻) additive interferences when Zr is present.

NOTE: As for the arsenic equation above, the coefficients in the Cd equation are ONLY illustrative. The most appropriate coefficients for an instrument can be determined from the ratio of the net isotope signals observed for a standard solution at a concentration providing suitable (<1 percent) counting precision.

The accuracy of these types of equations is based upon the constancy of the OBSERVED isotopic ratios for the interfering species. Corrections that presume a constant fraction of a molecular ion relative to the "parent" ion have not been found [7] to be reliable, e.g., oxide levels can vary. If a correction for an oxide ion is based upon the ratio of parent-to-oxide ion intensities, the correction must be adjusted for the degree of oxide formation by the use of an appropriate oxide internal standard previously demonstrated to form a similar level of oxide as the interferant. This type of correction has been reported [7] for oxide-ion corrections using ThO⁻/Th⁻ for the determination of rare earth elements. The use of aerosol desolvation and/or mixed plasmas have been shown to greatly reduce molecular interferences [8]. These techniques can be used provided that method detection limits, accuracy, and precision requirements for analysis of the samples can be met.

3.3 Physical interferences are associated with the sample nebulization and transport processes as well as with ion-transmission efficiencies. Nebulization and transport processes can be affected if a matrix component causes a change in surface tension or viscosity. Changes in matrix composition can cause significant signal suppression or enhancement [9]. Dissolved solids can deposit on the nebulizer tip of a pneumatic nebulizer and on the interface skimmers (reducing the orifice size and the instrument performance). Total solid levels below 0.2% (2,000 mg/L) have been currently recommended [10] to minimize solid deposition. An internal standard can be used to correct for physical interferences, if it is carefully matched to the analyte so that the two elements are similarly affected by matrix changes [11]. When the intensity level of an internal standard is less than 30 percent or greater than 120 percent of the intensity of the first standard used during calibration, the sample must be reanalyzed after a fivefold (1+4) or greater dilution has been performed.

3.4 Memory interferences can occur when there are large concentration differences between samples or standards which are analyzed sequentially. Sample

deposition on the sampler and skimmer cones, spray chamber design, and the type of nebulizer affect the extent of the memory interferences which are observed. The rinse period between samples must be long enough to eliminate significant memory interference.

4.0 APPARATUS AND MATERIALS

4.1 Inductively coupled plasma-mass spectrometer:

4.1.1 A system capable of providing resolution, better than or equal to amu at 10% peak height is required. The system must have a mass range from at least 6 to 240 amu and a data system that allows corrections for isobaric interferences and the application of the internal standard technique. Use of a mass-flow controller for the nebulizer argon and a peristaltic pump for the sample solution are recommended.

4.1.2 Argon gas supply: high-purity grade (99.99%).

5.0 REAGENTS

5.1 Acids used in the preparation of standards and for sample processing must be of high purity. Redistilled acids are recommended because of the high sensitivity of ICP-MS. Nitric acid at less than 2 per cent (v/v) is required for ICP-MS to minimize damage to the interface and to minimize isobaric molecular-ion interferences with the analytes. Many more molecular-ion interferences are observed on the analytes when hydrochloric and sulfuric acids are used [3.4]. Concentrations of antimony and silver between 50-500 µg/L require 1% (v/v) HCl for stability; for concentrations above 500 µg/L Ag, additional HCl will be needed.

5.2 Reagent water: All references to water in the method refer to reagent water unless otherwise specified. Refer to Chapter One for a definition of reagent water.

5.3 Standard stock solutions may be purchased or prepared from ultra-high purity grade chemicals or metals (99.99 or greater purity). See Method 6010A, Section 5.3, for instructions on preparing standard solutions from solids.

5.3.1 Bismuth internal standard solution, stock, 1 mL = 100 µg Bi: Dissolve 0.1115 g Bi₂O₃ in a minimum amount of dilute HNO₃. Add 10 mL conc. HNO₃ and dilute to 1.000 mL with reagent water.

5.3.2 Holmium internal standard solution, stock, 1 mL = 100 µg Ho: Dissolve 0.1757 g Ho₂(CO₃)₂·5H₂O in 10 mL reagent water and 10 mL HNO₃. After dissolution is complete, warm the solution to degas. Add 10 mL conc. HNO₃ and dilute to 1.000 mL with reagent water.

5.3.3 Indium internal standard solution. stock. 1 mL = 100 µg In: Dissolve 0.1000 g indium metal in 10 mL conc. HNO₃. Dilute to 1.000 mL with reagent water.

5.3.4 Lithium internal standard solution. stock. 1 mL = 100 µg ⁶Li: Dissolve 0.6312 g 95-atom-% ⁶Li. Li₂CO₃ in 10 mL of reagent water and 10 mL HNO₃. After dissolution is complete, warm the solution to degas. Add 10 mL conc. HNO₃ and dilute to 1.000 mL with reagent water.

5.3.5 Rhodium internal standard solution. stock. 1 mL = 100 µg Rh: Dissolve 0.3593 g ammonium hexachlororhodate (III) (NH₄)₃RhCl₆ in 10 mL reagent water. Add 100 mL conc. HCl and dilute to 1.000 mL with reagent water.

5.3.6 Scandium internal standard solution. stock. 1 mL = 100 µg Sc: Dissolve 0.15343 g Sc₂O₃ in 10 mL (1+1) hot HNO₃. Add 5 mL conc. HNO₃ and dilute to 1.000 mL with reagent water.

5.3.7 Terbium internal standard solution. stock. 1 mL = 100 µg Tb: Dissolve 0.1828 g Tb₂(CO₃)₃ · 5H₂O in 10 mL (1+1) HNO₃. After dissolution is complete, warm the solution to degas. Add 5 mL conc. HNO₃ and dilute to 1.000 mL with reagent water.

5.3.8 Yttrium internal standard solution. stock. 1 mL = 100 µg Y: Dissolve 0.2316 g Y₂(CO₃)₃ · 3H₂O in 10 mL (1+1) HNO₃. Add 5 mL conc. HNO₃ and dilute to 1.000 mL with reagent water.

5.3.9 Titanium solution. stock. 1 mL = 100 µg Ti: Dissolve 0.4133 g (NH₄)₂TiF₆ in reagent water. Add 2 drops conc. HF and dilute to 1.000 mL with reagent water.

5.3.10 Molybdenum solution. stock. 1 mL = 100 µg Mo: Dissolve 0.2043 g (NH₄)₂MoO₄ in reagent water. Dilute to 1.000 mL with reagent water.

5.4 Mixed calibration standard solutions are prepared by diluting the stock-standard solutions to levels in the linear range for the instrument in a solvent consisting of 1 percent (v/v) HNO₃ in reagent water. The calibration standard solutions must contain a suitable concentration of an appropriate internal standard for each analyte. Internal standards may be added on-line at the time of analysis using a second channel of the peristaltic pump and an appropriate mixing manifold.) Generally, an internal standard should be no more than 50 amu removed from the analyte. Recommended internal standards include ⁶Li, ⁴⁵Sc, ⁸⁹Y, ¹⁰³Rh, ¹¹⁵In, ¹⁵⁹Tb, ¹⁵⁹Ho, and ²⁰⁹Bi. Prior to preparing the mixed standards, each stock solution must be analyzed separately to determine possible spectral interferences or the presence of impurities. Care must be taken when preparing the mixed standards that the elements are compatible and stable. Transfer the mixed standard solutions to freshly acid-cleaned FEP fluorocarbon bottles for storage. Fresh mixed standards must be prepared as needed with the realization that concentrations can change on aging. Calibration standards must be initially verified using a quality control standard (see Section 5.7) and monitored weekly for stability.

5.5 Blanks: Three types of blanks are required for the analysis. The calibration blank is used in establishing the calibration curve. The preparation blank is used to monitor for possible contamination resulting from

the sample preparation procedure. The rinse blank is used to flush the system between all samples and standards.

5.5.1 The calibration blank consists of the same concentration(s) of the same acid(s) used to prepare the final dilution of the calibrating solutions of the analytes [often 1 percent HNO_3 (v/v) in reagent water] along with the selected concentrations of internal standards such that there is an appropriate internal standard element for each of the analytes. Use of HCl for antimony and silver is cited in Section 5.1

5.5.2 The preparation (or reagent) blank must be carried through the complete preparation procedure and contain the same volumes of reagents as the sample solutions.

5.5.3 The rinse blank consists of 1 to 2 percent HNO_3 (v/v) in reagent water. Prepare a sufficient quantity to flush the system between standards and samples.

NOTE: The ICS solutions in Table 2 are intended to evaluate corrections for known interferences on only the analytes in Table 1. If Method 6020 is used to determine an element not listed in Table 1, it is the responsibility of the analyst to modify the ICS solutions, or prepare an alternative ICS solution, to allow adequate verification of correction of interferences on the unlisted element (see section 8.4).

5.6 The interference check solution (ICS) is prepared to contain known concentrations of interfering elements that will demonstrate the magnitude of interferences and provide an adequate test of any corrections. Chloride in the ICS provides a means to evaluate software corrections for chloride-related interferences such as $^{35}\text{Cl}^{35}\text{O}$ on ^{51}V and $^{40}\text{Ar}^{35}\text{Cl}$ on ^{75}As . Iron is used to demonstrate adequate resolution of the spectrometer for the determination of manganese. Molybdenum serves to indicate oxide effects on cadmium isotopes. The other components are present to evaluate the ability of the measurement system to correct for various molecular-ion isobaric interferences. The ICS is used to verify that the interference levels are corrected by the data system within quality control limits:

5.6.1 These solutions must be prepared from ultra-pure reagents. They can be obtained commercially or prepared by the following procedure.

5.6.1.1 Mixed ICS solution I may be prepared by adding 13.903 g $\text{Al}(\text{NO}_3)_3 \cdot 9\text{H}_2\text{O}$, 2.498 g CaCO_3 (dried at 180 C for 1 h before weighing), 1.000 g Fe, 1.658 g MgO, 2.305 g Na_2CO_3 , and 1.767 g K_2CO_3 to 25 mL of reagent water. Slowly add 40 mL of (1+1) HNO_3 . After dissolution is complete, warm the solution to degas. Cool and dilute to 1,000 mL with reagent water.

5.6.1.2 Mixed ICS solution II may be prepared by slowly adding 7.444 g 85 % H_3PO_4 , 6.373 g 96% H_2SO_4 , 40.024 g 37% HCl, and 10.664 g citric acid $\text{C}_6\text{H}_8\text{O}_7$ to 100 mL of reagent water. Dilute to 1,000 mL with reagent water.

5.6.1.3 Mixed ICS solution III may be prepared by adding 1.00 mL each of 100- $\mu\text{g}/\text{mL}$ arsenic, cadmium, chromium, cobalt, copper, manganese, nickel, silver, and zinc stock solutions to about

50 mL reagent water. Add 2.0 mL concentrated HNO₃ and dilute to 100.0 mL with reagent water.

5.6.1.4 Working ICS Solutions

5.6.1.4.1 ICS-A may be prepared by adding 10.0 mL of mixed ICS solution I (5.7.1.1), 2.0 mL each of 100-μg/mL titanium stock solution (5.3.9) and molybdenum stock solution (5.3.10), and 5.0 mL of mixed ICS solution II (5.7.1.2). Dilute to 100 mL with reagent water. ICS solution A must be prepared fresh weekly.

5.6.1.4.2 ICS-AB may be prepared by adding 10.0 mL of mixed ICS solution I (5.7.1.1), 2.0 mL each of 100-μg/mL titanium stock solution (5.3.9) and molybdenum stock solution (5.3.10), 5.0 mL of mixed ICS solution II (5.7.1.2), and 2.0 mL of Mixed ICS solution III (5.7.1.3). Dilute to 100 mL with reagent water. Although the ICS solution AB must be prepared fresh weekly, the analyst should be aware that the solution may precipitate silver more quickly.

5.7 The quality control standard is the initial calibration verification solution (ICV), which must be prepared in the same acid matrix as the calibration standards. This solution must be an independent standard near the midpoint of the linear range at a concentration other than that used for instrument calibration. An independent standard is defined as a standard composed of the analytes from a source different from those used in the standards for instrument calibration.

5.8 Mass spectrometer tuning solution. A solution containing elements representing all of the mass regions of interest (for example, 10 μg/L of Li, Co, In, and Tl) must be prepared to verify that the resolution and mass calibration of the instrument are within the required specifications (see Section 7.5). This solution is also used to verify that the instrument has reached thermal stability (See Section 7.4).

6.0 SAMPLE COLLECTION, PRESERVATION, AND HANDLING

6.1 Sample collection procedures should address the considerations described in Chapter Nine of this Manual.

6.2 See the introductory material in Chapter Three, Inorganic Analytes, Sections 3.1.3 for information on sample handling and preservation. Only polyethylene or fluorocarbon (TFE or PFA) containers are recommended for use in Method 6020.

7.0 PROCEDURE

7.1 Solubilization and digestion procedures are presented in the Sample Preparation Methods (e.g., Methods 3005 - 3051).

7.2 Initiate appropriate operating configuration of the instruments computer according to the instrument manufacturer's instructions.

7.3 Set up the instrument with the proper operating parameters according to the instrument manufacturer's instructions.

7.4 Operating conditions: The analyst should follow the instructions provided by the instrument manufacturer. Allow at least 30 minutes for the instrument to equilibrate before analyzing any samples. This must be verified by analyzing a tuning solution (Section 5.8) at least four times with relative standard deviations of $\leq 5\%$ for the analytes contained in the tuning solution.

NOTE: Precautions must be taken to protect the channel electron multiplier from high ion currents. The channel electron multiplier suffers from fatigue after being exposed to high ion currents. This fatigue can last from several seconds to hours depending on the extent of exposure. During this time period, response factors are constantly changing, which invalidates the calibration curve, causes instability, and invalidates sample analyses.

7.5 Conduct mass calibration and resolution checks in the mass regions of interest. The mass calibration and resolution parameters are required criteria which must be met prior to any samples being analyzed. If the mass calibration differs more than 0.1 amu from the true value, then the mass calibration must be adjusted to the correct value. The resolution must also be verified to be less than 0.9 amu full width at 10 percent peak height.

7.6 Calibrate the instrument for the analytes of interest (recommended isotopes for the analytes in Table 1 are provided in Table 3), using the calibration blank and at least a single initial calibration standard according to the instrument manufacturer's procedure. Flush the system with the rinse blank (5.5.3) between each standard solution. Use the average of at least three integrations for both calibration and sample analyses.

7.7 All masses which could affect data quality should be monitored to determine potential effects from matrix components on the analyte peaks. The recommended isotopes to be monitored are listed in Table 3.

7.8 Immediately after the calibration has been established, the calibration must be verified and documented for every analyte by the analysis of the calibration verification solution (Section 5.7). When measurements exceed $\pm 10\%$ of the accepted value, the analyses must be terminated, the problem corrected, the instrument recalibrated, and the new calibration verified. Any samples analyzed under an out-of-control calibration must be reanalyzed. During the course of an analytical run, the instrument may be "resloped" or recalibrated to correct for instrument drift. A recalibration must then be followed immediately by a new analysis of a CCV and CCB before any further samples may be analyzed.

7.9 Flush the system with the rinse blank solution (5.5.3) until the signal levels return to the method's levels of quantitation (usually about 30 seconds) before the analysis of each sample (see Section 7.7). Nebulize each sample until a steady-state signal is achieved (usually about 30 seconds) prior to collecting data. Analyze the calibration verification solution (Section 5.6) and the calibration blank (Section 5.5.1) at a frequency of at least once every 10 analytical samples. Flow-injection systems may be used as long as they can meet the performance criteria of this method.

7.10 Dilute and reanalyze samples that are more concentrated than the linear range for an analyte (or species needed for a correction) or measure an alternate less-abundant isotope. The linearity at the alternate mass must be confirmed by appropriate calibration (see Sec. 7.6 and 7.8).

7.11 Calculations: The quantitative values shall be reported in appropriate units, such as micrograms per liter (µg/L) for aqueous samples and milligrams per kilogram (mg/kg) for solid samples. If dilutions were performed, the appropriate corrections must be applied to the sample values.

7.11.1 If appropriate, or required, calculate results for solids on a dry-weight basis as follows:

- (1) A separate determination of percent solids must be performed.
- (2) The concentrations determined in the digest are to be reported on the basis of the dry weight of the sample.

$$\text{Concentration (dry weight)(mg/kg)} = \frac{C \times V}{W \times S}$$

Where,

C = Digest Concentration (mg/L)

V = Final volume in liters after sample preparation

W = Weight in kg of wet sample

$$S = \frac{\% \text{ Solids}}{100}$$

Calculations should include appropriate interference corrections (see Section 3.2 for examples), internal-standard normalization, and the summation of signals at 206, 207, and 208 m/z for lead (to compensate for any differences in the abundances of these isotopes between samples and standards).

8.0 QUALITY CONTROL

8.1 All quality control data should be maintained and be available for easy reference or inspection.

8.2 Instrument Detection Limits (IDLs) in µg/L can be estimated by calculating the average of the standard deviations of the three runs on three non-consecutive days from the analysis of a reagent blank solution with seven consecutive measurements per day. Each measurement must be performed as though it were a separate analytical sample (i.e., each measurement must be followed by a rinse and/or any other procedure normally performed between the analysis of separate samples). IDLs must be determined at least every three months and kept with the instrument log book. Refer to Chapter One for additional guidance.

8.3 The intensities of all internal standards must be monitored for every analysis. When the intensity of any internal standard fails to fall between 30 and 120 percent of the intensity of that internal standard in the initial calibration standard, the following procedure is followed. The sample must be diluted fivefold (1+4) and reanalyzed with the addition of appropriate amounts of internal standards. This procedure must be repeated until the internal-standard intensities fall within the prescribed window. The intensity levels of the internal standards for the calibration blank (Section 5.5.1) and instrument check standard (Section 5.6) must agree within ± 20 percent of the intensity level of the internal standard of the original calibration solution. If they do not agree, terminate the analysis, correct the problem, recalibrate, verify the new calibration, and reanalyze the affected samples.

8.4 To obtain analyte data of known quality, it is necessary to measure more than the analytes of interest in order to apply corrections or to determine whether interference corrections are necessary. If the concentrations of interference sources (such as C, Cl, Mo, Zr, W) are such that, at the correction factor, the analyte is less than the limit of quantification and the concentration of interferents are insignificant, then the data may go uncorrected. Note that monitoring the interference sources does not necessarily require monitoring the interferant itself, but that a molecular species may be monitored to indicate the presence of the interferent. When correction equations are used, all QC criteria must also be met. Extensive QC for interference corrections are required at all times. The monitored masses must include those elements whose hydrogen, oxygen, hydroxyl, chlorine, nitrogen, carbon and sulfur molecular ions could impact the analytes of interest. Unsuspected interferences may be detected by adding pure major matrix components to a sample to observe any impact on the analyte signals. When an interference source is present, the sample elements impacted must be flagged to indicate (a) the percentage interference correction applied to the data or (b) an uncorrected interference by virtue of the elemental equation used for quantitation. The isotope proportions for an element or molecular-ion cluster provide information useful for quality assurance.

NOTE: Only isobaric elemental, molecular, and doubly charged interference corrections which use the observed isotopic-response ratios or parent-to-oxide ratios (provided an oxide internal standard is used as described in Section 3.2) for each instrument system are acceptable corrections for use in Method 6020.

8.5 Dilution Test: If the analyte concentration is within the linear dynamic range of the instrument and sufficiently high (minimally, a factor of at least 100 times greater than the concentration in the reagent blank, refer to Section 5.5.2), an analysis of a fivefold (1+4) dilution must agree within $\pm 10\%$ of the original determination. If not, an interference effect must be suspected. One dilution test must be included for each twenty samples (or less) of each matrix in a batch.

8.6 Post-Digestion Spike Addition: An analyte spike added to a portion of a prepared sample, or its dilution, should be recovered to within 75 to 125 percent of the known value or within the laboratory derived acceptance criteria. The spike addition should be based on the indigenous concentration of each element of interest in the sample. If the spike is not recovered within the specified limits, the sample must be diluted and reanalyzed to compensate for the matrix effect. Results must agree to within 10% of the original determination. The use of a standard-addition analysis procedure may also be used to compensate for this effect (Refer to Method 7000).

8.7 A Laboratory Control Sample (LCS) should be analyzed for each analyte using the same sample preparations, analytical methods and QA/QC procedures employed for the test samples. One LCS should be prepared and analyzed for each sample batch at a frequency of one LCS for each 20 samples or less.

8.8 Check the instrument calibration by analyzing appropriate quality control solutions as follows:

8.8.1 Check instrument calibration using a calibration blank (Section 5.5.1) and the initial calibration verification solution (Sections 5.7 and 7.9).

8.8.2 Verify calibration at a frequency of every 10 analytical samples with the instrument check standard (Section 5.6) and the calibration blank (Section 5.5.1). These solutions must also be analyzed for each analyte at the beginning of the analysis and after the last sample.

8.8.3 The results of the initial calibration verification solution and the instrument check standard must agree within $\pm 10\%$ of the expected value. If not, terminate the analysis, correct the problem, and recalibrate the instrument. Any sample analyzed under an out-of-control calibration must be reanalyzed.

8.8.4 The results of the calibration blank must be less than 3 times the current IDL for each element. If this is not the case, the reason for the out-of-control condition must be found and corrected, and affected samples must be reanalyzed. If the laboratory consistently has concentrations greater than 3 times the IDL, the IDL may be indicative of an estimated IDL and should be re-evaluated.

8.9 Verify the magnitude of elemental and molecular-ion isobaric interferences and the adequacy of any corrections at the beginning of an analytical run or once every 12 hours, whichever is more frequent. Do this by analyzing the interference check solutions A and AB. The analyst should be aware that precipitation from solution AB may occur with some elements, specifically silver. Refer to Section 3.0 for a discussion on interferences and potential solutions to those interferences if additional guidance is needed.

8.10 Analyze one duplicate sample for every matrix in a batch at a frequency of one matrix duplicate for every 20 samples.

8.10.1 The relative percent difference (RPD) between duplicate determinations must be calculated as follows:

$$RPD = \frac{|D_1 - D_2|}{(D_1 + D_2)/2} \times 100$$

where:

RPD = relative percent difference.

D_1 = first sample value.

D_2 = second sample value (duplicate)

A control limit of 20% RPD should not be exceeded for analyte values greater than 100 times the instrumental detection limit. If this limit is exceeded, the reason for the out-of-control situation must be found and corrected, and any samples analyzed during the out-of-control condition must be reanalyzed.

9.0 METHOD PERFORMANCE

9.1 In an EPA multi-laboratory study, 10 laboratories applied the ICP-MS technique to both aqueous and solid samples. TABLE 4 summarizes the method performance data for aqueous samples. Performance data for solid samples is provided in TABLE 5.

10.0 REFERENCES

1. Horlick, G., et al., Spectrochim. Acta 40B, 1555 (1985).
2. Gray, A.L., Spectrochim. Acta 40B, 1525 (1985); 41B, 151 (1986).
3. Tan, S.H., and Horlick, G., Appl. Spectrosc. 40, 445 (1986).
4. Vaughan, M.A., and Horlick, G., Appl. Spectrosc. 40, 434 (1986).
5. Holden, N.E., "Table of the Isotopes," in Lide, D.R., Ed., CRC Handbook of Chemistry and Physics, 74th Ed., CRC Press, Boca Raton, FL, 1993.
6. Hinnners, T.A., Heithmar, E., Rissmann, E., and Smith, D., Winter Conference on Plasma Spectrochemistry, Abstract THP18: p. 237, San Diego, CA (1994).
7. Lichte, F.E., et al., Anal. Chem. 59, 1150 (1987).
8. Evans E.H., and Ebdon, L., J. Anal. At. Spectrom. 4, 299 (1989).
9. Beauchemin, D., et al., Spectrochim. Acta 42B, 467 (1987).
10. Houk, R.S., Anal. Chem. 58, 97A (1986).
11. Thompson, J.J., and Houk, R.S., Appl. Spectrosc. 41, 801 (1987).

TABLE 1. ELEMENTS APPROVED FOR ICP-MS DETERMINATION

Element	CAS* #
Aluminum	7429-90-5
Antimony	7440-36-0
Arsenic	7440-38-2
Barium	7440-39-3
Beryllium	7440-41-7
Cadmium	7440-43-9
Chromium	7440-47-3
Cobalt	7440-48-4
Copper	7440-50-8
Lead	7439-92-1
Manganese	7439-96-5
Nickel	7440-02-0
Silver	7440-22-4
Thallium	7440-28-0
Zinc	7440-66-6

TABLE 2. RECOMMENDED INTERFERENCE CHECK SAMPLE COMPONENTS AND CONCENTRATIONS

Solution component	Solution A Concentration(mg/L)	Solution AB Concentration (mg/L)
Al	100.0	100.0
Ca	100.0	100.0
Fe	100.0	100.0
Mg	100.0	100.0
Na	100.0	100.0
P	100.0	100.0
K	100.0	100.0
S	100.0	100.0
C	200.0	200.0
Cl	1000.0	1000.0
Mo	2.0	2.0
Ti	2.0	2.0
As	0.0	0.0200
Cd	0.0	0.0200
Cr	0.0	0.0200
Co	0.0	0.0200
Cu	0.0	0.0200
Mn	0.0	0.0200
Ni	0.0	0.0200
Ag	0.0	0.0200
Zn	0.0	0.0200

TABLE 3. RECOMMENDED ISOTOPES FOR SELECTED ELEMENTS

Mass	Element of interest
<u>27</u>	Aluminum
121. <u>123</u>	Antimony
<u>75</u>	Arsenic
138. 137. 136. <u>135</u> . 134	Barium
<u>9</u>	Beryllium
209	Bismuth (IS)
<u>114</u> . 112. <u>111</u> . 110. 113. 116. 106	Cadmium
42. 43. <u>44</u> . 46. 48	Calcium (I)
35. 37. (77. 82) ^a	Chlorine (I)
<u>52</u> . <u>53</u> . <u>50</u> . 54	Chromium
<u>59</u>	Cobalt
<u>63</u> . <u>65</u>	Copper
165	Holmium (IS)
<u>115</u> . 113	Indium (IS)
<u>56</u> . <u>54</u> . <u>57</u> . 58	Iron (I)
139	Lanthanum (I)
<u>208</u> . <u>207</u> . <u>206</u> . 204	Lead
6 ⁷ . 7	Lithium (IS)
24. <u>25</u> . <u>26</u>	Magnesium (I)
<u>55</u>	Manganese
98. 96. 92. <u>97</u> . 94. (108) ^a	Molybdenum (I)
58. <u>60</u> . 62. <u>61</u> . 64	Nickel
<u>39</u>	Potassium (I)
103	Rhodium (IS)
45	Scandium (IS)
<u>107</u> . <u>109</u>	Silver
<u>23</u>	Sodium (I)
159	Terbium (IS)
<u>205</u> . 203	Thallium
120. <u>118</u>	Tin (I)
89	Yttrium (IS)
64. <u>66</u> . <u>68</u> . <u>67</u> . 70	Zinc

NOTE: Method 6020 is recommended for only those analytes listed in Table 1. Other elements are included in this table because they are potential interferences (labeled I) in the determination of recommended analytes, or because they are commonly used internal standards (labeled IS). Isotopes are listed in descending order of natural abundance. The most generally useful isotopes are underlined and in boldface, although certain matrices may require the use of alternative isotopes. ^a These masses are also useful for interference correction (Section 3.2). ^b Internal standard must be enriched in the ⁶Li isotope. This minimizes interference from indigenous lithium.

TABLE 4. ICP-MS MULTI-LABORATORY PRECISION AND ACCURACY DATA FOR AQUEOUS SOLUTIONS

Element	Comparability ^a Range	%RSD Range	N ^b	S ^c
Aluminum	95 - 100	11 - 14	14 - 14	4
Antimony	d	5.0 - 7.6	16 - 16	3
Arsenic	97 - 114	7.1 - 48	12 - 14	4
Barium	91 - 99	4.3 - 9.0	16 - 16	5
Beryllium	103 - 107	8.6 - 14	13 - 14	3
Cadmium	98 - 102	4.6 - 7.2	18 - 20	3
Calcium	99 - 107	5.7 - 23	17 - 18	5
Chromium	95 - 105	13 - 27	16 - 18	4
Cobalt	101 - 104	8.2 - 8.5	18 - 18	3
Copper	85 - 101	6.1 - 27	17 - 18	5
Iron	91 - 900	11 - 150	10 - 12	5
Lead	71 - 137	11 - 23	17 - 18	6
Magnesium	98 - 102	10 - 15	16 - 16	5
Manganese	95 - 101	8.8 - 15	18 - 18	4
Nickel	98 - 101	6.1 - 6.7	18 - 18	2
Potassium	101 - 114	9.9 - 19	11 - 12	5
Selenium	102 - 107	15 - 25	12 - 12	3
Silver	104 - 105	5.2 - 7.7	13 - 16	2
Sodium	82 - 104	24 - 43	9 - 10	5
Thallium	88 - 97	9.7 - 12	18 - 18	3
Vanadium	107 - 142	23 - 68	8 - 13	3
Zinc	93 - 102	6.8 - 17	16 - 18	5


^a Comparability refers to the percent agreement of mean ICP-MS values to those of the reference technique. ^b N is the range of the number of ICP-MS measurements where the analyte values exceed the limit of quantitation (3.3 times the average IDL value). ^c S is the number of samples with results greater than the limit of quantitation. ^d No comparability values are provided for antimony because of evidence that the reference data is affected by an interference.

TABLE 5. ICP-MS MULTI-LABORATORY PRECISION AND ACCURACY DATA FOR SOLID MATRICES

Element	Comparability ^a Range	%RSD Range	N ^b	S ^c
Aluminum	83 - 101	11 - 39	13 - 14	7
Antimony	d	12 - 21	15 - 16	2
Arsenic	79 - 102	12 - 23	16 - 16	7
Barium	100 - 102	4.3 - 17	15 - 16	7
Beryllium	50 - 87	19 - 34	12 - 14	5
Cadmium	93 - 100	6.2 - 25	19 - 20	5
Calcium	95 - 109	4.1 - 27	15 - 17	7
Chromium	77 - 98	11 - 32	17 - 18	7
Cobalt	43 - 102	15 - 30	17 - 18	6
Copper	90 - 109	9.0 - 25	18 - 18	7
Iron	87 - 99	6.7 - 21	12 - 12	7
Lead	90 - 104	5.9 - 28	15 - 18	7
Magnesium	89 - 111	7.6 - 37	15 - 16	7
Manganese	80 - 108	11 - 40	16 - 18	7
Nickel	87 - 117	9.2 - 29	16 - 18	7
Potassium	97 - 137	11 - 62	10 - 12	5
Selenium	81	39	12	1
Silver	43 - 112	12 - 33	15 - 15	3
Sodium	100 - 146	14 - 77	8 - 10	5
Thallium	91	33	18	1
Vanadium	83 - 147	20 - 70	6 - 14	7
Zinc	84 - 124	14 - 42	18 - 18	7

^a Comparability refers to the percent agreement of mean ICP-MS values to those of the reference technique. ^b N is the range of the number of ICP-MS measurements where the analyte values exceed the limit of quantitation (3.3 times the average IDL value). ^c S is the number of samples with results greater than the limit of quantitation. ^d No comparability values are provided for antimony because of evidence that the reference data is affected by an interference.

METHOD 6020 INDUCTIVELY COUPLED PLASMA - MASS SPECTROMETRY

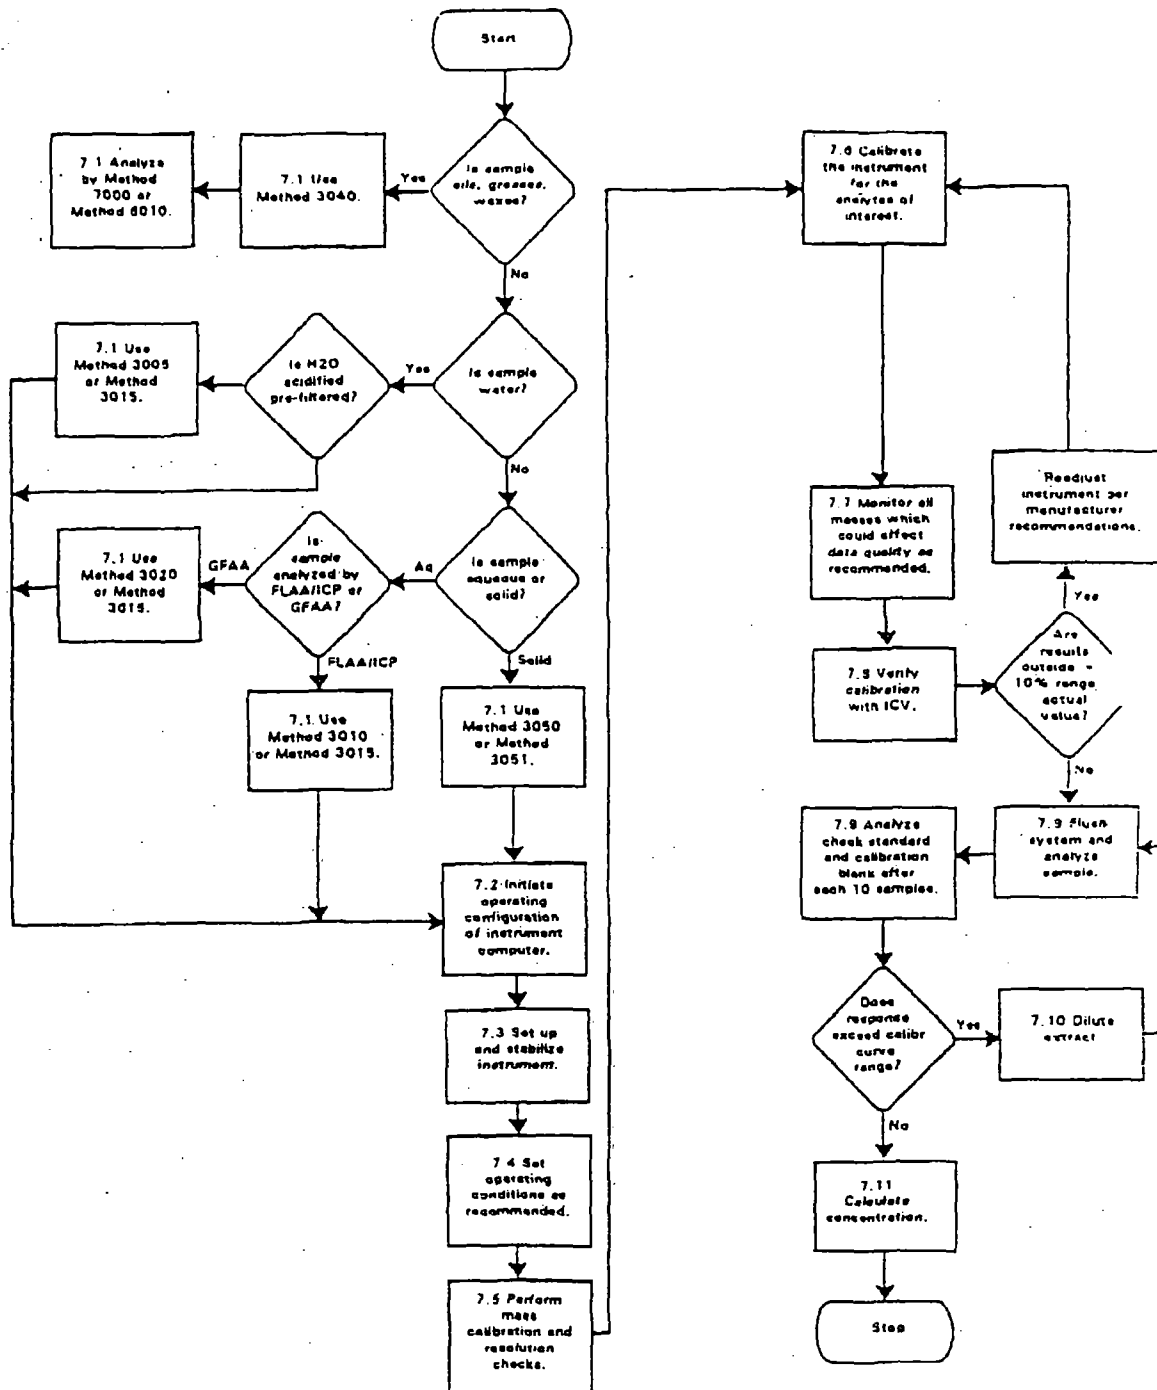

METHOD 200.8

DETERMINATION OF TRACE ELEMENTS IN WATERS AND WASTES
BY INDUCTIVELY COUPLED PLASMA - MASS SPECTROMETRY

Revision 5.4
EMMC Version

S.E. Long (Technology Applications Inc.), T.D. Martin, and E.R. Martin - Method 200.8,
Revisions 4.2 and 4.3 (1990)

S.E. Long (Technology Applications Inc.) and T.D. Martin - Method 200.8, Revision 4.4 (1991)

J.T. Creed, C.A. Brockhoff, and T.D. Martin - Method 200.8, Revision 5.4 (1994)

ENVIRONMENTAL MONITORING SYSTEMS LABORATORY
OFFICE OF RESEARCH AND DEVELOPMENT
U.S. ENVIRONMENTAL PROTECTION AGENCY
CINCINNATI, OHIO 45268
METHOD 200.8

DETERMINATION OF TRACE ELEMENTS IN WATERS AND WASTES BY INDUCTIVELY COUPLED PLASMA - MASS SPECTROMETRY

1.0 SCOPE AND APPLICATION

- 1.1 This method provides procedures for determination of dissolved elements in ground waters, surface waters and drinking water. It may also be used for determination of total recoverable element concentrations in these waters as well as wastewaters, sludges and soils samples. This method is applicable to the following elements:

Analyte		Chemical Abstract Services Registry Number (CASRN)
Aluminum	(Al)	7429-90-5
Antimony	(Sb)	7440-36-0
Arsenic	(As)	7440-38-2
Barium	(Ba)	7440-39-3
Beryllium	(Be)	7440-41-7
Cadmium	(Cd)	7440-43-9
Chromium	(Cr)	7440-47-3
Cobalt	(Co)	7440-48-4
Copper	(Cu)	7440-50-8
Lead	(Pb)	7439-92-1
Manganese	(Mn)	7439-96-5
Mercury	(Hg)	7439-97-6
Molybdenum	(Mo)	7439-98-7
Nickel	(Ni)	7440-02-0
Selenium	(Se)	7782-49-2
Silver	(Ag)	7440-22-4
Thallium	(Tl)	7440-28-0
Thorium	(Th)	7440-29-1
Uranium	(U)	7440-61-1
Vanadium	(V)	7440-62-2
Zinc	(Zn)	7440-66-6

Estimated instrument detection limits (IDLs) for these elements are listed in Table 1. These are intended as a guide to instrumental limits typical of a system optimized for multielement determinations and employing commercial instrumentation and pneumatic nebulization sample introduction. However, actual method detection limits (MDLs) and linear working ranges will be dependent on the sample matrix, instrumentation and selected operating conditions. Given in Table 7 are typical MDLs for both total recoverable determinations by "direct analysis" and where sample digestion is employed.

- 1.2 For reference where this method is approved for use in compliance monitoring programs [e.g., Clean Water Act (NPDES) or Safe Drinking Water Act (SDWA)] consult both the appropriate sections of the Code of Federal Regulation (40 CFR Part 136 Table 1B for NPDES, and Part 141 § 141.23 for drinking water), and the latest Federal Register announcements.
- 1.3 Dissolved elements are determined after suitable filtration and acid preservation. In order to reduce potential interferences, dissolved solids should not exceed 0.2% (w/v) (Section 4.1.4).
- 1.4 With the exception of silver, where this method is approved for the determination of certain metal and metalloid contaminants in drinking water, samples may be analyzed directly by pneumatic nebulization without acid digestion if the samples have been properly preserved with acid and have turbidity of <1 NTU at the time of analysis. This total recoverable determination procedure is referred to as "direct analysis".
- 1.5 For the determination of total recoverable analytes in aqueous and solid samples a digestion/extraction is required prior to analysis when the elements are not in solution (e.g., soils, sludges, sediments and aqueous samples that may contain particulate and suspended solids). Aqueous samples containing suspended or particulate material $\geq 1\%$ (w/v) should be extracted as a solid type sample (Section 11.2.2).
- 1.6 The total recoverable sample digestion procedure given in this method is not suitable for the determination of volatile organo-mercury compounds. However, for "direct analysis" of drinking water (turbidity <1 NTU), the combined concentrations of inorganic and organo-mercury in solution can be determined by "direct analysis" pneumatic nebulization provided gold is added to both samples and standards alike to eliminate memory interference effects.
- 1.7 Silver is only slightly soluble in the presence of chloride unless there is a sufficient chloride concentration to form the soluble chloride complex. Therefore, low recoveries of silver may occur in samples, fortified sample matrices and even fortified blanks if determined as a dissolved analyte or by "direct analysis" where the sample has not been processed using the total recoverable mixed acid digestion. For this reason it is recommended that samples be digested prior to the determination of silver. The total recoverable sample digestion procedure given in this method is suitable for the determination of silver in aqueous samples containing concentrations up to 0.1 mg/L. For the analysis of wastewater samples containing higher concentrations of silver, succeeding smaller volume, well mixed sample aliquots must be prepared until the analysis solution contains <0.1 mg/L silver. The extraction of solid samples containing concentrations of silver >50 mg/kg should be treated in a similar manner.
- 1.8 The total recoverable sample digestion procedure given in this method will solubilize and hold in solution only minimal concentrations of barium in the presence of free sulfate. For the analysis of barium in samples having varying

and unknown concentrations of sulfate, analysis should be completed as soon as possible after sample preparation.

- 1.9 This method should be used by analysts experienced in the use of inductively coupled plasma mass spectrometry (ICP-MS), the interpretation of spectral and matrix interferences and procedures for their correction. A minimum of six months experience with commercial instrumentation is recommended.
- 1.10 Users of the method data should state the data-quality objectives prior to analysis. Users of the method must document and have on file the required initial demonstration performance data described in Section 9.2 prior to using the method for analysis.

2.0 SUMMARY OF METHOD

- 2.1 An aliquot of a well mixed, homogeneous aqueous or solid sample is accurately weighed or measured for sample processing. For total recoverable analysis of a solid or an aqueous sample containing undissolved material, analytes are first solubilized by gentle refluxing with nitric and hydrochloric acids. After cooling, the sample is made up to volume, is mixed and centrifuged or allowed to settle overnight prior to analysis. For the determination of dissolved analytes in a filtered aqueous sample aliquot, or for the "direct analysis" total recoverable determination of analytes in drinking water where sample turbidity is <1 NTU, the sample is made ready for analysis by the appropriate addition of nitric acid, and then diluted to a predetermined volume and mixed before analysis.
- 2.2 The method describes the multi-element determination of trace elements by ICP-MS.¹⁻³ Sample material in solution is introduced by pneumatic nebulization into a radiofrequency plasma where energy transfer processes cause desolvation, atomization and ionization. The ions are extracted from the plasma through a differentially pumped vacuum interface and separated on the basis of their mass-to-charge ratio by a quadrupole mass spectrometer having a minimum resolution capability of 1 amu peak width at 5% peak height. The ions transmitted through the quadrupole are detected by an electron multiplier or Faraday detector and the ion information processed by a data handling system. Interferences relating to the technique (Section 4.0) must be recognized and corrected for. Such corrections must include compensation for isobaric elemental interferences and interferences from polyatomic ions derived from the plasma gas, reagents or sample matrix. Instrumental drift as well as suppressions or enhancements of instrument response caused by the sample matrix must be corrected for by the use of internal standards.

3.0 DEFINITIONS

- 3.1 **Calibration Blank** - A volume of reagent water acidified with the same acid matrix as in the calibration standards. The calibration blank is a zero standard and is used to calibrate the ICP instrument (Section 7.6.1).

- 3.2 Calibration Standard (CAL) - A solution prepared from the dilution of stock standard solutions. The CAL solutions are used to calibrate the instrument response with respect to analyte concentration (Section 7.4).
- 3.3 Dissolved Analyte - The concentration of analyte in an aqueous sample that will pass through a 0.45 μm membrane filter assembly prior to sample acidification (Section 11.1).
- 3.4 Field Reagent Blank (FRB) - An aliquot of reagent water or other blank matrix that is placed in a sample container in the laboratory and treated as a sample in all respects, including shipment to the sampling site, exposure to the sampling site conditions, storage, preservation, and all analytical procedures. The purpose of the FRB is to determine if method analytes or other interferences are present in the field environment (Section 8.5).
- 3.5 Instrument Detection Limit (IDL) - The concentration equivalent to the analyte signal which is equal to three times the standard deviation of a series of 10 replicate measurements of the calibration blank signal at the selected analytical mass(es). (Table 1).
- 3.6 Internal Standard - Pure analyte(s) added to a sample, extract, or standard solution in known amount(s) and used to measure the relative responses of other method analytes that are components of the same sample or solution. The internal standard must be an analyte that is not a sample component (Sections 7.5 and 9.4.5).
- 3.7 Laboratory Duplicates (LD1 and LD2) - Two aliquots of the same sample taken in the laboratory and analyzed separately with identical procedures. Analyses of LD1 and LD2 indicates precision associated with laboratory procedures, but not with sample collection, preservation, or storage procedures.
- 3.8 Laboratory Fortified Blank (LFB) - An aliquot of LRB to which known quantities of the method analytes are added in the laboratory. The LFB is analyzed exactly like a sample, and its purpose is to determine whether the methodology is in control and whether the laboratory is capable of making accurate and precise measurements (Sections 7.9 and 9.3.2).
- 3.9 Laboratory Fortified Sample Matrix (LFM) - An aliquot of an environmental sample to which known quantities of the method analytes are added in the laboratory. The LFM is analyzed exactly like a sample, and its purpose is to determine whether the sample matrix contributes bias to the analytical results. The background concentrations of the analytes in the sample matrix must be determined in a separate aliquot and the measured values in the LFM corrected for background concentrations (Section 9.4).
- 3.10 Laboratory Reagent Blank (LRB) - An aliquot of reagent water or other blank matrices that are treated exactly as a sample including exposure to all glassware, equipment, solvents, reagents, and internal standards that are used with other samples. The LRB is used to determine if method analytes or other interferences

are present in the laboratory environment, reagents, or apparatus (Sections 7.6.2 and 9.3.1).

- 3.11 Linear Dynamic Range (LDR) - The concentration range over which the instrument response to an analyte is linear (Section 9.2.2).
- 3.12 Method Detection Limit (MDL) - The minimum concentration of an analyte that can be identified, measured, and reported with 99% confidence that the analyte concentration is greater than zero (Section 9.2.4 and Table 7).
- 3.13 Quality Control Sample (QCS) - A solution of method analytes of known concentrations which is used to fortify an aliquot of LRB or sample matrix. The QCS is obtained from a source external to the laboratory and different from the source of calibration standards. It is used to check either laboratory or instrument performance (Sections 7.8 and 9.2.3).
- 3.14 Solid Sample - For the purpose of this method, a sample taken from material classified as either soil, sediment or sludge.
- 3.15 Stock Standard Solution - A concentrated solution containing one or more method analytes prepared in the laboratory using assayed reference materials or purchased from a reputable commercial source (Section 7.3).
- 3.16 Total Recoverable Analyte - The concentration of analyte determined either by "direct analysis" of an unfiltered acid preserved drinking water sample with turbidity of <1 NTU (Section 11.2.1), or by analysis of the solution extract of a solid sample or an unfiltered aqueous sample following digestion by refluxing with hot dilute mineral acid(s) as specified in the method (Sections 11.2 and 11.3).
- 3.17 Tuning Solution - A solution which is used to determine acceptable instrument performance prior to calibration and sample analyses (Section 7.7).
- 3.18 Water Sample - For the purpose of this method, a sample taken from one of the following sources: drinking, surface, ground, storm runoff, industrial or domestic wastewater.

4.0 INTERFERENCES

- 4.1 Several interference sources may cause inaccuracies in the determination of trace elements by ICP-MS. These are:
 - 4.1.1 Isobaric elemental interferences - Are caused by isotopes of different elements which form singly or doubly charged ions of the same nominal mass-to-charge ratio and which cannot be resolved by the mass spectrometer in use. All elements determined by this method have, at a minimum, one isotope free of isobaric elemental interference. Of the analytical isotopes recommended for use with this method (Table 4), only molybdenum-98 (ruthenium) and selenium-82 (krypton) have isobaric elemental interferences. If alternative analytical isotopes having higher

natural abundance are selected in order to achieve greater sensitivity, an isobaric interference may occur. All data obtained under such conditions must be corrected by measuring the signal from another isotope of the interfering element and subtracting the appropriate signal ratio from the isotope of interest. A record of this correction process should be included with the report of the data. It should be noted that such corrections will only be as accurate as the accuracy of the isotope ratio used in the elemental equation for data calculations. Relevant isotope ratios should be established prior to the application of any corrections.

- 4.1.2 Abundance sensitivity - Is a property defining the degree to which the wings of a mass peak contribute to adjacent masses. The abundance sensitivity is affected by ion energy and quadrupole operating pressure. Wing overlap interferences may result when a small ion peak is being measured adjacent to a large one. The potential for these interferences should be recognized and the spectrometer resolution adjusted to minimize them.
- 4.1.3 Isobaric polyatomic ion interferences - Are caused by ions consisting of more than one atom which have the same nominal mass-to-charge ratio as the isotope of interest, and which cannot be resolved by the mass spectrometer in use. These ions are commonly formed in the plasma or interface system from support gases or sample components. Most of the common interferences have been identified³, and these are listed in Table 2 together with the method elements affected. Such interferences must be recognized, and when they cannot be avoided by the selection of alternative analytical isotopes, appropriate corrections must be made to the data. Equations for the correction of data should be established at the time of the analytical run sequence as the polyatomic ion interferences will be highly dependent on the sample matrix and chosen instrument conditions. In particular, the common ⁸²Kr interference that affects the determination of both arsenic and selenium, can be greatly reduced with the use of high purity krypton free argon.
- 4.1.4 Physical interferences - Are associated with the physical processes which govern the transport of sample into the plasma, sample conversion processes in the plasma, and the transmission of ions through the plasma-mass spectrometer interface. These interferences may result in differences between instrument responses for the sample and the calibration standards. Physical interferences may occur in the transfer of solution to the nebulizer (e.g., viscosity effects), at the point of aerosol formation and transport to the plasma (e.g., surface tension), or during excitation and ionization processes within the plasma itself. High levels of dissolved solids in the sample may contribute deposits of material on the extraction and/or skimmer cones reducing the effective diameter of the orifices and therefore ion transmission. Dissolved solids levels not exceeding 0.2% (w/v) have been recommended³ to reduce such effects. Internal standardization may be effectively used to compensate for many physical interference effects.⁴ Internal standards ideally should have similar

analytical behavior to the elements being determined.

- 4.1.5 Memory interferences - Result when isotopes of elements in a previous sample contribute to the signals measured in a new sample. Memory effects can result from sample deposition on the sampler and skimmer cones, and from the buildup of sample material in the plasma torch and spray chamber. The site where these effects occur is dependent on the element and can be minimized by flushing the system with a rinse blank between samples (Section 7.6.3). The possibility of memory interferences should be recognized within an analytical run and suitable rinse times should be used to reduce them. The rinse times necessary for a particular element should be estimated prior to analysis. This may be achieved by aspirating a standard containing elements corresponding to 10 times the upper end of the linear range for a normal sample analysis period, followed by analysis of the rinse blank at designated intervals. The length of time required to reduce analyte signals to within a factor of 10 of the method detection limit, should be noted. Memory interferences may also be assessed within an analytical run by using a minimum of three replicate integrations for data acquisition. If the integrated signal values drop consecutively, the analyst should be alerted to the possibility of a memory effect, and should examine the analyte concentration in the previous sample to identify if this was high. If a memory interference is suspected, the sample should be reanalyzed after a long rinse period. In the determination of mercury, which suffers from severe memory effects, the addition of 100 µg/L gold will effectively rinse 5 µg/L mercury in approximately two minutes. Higher concentrations will require a longer rinse time.

5.0 SAFETY

- 5.1 The toxicity or carcinogenicity of reagents used in this method have not been fully established. Each chemical should be regarded as a potential health hazard and exposure to these compounds should be as low as reasonably achievable. Each laboratory is responsible for maintaining a current awareness file of OSHA regulations regarding the safe handling of the chemicals specified in this method.^{5,9} A reference file of material data handling sheets should also be available to all personnel involved in the chemical analysis. Specifically, concentrated nitric and hydrochloric acids present various hazards and are moderately toxic and extremely irritating to skin and mucus membranes. Use these reagents in a fume hood whenever possible and if eye or skin contact occurs, flush with large volumes of water. Always wear safety glasses or a shield for eye protection, protective clothing and observe proper mixing when working with these reagents.
- 5.2 The acidification of samples containing reactive materials may result in the release of toxic gases, such as cyanides or sulfides. Acidification of samples should be done in a fume hood.
- 5.3 All personnel handling environmental samples known to contain or to have been

in contact with human waste should be immunized against known disease causative agents.

- 5.4 Analytical plasma sources emit radiofrequency radiation in addition to intense UV radiation. Suitable precautions should be taken to protect personnel from such hazards. The inductively coupled plasma should only be viewed with proper eye protection from UV emissions.
- 5.5 It is the responsibility of the user of this method to comply with relevant disposal and waste regulations. For guidance see Sections 14.0 and 15.0.

6.0 EQUIPMENT AND SUPPLIES

6.1 Inductively coupled plasma mass spectrometer:

- 6.1.1 Instrument capable of scanning the mass range 5-250 amu with a minimum resolution capability of 1 amu peak width at 5% peak height. Instrument may be fitted with a conventional or extended dynamic range detection system.

Note: If an electron multiplier detector is being used, precautions should be taken, where necessary, to prevent exposure to high ion flux. Otherwise changes in instrument response or damage to the multiplier may result.

- 6.1.2 Radio-frequency generator compliant with FCC regulations.
- 6.1.3 Argon gas supply - High purity grade (99.99%). When analyses are conducted frequently, liquid argon is more economical and requires less frequent replacement of tanks than compressed argon in conventional cylinders (Section 4.1.3).
- 6.1.4 A variable-speed peristaltic pump is required for solution delivery to the nebulizer.
- 6.1.5 A mass-flow controller on the nebulizer gas supply is required. A water-cooled spray chamber may be of benefit in reducing some types of interferences (e.g., from polyatomic oxide species).
- 6.1.6 If an electron multiplier detector is being used, precautions should be taken, where necessary, to prevent exposure to high ion flux. Otherwise changes in instrument response or damage to the multiplier may result. Samples having high concentrations of elements beyond the linear range of the instrument and with isotopes falling within scanning windows should be diluted prior to analysis.

- 6.2 Analytical balance, with capability to measure to 0.1 mg, for use in weighing solids, for preparing standards, and for determining dissolved solids in digests or extracts.

- 6.3 A temperature adjustable hot plate capable of maintaining a temperature of 95°C.
- 6.4 (Optional) A temperature adjustable block digester capable of maintaining a temperature of 95°C and equipped with 250 mL constricted digestion tubes.
- 6.5 (Optional) A steel cabinet centrifuge with guard bowl, electric timer and brake.
- 6.6 A gravity convection drying oven with thermostatic control capable of maintaining $105\text{ }^{\circ}\text{C} \pm 5\text{ }^{\circ}\text{C}$.
- 6.7 (Optional) An air displacement pipetter capable of delivering volumes ranging from 0.1-2500 μL with an assortment of high quality disposable pipet tips.
- 6.8 Mortar and pestle, ceramic or nonmetallic material.
- 6.9 Polypropylene sieve, 5-mesh (4 mm opening).
- 6.10 Labware - For determination of trace levels of elements, contamination and loss are of prime consideration. Potential contamination sources include improperly cleaned laboratory apparatus and general contamination within the laboratory environment from dust, etc. A clean laboratory work area designated for trace element sample handling must be used. Sample containers can introduce positive and negative errors in the determination of trace elements by (1) contributing contaminants through surface desorption or leaching, (2) depleting element concentrations through adsorption processes. All reusable labware (glass, quartz, polyethylene, PTFE, FEP, etc.) should be sufficiently clean for the task objectives. Several procedures found to provide clean labware include soaking overnight and thoroughly washing with laboratory-grade detergent and water, rinsing with tap water, and soaking for four hours or more in 20% (V/V) nitric acid or a mixture of dilute nitric and hydrochloric acid (1+2+9), followed by rinsing with reagent grade water and storing clean.

Note: Chromic acid must not be used for cleaning glassware.

- 6.10.1 Glassware - Volumetric flasks, graduated cylinders, funnels and centrifuge tubes (glass and/or metal free plastic).
- 6.10.2 Assorted calibrated pipettes.
- 6.10.3 Conical Phillips beakers (Corning 1080-250 or equivalent), 250 mL with 50 mm watch glasses.
- 6.10.4 Griffin beakers, 250 mL with 75 mm watch glasses and (optional) 75 mm ribbed watch glasses.
- 6.10.5 (Optional) PTFE and/or quartz beakers, 250 mL with PTFE covers.
- 6.10.6 Evaporating dishes or high-form crucibles, porcelain, 100 mL capacity.

6.10.7 Narrow-mouth storage bottles, FEP (fluorinated ethylene propylene) with ETFE (ethylene tetrafluorethylene) screw closure, 125-250 mL capacities.

6.10.8 One-piece stem FEP wash bottle with screw closure, 125 mL capacity.

7.0 REAGENTS AND STANDARDS

7.1 Reagents may contain elemental impurities that might affect the integrity of analytical data. Owing to the high sensitivity of ICP-MS, high-purity reagents should be used whenever possible. All acids used for this method must be of ultra high-purity grade. Suitable acids are available from a number of manufacturers or may be prepared by sub-boiling distillation. Nitric acid is preferred for ICP-MS in order to minimize polyatomic ion interferences. Several polyatomic ion interferences result when hydrochloric acid is used (Table 2), however, it should be noted that hydrochloric acid is required to maintain stability in solutions containing antimony and silver. When hydrochloric acid is used, corrections for the chloride polyatomic ion interferences must be applied to all data.

7.1.1 Nitric acid, concentrated (sp.gr. 1.41).

7.1.2 Nitric acid (1+1) - Add 500 mL conc. nitric acid to 400 mL of reagent grade water and dilute to 1 L.

7.1.3 Nitric acid (1+9) - Add 100 mL conc. nitric acid to 400 mL of reagent grade water and dilute to 1 L.

7.1.4 Hydrochloric acid, concentrated (sp.gr. 1.19).

7.1.5 Hydrochloric acid (1+1) - Add 500 mL conc. hydrochloric acid to 400 mL of reagent grade water and dilute to 1 L.

7.1.6 Hydrochloric acid (1+4) - Add 200 mL conc. hydrochloric acid to 400 mL of reagent grade water and dilute to 1 L.

7.1.7 Ammonium hydroxide, concentrated (sp.gr. 0.902).

7.1.8 Tartaric acid (CASRN 87-69-4).

7.2 Reagent water - All references to reagent grade water in this method refer to ASTM Type I water (ASTM D1193).⁹ Suitable water may be prepared by passing distilled water through a mixed bed of anion and cation exchange resins.

7.3 Standard Stock Solutions - Stock standards may be purchased from a reputable commercial source or prepared from ultra high-purity grade chemicals or metals (99.99-99.999% pure). All salts should be dried for one hour at 105°C, unless otherwise specified. Stock solutions should be stored in FEP bottles. Replace stock standards when succeeding dilutions for preparation of the multielement stock standards can not be verified.

CAUTION: Many metal salts are extremely toxic if inhaled or swallowed. Wash hands thoroughly after handling.

The following procedures may be used for preparing standard stock solutions:

Note: Some metals, particularly those which form surface oxides require cleaning prior to being weighed. This may be achieved by pickling the surface of the metal in acid. An amount in excess of the desired weight should be pickled repeatedly, rinsed with water, dried and weighed until the desired weight is achieved.

- 7.3.1 Aluminum solution, stock 1 mL = 1000 μ g Al: Pickle aluminum metal in warm (1+1) HCl to an exact weight of 0.100 g. Dissolve in 10 mL conc. HCl and 2 mL conc. nitric acid, heating to effect solution. Continue heating until volume is reduced to 4 mL. Cool and add 4 mL reagent grade water. Heat until the volume is reduced to 2 mL. Cool and dilute to 100 mL with reagent grade water.
- 7.3.2 Antimony solution, stock 1 mL = 1000 μ g Sb: Dissolve 0.100 g antimony powder in 2 mL (1+1) nitric acid and 0.5 mL conc. hydrochloric acid, heating to effect solution. Cool, add 20 mL reagent grade water and 0.15 g tartaric acid. Warm the solution to dissolve the white precipitate. Cool and dilute to 100 mL with reagent grade water.
- 7.3.3 Arsenic solution, stock 1 mL = 1000 μ g As: Dissolve 0.1320 g As_2O_3 in a mixture of 50 mL reagent grade water and 1 mL conc. ammonium hydroxide. Heat gently to dissolve. Cool and acidify the solution with 2 mL conc. nitric acid. Dilute to 100 mL with reagent grade water.
- 7.3.4 Barium solution, stock 1 mL = 1000 μ g Ba: Dissolve 0.1437 g BaCO_3 in a solution mixture of 10 mL reagent grade water and 2 mL conc. nitric acid. Heat and stir to effect solution and degassing. Dilute to 100 mL with reagent grade water.
- 7.3.5 Beryllium solution, stock 1 mL = 1000 μ g Be: Dissolve 1.965 g $\text{BeSO}_4 \cdot 4\text{H}_2\text{O}$ (DO NOT DRY) in 50 mL reagent grade water. Add 1 mL conc. nitric acid. Dilute to 100 mL with reagent grade water.
- 7.3.6 Bismuth solution, stock 1 mL = 1000 μ g Bi: Dissolve 0.1115 g Bi_2O_3 in 5 mL conc. nitric acid. Heat to effect solution. Cool and dilute to 100 mL with reagent grade water.
- 7.3.7 Cadmium solution, stock 1 mL = 1000 μ g Cd: Pickle cadmium metal in (1+9) nitric acid to an exact weight of 0.100 g. Dissolve in 5 mL (1+1) nitric acid, heating to effect solution. Cool and dilute to 100 mL with reagent grade water.
- 7.3.8 Chromium solution, stock 1 mL = 1000 μ g Cr: Dissolve 0.1923 g CrO_3 in a solution mixture of 10 mL reagent grade water and 1 mL conc. nitric

acid. Dilute to 100 mL with reagent grade water.

- 7.3.9 Cobalt solution, stock 1 mL = 1000 μ g Co: Pickle cobalt metal in (1+9) nitric acid to an exact weight of 0.100 g. Dissolve in 5 mL (1+1) nitric acid, heating to effect solution. Cool and dilute to 100 mL with reagent grade water.
- 7.3.10 Copper solution, stock 1 mL = 1000 μ g Cu: Pickle copper metal in (1+9) nitric acid to an exact weight of 0.100 g. Dissolve in 5 mL (1+1) nitric acid, heating to effect solution. Cool and dilute to 100 mL with reagent grade water.
- 7.3.11 Gold solution, stock 1 mL = 1000 μ g Au: Dissolve 0.100 g high purity (99.9999%) Au shot in 10 mL of hot conc. nitric acid by dropwise addition of 5 mL conc. HCl and then reflux to expel oxides of nitrogen and chlorine. Cool and dilute to 100 mL with reagent grade water.
- 7.3.12 Indium solution, stock 1 mL = 1000 μ g In: Pickle indium metal in (1+1) nitric acid to an exact weight of 0.100 g. Dissolve in 10 mL (1+1) nitric acid, heating to effect solution. Cool and dilute to 100 mL with reagent grade water.
- 7.3.13 Lead solution, stock 1 mL = 1000 μ g Pb: Dissolve 0.1599 g PbNO_3 in 5 mL (1+1) nitric acid. Dilute to 100 mL with reagent grade water.
- 7.3.14 Magnesium solution, stock 1 mL = 1000 μ g Mg: Dissolve 0.1658 g MgO in 10 mL (1+1) nitric acid, heating to effect solution. Cool and dilute to 100 mL with reagent grade water.
- 7.3.15 Manganese solution, stock 1 mL = 1000 μ g Mn: Pickle manganese flake in (1+9) nitric acid to an exact weight of 0.100 g. Dissolve in 5 mL (1+1) nitric acid, heating to effect solution. Cool and dilute to 100 mL with reagent grade water.
- 7.3.16 Mercury solution, stock, 1 mL = 1000 μ g Hg: DO NOT DRY. CAUTION: highly toxic element. Dissolve 0.1354 g HgCl_2 in reagent water. Add 5.0 mL concentrated HNO_3 and dilute to 100 mL with reagent water.
- 7.3.17 Molybdenum solution, stock 1 mL = 1000 μ g Mo: Dissolve 0.1500 g MoO_3 in a solution mixture of 10 mL reagent grade water and 1 mL conc. ammonium hydroxide., heating to effect solution. Cool and dilute to 100 mL with reagent grade water.
- 7.3.18 Nickel solution, stock 1 mL = 1000 μ g Ni: Dissolve 0.100 g nickel powder in 5 mL conc. nitric acid, heating to effect solution. Cool and dilute to 100 mL with reagent grade water.
- 7.3.19 Scandium solution, stock 1 mL = 1000 μ g Sc: Dissolve 0.1534 g Sc_2O_3 in 5 mL (1+1) nitric acid, heating to effect solution. Cool and dilute to

100 mL with reagent grade water.

- 7.3.20 Selenium solution, stock 1 mL = 1000 μg Se: Dissolve 0.1405 g SeO_2 in 20 mL ASTM Type I water. Dilute to 100 mL with reagent grade water.
- 7.3.21 Silver solution, stock 1 mL = 1000 μg Ag: Dissolve 0.100 g silver metal in 5 mL (1+1) nitric acid, heating to effect solution. Cool and dilute to 100 mL with reagent grade water. Store in dark container.
- 7.3.22 Terbium solution, stock 1 mL = 1000 μg Tb: Dissolve 0.1176 g Tb_4O_7 in 5 mL conc. nitric acid, heating to effect solution. Cool and dilute to 100 mL with reagent grade water.
- 7.3.23 Thallium solution, stock 1 mL = 1000 μg Tl: Dissolve 0.1303 g TlNO_3 in a solution mixture of 10 mL reagent grade water and 1 mL conc. nitric acid. Dilute to 100 mL with reagent grade water.
- 7.3.24 Thorium solution, stock 1 mL = 1000 μg Th: Dissolve 0.2380 g $\text{Th}(\text{NO}_3)_4 \cdot 4\text{H}_2\text{O}$ (DO NOT DRY) in 20 mL reagent grade water. Dilute to 100 mL with reagent grade water.
- 7.3.25 Uranium solution, stock 1 mL = 1000 μg U: Dissolve 0.2110 g $\text{UO}_2(\text{NO}_3)_2 \cdot 6\text{H}_2\text{O}$ (DO NOT DRY) in 20 mL reagent grade water and dilute to 100 mL with reagent grade water.
- 7.3.26 Vanadium solution, stock 1 mL = 1000 μg V: Pickle vanadium metal in (1+9) nitric acid to an exact weight of 0.100 g. Dissolve in 5 mL (1+1) nitric acid, heating to effect solution. Cool and dilute to 100 mL with reagent grade water.
- 7.3.27 Yttrium solution, stock 1 mL = 1000 μg Y: Dissolve 0.1270 g Y_2O_3 in 5 mL (1+1) nitric acid, heating to effect solution. Cool and dilute to 100 mL with reagent grade water.
- 7.3.28 Zinc solution, stock 1 mL = 1000 μg Zn: Pickle zinc metal in (1+9) nitric acid to an exact weight of 0.100 g. Dissolve in 5 mL (1+1) nitric acid, heating to effect solution. Cool and dilute to 100 mL with reagent grade water.

- 7.4 Multielement Stock Standard Solutions - Care must be taken in the preparation of multielement stock standards that the elements are compatible and stable. Originating element stocks should be checked for the presence of impurities which might influence the accuracy of the standard. Freshly prepared standards should be transferred to acid cleaned, not previously used FEP fluorocarbon bottles for storage and monitored periodically for stability. The following combinations of elements are suggested:

Standard Solution A		Standard Solution B
Aluminum	Mercury	Barium
Antimony	Molybdenum	Silver
Arsenic	Nickel	
Beryllium	Selenium	
Cadmium	Thallium	
Chromium	Thorium	
Cobalt	Uranium	
Copper	Vanadium	
Lead	Zinc	
Manganese		

Except for selenium and mercury, multielement stock standard solutions A and B (1 mL = 10 µg) may be prepared by diluting 1.0 mL of each single element stock standard in the combination list to 100 mL with reagent water containing 1% (v/v) nitric acid. For mercury and selenium in solution A, aliquots of 0.05 mL and 5.0 mL of the respective stock standards should be diluted to the specified 100 mL (1 mL = 0.5 µg Hg and 50 µg Se). Replace the multielement stock standards when succeeding dilutions for preparation of the calibration standards cannot be verified with the quality control sample.

7.4.1 Preparation of calibration standards - fresh multielement calibration standards should be prepared every two weeks or as needed. Dilute each of the stock multielement standard solutions A and B to levels appropriate to the operating range of the instrument using reagent water containing 1% (v/v) nitric acid. The element concentrations in the standards should be sufficiently high to produce good measurement precision and to accurately define the slope of the response curve. Depending on the sensitivity of the instrument, concentrations ranging from 10-200 µg/L are suggested, except mercury, which should be limited to ≤5 µg/L. It should be noted the selenium concentration is always a factor of 5 greater than the other analytes. If the direct addition procedure is being used (Method A, Section 10.3), add internal standards (Section 7.5) to the calibration standards and store in FEP bottles. Calibration standards should be verified initially using a quality control sample (Section 7.8).

7.5 Internal Standards Stock Solution - 1 mL = 100 µg. Dilute 10 mL of scandium, yttrium, indium, terbium and bismuth stock standards (Section 7.3) to 100 mL with reagent water, and store in a FEP bottle. Use this solution concentrate for addition to blanks, calibration standards and samples, or dilute by an appropriate amount using 1% (v/v) nitric acid, if the internal standards are being added by peristaltic pump (Method B, Section 10.3).

Note: If mercury is to be determined by the "direct analysis" procedure, add an aliquot of the gold stock standard (Section 7.3.11) to the internal standard solution sufficient to provide a concentration of 100 µg/L in final the dilution of all blanks, calibration standards, and samples.

7.6 Blanks - Three types of blanks are required for this method. A calibration blank is used to establish the analytical calibration curve, the laboratory reagent blank is used to assess possible contamination from the sample preparation procedure and to assess spectral background and the rinse blank is used to flush the instrument between samples in order to reduce memory interferences.

7.6.1 Calibration blank - Consists of 1% (v/v) nitric acid in reagent grade water. If the direct addition procedure (Method A, Section 10.3) is being used, add internal standards.

7.6.2 Laboratory reagent blank (LRB) - Must contain all the reagents in the same volumes as used in processing the samples. The LRB must be carried through the same entire preparation scheme as the samples including digestion, when applicable. If the direct addition procedure (Method A, Section 10.3) is being used, add internal standards to the solution after preparation is complete.

7.6.3 Rinse blank - Consists of 2% (v/v) nitric acid in reagent grade water.

Note: If mercury is to be determined by the "direct analysis" procedure, add gold (Section 7.3.11) to the rinse blank to a concentration of 100 µg/L.

7.7 Tuning Solution - This solution is used for instrument tuning and mass calibration prior to analysis. The solution is prepared by mixing beryllium, magnesium, cobalt, indium and lead stock solutions (Section 7.3) in 1% (v/v) nitric acid to produce a concentration of 100 µg/L of each element. Internal standards are not added to this solution. (Depending on the sensitivity of the instrument, this solution may need to be diluted 10-fold.)

7.8 Quality Control Sample (QCS) - The QCS should be obtained from a source outside the laboratory. The concentration of the QCS solution analyzed will depend on the sensitivity of the instrument. To prepare the QCS dilute an appropriate aliquot of analytes to a concentration ≤ 100 µg/L in 1% (v/v) nitric acid. Because of lower sensitivity, selenium may be diluted to a concentration of < 500 µg/L, however, in all cases, mercury should be limited to a concentration of ≤ 5 µg/L. If the direct addition procedure (Method A, Section 10.3) is being used, add internal standards after dilution, mix and store in a FEP bottle. The QCS should be analyzed as needed to meet data-quality needs and a fresh solution should be prepared quarterly or more frequently as needed.

7.9 Laboratory Fortified Blank (LFB) - To an aliquot of LRB, add aliquots from multielement stock standards A and B (Section 7.4) to prepared the LFB. Depending on the sensitivity of the instrument, the fortified concentration used should range from 40-100 µg/L for each analyte, except selenium and mercury. For selenium the concentration should range from 200-500 µg/L, while the concentration range mercury should be limited to 2-5 µg/L. The LFB must be carried through the same entire preparation scheme as the samples including sample digestion, when applicable. If the direct addition procedure (Method A, Section 10.3) is being used, add internal standards to this solution after

preparation has been completed.

8.0 SAMPLE COLLECTION, PRESERVATION, AND STORAGE

- 8.1 Prior to the collection of an aqueous sample, consideration should be given to the type of data required, (i.e., dissolved or total recoverable), so that appropriate preservation and pretreatment steps can be taken. The pH of all aqueous samples must be tested immediately prior to aliquoting for processing or "direct analysis" to ensure the sample has been properly preserved. If properly acid preserved, the sample can be held up to 6 months before analysis.
- 8.2 For the determination of dissolved elements, the sample must be filtered through a 0.45 μm pore diameter membrane filter at the time of collection or as soon thereafter as practically possible. Use a portion of the sample to rinse the filter flask, discard this portion and collect the required volume of filtrate. Acidify the filtrate with (1+1) nitric acid immediately following filtration to pH <2.
- 8.3 For the determination of total recoverable elements in aqueous samples, samples are not filtered, but acidified with (1+1) nitric acid to pH <2 (normally, 3 mL of (1+1) acid per liter of sample is sufficient for most ambient and drinking water samples). Preservation may be done at the time of collection, however, to avoid the hazards of strong acids in the field, transport restrictions, and possible contamination it is recommended that the samples be returned to the laboratory within two weeks of collection and acid preserved upon receipt in the laboratory. Following acidification, the sample should be mixed, held for 16 hours, and then verified to be pH <2 just prior withdrawing an aliquot for processing or "direct analysis". If for some reason such as high alkalinity the sample pH is verified to be >2, more acid must be added and the sample held for 16 hours until verified to be pH <2. See Section 8.1.

Note: When the nature of the sample is either unknown or known to be hazardous, acidification should be done in a fume hood. See Section 5.2.

- 8.4 Solid samples require no preservation prior to analysis other than storage at 4°C. There is no established holding time limitation for solid samples.
- 8.5 For aqueous samples, a field blank should be prepared and analyzed as required by the data user. Use the same container and acid as used in sample collection.

9.0 QUALITY CONTROL

- 9.1 Each laboratory using this method is required to operate a formal quality control (QC) program. The minimum requirements of this program consist of an initial demonstration of laboratory capability, and the periodic analysis of laboratory reagent blanks, fortified blanks and calibration solutions as a continuing check on performance. The laboratory is required to maintain performance records that define the quality of the data thus generated.
- 9.2 Initial Demonstration of Performance (mandatory)

- 9.2.1 The initial demonstration of performance is used to characterize instrument performance (determination of linear calibration ranges and analysis of quality control samples) and laboratory performance (determination of method detection limits) prior to analyses conducted by this method.
- 9.2.2 Linear calibration ranges - Linear calibration ranges are primarily detector limited. The upper limit of the linear calibration range should be established for each analyte by determining the signal responses from a minimum of three different concentration standards, one of which is close to the upper limit of the linear range. Care should be taken to avoid potential damage to the detector during this process. The linear calibration range which may be used for the analysis of samples should be judged by the analyst from the resulting data. The upper LDR limit should be an observed signal no more than 10% below the level extrapolated from lower standards. Determined sample analyte concentrations that are greater than 90% of the determined upper LDR limit must be diluted and reanalyzed. The LDRs should be verified whenever, in the judgement of the analyst, a change in analytical performance caused by either a change in instrument hardware or operating conditions would dictate they be redetermined.
- 9.2.3 Quality control sample (QCS) - When beginning the use of this method, on a quarterly basis or as required to meet data-quality needs, verify the calibration standards and acceptable instrument performance with the preparation and analyses of a QCS (Section 7.8). To verify the calibration standards the determined mean concentration from three analyses of the QCS must be within $\pm 10\%$ of the stated QCS value. If the QCS is used for determining acceptable on-going instrument performance, analysis of the QCS prepared to a concentration of 100 $\mu\text{g/L}$ must be within $\pm 10\%$ of the stated value or within the acceptance limits listed in Table 8, whichever is the greater. (If the QCS is not within the required limits, an immediate second analysis of the QCS is recommended to confirm unacceptable performance.) If the calibration standards and/or acceptable instrument performance cannot be verified, the source of the problem must be identified and corrected before either proceeding on with the initial determination of method detection limits or continuing with on-going analyses.
- 9.2.4 Method detection limits (MDL) should be established for all analytes, using reagent water (blank) fortified at a concentration of two to five times the estimated detection limit.⁷ To determine MDL values, take seven replicate aliquots of the fortified reagent water and process through the entire analytical method. Perform all calculations defined in the method and report the concentration values in the appropriate units. Calculate the MDL as follows:

$$\text{MDL} = (t) \times (S)$$

where:

t = Student's t value for a 99% confidence level and a standard deviation estimate with n-1 degrees of freedom (t = 3.14 for seven replicates)

S = standard deviation of the replicate analyses

Note: If additional confirmation is desired, reanalyze the seven replicate aliquots on two more nonconsecutive days and again calculate the MDL values for each day. An average of the three MDL values for each analyte may provide for a more appropriate MDL estimate. If the relative standard deviation (RSD) from the analyses of the seven aliquots is <10%, the concentration used to determine the analyte MDL may have been inappropriately high for the determination. If so, this could result in the calculation of an unrealistically low MDL. Concurrently, determination of MDL in reagent water represents a best case situation and does not reflect possible matrix effects of real world samples. However, successful analyses of LFMs (Section 9.4) can give confidence to the MDL value determined in reagent water. Typical single laboratory MDL values using this method are given in Table 7.

The MDLs must be sufficient to detect analytes at the required levels according to compliance monitoring regulation (Section 1.2). MDLs should be determined annually, when a new operator begins work or whenever, in the judgement of the analyst, a change in analytical performance caused by either a change in instrument hardware or operating conditions would dictate they be redetermined.

9.3 Assessing Laboratory Performance (mandatory)

9.3.1 Laboratory reagent blank (LRB) - The laboratory must analyze at least one LRB (Section 7.6.2) with each batch of 20 or fewer of samples of the same matrix. LRB data are used to assess contamination from the laboratory environment and to characterize spectral background from the reagents used in sample processing. LRB values that exceed the MDL indicate laboratory or reagent contamination should be suspected. When LRB values constitute 10% or more of the analyte level determined for a sample or is 2.2 times the analyte MDL whichever is greater, fresh aliquots of the samples must be prepared and analyzed again for the affected analytes after the source of contamination has been corrected and acceptable LRB values have been obtained.

9.3.2 Laboratory fortified blank (LFB) - The laboratory must analyze at least one LFB (Section 7.9) with each batch of samples. Calculate accuracy as percent recovery using the following equation:

$$R = \frac{LFB - LRB}{s} \times 100$$

where:

- R = percent recovery
- LFB = laboratory fortified blank
- LRB = laboratory reagent blank
- s = concentration equivalent of analyte added to fortify the LBR solution

If the recovery of any analyte falls outside the required control limits of 85-115%, that analyte is judged out of control, and the source of the problem should be identified and resolved before continuing analyses.

- 9.3.3 The laboratory must use LFB analyses data to assess laboratory performance against the required control limits of 85-115% (Section 9.3.2). When sufficient internal performance data become available (usually a minimum of 20-30 analyses), optional control limits can be developed from the mean percent recovery (\bar{x}) and the standard deviation (S) of the mean percent recovery. These data can be used to establish the upper and lower control limits as follows:

$$\text{UPPER CONTROL LIMIT} = \bar{x} + 3S$$

$$\text{LOWER CONTROL LIMIT} = \bar{x} - 3S$$

The optional control limits must be equal to or better than the required control limits of 85-115%. After each five to ten new recovery measurements, new control limits can be calculated using only the most recent 20-30 data points. Also, the standard deviation (S) data should be used to establish an on-going precision statement for the level of concentrations included in the LFB. These data must be kept on file and be available for review.

- 9.3.4 Instrument performance - For all determinations the laboratory must check instrument performance and verify that the instrument is properly calibrated on a continuing basis. To verify calibration run the calibration blank and calibration standards as surrogate samples immediately following each calibration routine, after every ten analyses and at the end of the sample run. The results of the analyses of the standards will indicate whether the calibration remains valid. The analysis of all analytes within the standard solutions must be within $\pm 10\%$ of calibration. If the calibration cannot be verified within the specified limits, the instrument must be recalibrated. (The instrument responses from the calibration check may be used for recalibration purposes, however, it must be verified before continuing sample analysis.) If the continuing calibration check is not confirmed within $\pm 15\%$, the previous 10 samples must be reanalyzed after recalibration. If the sample matrix is responsible for the calibration drift, it is recommended that the previous 10 samples are reanalyzed in groups of five between calibration checks to prevent a similar drift situation from occurring.

9.4 Assessing Analyte Recovery and Data Quality

- 9.4.1 Sample homogeneity and the chemical nature of the sample matrix can affect analyte recovery and the quality of the data. Taking separate aliquots from the sample for replicate and fortified analyses can in some cases assess the effect. Unless otherwise specified by the data user, laboratory or program, the following laboratory fortified matrix (LFM) procedure (Section 9.4.2) is required.
- 9.4.2 The laboratory must add a known amount of analyte to a minimum of 10% of the routine samples. In each case the LFM aliquot must be a duplicate of the aliquot used for sample analysis and for total recoverable determinations added prior to sample preparation. For water samples, the added analyte concentration must be the same as that used in the laboratory fortified blank (Section 7.9). For solid samples, the concentration added should be 100 mg/kg equivalent (200 µg/L in the analysis solution) except silver which should be limited to 50 mg/kg (Section 1.8). Over time, samples from all routine sample sources should be fortified.
- 9.4.3 Calculate the percent recovery for each analyte, corrected for background concentrations measured in the unfortified sample, and compare these values to the designated LFM recovery range of 70-130%. Recovery calculations are not required if the concentration of the analyte added is less than 30% of the sample background concentration. Percent recovery may be calculated in units appropriate to the matrix, using the following equation:

$$R = \frac{C_s - C}{s} \times 100$$

where:

R = percent recovery

C_s = fortified sample concentration

C = sample background concentration

s = concentration equivalent of analyte added to fortify the sample

- 9.4.4 If recovery of any analyte falls outside the designated range and laboratory performance for that analyte is shown to be in control (Section 9.3), the recovery problem encountered with the fortified sample is judged to be matrix related, not system related. The data user should be informed that the result for that analyte in the unfortified sample is suspect due to either the heterogeneous nature of the sample or an uncorrected matrix effect.
- 9.4.5 Internal standards responses - The analyst is expected to monitor the responses from the internal standards throughout the sample set being

analyzed. Ratios of the internal standards responses against each other should also be monitored routinely. This information may be used to detect potential problems caused by mass dependent drift, errors incurred in adding the internal standards or increases in the concentrations of individual internal standards caused by background contributions from the sample. The absolute response of any one internal standard must not deviate more than 60-125% of the original response in the calibration blank. If deviations greater than these are observed, flush the instrument with the rinse blank and monitor the responses in the calibration blank. If the responses of the internal standards are now within the limit, take a fresh aliquot of the sample, dilute by a further factor of two, add the internal standards and reanalyze. If after flushing the response of the internal standards in the calibration blank are out of limits, terminate the analysis and determine the cause of the drift. Possible causes of drift may be a partially blocked sampling cone or a change in the tuning condition of the instrument.

10.0 CALIBRATION AND STANDARDIZATION

- 10.1 Operating conditions - Because of the diversity of instrument hardware, no detailed instrument operating conditions are provided. The analyst is advised to follow the recommended operating conditions provided by the manufacturer. It is the responsibility of the analyst to verify that the instrument configuration and operating conditions satisfy the analytical requirements and to maintain quality control data verifying instrument performance and analytical results. Instrument operating conditions which were used to generate precision and recovery data for this method (Section 13.0) are included in Table 6.
- 10.2 Precalibration routine - The following precalibration routine must be completed prior to calibrating the instrument until such time it can be documented with periodic performance data that the instrument meets the criteria listed below without daily tuning.
 - 10.2.1 Initiate proper operating configuration of instrument and data system. Allow a period of not less than 30 minutes for the instrument to warm up. During this process conduct mass calibration and resolution checks using the tuning solution. Resolution at low mass is indicated by magnesium isotopes 24, 25, and 26. Resolution at high mass is indicated by lead isotopes 206, 207, and 208. For good performance adjust spectrometer resolution to produce a peak width of approximately 0.75 amu at 5% peak height. Adjust mass calibration if it has shifted by more than 0.1 amu from unit mass.
 - 10.2.2 Instrument stability must be demonstrated by running the tuning solution (Section 7.7) a minimum of five times with resulting relative standard deviations of absolute signals for all analytes of less than 5%.
- 10.3 Internal Standardization - Internal standardization must be used in all analyses to correct for instrument drift and physical interferences. A list of acceptable

internal standards is provided in Table 3. For full mass range scans, a minimum of three internal standards must be used. Procedures described in this method for general application, detail the use of five internal standards; scandium, yttrium, indium, terbium and bismuth. These were used to generate the precision and recovery data attached to this method. Internal standards must be present in all samples, standards and blanks at identical levels. This may be achieved by directly adding an aliquot of the internal standards to the CAL standard, blank or sample solution (Method A, Section 10.3), or alternatively by mixing with the solution prior to nebulization using a second channel of the peristaltic pump and a mixing coil (Method B, Section 10.3). The concentration of the internal standard should be sufficiently high that good precision is obtained in the measurement of the isotope used for data correction and to minimize the possibility of correction errors if the internal standard is naturally present in the sample. Depending on the sensitivity of the instrument, a concentration range of 20-200 µg/L of each internal standard is recommended. Internal standards should be added to blanks, samples and standards in a like manner, so that dilution effects resulting from the addition may be disregarded.

- 10.4 Calibration - Prior to initial calibration, set up proper instrument software routines for quantitative analysis. The instrument must be calibrated using one of the internal standard routines (Method A or B) described in Section 10.3. The instrument must be calibrated for the analytes to be determined using the calibration blank (Section 7.6.1) and calibration standards A and B (Section 7.4.1) prepared at one or more concentration levels. A minimum of three replicate integrations are required for data acquisition. Use the average of the integrations for instrument calibration and data reporting.
- 10.5 The rinse blank should be used to flush the system between solution changes for blanks, standards and samples. Allow sufficient rinse time to remove traces of the previous sample (Section 4.1.5). Solutions should be aspirated for 30 seconds prior to the acquisition of data to allow equilibrium to be established.

11.0 PROCEDURE

11.1 Aqueous Sample Preparation - Dissolved Analytes

- 11.1.1 For the determination of dissolved analytes in ground and surface waters, pipet an aliquot (≥20 mL) of the filtered, acid preserved sample into a 50 mL polypropylene centrifuge tube. Add an appropriate volume of (1+1) nitric acid to adjust the acid concentration of the aliquot to approximate a 1% (v/v) nitric acid solution (e.g., add 0.4 mL (1+1) HNO₃ to a 20 mL aliquot of sample). If the direct addition procedure (Method A, Section 10.3) is being used, add internal standards, cap the tube and mix. The sample is now ready for analysis (Section 1.2). Allowance for sample dilution should be made in the calculations.

Note: If a precipitate is formed during acidification, transport, or storage, the sample aliquot must be treated using the procedure in Section 11.2 prior to analysis.

11.2 Aqueous Sample Preparation - Total Recoverable Analytes

11.2.1 For the "direct analysis" of total recoverable analytes in drinking water samples containing turbidity <1 NTU, treat an unfiltered acid preserved sample aliquot using the sample preparation procedure described in Section 11.1.1 while making allowance for sample dilution in the data calculation. For the determination of total recoverable analytes in all other aqueous samples or for preconcentrating drinking water samples prior to analysis follow the procedure given in Sections 11.2.2 through 11.2.8.

11.2.2 For the determination of total recoverable analytes in aqueous samples (other than drinking water with <1 NTU turbidity), transfer a 100 mL (± 1 mL) aliquot from a well mixed, acid preserved sample to a 250 mL Griffin beaker (Sections 1.2, 1.3, 1.7, and 1.8). (When necessary, smaller sample aliquot volumes may be used.)

Note: If the sample contains undissolved solids >1%, a well mixed, acid preserved aliquot containing no more than 1 g particulate material should be cautiously evaporated to near 10 mL and extracted using the acid-mixture procedure described in Sections 11.3.3 through 11.3.7.

11.2.3 Add 2 mL (1+1) nitric acid and 1.0 mL of (1+1) hydrochloric acid to the beaker containing the measured volume of sample. Place the beaker on the hot plate for solution evaporation. The hot plate should be located in a fume hood and previously adjusted to provide evaporation at a temperature of approximately but no higher than 85°C. (See the following note.) The beaker should be covered with an elevated watch glass or other necessary steps should be taken to prevent sample contamination from the fume hood environment.

Note: For proper heating adjust the temperature control of the hot plate such that an uncovered Griffin beaker containing 50 mL of water placed in the center of the hot plate can be maintained at a temperature approximately but no higher than 85°C. (Once the beaker is covered with a watch glass the temperature of the water will rise to approximately 95°C.)

11.2.4 Reduce the volume of the sample aliquot to about 20 mL by gentle heating at 85°C. DO NOT BOIL. This step takes about two hours for a 100 mL aliquot with the rate of evaporation rapidly increasing as the sample volume approaches 20 mL. (A spare beaker containing 20 mL of water can be used as a gauge.)

11.2.5 Cover the lip of the beaker with a watch glass to reduce additional evaporation and gently reflux the sample for 30 minutes. (Slight boiling may occur, but vigorous boiling must be avoided to prevent loss of the HCl-H₂O azeotrope.)

11.2.6 Allow the beaker to cool. Quantitatively transfer the sample solution to

a 50 mL volumetric flask or 50 mL class A stoppered graduated cylinder, make to volume with reagent water, stopper and mix.

11.2.7 Allow any undissolved material to settle overnight, or centrifuge a portion of the prepared sample until clear. (If after centrifuging or standing overnight the sample contains suspended solids that would clog the nebulizer, a portion of the sample may be filtered for their removal prior to analysis. However, care should be exercised to avoid potential contamination from filtration.)

11.2.8 Prior to analysis, adjust the chloride concentration by pipetting 20 mL of the prepared solution into a 50 mL volumetric flask, dilute to volume with reagent water and mix. (If the dissolved solids in this solution are >0.2%, additional dilution may be required to prevent clogging of the extraction and/or skimmer cones. If the direct addition procedure (Method A, Section 10.3) is being used, add internal standards and mix. The sample is now ready for analysis. Because the effects of various matrices on the stability of diluted samples cannot be characterized, all analyses should be performed as soon as possible after the completed preparation.

11.3 Solid Sample Preparation - Total Recoverable Analytes

11.3.1 For the determination of total recoverable analytes in solid samples, mix the sample thoroughly and transfer a portion (>20 g) to tared weighing dish, weigh the sample and record the wet weight (WW). (For samples with <35% moisture a 20 g portion is sufficient. For samples with moisture >35% a larger aliquot 50-100 g is required.) Dry the sample to a constant weight at 60°C and record the dry weight (DW) for calculation of percent solids (Section 12.6). (The sample is dried at 60°C to prevent the loss of mercury and other possible volatile metallic compounds, to facilitate sieving, and to ready the sample for grinding.)

11.3.2 To achieve homogeneity, sieve the dried sample using a 5-mesh polypropylene sieve and grind in a mortar and pestle. (The sieve, mortar and pestle should be cleaned between samples.) From the dried, ground material weigh accurately a representative 1.0 ± 0.01 g aliquot (W) of the sample and transfer to a 250 mL Phillips beaker for acid extraction.

11.3.3 To the beaker add 4 mL of (1+1) HNO₃ and 10 mL of (1+4) HCl. Cover the lip of the beaker with a watch glass. Place the beaker on a hot plate for reflux extraction of the analytes. The hot plate should be located in a fume hood and previously adjusted to provide a reflux temperature of approximately 95°C. (See the following note.)

Note: For proper heating adjust the temperature control of the hot plate such that an uncovered Griffin beaker containing 50 mL of water placed in the center of the hot plate can be maintained at a temperature approximately but no higher than 85°C. (Once the beaker is covered with a watch glass the temperature of the water will rise to approximately

95°C.) Also, a block digester capable of maintaining a temperature of 95°C and equipped with 250 mL constricted volumetric digestion tubes may be substituted for the hot plate and conical beakers in the extraction step.

- 11.3.4 Heat the sample and gently reflux for 30 minutes. Very slight boiling may occur, however vigorous boiling must be avoided to prevent loss of the HCl-H₂O azeotrope. Some solution evaporation will occur (3-4 mL).
- 11.3.5 Allow the sample to cool and quantitatively transfer the extract to a 100 mL volumetric flask. Dilute to volume with reagent water, stopper and mix.
- 11.3.6 Allow the sample extract solution to stand overnight to separate insoluble material or centrifuge a portion of the sample solution until clear. (If after centrifuging or standing overnight the extract solution contains suspended solids that would clog the nebulizer, a portion of the extract solution may be filtered for their removal prior to analysis. However, care should be exercised to avoid potential contamination from filtration.)
- 11.3.7 Prior to analysis, adjust the chloride concentration by pipetting 20 mL of the prepared solution into a 100 mL volumetric flask, dilute to volume with reagent water and mix. (If the dissolved solids in this solution are >0.2%, additional dilution may be required to prevent clogging of the extraction and/or skimmer cones. If the direct addition procedure (Method A, Section 10.3) is being used, add internal standards and mix. The sample extract is now ready for analysis. Because the effects of various matrices on the stability of diluted samples cannot be characterized, all analyses should be performed as soon as possible after the completed preparation.

Note: Determine the percent solids in the sample for use in calculations and for reporting data on a dry weight basis.

11.4 Sample Analysis

- 11.4.1 For every new or unusual matrix, it is highly recommended that a semi-quantitative analysis be carried out to screen the sample for elements at high concentration. Information gained from this may be used to prevent potential damage to the detector during sample analysis and to identify elements which may be higher than the linear range. Matrix screening may be carried out by using intelligent software, if available, or by diluting the sample by a factor of 500 and analyzing in a semi-quantitative mode. The sample should also be screened for background levels of all elements chosen for use as internal standards in order to prevent bias in the calculation of the analytical data.
- 11.4.2 Initiate instrument operating configuration. Tune and calibrate the instrument for the analytes of interest (Section 10.0).

- 11.4.3 Establish instrument software run procedures for quantitative analysis. For all sample analyses, a minimum of three replicate integrations are required for data acquisition. Use the average of the integrations for data reporting.
- 11.4.4 All masses which might affect data quality must be monitored during the analytical run. As a minimum, those masses prescribed in Table 4 must be monitored in the same scan as is used for the collection of the data. This information should be used to correct the data for identified interferences.
- 11.4.5 During the analysis of samples, the laboratory must comply with the required quality control described in Sections 9.3 and 9.4. Only for the determination of dissolved analytes or the "direct analysis" of drinking water with turbidity of <1 NTU is the sample digestion step of the LRB, LFB, and LFM not required.
- 11.4.6 The rinse blank should be used to flush the system between samples. Allow sufficient time to remove traces of the previous sample or a minimum of one minute (Section 4.1.5). Samples should be aspirated for 30 seconds prior to the collection of data.
- 11.4.7 Samples having concentrations higher than the established linear dynamic range should be diluted into range and reanalyzed. The sample should first be analyzed for the trace elements in the sample, protecting the detector from the high concentration elements, if necessary, by the selection of appropriate scanning windows. The sample should then be diluted for the determination of the remaining elements. Alternatively, the dynamic range may be adjusted by selecting an alternative isotope of lower natural abundance, provided quality control data for that isotope have been established. The dynamic range must not be adjusted by altering instrument conditions to an uncharacterized state.

12.0 DATA ANALYSIS AND CALCULATIONS

- 12.1 Elemental equations recommended for sample data calculations are listed in Table 5. Sample data should be reported in units of $\mu\text{g/L}$ for aqueous samples or mg/kg dry weight for solid samples. Do not report element concentrations below the determined MDL.
- 12.2 For data values less than 10, two significant figures should be used for reporting element concentrations. For data values greater than or equal to 10, three significant figures should be used.
- 12.3 For aqueous samples prepared by total recoverable procedure (Section 11.2), multiply solution concentrations by the dilution factor 1.25. If additional dilutions were made to any samples or an aqueous sample was prepared using the acid-mixture procedure described in Section 11.3, the appropriate factor should be applied to the calculated sample concentrations.

- 12.4 For total recoverable analytes in solid samples (Section 11.3), round the solution

calculate the mg/L analyte concentration in the 100 mL extract solution. (If additional dilutions were made to any samples, the appropriate factor should be applied to calculate analyte concentrations in the extract solution.) Report the data up to three significant figures as mg/kg dry-weight basis unless specified otherwise by the program or data user. Calculate the concentration using the equation below:

$$\text{Sample Conc. (mg/kg)}_{\text{dry-weight basis}} = \frac{C \times V}{W}$$

where:

C = Concentration in the extract (mg/L)
V = Volume of extract (L, 100 mL = 0.1L)
W = Weight of sample aliquot extracted (g x 0.001 = kg)

Do not report analyte data below the estimated solids MDL or an adjusted MDL because of additional dilutions required to complete the analysis.

- 12.5 To report percent solids in solid samples (Sect. 11.3) calculate as follows:

$$\% \text{ solids (S)} = \frac{DW}{WW} \times 100$$

where:

DW = Sample weight (g) dried at 60°C
WW = Sample weight (g) before drying

Note: If the data user, program or laboratory requires that the reported percent solids be determined by drying at 105°C, repeat the procedure given in Section 11.3 using a separate portion (>20 g) of the sample and dry to constant weight at 103-105°C.

- 12.6 Data values should be corrected for instrument drift or sample matrix induced interferences by the application of internal standardization. Corrections for characterized spectral interferences should be applied to the data. Chloride interference corrections should be made on all samples, regardless of the addition of hydrochloric acid, as the chloride ion is a common constituent of environmental samples.
- 12.7 If an element has more than one monitored isotope, examination of the concentration calculated for each isotope, or the isotope ratios, will provide useful information for the analyst in detecting a possible spectral interference.

Consideration should therefore be given to both primary and secondary isotopes in the evaluation of the element concentration. In some cases, secondary isotopes may be less sensitive or more prone to interferences than the primary recommended isotopes, therefore differences between the results do not necessarily indicate a problem with data calculated for the primary isotopes.

- 12.8 The QC data obtained during the analyses provide an indication of the quality of the sample data and should be provided with the sample results.

13.0 METHOD PERFORMANCE

- 13.1 Instrument operating conditions used for single laboratory testing of the method are summarized in Table 6. Total recoverable digestion and "direct analysis" MDLs determined using the procedure described in Section 9.2.4, are listed in Table 7.
- 13.2 Data obtained from single laboratory testing of the method are summarized in Table 9 for five water samples representing drinking water, surface water, ground water and waste effluent. Samples were prepared using the procedure described in Section 11.2. For each matrix, five replicates were analyzed and the average of the replicates used for determining the sample background concentration for each element. Two further pairs of duplicates were fortified at different concentration levels. For each method element, the sample background concentration, mean percent recovery, the standard deviation of the percent recovery and the relative percent difference between the duplicate fortified samples are listed in Table 8.
- 13.3 Data obtained from single laboratory testing of the method are summarized in Table 10 for three solid samples consisting of SRM 1645 River Sediment, EPA Hazardous Soil and EPA Electroplating Sludge. Samples were prepared using the procedure described in Section 11.3. For each method element, the sample background concentration, mean percent recovery, the standard deviation of the percent recovery and the relative percent difference between the duplicate fortified samples were determined as for Section 13.2.
- 13.4 Data obtained from single laboratory testing of the method for drinking water analysis using the "direct analysis" procedure (Section 11.2.1) are given in Table 11. Three drinking water samples of varying hardness collected from

For each matrix, four replicate aliquots were analyzed to determine the sample background concentration of each analyte and four fortified aliquots were analyzed to determine mean percent recovery in each matrix. Listed in the Table 11 are the average mean percent recovery of each analyte in the three matrices and the standard deviation of the mean percent recoveries.

- 13.5 Listed in Table 12 are the regression equations for precision and bias developed from the joint USEPA/Association of Official Analytical Chemists (AOAC) multilaboratory validation study conducted on this method. These equations

were developed from data received from 13 laboratories on reagent water, drinking water and ground water. Listed in Tables 13 and 14, respectively, are the precision and recovery data from a wastewater digestate supplied to all laboratories and from a wastewater of the participant's choice. For a complete review of the study see Reference 11, Section 16.0 of this method.

14.0 POLLUTION PREVENTION

- 14.1 Pollution prevention encompasses any technique that reduces or eliminates the quantity or toxicity of waste at the point of generation. Numerous opportunities for pollution prevention exist in laboratory operation. The EPA has established a preferred hierarchy of environmental management techniques that places pollution prevention as the management option of first choice. Whenever feasible, laboratory personnel should use pollution prevention techniques to address their waste generation. When wastes cannot be feasibly reduced at the source, the Agency recommends recycling as the next best option.
- 14.2 For information about pollution prevention that may be applicable to laboratories and research institutions, consult "Less is Better: Laboratory Chemical Management for Waste Reduction", available from the American Chemical Society's Department of Government Relations and Science Policy, 1155 16th Street N.W., Washington D.C. 20036, (202)872-4477.

15.0 WASTE MANAGEMENT

- 15.1 The Environmental Protection Agency requires that laboratory waste management practices be conducted consistent with all applicable rules and regulations. The Agency urges laboratories to protect the air, water, and land by minimizing and controlling all releases from hoods and bench operations, complying with the letter and spirit of any sewer discharge permits and regulations, and by complying with all solid and hazardous waste regulations, particularly the hazardous waste identification rules and land disposal restrictions. For further information on waste management consult "The Waste Management Manual for Laboratory Personnel", available from the American Chemical Society at the address listed in the Section 14.2.

16.0 REFERENCES

1. Gray, A.L. and A. R. Date. Inductively Coupled Plasma Source Mass Spectrometry Using Continuum Flow Ion Extraction. *Analyst* 108 1033-1050, 1983.
2. Houk, R.S. et al. Inductively Coupled Argon Plasma as an Ion Source for Mass Spectrometric Determination of Trace Elements. *Anal. Chem.* 52 2283-2289, 1980.
3. Houk, R.S. Mass Spectrometry of Inductively Coupled Plasmas. *Anal. Chem.* 58 97A-105A, 1986.
4. Thompson, J.J. and R. S. Houk. A Study of Internal Standardization in Inductively Coupled Plasma-Mass Spectrometry. *Appl. Spec.* 41 801-806, 1987.

5. Carcinogens - Working With Carcinogens, Department of Health, Education, and Welfare, Public Health Service, Center for Disease Control, National Institute for Occupational Safety and Health, Publication No. 77-206, Aug. 1977. Available from the National Technical Information Service (NTIS) as PB-277256.
6. OSHA Safety and Health Standards, General Industry, (29 CFR 1910), Occupational Safety and Health Administration, OSHA 2206, (Revised, January 1976).
7. Safety in Academic Chemistry Laboratories, American Chemical Society Publication, Committee on Chemical Safety, 3rd Edition, 1979.
8. Proposed OSHA Safety and Health Standards, Laboratories, Occupational Safety and Health Administration, Federal Register, July 24, 1986.
9. American Society for Testing and Materials. Standard Specification for Reagent Water, D1193-77. Annual Book of ASTM Standards, Vol. 11.01. Philadelphia, PA, 1991.
10. Code of Federal Regulations 40, Ch. 1, Pt. 136 Appendix B.
11. Longbottom, J.E. et. al. Determination of Trace Elements in Water by Inductively Coupled Plasma-Mass Spectrometry: Collaborative Study, Journal of AOAC International 77 1004-1023, 1994.
12. Hinnert, T.A. Interferences in ICP-MS by Bromine Species. Winter Conference on Plasma Spectrochemistry, San Diego, CA, January, 10-15, 1994.