



WASTE PILE SAMPLING

SOP#: 2017
DATE: 11/17/94
REV. #: 0.0

1.0 SCOPE AND APPLICATION

The objective of this standard operating procedure (SOP) is to outline the equipment and methods used in collecting representative samples from waste piles, sludges or other solid or liquid waste mixed with soil.

These are standard (i.e., typically applicable) operating procedures which may be varied or changed as required, dependent on site conditions, equipment limitations or other procedure limitations. In all instances, the ultimate procedures employed should be documented and associated with the final report.

Mention of trade names or commercial products does not constitute U.S. EPA endorsement or recommendation for use.

2.0 METHOD SUMMARY

Stainless steel shovels, trowels, or scoops should be used to clear away surface material before samples are collected. For depth samples, a decontaminated auger may be required to advance the hole, then another decontaminated auger used for sample collection. For a sample core, thin-wall tube samplers or grain samplers may be used. Near surfaces, samples can be collected with a clean stainless steel spoon or trowel.

All samples collected, except those for volatile organic analysis, should be placed into a Teflon lined or stainless steel pail and mixed thoroughly before transfer to appropriate sample container.

3.0 SAMPLE PRESERVATION, CONTAINERS, HANDLING, AND STORAGE

Chemical preservation of solids is generally not recommended. Refrigeration to 4°C is usually the best approach, supplemented by a minimal holding time, depending on contaminants of concern.

Wide mouth glass containers with Teflon lined caps are typically used for waste pile samples. Sample volume required is a function of the analytical requirements and should be specified in the work plan.

4.0 INTERFERENCES AND POTENTIAL PROBLEMS

There are several variables involved in waste sampling, including shape and size of piles, compactness, and structure of the waste material. Shape and size of waste material or waste piles vary greatly in areal extent and height. Since state and federal regulations often require a specified number of samples per volume of waste, the size and shape must be used to calculate volume and to plan for the correct number of samples. Shape must also be accounted for when planning physical access to the sampling point and the equipment necessary to successfully collect the sample at that location.

Material to be sampled may be homogeneous or heterogeneous. Homogeneous material resulting from known situations may not require an extensive sampling protocol. Heterogeneous and unknown wastes require more extensive sampling and analysis to ensure the different components (i.e. layers, strata) are being represented.

The term "representative sample" is commonly used to denote a sample that has the properties and composition of the population from which it was collected and in the same proportions as found in the population. This can be misleading unless one is dealing with a homogenous waste from which one sample can represent the whole population.

The usual options for obtaining the most "representative sample" from waste piles are simple random sampling or stratified random sampling. Simple random sampling is the method of choice unless: (1) there are known distinct strata; (2) one wants to prove or disprove that there are distinct

strata; or (3) one is limited in the number of samples and desires to statistically minimize the size of a "hot spot" that could go unsampled. If any of these conditions exist, stratified random sampling would be the better strategy.

Stratified random sampling can be employed only if all points within the pile can be accessed. In such cases, the pile should be divided into a three-dimensional grid system with, the grid cubes should be numbered, and the grid cubes to be sampled should be chosen by random number tables or generators. The only exceptions to this are situations in which representative samples cannot be collected safely or where the investigative team is trying to determine worst case conditions.

If sampling is limited to certain portions of the pile, a statistically based sample will be representative only of that portion, unless the waste is homogenous.

5.0 EQUIPMENT/APPARATUS

Waste pile solids include powdered, granular, or block materials of various sizes, shapes, structure, and compactness. The type of sampler chosen should be compatible with the waste. Samplers commonly used for waste piles include: stainless steel scoops, shovels, trowels, spoons, and stainless steel hand augers, sampling triers, and grain samplers.

Waste pile sampling equipment check list:

- Sampling plan
- Maps/plot plan
- Safety equipment, as specified in the Health and Safety Plan
- Compass
- Tape measure
- Survey stakes or flags
- Camera and film
- Stainless steel, plastic, or other appropriate homogenization bucket or bowl
- Appropriate size sample jars
- Ziplock plastic bags
- Logbook
- Labels
- Chain of Custody records and seals
- Field data sheets
- Cooler(s)
- Ice
- Decontamination supplies/equipment

- Canvas or plastic sheet
- Spade or shovel
- Spatula
- Scoop
- Plastic or stainless steel spoons
- Trowel
- Continuous flight (screw) augers
- Bucket auger
- Post hole auger
- Extension rods
- T-Handle
- Thin-wall tube sampler with cutting tips
- Sampling trier
- Grain sampler

6.0 REAGENTS

No chemical reagents are used for the preservation of waste pile samples; however, decontamination solutions may be required. If decontamination of equipment is required, refer to the Sampling Equipment Decontamination SOP, and the site specific work plan.

7.0 PROCEDURES

7.1 Preparation

1. Review all information available on the waste pile and expected or unknown contaminants.
2. Determine the extent of the sampling effort, the sampling methods to be employed, and the types and amounts of equipment and supplies required.
3. Obtain necessary sampling and monitoring equipment.
4. Decontaminate or pre-clean equipment, and ensure that it is in working order.
5. Prepare schedules, and coordinate with staff, client, and regulatory agencies, if appropriate.
6. Perform a general site survey prior to site entry in accordance with the site specific Health and Safety Plan.
7. Use stakes or flagging to identify and mark

all sampling locations. Specific site factors, including extent and nature of contaminant should be considered when selecting sample locations. If required, the proposed locations may be adjusted based on site access, property boundaries, and surface obstructions.

7.2 Sample Collection

7.2.1 Sampling with Shovels and Scoops

Collection of samples from surface portions of the pile can be accomplished with tools such as spades, shovels, and scoops. Surface material can be removed to the required depth with this equipment, then a stainless steel or plastic scoop, or equivalent can be used to collect the sample.

Accurate, representative samples can be collected with this procedure depending on the care and precision demonstrated by sample team members. Use of a flat, pointed mason trowel to cut a block of the desired material can be helpful when undisturbed profiles are required. A stainless steel scoop, lab spoon, plastic spoon, or equivalent will suffice in most other applications. Care should be exercised to avoid the use of devices plated with chrome or other materials. Plating is particularly common with implements such as garden trowels.

The following procedure is used to collect the surface samples:

1. Carefully remove the top layer of material to the desired sample depth with a pre-cleaned spade.
2. Using a pre-cleaned stainless steel scoop, plastic spoon, trowel, or equivalent remove and discard a thin layer of material from the area which came in contact with the spade.
3. If volatile organic analysis is to be performed, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, or equivalent, and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container, and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the

caps tightly; or, if composite samples are to be collected, place a sample from another sampling interval into the homogenization container and mix thoroughly. When compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.

7.2.2 Sampling with Bucket Augers and Thin-Wall Tube Samplers

These samplers consist of a series of extensions, a "T" handle, and a bucket auger or thin-wall tube sampler (Appendix A, Figure 1). The auger is used to bore a hole to a desired sampling depth, and is then withdrawn. The sample may be collected directly from the bucket auger. If a core sample is to be collected, the auger tip is then replaced with a thin-wall tube sampler. The sampler is then lowered down the borehole, and driven into the pile to the completion depth. The sampler is withdrawn and the core collected from the thin-wall tube sampler.

Several augers are available. These include: bucket, continuous flight (screw), and post hole augers. Bucket augers are better for direct sample recovery since they provide a large volume of sample in a short time. When continuous flight augers are used, the sample can be collected directly from the flights, which are usually at five (5) foot intervals. The continuous flight augers are satisfactory for use when a composite of the complete waste pile column is desired. Post hole augers have limited utility for sample collection as they are designed to cut through fibrous, rooted, swampy areas.

The following procedure will be used for collecting waste pile samples with the bucket augers and thin-wall tube samplers:

1. Attach the auger bit to a drill rod extension, and attach the "T" handle to the drill rod.
2. Clear the area to be sampled of any surface debris. It may be advisable to remove the first three to six inches of surface material for an area approximately six inches in radius around the drilling location.
3. Begin augering, periodically removing and depositing accumulated materials onto a plastic sheet spread near the hole. This prevents accidental brushing of loose

material back down the borehole when removing the auger or adding drill rod extensions. It also facilitates refilling the hole, and avoids possible contamination of the surrounding area.

4. After reaching the desired depth, slowly and carefully remove the auger from the borehole. When sampling directly from the auger, collect the sample after the auger is removed from the borehole and proceed to Step 10.
5. Remove auger tip from drill rods and replace with a pre-cleaned thin-wall tube sampler. Install proper cutting tip.
6. Carefully lower the tube sampler down the borehole. Gradually force the tube sampler into the pile. Care should be taken to avoid scraping the borehole sides. Avoid hammering the drill rod extensions to facilitate coring as the vibrations may cause the borehole walls to collapse.
7. Remove the tube sampler, and unscrew the drill rod extensions.
8. Remove the cutting tip and the thin-wall tube sampler.
9. Discard the top of the core (approximately one-inch), as this represents material collected before penetration of the layer of concern. Place the remaining core into the appropriate labeled sample container. Sample homogenization is not required.
10. If volatile organic analysis is to be performed, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container, and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the caps tightly; or, if composite samples are to be collected, place a sample from another sampling interval into the homogenization

container and mix thoroughly. When compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.

11. If another sample is to be collected in the same hole, but at a greater depth, reattach the bucket auger to the drill and assembly, and follow steps 3 through 11, making sure to decontaminate the bucket auger and thin-wall tube sampler between samples.

7.2.3 Sampling with a Trier

This sampling device consists of a trier, and a "T" handle. The trier is driven into the waste pile and used to extract a core sample from the appropriate depth.

The following procedure will be used to collect waste pile samples with a sampling trier:

1. Insert the trier (Appendix A, Figure 2) into the material to be sampled at a 0° to 45° angle from horizontal. This orientation minimizes spillage of the sample. Extraction of the samples might require tilting of the sample containers.
2. Rotate the trier once or twice to cut a core of material.
3. Slowly withdraw the trier, making sure that the slot is facing upward.
4. If volatile organic analysis is to be performed, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, plastic lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container, and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the caps tightly; or, if composite samples are being collected, place samples from the other sampling intervals into the homogenization container and mix thoroughly. When compositing is complete, place the sample

into appropriate, labeled containers and secure the caps tightly.

7.2.4 Sampling with a Grain Sampler

The grain sampler (Appendix A, Figure 3) is used for sampling powdered or granular wastes or materials in bags, fiber drums, sacks, similar containers or piles. This sampler is most useful when the solids are no greater than 0.6 cm (1/4") in diameter.

This sampler consists of two slotted telescoping brass or stainless steel tubes. The outer tube has a conical, pointed tip at one end that permits the sampler to penetrate the material being sampled. The sampler is opened and closed by rotating the inner tube. Grain samplers are generally 61 to 100 cm (24 to 40 in.) long by 1.27 to 2.54 cm (1/2 to 1 in.) in diameter and are commercially available at laboratory supply houses.

The following procedures will be used to collect waste pile samples with a grain sampler:

1. With the sampler in the closed position, insert it into the granular or powdered material or waste being sampled from a point near a top edge or corner, through the center, and to a point diagonally opposite the point of entry.
2. Rotate the sampler inner tube into the open position.
3. Wiggle the sampler a few times to allow material to enter the open slots.
4. Place the sampler in the closed position and withdraw from the material being sampled.
5. Place the sampler in a horizontal position with the slots facing upward.
6. Rotate the outer tube and slide it away from the inner tube.
7. If volatile organic analysis is to be performed, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, plastic lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container, and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the caps tightly; or, if composite samples are to be collected, place a sample from another sampling interval into the homogenization container and mix thoroughly. When compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.

8.0 CALCULATIONS

This section is not applicable to this SOP.

9.0 QUALITY ASSURANCE/ QUALITY CONTROL

There are no specific quality assurance activities which apply to the implementation of these procedures. However, the following QA procedures apply:

1. All data must be documented on field data sheets or within site logbooks.
2. All instrumentation must be operated in accordance with operating instructions as supplied by the manufacturer, unless otherwise specified in the work plan. Equipment checkout and calibration activities must occur prior to sampling/operation, and they must be documented.

10.0 DATA VALIDATION

This section is not applicable to this SOP.

11.0 HEALTH AND SAFETY

When working with potentially hazardous materials, follow U.S. EPA/OSHA and corporate health and safety procedures.

12.0 REFERENCES

Test Methods for Evaluating Solids Waste (SW-846), Third Edition, Vol. II Field Manual U.S. EPA Office of Solid Waste and Emergency Response, Washington, D.C. November, 1986.


Engineering Support Branch Standard Operating Procedures and Quality Assurance Manual, U.S. Environmental Protection Agency, Region IV, April 1, 1986.

Field Sampling Procedures Manual, New Jersey Department of Environmental Protection, February, 1988.

APPENDIX A

Figures


FIGURE 1. Sampling Augers

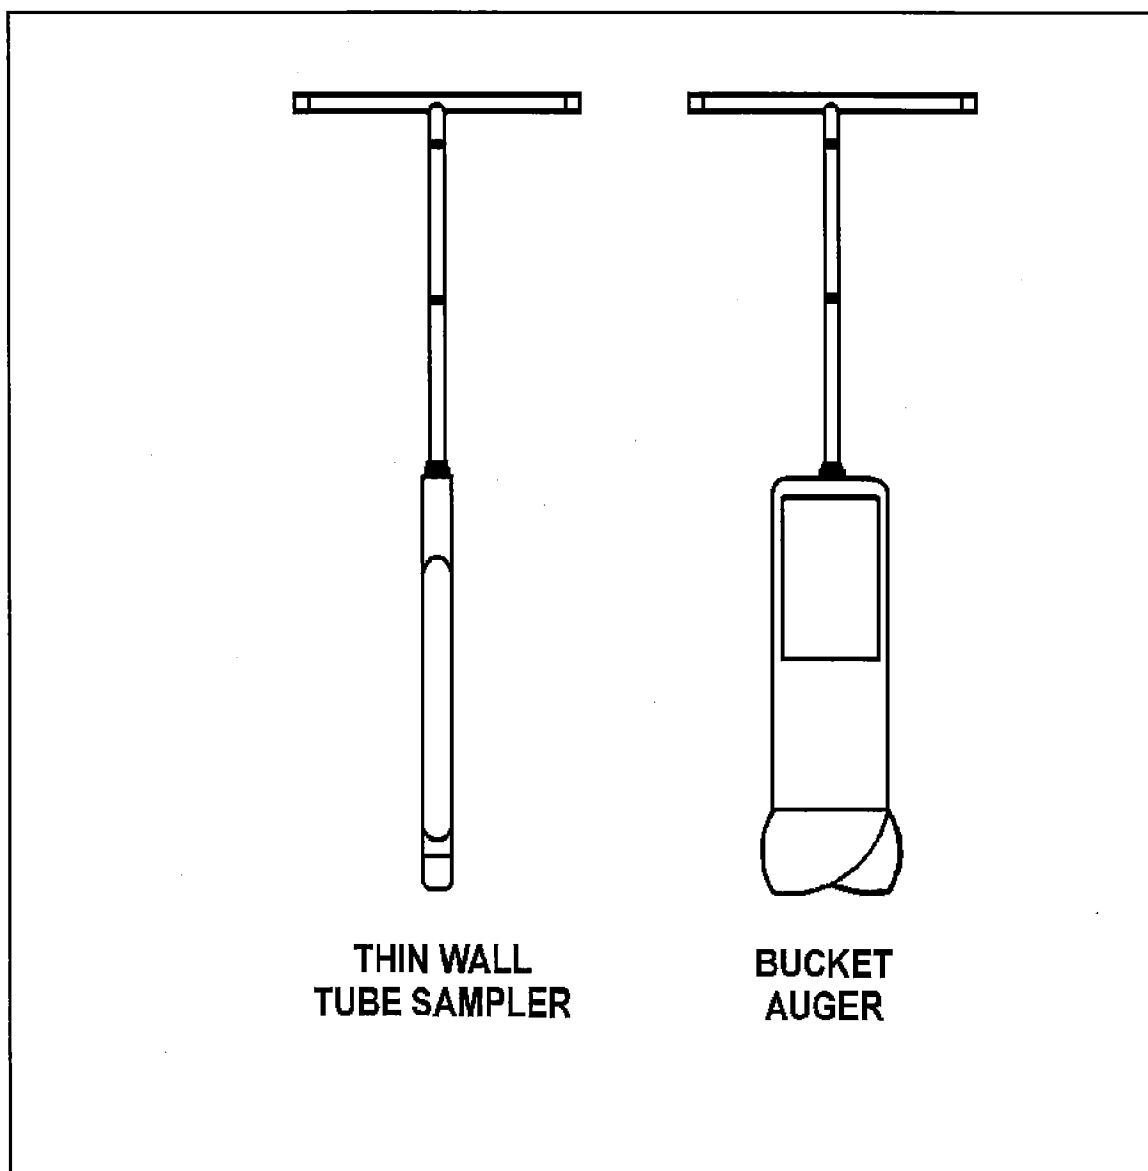

APPENDIX A (Cont'd)

Figures


FIGURE 2. Sampling Trier

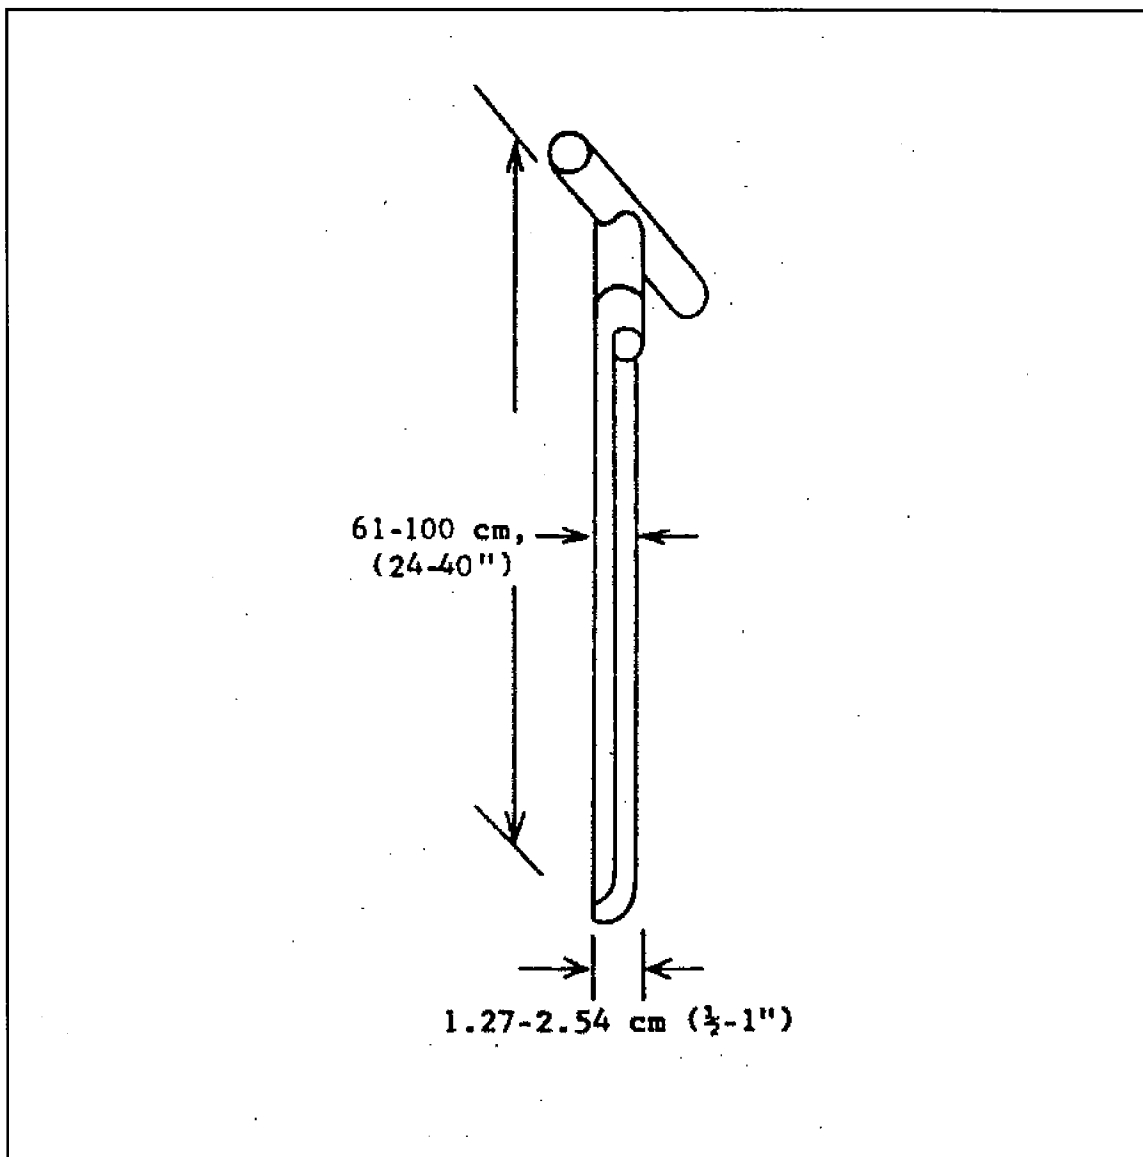

APPENDIX A (Cont'd)

Figures

FIGURE 3. Grain Sampler

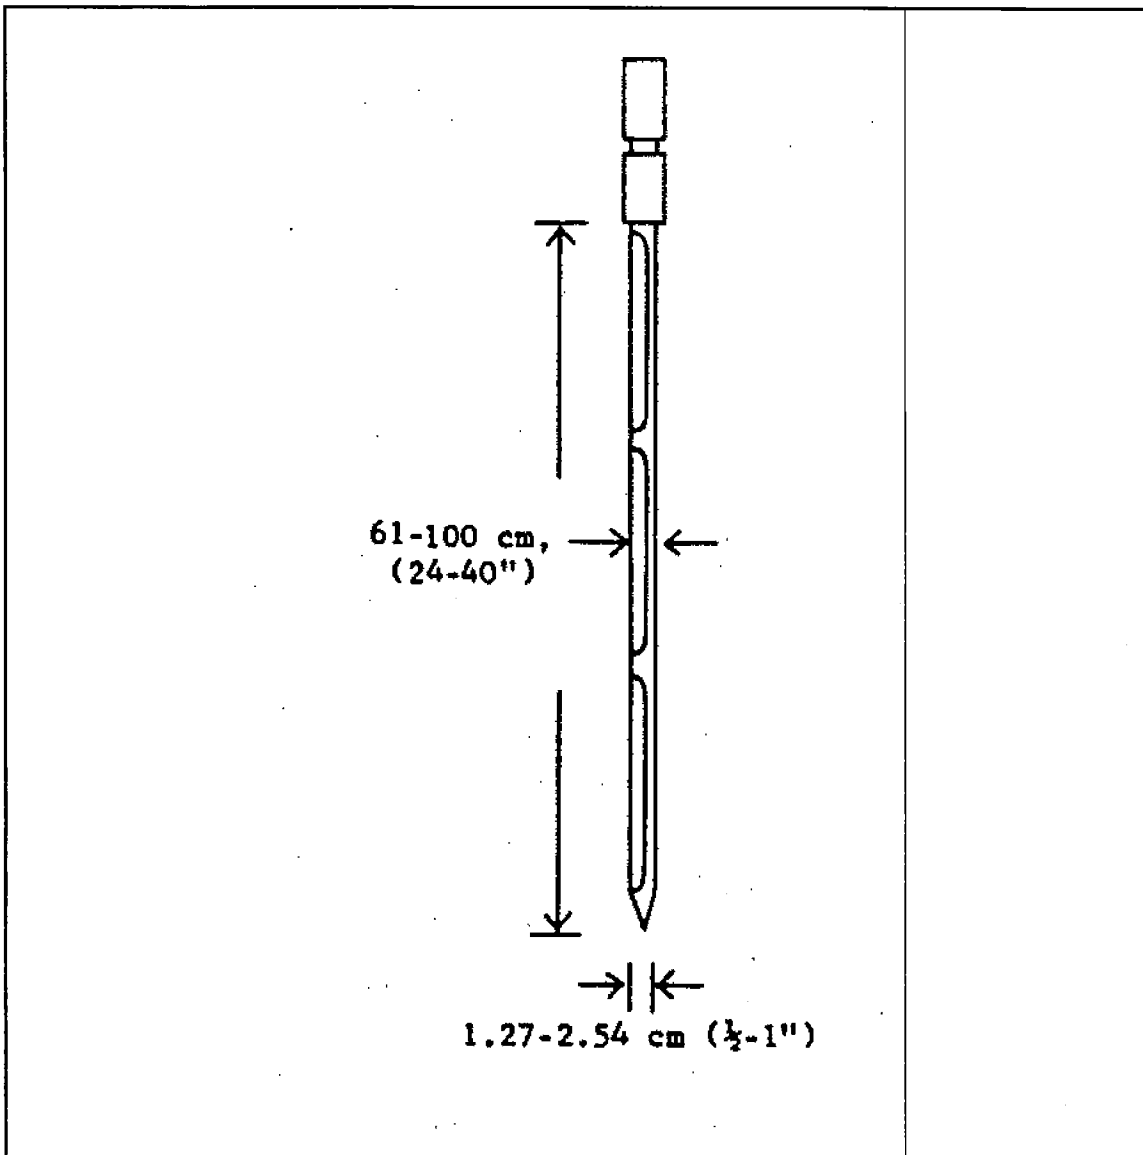

SUPERFUND TECHNICAL ASSESSMENT RESPONSE TEAM
STANDARD OPERATING PROCEDURES

SOP 403
WASTE PILE SAMPLING

1.0 SCOPE AND APPLICATION

The objective of this Standard Operating Procedure (SOP) is to outline the equipment and methods used to collect representative samples from waste piles, sludges or other solid or liquid waste mixed with soil.

2.0 METHOD SUMMARY

Stainless steel shovels or scoops should be used to clear away surface material before samples are collected. For samples at depth, a decontaminated auger may be required to advance the hole, then another decontaminated auger used for sample collection. For a sample core, thin-wall tube samplers or grain samplers may be used. Near surfaces samples can be collected with a clean stainless steel spoon or trowel.

All samples collected, except those for volatile organic analysis, should be placed into a Teflon-lined or stainless steel pail and mixed thoroughly before being transferred to an appropriate sample container.

3.0 SAMPLE PRESERVATION, CONTAINERS, HANDLING AND STORAGE

Chemical preservation of solids is generally not recommended. Refrigeration to 4°C is usually the best approach, supplemented by a minimal holding time.

Wide mouth glass containers with Teflon-lined caps are typically used for waste pile samples. Sample volume required is a function of the analytical requirements and should be specified in the work plan.

4.0 INTERFERENCES AND POTENTIAL PROBLEMS

There are several variables involved in waste sampling, including shape and size of piles, compactness, and structure of the waste material. Shape and size of waste material piles vary greatly in area extent and height. Since state and federal regulations often require a specified number of samples per volume of waste, size and shape must be used to calculate volume and to plan for the correct number of samples. Shape must also be accounted for when planning physical access to the sampling point and when selecting the appropriate equipment to successfully collect the sample at that location.

Material to be sampled may be homogeneous or heterogeneous. Homogeneous material

resulting from known situations may not require an extensive sampling protocol. Heterogeneous and unknown wastes require more extensive sampling and analysis to ensure the different components are being represented.

The term "representative sample" is commonly used to denote a sample that has the properties and composition of the population from which it was collected, in the sample proportions as found in the population. This can be misleading unless one is dealing with a homogenous waste from which one sample can represent the whole population.

The usual options for obtaining the most "representative sample" from waste piles are simple or stratified random sampling. Simple random sampling is the method of choice unless (1) there are known distinct strata; (2) one wants to prove or disprove that there are distinct strata; or (3) one is limited in the number of samples and desires to minimize the size of a "hot spot" that could go unsampled. If any of these conditions exist, stratified random sampling would be the better strategy.

This strategy, however, can be employed only if all points within the pile can be accessed. In such cases, the pile should be divided into a three-dimensional grid system; the grid sections assigned numbers; and the sampling points chosen using random-number tables or random-number generators. The only exceptions to this are situations in which representative samples cannot be collected safely or where the investigative team is trying to determine worst-case conditions. If sampling is limited to certain portions of the pile, a statistically based sample will be representative only of that portion, unless the waste is homogenous.

5.0 EQUIPMENT/APPARATUS

While pile solids include powdered, granular, or block materials of various sizes, shapes, structure, and compactness. The type of sampler chosen should be compatible with the waste. Samplers should be compatible with the waste. Samplers commonly used for waste piles include: stainless steel scoops, shovels, trowels, spoons, and stainless steel hand augers, sampling triers, and grain samplers.

Waste pile sampling equipment check list:

- sampling plan
- maps/plot plan
- safety equipment, as specified in the health and safety plan
- compass
- tape measure
- survey stakes or flags
- camera and film
- stainless steel, plastic, or other appropriate homogenization bucket or bowl
- 1-quart mason jars w/Teflon liners
- Ziploc plastic bags
- logbook

- labels
- chain of custody forms and seals
- field data sheets
- cooler(s)
- ice
- decontamination supplies/equipment
- canvas or plastic sheet
- spade or shovel
- spatula
- scoop
- plastic or stainless steel spoons
- trowel
- continuous flight (screw) auger
- bucket auger
- post hole auger
- extension rods
- T-handle
- thin-wall tube sampler
- sampling trier
- grain sampler

6.0 REAGENTS

No chemical reagents are used for the preservation of waste pile samples; however, decontamination solutions may be required. If decontamination of equipment is required, refer to SOP No. 301, Decontamination Procedures, and the site specific work plan.

7.0 PROCEDURES

7.1 Preparation

1. Determine the extent of the sampling effort, the sampling methods to be employed, and which equipment and supplies are required.
2. Obtain necessary sampling and monitoring equipment.

3. Decontaminate or preclean equipment, and ensure that it is in working order.
4. Prepare schedules, and coordinate with staff, client, and regulatory agencies, if appropriate.
5. Perform a general site survey prior to site entry in accordance with the site-specific health and safety plan.
6. Use stakes or flagging to identify and mark all sampling locations. Specific site factors, including extent and nature of contaminants, should be considered when selecting sample locations. If required, the proposed locations may be adjusted based on site access, property boundaries, and surface obstructions.

7.2 Sample Collection

SAMPLING WITH SHOVELS AND SCOOPS

Collection of samples from surface portions of the pile can be accomplished with tools such as spades, shovels, and scoops. Surface material can be removed to the required depth with this equipment, then a stainless steel or plastic scoop can be used to collect the sample.

Accurate, representative samples can be collected with procedure depending on the care and precision demonstrated by sample team members. Use of a flat, pointed mason trowel to cut a block of the desired material can be helpful when undisturbed profiles are required. A stainless steel scoop, lab spoon, or plastic spoon will suffice in most other applications. Care should be exercised to avoid the use of devices plated with chrome or other materials. Plating is particularly common in implements such as garden trowels.

Use the following procedure to collect surface samples:

1. Carefully remove the top layer of material to the desired sample depth with a precleaned spade.
2. Using a precleaned stainless steel scoop, plastic spoon, or trowel, remove and discard a thin layer of material from the area which came in contact with the spade.
3. If volatile organic analysis is to be performed, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, plastic lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container, and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate,

labeled containers and secure the caps tightly; or, if composite samples are to be collected, place a sample from another sampling interval into the homogenization container and mix thoroughly. When compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.

SAMPLING WITH AUGERS AND THIN-WALL TUBE SAMPLERS

This system consists of an auger, a series of extensions, a "T" handle, and a thin-wall tube sampler. The Auger is used to bore a hole to a desired sampling depth, and is then withdrawn. The sample may be collected directly from the auger. If a core sample is to be collected, the auger tip is then replaced with a thin-wall tube sampler. The system is then lowered down the borehole, and driven into the pile at the completion depth. The system is withdrawn and the core collected from the thin-wall tube sampler.

Several augers are available. These include: bucket, continuous flight (screw), and post hole augers. Bucket augers are better for direct sample recovery since they provide a large volume of sample in a short time. When continuous flight augers are used, the sample can be collected directly from the flights, which are usually at 5-foot intervals. The continuous flight augers are satisfactory for use when a composite of the complete waste pile column is desired. Post hole augers have limited utility for sample collection as they are designed to cut through fibrous, rooted, or swampy areas.

Use the following procedure for collecting waste pile samples with the auger:

1. Attach the auger bit to a drill rod extension, and attach the "T" handle to the drill rod.
2. Using a precleaned stainless steel scoop, plastic spoon, or trowel, remove and discard a thin layer of material from the area which came in contact with the spade.
3. If volatile organic analysis is to be performed, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, plastic lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container, and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the caps tightly; or, if composite samples are to be collected, place a sample from another sampling interval into the homogenization container and mix thoroughly. When compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.

SAMPLING WITH AUGERS AND THIN-WALL TUBE SAMPLERS

This system consists of an auger, a series of extensions, a "T" handle, and a thin-wall tube sampler. The auger is used to bore a hole to the desired sampling depth, and is then withdrawn. The sample may be collected directly from the auger. If a core sample is to be collected, the auger tip is then replaced with a thin-wall tube sampler. The system is then lowered down the borehole, and driven into the pile at the completion depth. The system is withdrawn and the core collected from the thin-wall tube sampler.

Several augers are available. These include: bucket, continuous flight (screw), and post hole augers. Bucket augers are better for direct sample recovery since they provide a large volume of sample in a short time. When continuous flight augers are used, the sample can be collected directly from the flights, which are usually at 5-foot intervals. The continuous flight augers are satisfactory for use when a composite of the complete waste pile column is desired. Post hole augers have limited utility for sample collection as they are designed to cut through fibrous, rooted, or swampy areas.

Use the following procedure for collecting waste pile samples with the auger:

1. Attach the auger bit to a drill rod extension, and attach the "T" handle to the drill rod.
2. Clear the area to be sampled of any surface debris. It may be advisable to remove the first 3 to 6 inches of surface material from an area approximately 6 inches in radius around the drilling location.
3. Begin augering, periodically removing and depositing accumulated materials onto a plastic sheet spread near the hole. This prevents accidental brushing of loose material back down the borehole when removing the auger or adding drill rods. It also facilitates refilling the hole, and avoids possible contamination of the surrounding area.
4. After reaching the desired depth, slowly and carefully remove the auger from boring. When sampling directly from the auger, collect the sample after the auger is removed from boring and proceed to Step 10.
5. Remove auger tip from drill rods and replace with a precleaned thin-wall tube sampler. Install proper cutting tip.
6. Carefully lower the tube sampler down the borehole. Gradually force the tube sampler into the pile. Care should be taken to avoid scraping the borehole sides. Avoid hammering the drill rods to facilitate coring as the vibrations may cause the boring walls to collapse.
7. Remove the tube sampler, and unscrew the drill rods.

8. Remove the cutting tip and the core from the device.
9. Discard the top of the core (approximately 1-inch), as this represents material collected before penetration of the layer of concern. Place the remaining core into the appropriate labeled sample container. Sample homogenization is not required.
10. If volatile organic analysis is to be performed, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, plastic lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container, and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the caps tightly; or, if composite samples are to be collected, place a sample from another sampling interval into the homogenization container and mix thoroughly. When compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.
11. If another sample is to be collected in the same hole, but at a greater depth, reattach the auger bit to the drill and assembly, and follow steps 3 through 11, making sure to decontaminate the auger and tube sampler between samples.

SAMPLING WITH A TRIER

This system consists of a trier and a "T" handle. The auger is driven into the waste pile and used to extract a core sample from the appropriate depth.

Use the following procedure to collect waste pile samples with a sampling trier:

1. Insert the trier into the material to be sampled at a 0° to 45° angle from horizontal. This orientation minimizes spillage of the sample. Extraction of the samples might require tilting of the sample containers.
2. Rotate the trier once or twice to cut a core of material.
3. Slowly withdraw the trier, making sure that the slot is facing upward.
4. If volatile organic analysis is to be performed, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, plastic lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container, and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the caps tightly; or if composite samples are being collected, place samples from the other sampling intervals into the

homogenization container and mix thoroughly. When compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.

SAMPLING WITH A GRAIN SAMPLER

The grain sampler is used for sampling powdered or granular wastes or materials in bags, fiberdrums, sacks, similar containers or piles. This sampler is most useful when the solids are no greater than 0.6 cm (1/4 inch) in diameter.

This sampler consists of two slotted telescoping brass or stainless steel tubes. The outer tube has a conical, pointed tip at one end that permits the sampler to penetrate the material being sampled. The sampler is opened and closed by rotating the inner tube. Grain samplers are generally 61 to 100 cm (24 to 40 inch) long by 1.27 to 2.54 cm (1/2 to 1 inch) in diameter and are commercially available at laboratory supply houses.

Use the following procedures to collect waste pile samples with a grain sampler:

1. With the sampler in the closed position, insert it into the granular or powdered material or waste being sampled from a point near a top edge or corner, through the center, and to a point diagonally opposite the point of entry.
2. Rotate the sampler inner tube into the open position.
3. Wiggle the sampler a few times to allow material to enter the open slots.
4. With the sampler in the closed position, withdraw it from the material being sampled.
5. Place the sampler in a horizontal position with the slots facing upward.
6. Rotate the outer tube and slide it away from the inner tube.
7. If volatile organic analysis is to be performed, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, plastic lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container, and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the caps tightly; or, if composite samples are to be collected, place a sample from another sampling interval into the homogenization

container and mix thoroughly. When compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.

8.0 CALCULATIONS

This section is not applicable to this SOP.

9.0 QUALITY ASSURANCE/QUALITY CONTROL

There are no specific quality assurance activities which apply to the implementation of these procedures. However, the following QA procedures apply:

- All data must be documented on field data sheets or within site logbooks.
- All instrumentation must be operated in accordance with operating instructions as supplied by the manufacturer, unless otherwise specified in the work plan. Equipment checkout and calibration activities must occur prior to sampling/operation, and they must be documented.

10.0 DATA VALIDATION

This section is not applicable to this SOP.

11.0 HEALTH AND SAFETY

When working with potentially hazardous materials, follow U.S. EPA, OSHA and specific health and safety procedures.

12.0 REFERENCES

EPA. 1991. Compendium of ERT Waste Sampling Procedures. Office of Solid Waste and Emergency Response, Washington, DC. EPA/540/P-91/009.