



1076028

ATTACHMENT A
Standard Operating Procedures

Project-Specific Modification

SOP No.: 1-2


SOP Title: Sample Custody

Project: Libby Asbestos Remedial Investigation (RI)

Project No.: 3282-137

Client: U.S. Environmental Protection Agency

Project Manager:  Date: 5/7/03

Technical Reviewer:  Date: 5/7/03

QA Reviewer:  Date: 5/12/03

EPA Approval:  Date: 5/19/03

NOTE: Each media (soil/dust) must be submitted on separate COC forms.

The sample coordinator assistant will use the FSDS to complete an electronic chain of custody (eCOC). The sample coordinator will check the data entered to create the eCOC against the FSDSs. Three paper copies of the eCOC will then be generated. One copy will be filed in the CDM Libby office and the other two will be sent with the samples. The sample coordinator will then check the eCOC versus the sample containers and sample shipment. The sample coordinator will be responsible for shipment of samples. If any errors are found on an eCOC after shipment, the paper copy of the COC will be corrected by the sample coordinator with a single strikeout initial and date. The corrected copy will be faxed to Volpe and the laboratory. The fax to Volpe will be used to update the Libby project database.

Reason for and duration of modification: Sample custody procedures for the Libby asbestos project vary slightly from SOP 1-2. These modifications are necessary for the entire duration of the project.

Project-Specific Modification

Via: Hand delivery or shipped. Hand delivery refers to samples delivered by hand to the onsite laboratory; shipped refers to samples sent to the laboratory by delivery service (i.e., Federal Express). To be completed by the sample coordinator.

Project: All samples collected in accordance with this sampling and analysis plan (SAP) are part of the CSS. Circle CSS. To be completed by the field team.

Sample Placed in Cooler/Bag: Refers to visual confirmation of the sample in the shipping container. To be completed by the sample coordinator.

Index ID: Unique index identification number used to identify sample, in the form CSS-####. To be completed by the field team.

Sample Date: The date each sample was collected, in the form MM/DD/YY. To be completed by the field team.

Sample Time: The time each sample was collected, in military time. To be completed by the field team.

Sample Matrix: The matrix of each sample collected, specific to the CSS; S = soil and W = water. To be completed by the field team.

Sample Type: Sample type of each sample collected; G = grab, C = composite. To be completed by the field team.

Volume: Specific to air and dust samples. Does not pertain to the CSS. "NA" should be placed in this field. To be completed by the field team.

Analysis Request: Analysis of each sample collected. All soil samples will be analyzed by IR. IR will be written in the analysis request portion of the COC form by the field team. The sample coordinator and/or laboratory coordinator may request SEM analysis based on Table 5-2 of the SAP. The sample coordinator and/or laboratory coordinator will designate IR for the appropriate samples.

Comments: Any pertinent information regarding the sample (i.e., vermiculite visible) will be entered by either the field team or the sample coordinator.

Sample Received by Lab: To be checked by the sample custodian at the laboratory upon receipt of the samples to confirm presence of each sample on the COC record.

Project-Specific Modification

Total Number of Samples: Total number of samples on the COC form. To be completed by the field team.

Additional Comments: Any additional comments that relate to samples on the COC form (i.e., turn around times). To be completed by the field team or sample coordinator.

Relinquished by: (1) Signed by field team member that relinquishes samples to sample coordinator and company of person relinquishing samples to sample coordinator (i.e., CDM). Date of relinquish shall be in the form MM/DD/YY and time shall be in military time. (2) Additional relinquished by lines to be completed following standard sample custody procedures.

Received by: (1) Signed by sample coordinator that receives samples from the sampling team and company of person accepting samples from the field teams (i.e., CDM). Date and time of acceptance should be the same as date and time of relinquish. (2) Additional received by lines to be completed following standard sample custody procedures.

Sample Condition upon Receipt: Will reflect the condition of samples at the relinquish time (i.e., accept ok or not acceptable with an explanation). To be completed by the person receiving samples.

Page ___ of ___: Sequential page number of the entire COC set sent to the laboratory. To be completed by the sample coordinator.

Sample Custody

SOP 1-2

Revision: 4

Date: March 1, 2004

Page 1 of 7

Prepared: David O. Johnson

Technical Review: Shelley Thibeault

QA Review: Laura Splichal

Approved: Michael C. Mally 2/24/04

Issued:  2/18/04
Signature/Date

Signature/Date

1.0 Objective

Due to the evidentiary nature of samples collected during environmental investigations, possession must be traceable from the time the samples are collected until their derived data are introduced as evidence in legal proceedings. To maintain and document sample possession, sample custody procedures are followed. All paperwork associated with the sample custody procedures will be retained in CDM Federal Programs Corporation (CDM) files unless the client requests that it be transferred to them for use in legal proceedings or at the completion of the contract.

Note: Sample custody documentation requirements vary with the specific EPA region or client. This SOP is intended to present basic sample custody requirements, along with common options. Specific sample custody requirements should be presented in the project-specific quality assurance (QA) project plan or project-specific modification or clarification form (see Section U-1).

2.0 Background

2.1 Definitions

Sample – A sample is material to be analyzed that is contained in single or multiple containers representing a unique sample identification number.

Sample Custody – A sample is under custody if:

1. It is in your possession
2. It is in your view, after being in your possession
3. It was in your possession and you locked it up
4. It is in a designated secure area

Chain-of-Custody Record – A chain-of-custody record is a form used to document the transfer of custody of samples from one individual to another.

Custody Seal – A custody seal is a tape-like seal that is part of the chain-of-custody process and is used to detect tampering with samples after they have been packed for shipping.

Sample Label – A sample label is an adhesive label placed on sample containers to designate a sample identification number and other sampling information.

Sample Tag – A sample tag is attached with string to a sample container to designate a sample identification number and other sampling information. Tags may be used when it is difficult to physically place adhesive labels on the container (e.g., in the case of small air sampling tubes).

3.0 Responsibilities

Sampler – The sampler is personally responsible for the care and custody of the samples collected until they are properly transferred or dispatched.

Field Team Leader – The field team leader (FTL) is responsible for ensuring that strict chain-of-custody procedures are maintained during all sampling events. The FTL is also responsible for coordinating with the subcontractor laboratory to ensure that adequate information is recorded on custody records. The FTL determines whether proper custody procedures were followed during the fieldwork and decides if additional samples are required.

Field Sample Custodian – The field sample custodian, when designated by the FTL, is responsible for accepting custody of samples from the sampler(s) and properly packing and shipping the samples to the laboratory assigned to do the analyses. A field sample custodian is typically designated only for large and complex field efforts.

4.0 Required Supplies

- Chain-of-custody records (applicable client or CDM forms)
- Sample labels or tags
- Custody seals
- Clear tape

5.0 Procedures

5.1 Chain-of-Custody Record

This procedure establishes a method for maintaining custody of samples through use of a chain-of-custody record. This procedure will be followed for all samples collected or split samples accepted.

Field Custody

1. Collect only the number of samples needed to represent the media being sampled. To the extent possible, determine the quantity and types of samples and sample locations prior to the actual fieldwork. As few people as possible should handle samples.
2. Complete sample labels or tags for each sample using waterproof ink.
3. Maintain personal custody of the samples (in your possession) at all times until custody is transferred for sample shipment or directly to the analytical laboratory.

Transfer of Custody and Shipment

1. Complete a chain-of-custody record for all samples (see Figure 1 for an example of a chain-of-custody record. Similar forms may be used when requested by the client). When transferring the possession of samples, the individuals relinquishing and receiving will sign, date, and note the time on the record. This record documents sample custody transfer from the sampler, often through another person, to the sample custodian in the appropriate laboratory.
 - The date/time will be the same for both signatures when custody is transferred directly to another person. When samples are shipped via common carrier (e.g., Federal Express), the

Sample Custody

SOP 1-2

Revision: 4

Date: March 1, 2004

Page 3 of 7

date/time will not be the same for both signatures. Common carriers are not required to sign the chain-of-custody record.

- In all cases, it must be readily apparent that the person who received custody is the same person who relinquished custody to the next custodian.
- If samples are left unattended or a person refuses to sign, this must be documented and explained on the chain-of-custody record.

Note: If a field sample custodian has been designated, he/she may initiate the chain-of-custody record, sign, and date as the relinquisher. The individual sampler(s) must sign in the appropriate block, but does (do) not need to sign and date as a relinquisher (refer to Figure 1).

2. Package samples properly for shipment and dispatch to the appropriate laboratory for analysis. Each shipment must be accompanied by a separate chain-of-custody record. If a shipment consists of multiple coolers, samples in the coolers may be recorded on a single chain-of-custody record.
3. The original record will accompany the shipment, and the copies will be retained by the FTL and, if applicable, distributed to the appropriate sample coordinators. Freight bills will also be retained by the FTL as part of the permanent documentation. The shipping number from the freight bill shall be recorded on the applicable chain-of-custody record.

Procedure for Completing CDM Example Chain-of-Custody Record

The following procedure is to be used to fill out the CDM chain-of-custody record. The record provided herein (Figure 1) is an example chain-of-custody record. If another type of custody record (i.e., provided by the EPA contract laboratory program or a subcontract laboratory) is used to track the custody of samples, the custody record should be filled out in its entirety.

1. Record project number.
2. Record FTL for the project (if a field sample custodian has been designated, also record this name in the "Remarks" box).
3. Record the name and address of the laboratory to which samples are being shipped.
4. Enter the project name/location or code number.
5. Record overnight courier's airbill number.
6. Record sample location number.
7. Record sample number.
8. Note preservatives added to the sample.
9. Note media type (matrix) of the sample.
10. Note sample type (grab or composite).
11. Enter date of sample collection.
12. Enter time of sample collection in military time.

Sample Custody

SOP 1-2
Revision: 4
Date: March 1, 2004
Page 4 of 7

Figure 1
Example CDM Chain-of-Custody Record

CDM

125 Maiden Lane, 5th Floor
New York, NY 10038
(212) 785-9123
Fax: (212) 785-6114

CHAIN OF CUSTODY RECORD

PROJECT ID.		FIELD TEAM LEADER		LABORATORY AND ADDRESS				DATE SHIPPED				
PROJECT NAME/LOCATION				LAB CONTRACT:				AIRBILL NO.				
MEDIA TYPE		PRESERVATIVES		SAMPLE TYPE		ANALYSES (List no. of containers submitted)						
1. Surface Water 2. Groundwater 3. Leachate 4. Field QC 5. Soil/Sediment 6. Oil 7. Waste 8. Other _____		1. HCl, pH <2 2. HNO ₃ , pH <2 3. NaOH, pH >12 4. H ₂ SO ₄ , pH <2 5. Zinc Acetate, pH >9 6. Ice Only 7. Not Preserved 8. Other _____		G = Grab C = Composite								
SAMPLE LOCATION NO.	LABORATORY SAMPLE NUMBER	PRESERVATIVES ADDED	MEDIA TYPE	SAMPLE TYPE	20 _ DATE	TIME SAMPLED						REMARKS (Note if MS/MSD)
1.												
2.												
3.												
4.												
5.												
6.												
7.												
8.												
9.												
10.												
SAMPLER SIGNATURES:												
RELINQUISHED BY: (PRINT)	DATE/TIME	RECEIVED BY: (PRINT)	DATE/TIME	RELINQUISHED BY: (PRINT)	DATE/TIME	RECEIVED BY: (PRINT)	DATE/TIME	RELINQUISHED BY: (PRINT)	DATE/TIME	RECEIVED BY: (PRINT)	DATE/TIME	
(SIGN)		(SIGN)		(SIGN)		(SIGN)		(SIGN)		(SIGN)		
RELINQUISHED BY: (PRINT)	DATE/TIME	RECEIVED BY: (PRINT)	DATE/TIME	RELINQUISHED BY: (PRINT)	DATE/TIME	RECEIVED BY: (PRINT)	DATE/TIME	RELINQUISHED BY: (PRINT)	DATE/TIME	RECEIVED BY: (PRINT)	DATE/TIME	
(SIGN)		(SIGN)		(SIGN)		(SIGN)		(SIGN)		(SIGN)		
COMMENTS:												

DISTRIBUTION: White and yellow copies accompany sample shipment to laboratory; yellow copy retained by laboratory; Pink copy retained by samplers.

1/98

Note: If requested by the client, different chain-of-custody records may be used. Copies of the template for this record may be obtained from the Chantilly Graphics Department.

Sample Custody

SOP 1-2

Revision: 4

Date: March 1, 2004

Page 5 of 7

13. When required by the client, enter the names or initials of the samplers next to the sample location number of the sample they collected.
14. List parameters for analysis and the number of containers submitted for each analysis.
15. Enter matrix spike/matrix spike duplicate (MS/MSD) if sample is for **laboratory** quality control or other remarks (e.g., sample depth).
16. Sign the chain-of-custody record(s) in the space provided. All samplers must sign each record.
17. If sample tags are used, record the sample tag number in the "Remarks" column.
18. The originator checks information entered in Items 1 through 16 and then signs the top left "Relinquished by" box, prints his/her name, and enters the current date and time (military).
19. Send the top two copies (usually white and yellow) with the samples to the laboratory; retain the third copy (usually pink) for the project files. Retain additional copies for the project file or distribute as required to the appropriate sample coordinators.
20. The laboratory sample custodian receiving the sample shipment checks the sample label information against the chain-of-custody record. Sample condition is checked and anything unusual is noted under "Remarks" on the chain-of-custody record. The laboratory custodian receiving custody signs in the adjacent "Received by" box and keeps the copy. The white copy is returned to CDM.

5.2 Sample Labels and Tags


Unless the client directs otherwise, sample labels or tags will be used for all samples collected or accepted for CDM projects.

1. Complete one label or tag with the information required by the client for each sample container collected. A typical label or tag would be completed as follows (see Figure 2 for example of sample tag; labels are completed with the equivalent information):
 - Record the project code (i.e., project or task number).
 - Enter the station number (sample number) if applicable.
 - Record the date to indicate the month, day, and year of sample collection.
 - Enter the time (military) of sample collection.
 - Place a check to indicate composite or grab sample.
 - Record the station (sample) location.
 - Sign in the space provided.
 - Place a check next to "yes" or "no" to indicate if a preservative was added.
 - Place a check under "Analyses" next to the parameters for which the sample is to be analyzed. If the desired analysis is not listed, write it in the empty slot. **Note:** Do not write in the box for "laboratory sample number."
 - Place or write additional relevant information under "Remarks."
2. Place adhesive labels directly on the sample containers. Place clear tape over the label to protect from moisture.
3. Securely attach sample tags to the sample bottle. On 2.27 liter (80 oz.) amber bottles, the tag string may be looped through the ring style handle and tied. On all other containers, it is

Sample Custody

SOP 1-2
Revision: 4
Date: March 1, 2004
Page 6 of 7

Figure 2
Example Sample Tag

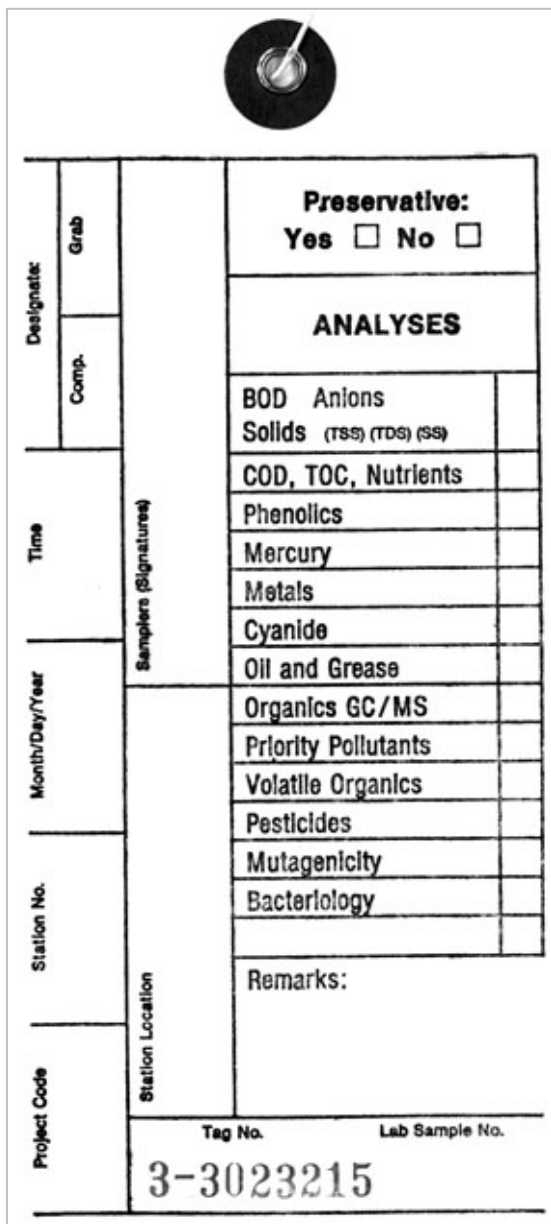

Designator	Grab	Preservative: Yes <input type="checkbox"/> No <input type="checkbox"/>
	Comp.	
Time	ANALYSES	
	BOD Anions	
	Solids (TSS) (TDS) (SS)	
	COD, TOC, Nutrients	
	Phenolics	
	Mercury	
	Metals	
Month/Day/Year	Cyanide	
	Oil and Grease	
	Organics GC/MS	
Station No.	Priority Pollutants	
	Volatile Organics	
Project Code	Pesticides	
	Mutagenicity	
Station Location	Bacteriology	
	Remarks:	
Tag No.		Lab Sample No.
3-3023215		

Note: Equivalent sample labels or tags may be used.

recommended that the string be looped around the neck of the bottle, then twisted and re-looped around the neck until the slack in the string is removed.

4. Double-check that the information recorded on the sample tag is consistent with the information recorded on the chain-of-custody record.

5.3 Custody Seals

Two custody seals must be placed on opposite corners of all shipping containers (e.g., cooler) prior to shipment. The seals should be signed and dated by the shipper.

Custody seals may also be placed on individual sample bottles. Check with the client or refer to EPA regional guidelines for direction.

5.4 Sample Shipping

The CDM standard operating procedure listed below defines the requirements for packaging and shipping environmental samples.

- CDM Federal SOP 2-1, Packaging and Shipping Environmental Samples

6.0 Restrictions/Limitations

Check with the EPA region or client for specific guidelines. If no specific guidelines are identified, this procedure should be followed.

For EPA Contract Laboratory Program (CLP) sampling events, combined chain-of-custody/traffic report forms or other EPA-specific records may be used. Refer to regional guidelines for completing these forms.

The EPA FORMS II Lite™ software may be used to customize sample labels and custody records when directed by the client or the CDM project manager.

7.0 References

U.S. Environmental Protection Agency, *EPA Guidance for Quality Assurance Project Plans*, EPA QA/G-5, EPA/600/R-98/018, February 1998, Section B3.

U.S. Environmental Protection Agency, *National Enforcement Investigations Center, Multi-Media Investigation Manual*, EPA-330/9-89-003-R, Revised March 1992, p.85.

U.S. Environmental Protection Agency, *Contract Laboratory Program (CLP), Guidance for Field Samplers*, EPA-540-R-00-003, Draft Final, June 2001, Section 3.2.

U.S. Environmental Protection Agency, *FORMS II Lite™ User's Guide*, March 2001.

U.S. Environmental Protection Agency, Region IV, *Environmental Investigations Standard Operating Procedures and Quality Assurance Manual*, May 1996, Section 3.3.

U.S. Army Corps of Engineers, *Requirements for the Preparation of Sampling and Analysis Plan*, EM 200-1-3, February 2001, Appendix F.

Project-Specific Modification

SOP No.: 2-1

SOP Title: Packaging and Shipping of Environmental Samples

Project: Libby Asbestos Remedial Investigation (RI)

Project No.: 3282-137

Client: U.S. Environmental Protection Agency

Project Manager: [Signature] Date: 5/7/03

Technical Reviewer: [Signature] Date: 5/7/03

QA Reviewer: [Signature] Date: 5/12/03

EPA Approval: [Signature] Date: 5/19/03

Reason for and duration of modification: Procedures for shipping environmental samples for the Libby asbestos project vary slightly from CDM Technical SOP 2-1. These modifications are necessary for the entire duration of the project.

Samples collected during this investigation will be packaged and shipped in accordance with CDM Technical SOP 2-1, with the following modifications:

Section 1.4, Required Equipment - Vermiculite (or other absorbent material), bubble wrap, or ice will not be used for packaging or shipping samples.

Section 1.5, Procedures - No vermiculite or other absorbent material will be used to pack the samples. No ice will be used.

Packaging and Shipping Environmental Samples

SOP: 2-1
Revision: 2
Date: March 1, 2004
Page 1 of 21

Prepared: Krista Lippoldt

Technical Review: Chuck Myers

QA Review: Douglas J. Updike

Approved: Michael C. Mally 2/24/04

Issued: [Signature] 2/18/04
Signature/Date

Signature/Date

1.0 Packaging and Shipping of All Samples

This standard operating procedure (SOP) applies to the packaging and shipping of all environmental samples. If the sample is preserved or radioactive, the following sections may also be applicable.

Section 2.0 – Packaging and Shipping Samples Preserved with Methanol

Section 3.0 – Packaging and Shipping Samples Preserved with Sodium Hydroxide

Section 4.0 – Packaging and Shipping Samples Preserved with Hydrochloric Acid

Section 5.0 – Packaging and Shipping Samples Preserved with Nitric Acid

Section 6.0 – Packaging and Shipping Samples Preserved with Sulfuric Acid

Section 7.0 – Packaging and Shipping Limited-Quantity Radioactive Samples

1.1 Objective

The objective of this SOP is to outline the requirements for the packaging and shipment of environmental samples. Additionally, Sections 2.0 through 7.0 outline requirements for the packaging and shipping of regulated environmental samples under the Department of Transportation (DOT) Hazardous Materials Regulations, the International Air Transportation Association (IATA), and International Civil Aviation Organization (ICAO) Dangerous Goods Regulations for shipment by air and applies only to domestic shipments. This SOP does not cover the requirements for packaging and shipment of equipment (including data loggers and self-contained breathing apparatus [SCBAs] or bulk chemicals that are regulated under the DOT, IATA, and ICAO.

1.2 Background

1.2.1 Definitions

Environmental Sample - An aliquot of air, water, plant material, sediment, or soil that represents the contaminant levels on a site. Samples of potential contaminant sources, like tanks, lagoons, or non-aqueous phase liquids are normally not "environmental" for this purpose. This procedure applies only to environmental samples that contain less than reportable quantities for any foreseeable hazardous constituents according to DOT regulations promulgated in 49 CFR - Part 172.101 Appendix A.

Custody Seal - A custody seal is a narrow adhesive-backed seal that is applied to individual sample containers and/or the container (i.e., cooler) before offsite shipment. Custody seals are used to demonstrate that sample integrity has not been compromised during transportation from the field to the analytical laboratory.

Inside Container - The container, normally made of glass or plastic, that actually contacts the shipped material. Its purpose is to keep the sample from mixing with the ambient environment.

Packaging and Shipping Environmental Samples

SOP: 2-1
Revision: 2
Date: March 1, 2004
Page 2 of 21

Outside Container – The container, normally made of metal or plastic, that the transporter contacts. Its purpose is to protect the inside container.

Secondary Containment – The outside container provides secondary containment if the inside container breaks (i.e., plastic overpackaging if liquid sample is collected in glass).

Excepted Quantity – Excepted quantities are limits to the mass or volume of a hazardous material in the inside and outside containers below which DOT, IATA, ICAO regulations do not apply. The excepted quantity limits are very low. Most regulated shipments will be made under limited quantity.

Limited Quantity – Limited quantity is the maximum amount of a hazardous material below which there are specific labeling or packaging exceptions.

Performance Testing – Performance testing is the required testing of outer packaging. These tests include drop and stacking tests.

Qualified Shipper – A qualified shipper is a person who has been adequately trained to perform the functions of shipping hazardous materials.

1.2.2 Discussion

Proper packaging and shipping is necessary to ensure the protection of the integrity of environmental samples shipped for analysis. These shipments are potentially subject to regulations published by DOT, IATA, or ICAO. Failure to abide by these rules places both CDM and the individual employee at risk of serious fines. The analytical holding times for the samples must not be exceeded. The samples should be packed in time to be shipped for overnight delivery. Make arrangements with the laboratory before sending samples for weekend delivery.

1.2.3 Associated Procedure

- CDM Federal SOP 1-2, Sample Custody

1.3 Required Equipment

- Coolers with return address of the appropriate CDM office
- Heavy-duty plastic garbage bags
- Plastic zip-type bags, small and large
- Clear tape
- Nylon reinforced strapping tape
- Duct tape
- Vermiculite (or an equivalent nonflammable material that is inert and absorbent)*
- Bubble wrap (optional)
- Ice
- Custody seals
- Completed chain-of-custody record or contract laboratory program (CLP) custody records, if applicable
- Completed bill of lading
- “This End Up” and directional arrow labels

Packaging and Shipping Environmental Samples

SOP: 2-1
Revision: 2
Date: March 1, 2004
Page 3 of 21

- * Check for any client-specific or laboratory requirements related to the use of absorbent packaging materials.

1.4 Packaging Environmental Samples

The following steps must be followed when packing sample bottles and jars for shipment:

1. Verify the samples undergoing shipment meet the definition of “environmental sample” and are not a hazardous material as defined by DOT. Professional judgment and/or consultation with qualified persons such as the appropriate health and safety coordinator or the health and safety manager should be observed.
2. Select a sturdy cooler in good repair. Tape any interior opening in the cooler (drain plug) from the inside to ensure control of interior contents. Also, tape the drain plug from the outside of the cooler. Line the cooler with a large heavy-duty plastic garbage bag.
3. Be sure the caps on all bottles are tight (will not leak); check to see that labels and chain-of-custody records are completed properly (SOP 1-2, Sample Custody).
4. Place all bottles in separate and appropriately sized plastic zip-top bags and close the bags. Up to three VOA vials may be packed in one bag. Binding the vials together with a rubber band on the outside of the bag, or separating them so that they do not contact each other, will reduce the risk of breakage. Bottles may be wrapped in bubble wrap. Optionally, place three to six VOA vials in a quart metal can and then fill the can with vermiculite or equivalent. **Note:** Trip blanks must be included in coolers containing VOA samples.
5. Place 2 to 4 inches of vermiculite (or equivalent) into a cooler that has been lined with a garbage bag, and then place the bottles and cans in the bag with sufficient space to allow for the addition of packing material between the bottles and cans. It is preferable to place glass sample bottles and jars into the cooler vertically. Glass containers are less likely to break when packed vertically rather than horizontally.
6. While placing sample containers into the cooler, conduct an inventory of the contents of the shipping cooler against the chain-of-custody record. The chain-of-custody with the cooler should reflect only those samples within the cooler.
7. Put ice in large plastic zip-top bags (double bagging the zip-tops is preferred) and properly seal. Place the ice bags on top of and/or between the samples. Several bags of ice are required (dependant on outdoor temperature, staging time, etc.) to maintain the cooler temperature at approximately 4° Celsius (C) if the analytical method requires cooling. Fill all remaining space between the bottles or cans with packing material. Securely fasten the top of the large garbage bag with fiber or duct tape.
8. Place the completed chain-of-custody record or the CLP traffic report form (if applicable) for the laboratory into a plastic zip-top bag, seal the bag, tape the bag to the inner side of the cooler lid and close the cooler.

9. The cooler lid shall be secured with nylon reinforced strapping tape by wrapping each end of the cooler a minimum of two times. Attach a completed chain-of-custody seal across the opening of the cooler on opposite sides. The custody seals should be affixed to the cooler with half of the seal on the strapping tape so that the cooler cannot be opened without breaking the seal. Complete two more wraps around with fiber tape and place clear tape over the custody seals.
10. The shipping container lid must be marked **"THIS END UP"** and arrow labels that indicate the proper upward position of the container should be affixed to the cooler. A label containing the name and address of the shipper (CDM) shall be placed on the outside of the container. Labels used in the shipment of hazardous materials (such as Cargo Only Air Craft, Flammable Solids, etc.) are not permitted on the outside of containers used to transport environmental samples and shall not be used. The name and address of the laboratory shall be placed on the container, or when shipping by common courier, the bill of lading shall be completed and attached to the lid of the shipping container.

2.0 Packaging and Shipping Samples Preserved with Methanol

2.1 Containers

- The maximum volume of methanol in a sample container is limited to 30 ml.
- The sample container must not be full of methanol.

2.2 Responsibility

It is the responsibility of the qualified shipper to:

- Ensure that the samples undergoing shipment contain no other contaminant that meets the definition of "hazardous material" as defined by DOT
- Determine the amount of preservative in each sample so that accurate determination of quantities can be made

2.3 Additional Required Equipment

The following equipment is needed in addition to the required equipment listed in Section 1.3:

- Inner packing may consist of glass or plastic jars
- Outer packaging (for limited quantities) insulated cooler that has passed the ICAO drop test
- Survey documentation (if shipping from Department of Energy [DOE] or radiological sites)
- Class 3 flammable liquid labels
- Orientation labels
- Consignor/consignee labels

2.4 Packaging Samples Preserved with Methanol

The following steps are to be followed when packaging limited-quantity sample shipments.

- Tape any interior opening in the cooler (drain plug) from the inside to ensure control of interior contents. Also, tape the drain plug from the outside of the cooler.
- All sample containers will be properly labeled and the label protected with waterproof tape prior to sampling.

Packaging and Shipping Environmental Samples

SOP: 2-1
Revision: 2
Date: March 1, 2004
Page 5 of 21

- At a minimum the label must contain:
 - Project name
 - Project number
 - Date and time of sample collection
 - Sample location
 - Sample identification number
 - Collector's initials
 - Preservative (note amount of preservative used in miscellaneous section of the chain-of-custody form)
- Wrap each container (40-ml VOA vials) in bubble wrap (secure with waterproof tape) to prevent breakage.
- Place the bubble-wrapped container into a 2.7-mil zip-type bag, removing trapped air.
- Place wrapped containers inside a polyethylene bottle filled with vermiculite; seal the bottle. (Maximum of 4 VOA vials will fit inside a 500-ml wide-mouth polyethylene bottle.)
- Total volume of methanol per shipping container must not exceed 500 ml.
- Place sufficient amount of vermiculite in the bottom of the cooler to absorb any leakage that may occur.
- Place a garbage bag in the cooler.
- Pack the samples appropriately inside the garbage bag (bottles placed upright) to prevent movement during shipment.
- Place a sufficient amount of double-bagged ice around the samples to maintain the required temperature during shipment.
- Seal the garbage bag by tying or taping.
- The maximum weight of the cooler shall not exceed 30 kg (66 lbs) for any limited-quantity shipment of dangerous goods.
- Secure the chain-of-custody form (placed inside a zip-type bag) to the interior of the cooler lid.
- If the shipment is from a DOE or other facility, place the results of the radiation screen and cooler/sample survey with the chain-of-custody.
- Wrap strapping tape or duct tape around both ends of the cooler and around the cooler lid.
- Affix custody seals to opposite sides of the cooler lid. Cover the custody seals with clear waterproof tape.
- Mark the outside of the cooler with the proper shipping name of the contents, corresponding UN number, and LTD. QTY. (as shown below).

Methanol Mixture
UN1230
LTD. QTY.

- Place a label on the front of the cooler with the company name, contact name, phone number, full street address, and state with zip code for both shipper and recipient.
- Affix a Flammable Liquid label to the outside of the cooler.
- Affix package orientation labels on two opposite sides of the cooler.
- Secure the marking and labels to the surface of the cooler with clear waterproof tape to prevent accidental removal during shipment.
- An example of cooler labeling/marking locations is shown in Figure 1.

Packaging and Shipping Environmental Samples

SOP: 2-1

Revision: 2

Date: March 1, 2004


Page 6 of 21

Note: No marking or labeling can be obscured by strapping or duct tape.

Note: The inner packaging of dangerous goods must be placed into the designated cooler for shipment. Other non-regulated environmental samples may be added to the cooler for shipment.

- When shipping from a DOE facility, the cooler will be surveyed by a qualified radiation control technician to ensure that radiation flux on exterior surfaces does not exceed 0.5 mrem/h on all sides. This survey will be documented and the results reviewed by the qualified shipper.
- Complete the Dangerous Goods and Hazardous Materials Inspection Checklist for Shipping Limited-Quantity (Appendix A).
- Complete a Dangerous Goods Airbill.

Figure 1 - Example of Cooler Label/Marking Locations

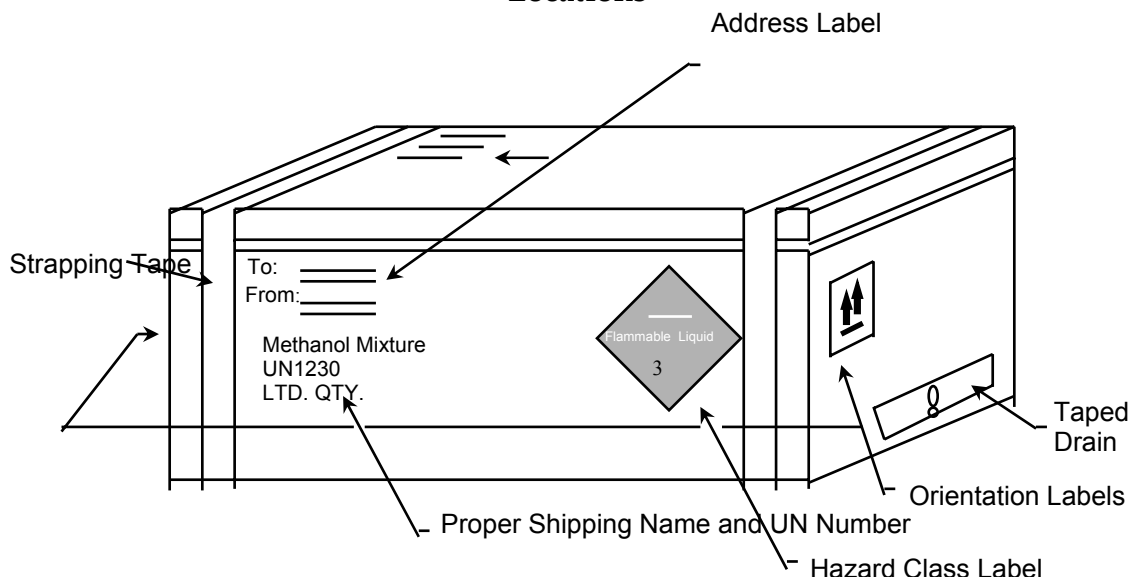

3.0 Packaging and Shipping Samples Preserved with Sodium Hydroxide

3.1 Containers

The inner packaging container (and amount of preservative) that may be used for these shipments includes:

Excepted Quantities of Sodium Hydroxide Preservatives

Preservative		Desired in Final Sample		Quantity of Preservative (ml) for Specified Container				
		pH	Conc.	40 ml	125 ml	250 ml	500 ml	1 L
NaOH	30%	>12	0.08%		.25	0.5	1	2

5 drops = 1 ml

3.2 Responsibility

It is the responsibility of the qualified shipper to determine the amount of preservative in each sample so that accurate determination of quantities can be made.

3.3 Additional Required Equipment

The following equipment is needed in addition to the required equipment listed in Section 1.3:

- Outer packaging (for limited quantities) insulated cooler that has passed the ICAO drop test
- Inner packings may consist of glass or plastic jars no larger than 1 pint
- Survey documentation (if shipping from DOE or radiological sites)
- Class 8 corrosive labels
- Orientation labels
- Consignor/consignee labels

3.4 Packaging Samples Preserved with Sodium Hydroxide

Samples containing NaOH as a preservative that exceed the excepted concentration of 0.08 percent (2 ml of a 30 percent NaOH solution per liter) may be shipped as a limited quantity per packing instruction Y819 of the IATA/ICAO Dangerous Goods Regulations.

The following steps are to be followed when packaging limited-quantity samples shipments.

- Tape any interior opening in the cooler (drain plug) from the inside to ensure control of interior contents. Also, tape the drain plug from the outside of the cooler.
- All sample containers will be properly labeled and the label protected with waterproof tape prior to sampling.
- At a minimum the label must contain:
 - Project name
 - Project number
 - Date and time of sample collection
 - Sample location
 - Sample identification number
 - Collector's initials
 - Preservative (note amount of preservative used in miscellaneous section of the chain-of-custody form)
- This step is optional; wrap each container in bubble wrap (secure with waterproof tape) to prevent breakage.
- Place the bubble-wrapped container into a 2.7-mil zip-type bag, removing trapped air.
- Place glass containers inside a polyethylene bottle filled with vermiculite; seal the bottle.
- The total volume of sample in each cooler must not exceed 1 liter.
- Place sufficient amount of vermiculite in the bottom of the cooler to absorb any leakage that may occur.
- Place a garbage bag in the cooler.
- Pack the samples appropriately inside the garbage bag (bottles placed upright) to prevent movement during shipment.
- Place a sufficient amount of double-bagged ice around the samples to maintain the required temperature during shipment.
- Seal the garbage bag by tying or taping.
- The maximum weight of the cooler shall not exceed 30 kg (66 lbs) for any limited-quantity shipment of dangerous goods.

Packaging and Shipping Environmental Samples

SOP: 2-1

Revision: 2

Date: March 1, 2004

Page 8 of 21

- Secure the chain-of-custody form (placed inside a zip-type bag) to the interior of the cooler lid.
- If the shipment is from a DOE or other facility, place the results of the radiation screen and cooler/sample survey with the chain-of-custody.
- Wrap strapping tape or duct tape around both ends of the cooler and around the cooler lid.
- Affix custody seals to opposite sides of the cooler lid. Cover the custody seals with clear waterproof tape.
- Mark the outside of the cooler with the proper shipping name of the contents, corresponding UN number, and LTD. QTY. (as shown below).

Sodium Hydroxide Solution
UN1824
LTD. QTY.

- Place a label on the front of the cooler with the company name, contact name, phone number, full street address, and state with zip code for both shipper and recipient.
- Affix a Corrosive label to the outside of the cooler.
- Affix package orientation labels on two opposite sides of the cooler.
- Secure the marking and labels to the surface of the cooler with clear waterproof tape to prevent accidental removal during shipment.
- An example of cooler labeling/marking locations is shown in Figure 1.

Note: Samples meeting the exception concentration of 0.08 percent NaOH by weight may be shipped as non-regulated or non-hazardous following the procedure in Section 1.4.

Note: No marking or labeling can be obscured by strapping or duct tape.

Note: The inner packaging of dangerous goods must be placed into the designated cooler for shipment. Other non-regulated environmental samples may be added to the cooler for shipment.

- When shipping from a DOE facility, the cooler will be surveyed by a qualified radiation control technician to ensure that radiation flux on exterior surfaces does not exceed 0.5 mrem/h on all sides. This survey will be documented and the results reviewed by the qualified shipper.
- Complete the Dangerous Goods and Hazardous Materials Inspection Checklist for Shipping Limited-Quantity (Appendix A).
- Complete a Dangerous Goods Airbill.

4.0 Packaging and Shipping Samples Preserved with Hydrochloric Acid

4.1 Containers

The inner packaging container (and amount of preservative) that may be used for these shipments includes:

Packaging and Shipping Environmental Samples

SOP: 2-1
Revision: 2
Date: March 1, 2004
Page 9 of 21

Excepted Quantities of Hydrochloric Acid Preservatives

<i>Preservative</i>		<i>Desired in Final Sample</i>		<i>Quantity of Preservative (ml) for Specified Container</i>		
		pH	Conc.	40 ml	125 ml	250 ml
HCl	2N	<1.96	0.04%	.2	.5	1

5 drops = 1 ml

4.2 Responsibility

It is the responsibility of the qualified shipper to:

- Determine the samples undergoing shipment contain no other contaminant that meets the definition of hazardous material as defined by DOT
- Determine the amount of preservative in each sample so that accurate determination of quantities can be made

4.3 Additional Required Equipment

The following equipment is needed in addition to the required equipment listed in Section 1.3.

- Inner packing may consist of glass or plastic jars no larger than 1 pint.
- Outer packaging (for limited quantities) insulated cooler that has passed the ICAO drop test.
- Survey documentation (if shipping from DOE or radiological sites)
- Class 8 corrosive labels
- Orientation labels
- Consignor/consignee labels

4.4 Packaging Samples Preserved with Hydrochloric Acid

The following steps are to be followed when packaging limited-quantity sample shipments.

- Tape any interior opening in the cooler (drain plug) from the inside to ensure control of interior contents. Also, tape the drain plug from the outside of the cooler.
- All sample containers will be properly labeled and the label protected with waterproof tape prior to sampling.
- At a minimum the label must contain:
 - Project name
 - Project number
 - Date and time of sample collection
 - Sample location
 - Sample identification number
 - Collector's initials
 - Preservative (note amount of preservative used in miscellaneous section of the chain-of-custody form)
- Wrap each container (40-ml VOA vials) in bubble wrap (secure with waterproof tape) to prevent breakage.
- Place the bubble-wrapped container into a 2.7-mil zip-type bag, removing trapped air.
- Place wrapped containers inside a polyethylene bottle filled with vermiculite; seal the bottle. (No more than 4 VOA vials will fit inside a 500-ml wide-mouth polyethylene bottle.)

Packaging and Shipping Environmental Samples

SOP: 2-1
Revision: 2
Date: March 1, 2004
Page 10 of 21

- Total volume of sample inside each cooler must not exceed 1 liter.
- Place sufficient amount of vermiculite in the bottom of the cooler to absorb any leakage that may occur.
- Place a garbage bag in the cooler.
- Pack the samples appropriately inside the garbage bag (bottles placed upright) to prevent movement during shipment.
- Place a sufficient amount of double-bagged ice around the samples to maintain the required temperature during shipment.
- Seal the garbage bag by tying or taping.
- The maximum weight of the cooler shall not exceed 30 kg (66 lbs) for any limited-quantity shipment of dangerous goods.
- Secure the chain-of-custody form (placed inside a zip-type bag) to the interior of the cooler lid.
- If the shipment is from a DOE or other facility, place the results of the radiation screen and cooler/sample survey with the chain-of-custody.
- Wrap strapping tape or duct tape around both ends of the cooler and around the cooler lid.
- Affix custody seals to opposite sides of the cooler lid. Cover the custody seals with clear waterproof tape.
- Mark the outside of the cooler with the proper shipping name of the contents, corresponding UN number, and LTD. QTY. (as shown below).

Hydrochloric Acid Solution
UN1789
LTD. QTY.

- Place a label on the front of the cooler with the company name, contact name, phone number, full street address, and state with zip code for both shipper and recipient.
- Affix a Corrosive label to the outside of the cooler.
- Affix package orientation labels on two opposite sides of the cooler.
- Secure the marking and labels to the surface of the cooler with clear waterproof tape to prevent accidental removal during shipment.
- An example of cooler labeling/marking locations is shown in Figure 1.

Note: Samples containing less than the exception concentration of 0.04 percent HCl by weight will be shipped as non-regulated or non-hazardous following the procedure in Section 1.4.

Note: No marking or labeling can be obscured by strapping or duct tape.

Note: The inner packaging of dangerous goods must be placed into the designated cooler for shipment. Other non-regulated environmental samples may be added to the cooler for shipment.

- When shipping from a DOE facility, the cooler will be surveyed by a qualified radiation control technician to ensure that radiation flux on exterior surfaces does not exceed 0.5 mrem/h on all sides. This survey will be documented and the results reviewed by the qualified shipper.

Packaging and Shipping Environmental Samples

SOP: 2-1
Revision: 2
Date: March 1, 2004
Page 11 of 21

- Complete the Dangerous Goods and Hazardous Materials Inspection Checklist for Shipping Limited-Quantity (Appendix A).
- Complete a Dangerous Goods Airbill.

5.0 Packaging and Shipping Samples Preserved with Nitric Acid

5.1 Containers

The inner packaging container (and amount of preservative) that may be used for these shipments includes:

Excepted Quantities of Nitric Acid Preservatives

<i>Preservative</i>		<i>Desired in Final Sample</i>		<i>Quantity of Preservative (ml) for Specified Container</i>				
		pH	Conc.	40 ml	125 ml	250 ml	500 ml	1 L
HNO ₃	6N	<1.62	0.15%		2	4	5	8

5 drops = 1 ml

5.2 Responsibility

It is the responsibility of the qualified shipper to:

- Determine the samples undergoing shipment contain no other contaminant that meets the definition of hazardous material as defined by DOT
- Determine the amount of preservative in each sample so that accurate determination of quantities can be made

5.3 Additional Required Equipment

The following equipment is needed in addition to the required equipment listed in Section 1.3.

- Inner packings may consist of glass or plastic jars no larger than 100 ml.
- Outer packaging (for limited quantities) insulated cooler that has passed the ICAO drop test.
- Survey documentation (if shipping from DOE or radiological sites)
- Class 8 corrosive labels
- Orientation labels
- Consignor/consignee labels

5.4 Packaging Samples Preserved with Nitric Acid

Samples containing HNO₃ as a preservative that exceed the excepted concentration of 0.15 percent HNO₃ will be shipped as a limited quantity per packing instruction Y807 of the IATA/ICAO Dangerous Goods Regulations.

The following steps are to be followed when packaging limited-quantity sample shipments.

- Tape any interior opening in the cooler (drain plug) from the inside to ensure control of interior contents. Also, tape the drain plug from the outside of the cooler.
- All sample containers will be properly labeled and the label protected with waterproof tape prior to sampling.
- At a minimum the label must contain:
 - Project name

Packaging and Shipping Environmental Samples

SOP: 2-1

Revision: 2

Date: March 1, 2004

Page 12 of 21

- Project number
- Date and time of sample collection
- Sample location
- Sample identification number
- Collector's initials
- Preservative (note amount of preservative used in miscellaneous section of the chain-of-custody)
- This step is optional; wrap each container in bubble wrap (secure with waterproof tape) to prevent breakage.
- Place the bubble-wrapped container into a 2.7-mil zip-type bag, removing trapped air.
- Place glass containers inside a polyethylene bottle filled with vermiculite; seal the bottle.
- Place sufficient amount of vermiculite in the bottom of the cooler to absorb any leakage that may occur.
- Place a garbage bag in the cooler.
- Pack the samples appropriately inside the garbage bag (bottles placed upright) to prevent movement during shipment.
- Place a sufficient amount of double-bagged ice around the samples to maintain the required temperature during shipment.
- Seal the garbage bag by tying or taping.
- The maximum volume of preserved solution in the cooler must not exceed 500 ml.
- The maximum weight of the cooler shall not exceed 30 kg (66 lbs) for any limited-quantity shipment of dangerous goods.
- Secure the chain-of-custody form (placed inside a zip-type bag) to the interior of the cooler lid.
- If the shipment is from a DOE or other facility, place the results of the radiation screen and cooler/sample survey with the chain-of-custody.
- Wrap strapping tape or duct tape around both ends of the cooler and around the cooler lid.
- Affix custody seals to opposite sides of the cooler lid. Cover the custody seals with clear waterproof tape.
- Mark the outside of the cooler with the proper shipping name of the contents, corresponding UN number, and LTD. QTY. (as shown below).

Nitric Acid Solution (with less than 20 percent)

UN2031

Ltd. Qty.

- Place a label on the front of the cooler with the company name, contact name, phone number, full street address, and state with zip code for both shipper and recipient.
- Affix a Corrosive label to the outside of the cooler.
- Affix package orientation labels on two opposite sides of the cooler.
- Secure the marking and labels to the surface of the cooler with clear waterproof tape to prevent accidental removal during shipment.
- An example of cooler labeling/ marking locations is shown in Figure 1.

Packaging and Shipping Environmental Samples

SOP: 2-1

Revision: 2

Date: March 1, 2004

Page 13 of 21

Note: Samples meeting the exception concentration of 0.15 percent HNO₃ by weight will be shipped as non-regulated or non-hazardous following the procedure in Section 1.4.

Note: No marking or labeling can be obscured by strapping or duct tape.

Note: The inner packaging of dangerous goods must be placed into the designated cooler for shipment. Other non-regulated environmental samples may be added to the cooler for shipment.

- When shipping from a DOE facility, the cooler will be surveyed by a qualified radiation control technician to ensure that radiation flux on exterior surfaces does not exceed 0.5 mrem/h on all sides. This survey will be documented and the results reviewed by the qualified shipper.
- Complete the Dangerous Goods and Hazardous Materials Inspection Checklist for Shipping Limited-Quantity (Appendix A).
- Complete a Dangerous Goods Airbill.

6.0 Packaging and Shipping Samples Preserved with Sulfuric Acid

6.1 Containers

The inner packaging container (and amount of preservative) that may be used for these shipments includes:

Excepted Quantities of Sulfuric Acid Preservatives

<i>Preservative</i>		<i>Desired in Final Sample</i>		<i>Quantity of Preservative (ml) for Specified Container</i>				
		pH	Conc.	40 ml	125 ml	250 ml	500 ml	1 L
H ₂ SO ₄	37N	<1.15	0.35%	.1	.25	0.5	1	2

5 drops = 1 ml

6.2 Responsibility

It is the responsibility of the qualified shipper to:

- Determine the samples undergoing shipment contain no other contaminant that meets the definition of hazardous material as defined by DOT
- Determine the amount of preservative in each sample so that accurate determination of quantities can be made

6.3 Additional Required Equipment

The following equipment is needed in addition to the required equipment listed in Section 1.3.

- Inner packings may consist of glass or plastic jars no larger than 100 ml.
- Outer packaging (for limited quantities) insulated cooler that has passed the ICAO drop test.
- Survey documentation (if shipping from DOE or radiological sites)
- Class 8 corrosive labels
- Orientation labels
- Consignor/consignee labels

6.4 Packaging of Samples Preserved with Sulfuric Acid

Samples containing H₂SO₄ as a preservative that exceed the excepted concentration of 0.35 percent will be shipped as a limited quantity per packing instruction Y809 of the IATA/ICAO Dangerous Goods Regulations.

The following steps are to be followed when packaging limited-quantity samples shipments.

- Tape any interior opening in the cooler (drain plug) from the inside to ensure control of interior contents. Also, tape the drain plug from the outside of the cooler.
- All sample containers will be properly labeled and the label protected with waterproof tape prior to sampling.
- At a minimum the label must contain:
 - Project name
 - Project number
 - Date and time of sample collection
 - Sample location
 - Sample identification number
 - Collector's initials
 - Preservative (note amount of preservative used in miscellaneous section of the chain-of-custody form)
- Wrap each glass container in bubble wrap (secure with waterproof tape) to prevent breakage.
- Place the bubble-wrapped container into a 2.7-mil zip-type bag, removing trapped air.
- Place glass containers inside a polyethylene bottle filled with vermiculite; seal the bottle.
- Place sufficient amount of vermiculite in the bottom of the cooler to absorb any leakage that may occur.
- Place a garbage bag in the cooler.
- Pack the samples appropriately inside the garbage bag (bottles placed upright) to prevent movement during shipment.
- Place a sufficient amount of double-bagged ice around the samples to maintain the required temperature during shipment.
- Seal the garbage bag by tying or taping.
- The maximum volume of preserved solution in the cooler must not exceed 500 ml.
- The maximum weight of the cooler shall not exceed 30 kg (66 lbs) for any limited-quantity shipment of dangerous goods.
- Secure the chain-of-custody form (placed inside a zip-type bag) to the interior of the cooler lid.
- If the shipment is from a DOE or other facility, place the results of the radiation screen and cooler/sample survey with the chain-of-custody.
- Wrap strapping tape or duct tape around both ends of the cooler and around the cooler lid.
- Affix custody seals to opposite sides of the cooler lid. Cover the custody seals with clear waterproof tape.
- Mark the outside of the cooler with the proper shipping name of the contents, corresponding UN number, and LTD. QTY. (as shown below).

Sulfuric Acid Solution
UN2796
LTD. QTY.

Packaging and Shipping Environmental Samples

SOP: 2-1
Revision: 2
Date: March 1, 2004
Page 15 of 21

- Place a label on the front of the cooler with the company name, contact name, phone number, full street address, and state with zip code for both shipper and recipient.
- Affix a Corrosive label to the outside of the cooler.
- Affix package orientation labels on two opposite sides of the cooler.
- Secure the marking and labels to the surface of the cooler with clear waterproof tape to prevent accidental removal during shipment.
- An example of cooler labeling/marking locations is shown in Figure 1.

Note: Samples containing less than the exception concentration of 0.35 percent H_2SO_4 by weight will be shipped as non-regulated or non-hazardous in accordance with the procedure described in Section 1.4.

Note: No marking or labeling can be obscured by strapping or duct tape.

Note: The inner packaging of dangerous goods must be placed into the designated cooler for shipment. Other non-regulated environmental samples may be added to the cooler for shipment.

- When shipping from a DOE facility, the cooler will be surveyed by a qualified radiation control technician to ensure that radiation flux on exterior surfaces does not exceed 0.5 mrem/h on all sides. This survey will be documented and the results reviewed by the qualified shipper.
- Complete the Dangerous Goods and Hazardous Materials Inspection Checklist for Shipping Limited-Quantity (Appendix A).
- Complete a Dangerous Goods Airbill.

7.0 Packaging and Shipping Limited-Quantity Radioactive Samples

7.1 Containers

The inner packaging containers that may be used for these shipments include:

- Any size sample container

7.2 Description/Responsibilities

- The qualified shipper will determine that the samples undergoing shipment contain no other contaminant that meets the definition of hazardous material as defined by DOT.
- The qualified shipper will ship all samples that meet the Class 7 definition of radioactive materials and meet the activity requirements specified in Table 7 of 49 CFR 173.425, as Radioactive Materials in Limited Quantity. The qualified shipper will verify that all packages and their contents meet the requirements of 49 CFR 173.421, *Limited Quantities of Radioactive Materials*.
- The packaging used for shipping will meet the general requirements for packaging and packages specified in 49 CFR 173.24 and the general design requirements provided in 173.410. These standards state that a package must be capable of withstanding the effects of any acceleration, vibration, or vibration resonance that may arise under normal condition of transport without any deterioration in the effectiveness of the closing devices on the various

Packaging and Shipping Environmental Samples

SOP: 2-1
Revision: 2
Date: March 1, 2004
Page 16 of 21

receptacles or in the integrity of the package as a whole and without loosening or unintentionally releasing the nuts, bolts, or other securing devices even after repeated use.

- If the shipment is from a DOE facility, radiological screenings will be completed on all samples taken. The qualified shipper will review the results of each screening (alpha, beta, and gamma speciation). Samples will not be shipped offsite until the radiological screening has been performed.
- The total activity for each package will not exceed the relevant limits listed in Table 7 of 49 CFR 173.425. The A_2 value of the material will be calculated based on all radionuclides found during previous investigations (if any) in the area from which the samples are derived. The A_2 values to be used will be the most restrictive of all potential radionuclides as listed in 49 CFR 173.435.
- The radiation level at any point on the external surface of the package bearing the sample(s) will not exceed 0.005 mSv/hour (0.5 mrem/hour). These will be verified by dose and activity monitoring prior to shipment of the package.
- The removable radioactive surface contamination on the external surface of the package will not exceed the limits specified in 49 CFR 173.443(a). CDM will apply the DOE-established free release criteria for removable surface contamination of less than 20 dpm/100 cm² (alpha) and 1,000 dpm/100 cm² (beta/gamma). It should be noted that these values are more conservative than the DOT requirements for removable surface contamination.
- The qualified shipper will verify that the outside of the inner packaging is marked "Radioactive."
- The qualified shipper will verify that the excepted packages prepared for shipment under the provisions of 49 CFR 173.421 have a notice enclosed, or shown on the outside of the package, that reads, **"This package conforms to the conditions and limitations specified in 49 CFR 173.421 for radioactive material, excepted package-limited quantity of material, UN2910."**

7.3 Additional Required Equipment

The following equipment is needed in addition to the required equipment listed in Section 1.3.

- Survey documentation/radiation screening results (if shipping from DOE or radiological sites)
- Orientation labels
- Excepted quantities label
- Consignor/consignee labels

7.4 Packaging of Limited-Quantity Radioactive Samples

The following steps are to be followed when packaging limited-quantity sample shipments.

- The cooler is to be surveyed by a qualified radiation control technician to ensure that radiation flux on exterior surfaces does not exceed 0.5 mrem/h on all sides. This survey will be documented and the results reviewed by the qualified shipper.
- Tape any interior opening in the cooler (drain plug) from the inside to ensure control of interior contents. Also, tape the drain plug from the outside of the cooler.
- All sample containers will be properly labeled and the label protected with waterproof tape prior to sampling.
- At a minimum the label must contain:
 - Project name
 - Project number

Packaging and Shipping Environmental Samples

SOP: 2-1

Revision: 2

Date: March 1, 2004

Page 17 of 21

- Date and time of sample collection
- Sample location
- Sample identification number
- Collector's initials
- This step is optional; wrap each container in bubble wrap (secure with waterproof tape) to prevent breakage.
- Place sufficient amount of vermiculite, or approved packaging material, in the bottom of the cooler to absorb any leakage that may occur.
- Place a garbage bag in the cooler.
- Pack the samples appropriately inside the garbage bag (bottles placed upright) to prevent movement during shipment.
- If required, place a sufficient amount of double-bagged ice around the samples to maintain the required temperature during shipment.
- Seal the garbage bag by tying or taping.
- Place a label marked Radioactive on the outside of the sealed bag.
- Enclose a notice that includes the name of the consignor or consignee and the following statement: **"This package conforms to the conditions and limitations specified in 49 CFR 173.421 for radioactive material, excepted package-limited quantity of material, UN2910."**
- Note that both DOT and IATA apply different limits to the quantity in the inside packing and in the outside packing.
- The maximum weight of the package shall not exceed 30 kg (66 lbs) for any limited-quantity shipment of dangerous goods.
- Secure the chain-of-custody form (placed inside a zip-type bag) to the interior of the cooler lid.
- If the shipment is from a DOE or other facility, place the results of the radiation screen and cooler/sample survey with the chain-of-custody.
- If a cooler is used, wrap strapping tape or duct tape around both ends of the cooler and around the cooler lid.
- Affix custody seals to opposite sides of the cooler lid. Cover the custody seals with clear waterproof tape.
- Place a label on the front of the cooler with the company name, contact name, phone number, full street address, and state with zip code for both shipper and recipient.
- Affix package orientation labels on two opposite sides of the cooler/package.
- Affix a completed Excepted Quantities label to the side of the cooler/package.
- Secure any marking and labels to the surface of the cooler with clear waterproof tape to prevent accidental removal during shipment.
- An example of the cooler labeling/marketing is shown in Figure 2.


Note: No marking or labeling can be obscured by strapping or duct tape.

- Complete the Shipment Quality Assurance Checklist (Appendix B).

Note: Except as provided in 49 CFR 173.426, the package will not contain more than 15 grams of ²³⁵U.

Note: A declaration of dangerous goods is not required.

Figure 2 - Radioactive Material – Limited-Quantity Cooler Marking Example

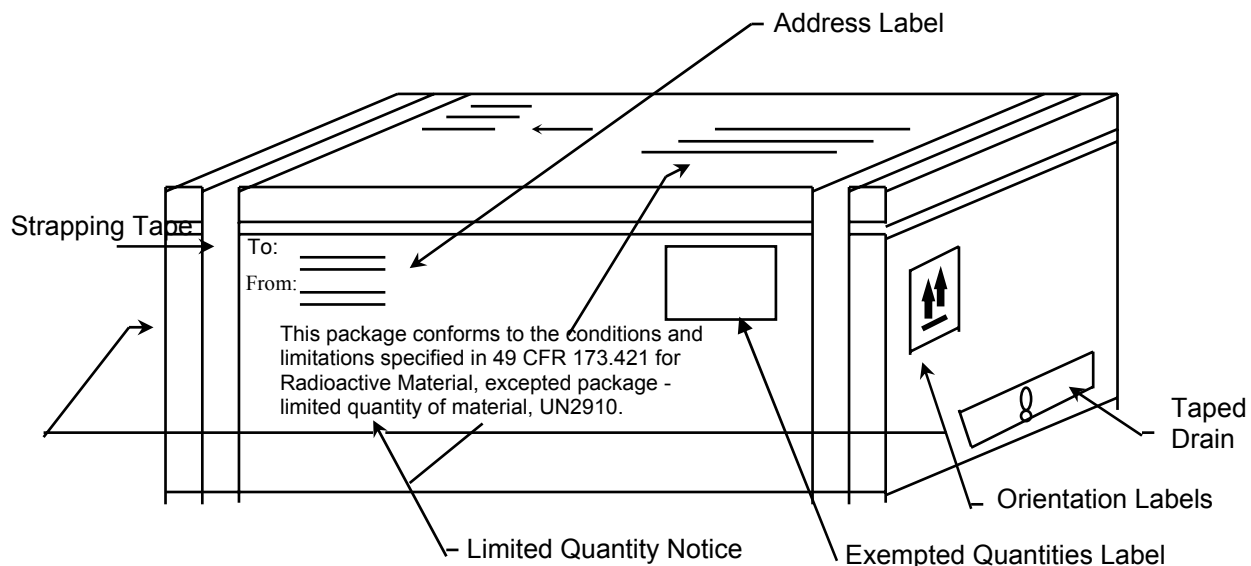

8.0 References

U.S. Environmental Protection Agency, *Sampler's Guide to the Contract Laboratory Program*, EPA/540/P-90/006, December 1990.

U.S. Environmental Protection Agency, Region IV, *Standard Operating Procedures and Quality Assurance Manual*, February 1991.

U.S. Environmental Protection Agency Rule, 40 CFR 136.

Appendix A
Dangerous Goods and Hazardous Materials Inspection Checklist
for Shipping Limited-Quantity

Sample Packaging

Yes	No	N/A	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	The VOA vials are wrapped in bubble wrap and placed inside a zip-type bag.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	The VOA vials are placed into a polyethylene bottle, filled with vermiculite, and tightly sealed.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	The drain plug is taped inside and outside to ensure control of interior contents.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	The samples have been placed inside garbage bags with sufficient bags of ice to preserve samples at 4°C.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	The cooler weighs less than the 66-pound limit for limited-quantity shipment.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	The garbage bag has been sealed with tape (or tied) to prevent movement during shipment.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	The chain-of-custody has been secured to the interior of the cooler lid.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	The cooler lid and sides have been taped to ensure a seal.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	The custody seals have been placed on both the front and back hinges of the cooler, using waterproof tape.

Air Waybill Completion

Yes	No	N/A	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Section 1 has the shipper's name, company, and address; the account number, date, internal billing reference number; and the telephone number where the shipper can be reached.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Section 2 has the recipient's name and company along with a telephone number where they can be reached.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Section 3 has the Bill Sender box checked.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Section 4 has the Standard Overnight box checked.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Section 5 has the Deliver Weekday box checked.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Section 6 has the number of packages and their weights filled out. Was the total of all packages and their weights figured up and added at the bottom of Section 6?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Under the Transport Details box, the Cargo Aircraft Only box is obliterated, leaving only the Passenger and Cargo Aircraft box.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Under the Shipment Type , the Radioactive box is obliterated, leaving only the Non-Radioactive box.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Under the Nature and Quantity of Dangerous Goods box, the Proper Shipping Name, Class or Division, UN or ID No., Packing Group, Subsidiary Risk, Quantity and Type of Packing, Packing Instructions, and Authorization have been filled out for the type of chemical being sent.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	The Name, Place and Date, Signature, and Emergency Telephone Number appears at the bottom of the FedEx Airbill.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	The statement "In accordance with IATA/ICAO" appears in the Additional Handling Information box.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	The Emergency Contact Information at the bottom of the FedEx Airbill is truly someone who can respond any time of the day or night.

Packaging and Shipping Environmental Samples

SOP: 2-1
Revision: 2
Date: March 1, 2004
Page 20 of 21

<i>Proper Shipping Name</i>	<i>Class or Division</i>	<i>UN or ID No.</i>	<i>Packing Group</i>	<i>Sub Risk</i>	<i>Quantity</i>	<i>Packing Instruction</i>	<i>Authorization</i>
Hydrochloric Acid Solution	8	UN1789	II		1 plastic box × 0.5 L	Y809	Ltd. Qty.
Nitric Acid Solution (with less than 20%)	8	UN2031	II		1 plastic box × 0.5 L	Y807	Ltd. Qty.
Sodium Hydroxide Solution	8	UN1824	II		1 plastic box × 0.5 L	Y809	Ltd. Qty.
Sulfuric Acid Solution	8	UN2796	II		1 plastic box × 0.5 L	Y809	Ltd. Qty.
Methanol	3	UN1230	II		1 plastic box × 1 L	Y305	Ltd. Qty.

Sample Cooler Labeling

Yes **No** **N/A**

- | | | | |
|--------------------------|--------------------------|--------------------------|---|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | The proper shipping name, UN number, and Ltd. Qty. appears on the shipping container. |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | The corresponding hazard labels are affixed on the shipping container; the labels are not obscured by tape. |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | The name and address of the shipper and receiver appear on the top and side of the shipping container. |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | The air waybill is attached to the top of the shipping container. |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Up Arrows have been attached to opposite sides of the shipping container. |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Packaging tape does not obscure markings or labeling. |

**Packaging and Shipping
Environmental Samples**

SOP: 2-1
Revision: 2
Date: March 1, 2004
Page 21 of 21

**Appendix B
Shipment Quality Assurance Checklist**

Date: _____ Shipper: _____ Destination: _____

Item(s) Description: _____

Radionuclide(s): _____

Radiological Survey Results: surface _____ mrem/hr 1 meter _____

Instrument Used: Mfgr: _____ Model: _____

S/N: _____ Cal Date: _____

Limited-Quantity or Instrument and Article

- | Yes | No | |
|-----|-----|---|
| ___ | ___ | 1. Strong tight package (package that will not leak material during conditions normally incidental to transportation). |
| ___ | ___ | 2. Radiation levels at any point on the external surface of package less than or equal to 0.5 mrem/hr. |
| ___ | ___ | 3. Removable surface contamination less than 20 dpm/100 cm ² (alpha) and 1,000 dpm/100 cm ² (beta/gamma). |
| ___ | ___ | 4. Outside inner package bears the marking "Radioactive." |
| ___ | ___ | 5. Package contains less than 15 grams of ²³⁵ U (check yes if ²³⁵ U not present). |
| ___ | ___ | 6. Notice enclosed in or on the package that includes the consignor or consignee and the statement, "This package conforms to the conditions and limitations specified in 49 CFR 173.421 for radioactive material, excepted package-limited quantity of material, UN2910." |
| ___ | ___ | 7. Activity less than that specified in 49 CFR 173.425. Permissible package limit:
Package Quantity: |
| ___ | ___ | 8. On all air shipments, the statement Radioactive Material, excepted package-limited quantity of material shall be noted on the air waybill. |

Qualified Shipper: _____ Signature: _____

Project Specific Modification


SOP No.: 2-2

SOP Title: Guide to Handling Investigation-Derived Waste


Project: Libby Asbestos Remedial Investigation (RI)

Project No.: 3282-137

Client: U.S. Environmental Protection Agency

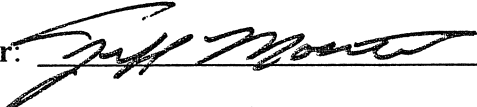Project Manager:  Date: 5/7/03

Technical Reviewer:  Date: 5/7/03

QA Reviewer:  Date: 5/12/03

EPA Approval:  Date: 5/19/03

Reason for and duration of modification: Site-specific procedures for disposing of Libby amphibole asbestos contaminated IDW are different than CDM Technical SOP 2-2. These modifications are necessary for the entire duration of the project.

All IDW will be handled in accordance with CDM Technical SOP 2-2, Guide to Handling Investigation-Derived Waste, with the following modifications:

Section 5.2, Off Site Disposal - All IDW (not including excess soil volume) will be collected in transparent garbage bags and marked "IDW" with an indelible marker. These bags will be deposited into the asbestos contaminated waste stream for disposal at the mine.

Guide To Handling Investigation-Derived Waste

SOP: 2-2
Revision: 4
Date: March 1, 2004
Page 1 of 7

Prepared: Tim Eggert

Technical Review: Sharon Budney

QA Review: Jeniffer Oxford

Approved: Michael C. Mally 2/24/04

Issued: [Signature] 2/18/04
Signature/Date

Signature/Date
[Signature]

1.0 Objective

This standard operating procedure (SOP) presents guidance for the management of investigation-derived waste (IDW). The primary objectives for managing IDW during field activities include:

- Leaving the site in no worse condition than existed prior to field activities
- Remove wastes that pose an immediate threat to human health or the environment
- Proper handling of onsite wastes that do not require offsite disposal or extended above-ground containerization
- Complying with federal, state, and facility applicable or relevant and appropriate requirements (ARARs)
- Careful planning and coordination of IDW management options
- Minimizing the quantity of IDW

2.0 Background

2.1 Definitions

Hazardous Waste - Discarded material that is regulated listed waste, or waste that exhibits ignitability, corrosivity, reactivity, or toxicity as defined in 40 CFR 261.3 or state regulations.

Investigation-Derived Wastes (IDWs) - Discarded materials resulting from field activities such as sampling, surveying, drilling, excavations, and decontamination processes that, in present form, possess no inherent value or additional usefulness without treatment. Wastes may be solid, liquid, or gaseous, or multiphase materials that may be classified as hazardous or non-hazardous.

Mixed-Waste - Any material that has been classified as hazardous and radioactive.

Radioactive Wastes - Discarded materials that are contaminated with radioactive constituents with specific activities in concentrations greater than the latest regulatory criteria (i.e., 10 CFR 20).

Treatment, Storage, and Disposal Facility (TSDF) - Permitted facilities that accept hazardous waste shipments for further treatment, storage, and/or disposal. These facilities must be permitted by the U.S. Environmental Protection Agency (EPA) and appropriate state agencies.

2.2 Discussion

Field investigation activities result in the generation of waste materials that may be characterized as hazardous or radioactive waste. IDWs may include drilling muds, cuttings, and purge water from test pit and well installation; purge water, soil, and other materials from collection of samples; residues from testing of treatment technologies and pump and treat systems; personal protective equipment (PPE); solutions (aqueous or otherwise) used to decontaminate non-disposable protective clothing and

Guide To Handling Investigation-Derived Waste

SOP: 2-2
Revision: 4
Date: March 1, 2004
Page 2 of 7

equipment; and other wastes or supplies used in sampling and testing potentially hazardous or radiologically contaminated material.

Note: The client's representatives may not be aware of all potential contaminants. The management of IDW must comply with applicable regulatory requirements.

3.0 Responsibilities

Site Manager - The site manager is responsible for ensuring that all IDW procedures are conducted in accordance with this SOP. The site manager is also responsible for ensuring that handling of IDW is in accordance with site-specific requirements.

Project Manager - The project manager is responsible for identifying site-specific requirements for the disposal of IDW in accordance with federal, state, and/or facility requirements.

Field Crew Members - Field crew members are responsible for implementing this SOP and communicating any unusual or unplanned condition to the project manager's attention.

4.0 Required Equipment

Equipment required for IDW containment will vary according to site-specific/client requirements. Management decisions concerning the necessary equipment required should consider: containment method, sampling, labeling, maneuvering, and storage (if applicable). Equipment must be onsite and inspected before commencing work.

4.1 IDW Containment Devices

The appropriate containment device (drums, tanks, etc.) will depend on site- or client-specific requirements and the ultimate disposition of the IDW. Typical IDW containment devices can include:

- Plastic sheeting (polyethylene) with a minimum thickness of 20 millimeters
- Department of Transportation (DOT) approved steel containers
- Bulk storage tanks comprised of polyethylene or steel

Containment of IDW should be segregated by waste type (i.e., solid or liquid, corrosive or flammable, etc.) and source location. Volume of the appropriate containment device should be site-specific.

4.2 IDW Container Labeling

A "Waste Container" or "IDW Container" label or indelible marking should be applied to each container. Labeling or marking requirements for onsite IDW not expected to be transported offsite are:

- Labels and markings that contain the following information: project name, generation date, location of waste origin, container identification number, sample number (if applicable), and contents (drill cuttings, purge water, PPE, etc.).
- Each label or marking will be applied to the upper one-third of the container at least twice, on opposite sides.
- Containers that are 5 gallons or less may only require one label or set of markings.
- Labels or markings will be positioned on a smooth part of the container. The label must not be affixed across container bungs, seams, ridges, or dents.

Guide To Handling Investigation-Derived Waste

SOP: 2-2
Revision: 4
Date: March 1, 2004
Page 3 of 7

- Labels must be constructed of a weather-resistive material with markings made with a permanent marker or paint pen and capable of enduring the expected weather conditions. If markings are used, the color must be easily distinguishable from the drum color.
- Labels will be secured in a manner to ensure the label remains affixed to the container.

Labeling or marking requirements for IDW expected to be transported offsite must be in accordance with the requirements of 49 CFR 172.

4.3 IDW Container Movement

Staging areas for IDW containers should be predetermined and in accordance with site-specific and/or client requirements. Arrangements should be made prior to field mobilization as to the methods and personnel required to safely transport IDW containers to the staging area. Transportation offsite onto a public roadway is prohibited unless 49 CFR 172 requirements are met.

4.4 IDW Container Storage

Containerized IDW should be staged pending chemical analysis or further onsite treatment. Staging areas and bulk storage procedures are to be determined according to site-specific requirements. Containers are to be stored in such a fashion that the labels can be easily read. A secondary/spill container must be provided as appropriate.

5.0 Procedures

The three general options for managing IDW are (1) collection and onsite disposal, (2) collection for offsite disposal, and (3) collection and interim management. Attachment 1 summarizes media-specific information on generation processes and management options. The option selected should take into account the following factors:

- Type (soil, sludge, liquid, debris), quantity, and source of IDW
- Risk posed by managing the IDW onsite
- Compliance with regulatory requirements
- IDW minimization and consistency with the IDW remedy and the site remedy

In all cases the client should approve the plans for IDW. Formal plans for the management of IDW must be prepared as part of a work plan or separate document.

5.1 Onsite Disposal

5.1.1 Soil/Sludge/Sediment

The options for handling soil/sludge/sediment IDW are as follows:

1. Return to boring, pit, or source immediately after generation as long as returning the media to these areas will not increase site risks (e.g., the contaminated soil will not be replaced at a greater depth than where it was originally so that it will not contaminate "clean" areas).
2. Spread around boring, pit, or source within the area of contamination (AOC) as long as returning the media to these areas will not increase site risks (e.g., direct contact with surficial contamination).

Guide To Handling Investigation-Derived Waste

SOP: 2-2
Revision: 4
Date: March 1, 2004
Page 4 of 7

3. Consolidate in a pit within the AOC as long as returning the media to these areas will not increase site risks (e.g., the contaminated soil will not be replaced at a greater depth than where it was originally so that it will not contaminate "clean" areas).
4. Send to onsite TSDF - may require analytical analysis prior to treatment/disposal.

Note: These options may require client and/or regulatory approval.

5.1.2 Aqueous Liquids

The options for handling aqueous liquid IDW are as follows:

1. Discharge to surface water, only when IDW is not contaminated.
2. Discharge to ground surface close to the well, only if soil contaminants will not be mobilized in the process and the action will not contaminate clean areas. If IDW from the sampling of background upgradient wells is not a community concern or associated with soil contamination, this presumably uncontaminated IDW may be released on the ground around the well.
3. Discharge to sanitary sewer.
4. Send to onsite TSDF - may require analysis prior to treatment/disposal.

Note: These options may require analytical results to obtain client and/or regulatory approval.

5.1.3 Disposable PPE

The options for handling disposable PPE are as follows:

1. Double-bag contents in non-transparent trash bags and place in onsite industrial dumpster, only if PPE is not contaminated.
2. Containerize, label, and send to onsite TSDF - may require analysis prior to treatment/disposal.

5.2 Offsite Disposal

Before sending to an offsite TSDF, analysis may be required. Also, manifests are required. Arrangements must be made with the client responsible for the site; it is CDM's policy not to sign manifests. The TSDF and transporter must be permitted for the respective wastes.

5.2.1 Soil/Sludge/Sediment

When the final site remedy requires offsite treatment and disposal, the IDW may be stored (e.g., drummed, covered in a waste pile) or returned to its source until final disposal. The management option selected should take into account the potential for increased risks, applicable regulations, and other relevant site-specific factors (e.g., weather, storage space, and public concern/perceptions).

5.2.2 Aqueous Liquids

When the final site remedy requires offsite treatment and disposal, the IDW may be stored (e.g., mobile tanks or drums) until final disposal. The management option selected should take into account the

Guide To Handling Investigation-Derived Waste

SOP: 2-2
Revision: 4
Date: March 1, 2004
Page 5 of 7

potential for increased risks, applicable regulations, and other relevant site-specific factors (e.g., weather, storage space, and public concern/perceptions).

5.2.3 Disposable PPE

When the final site remedy requires offsite treatment disposal, the IDW may be containerized and stored. The management option selected should take into account potential for increased risks, applicable regulations, and other relevant site-specific factors (e.g., weather, storage space, and public concern/perceptions).

5.3 Interim Measures

All interim measures must be approved by the client and regulatory agencies.

1. Storing IDW onsite until the final action may be practical in the following situations:
 - A. Returning wastes (especially sludges and soils) to their onsite source area would require re-excavation for disposal in the final remediation alternative.
 - B. Interim storage in containers may be necessary to provide adequate protection to human health and the environment.
 - C. Offsite disposal options may trigger land disposal regulations under the Resource Conservation and Recovery Act (RCRA). Storing IDW until the final disposal of all wastes from the site will eliminate the need to address this issue more than once.
 - D. Interim storage may be necessary to provide time for sampling and analysis.
2. Segregate and containerize all waste for future treatment and/or disposal.
 - A. Containment options for soil/sludge/sediment may include drums or covered waste piles in AOC.
 - B. Containment options for aqueous liquids may include mobile tanks or drums.
 - C. Containment options for PPE may include drums or roll-off boxes.

6.0 Restrictions/Limitations

Site Managers Should Determine the Most Appropriate Disposal Option for Aqueous Liquids on a Site-Specific Basis. Parameters to consider, especially when determining the level of protection, include the volume of IDW, the contaminants present in the groundwater, the presence of contaminants in the soil at the site, whether the groundwater or surface water is a drinking water supply, and whether the groundwater plume is contained or moving. Special disposal/handling may be needed for drilling fluids because they may contain significant solid components.

Disposable sampling materials, disposable PPE, decontamination fluids, etc. will always be managed on a site-specific basis. **Under No Circumstances Should These Types of Materials Be Brought Back to the Office or Warehouse.**

Guide To Handling Investigation-Derived Waste

SOP: 2-2
Revision: 4
Date: March 1, 2004
Page 6 of 7

7.0 References

Environmental Resource Center. 1992. *Hazardous Waste Management Compliance Handbook*, Van Nostrand Reinhold.

Institute of Hazardous Materials Management. 1992. *Handbook on Hazardous Materials Management*, 4th Ed.

U. S. Environmental Protection Agency. 1987. *A Compendium of Superfund Field Operations Methods*, EPA/540/P-87/001.1.

U. S. Environmental Protection Agency. August 1990. *Low-Level Mixed Waste: A RCRA Perspective for NRC Licensees*, EPA/530-SW-90-057.

U. S. Environmental Protection Agency. May 1991. *Management of Investigation-Derived Wastes During Site Inspections*, EPA/540/G-91/009.

U. S. Environmental Protection Agency. January 1992. *Guide to Management of Investigation-Derived Wastes*, 9345.3-03FS.

U. S. Environmental Protection Agency, Region IV. May 1996 and 1997. *Environmental Investigations Standard Operating Procedures and Quality Assurance Manual*, revisions.

Guide To Handling Investigation-Derived Waste

SOP: 2-2
Revision: 4
Date: March 1, 2004
Page 7 of 7

Attachment 1 IDW Management Options

<i>Type of IDW</i>	<i>Generation Processes</i>	<i>Management Options</i>
Soil	<ul style="list-style-type: none"> Well/Test pit installations Borehole drilling Soil sampling 	<p>Onsite Disposal</p> <ul style="list-style-type: none"> Return to boring, pit, or source immediately after generation Spread around boring, pit, or source within the AOC Consolidate in a pit (within the AOC) Send to onsite TSDF <p>Offsite Disposal</p> <ul style="list-style-type: none"> Client to send to offsite TSDF <p>Interim Management</p> <ul style="list-style-type: none"> Store for future treatment and/or disposal
Sludge/Sediment	<ul style="list-style-type: none"> Sludge pit/sediment sampling 	<p>Onsite Disposal</p> <ul style="list-style-type: none"> Return to boring, pit, or source immediately after generation Send to onsite TSDF <p>Offsite Disposal</p> <ul style="list-style-type: none"> Client to send to offsite TSDF <p>Interim Management</p> <ul style="list-style-type: none"> Store for future treatment and/or disposal
Aqueous Liquids (groundwater, surface water, drilling fluids, wastewaters)	<ul style="list-style-type: none"> Well installation/development Well purging during sampling Groundwater discharge during pump tests Surface water sampling Wastewater sampling 	<p>Onsite Disposal</p> <ul style="list-style-type: none"> Pour onto ground close to well (nonhazardous waste) Discharge to sewer Send to onsite TSDF <p>Offsite Disposal</p> <ul style="list-style-type: none"> Client to send to offsite commercial treatment unit Client to send to publicly owned treatment works (POTW) <p>Interim Management</p> <ul style="list-style-type: none"> Store for future treatment and/or disposal
Decontamination Fluids	<ul style="list-style-type: none"> Decontamination of PPE and equipment 	<p>Onsite Disposal</p> <ul style="list-style-type: none"> Send to onsite TSDF Evaporate (for small amounts of low contamination organic fluids) Discharge to ground surface <p>Offsite Disposal</p> <ul style="list-style-type: none"> Client to send to offsite TSDF Discharge to sewer <p>Interim Management</p> <ul style="list-style-type: none"> Store for future treatment and/or disposal
Disposable PPE and Sampling Equipment	<ul style="list-style-type: none"> Sampling procedures or other onsite activities 	<p>Onsite Disposal</p> <ul style="list-style-type: none"> Place in onsite industrial dumpster Send to onsite TSDF <p>Offsite Disposal</p> <ul style="list-style-type: none"> Client to send to offsite TSDF <p>Interim Management</p> <ul style="list-style-type: none"> Store for future treatment and/or disposal

Adapted from U.S. Environmental Protection Agency, Guide to Management of Investigation-Derived Wastes, 9345-03FS, January 1992.

Project-Specific Modification

SOP No.: 4-1

SOP Title: Field Logbook Content and Control

Project: Libby Asbestos Remedial Investigation (RI)

Project No.: 3282-137

Client: U.S. Environmental Protection Agency

Project Manager:  Date: 5/7/03

Technical Reviewer:  Date: 5/11/03

QA Reviewer:  Date: 5/12/03

EPA Approval:  Date: 5/19/03

Reason for and duration of modification: Site-specific procedures field logbook completions are different than CDM Technical SOP 4-1. These modifications are necessary for the entire duration of the project.

All content and control of will logbooks will be done accordance with CDM Technical SOP 4-1, Field Logbook Content and Control, with the following modifications:

Section 5.2, Operation – A new page will be completed for each property where information is collected for RI activities. The header information will include the address, the name of the property owner, and the building identification number of structures on the property.

When following the line-out and signature procedures to close a logbook page, the author must also print their name under the signature.

Field Logbook Content and Control

SOP 4-1

Revision: 5

Date: March 1, 2004

Page 1 of 4

Prepared: Del Baird

Technical Review: Sharon Budney

QA Review: Douglas J. Updike

Approved: Michael C. Mally 2/24/04
Signature/Date

Issued: [Signature] 2/18/04
Signature/Date

1.0 Objective

The objective of this standard operating procedure (SOP) is to set CDM Federal (CDM) criteria for content entry and form of field logbooks. Field logbooks are an essential tool to document field activities for historical and legal purposes.

2.0 Background

2.1 Definitions

Biota - The flora and fauna of a region.

Magnetic Declination Corrections - Compass adjustments to correct for the angle between magnetic north and geographical meridians.

2.2 Discussion

Information recorded in field logbooks includes field team names, observations, data, calculations, date/time, weather, and description of the data collection activity, methods, instruments, and results. Additionally, the logbook may contain deviations from plans and descriptions of wastes, biota, geologic material, and site features including sketches, maps, or drawings as appropriate.

3.0 Responsibilities

Field Team Leader (FTL) - The FTL is responsible for ensuring that the format and content of data entries are in accordance with this procedure.

Site Personnel - All CDM employees who make entries in field logbooks during onsite activities are required to read this procedure prior to engaging in this activity. The FTL will assign field logbooks to site personnel who will be responsible for their care and maintenance. Site personnel will return field logbooks to the records file at the end of the assignment.

4.0 Required Equipment

- Site-specific plans
- Field notebook
- Indelible black or blue ink pen
- Ruler or similar scale

Field Logbook Content and Control

SOP 4-1

Revision: 5

Date: March 1, 2004

Page 2 of 4

5.0 Procedures

5.1 Preparation

In addition to this SOP, site personnel responsible for maintaining logbooks must be familiar with all procedures applicable to the field activity being performed. These procedures should be consulted as necessary to obtain specific information about equipment and supplies, health and safety, sample collection, packaging, decontamination, and documentation. These procedures should be located at the field office.

Field logbooks shall be bound with lined, consecutively numbered pages. All pages must be numbered prior to initial use of the logbook. Prior to use in the field, each logbook will be marked with a specific document control number issued by the document control administrator, if required by the contract quality implementation plan (QIP). Not all contracts require document control numbers. The following information shall be recorded on the cover of the logbook:

- Field logbook document control number.
- Activity (if the logbook is to be activity-specific) and location.
- Name of CDM contact and phone number(s).
- Start date.
- In specific cases, special logbooks may be required (e.g., waterproof paper for stormwater monitoring).

The first few (approximately five) pages of the logbook will be reserved for a table of contents (TOC). Mark the first page with the heading and enter the following:

Table of Contents

Date/Description	Page
(Start Date)/Reserved for TOC	1-5

The remaining pages of the table of contents will be designated as such with "TOC" written on the top center of each page.

5.2 Operation

Requirements that must be followed when using a logbook:

- Record work, observations, quantities of materials, calculations, drawings, and related information directly in the logbook. If data collection forms are specified by an activity-specific plan, this information need not be duplicated in the logbook. However, any forms used to record site information must be referenced in the logbook.
- Do not start a new page until the previous one is full or has been marked with a single diagonal line so that additional entries cannot be made. Use both sides of each page.
- Do not erase or blot out any entry at any time. Indicate any deletion by a single line through the material to be deleted. Initial and date each deletion. Take care to not obliterate what was written previously.
- Do not remove any pages from the book.

Field Logbook Content and Control

SOP 4-1

Revision: 5

Date: March 1, 2004

Page 3 of 4

Specific requirements for field logbook entries include:

- Initial and date each page.
- Sign and date the final page of entries for each day.
- Initial and date all changes.
- Multiple authors must sign out the logbook by inserting the following:
Above notes authored by:
 - (Sign name)
 - (Print name)
 - (Date)
- A new author must sign and print his/her name before additional entries are made.
- Draw a diagonal line through the remainder of the final page at the end of the day.
- Record the following information on a daily basis:
 - Date and time
 - Name of individual making entry
 - Names of field team and other persons onsite
 - Description of activity being conducted including station or location (i.e., well, boring, sampling location number) if appropriate
 - Weather conditions (i.e., temperature, cloud cover, precipitation, wind direction, and speed) and other pertinent data
 - Level of personal protection to be used
 - Serial numbers of instruments
 - Required calibration information
 - Serial/tracking numbers on documentation (e.g., carrier air bills)

Entries into the field logbook shall be preceded with the time (written in military units) of the observation. The time should be recorded frequently and at the point of events or measurements that are critical to the activity being logged. All measurements made and samples collected must be recorded unless they are documented by automatic methods (e.g., data logger) or on a separate form required by an operating procedure. In these cases, the logbook must reference the automatic data record or form.

At each station where a sample is collected or an observation or measurement made, a detailed description of the location of the station is required. Use a compass (include a reference to magnetic declination corrections), scale, or nearby survey markers, as appropriate. A sketch of station location may be warranted. All maps or sketches made in the logbook should have descriptions of the features shown and a direction indicator. It is preferred that maps and sketches be oriented so that north is toward the top of the page. Maps, sketches, figures, or data that will not fit on a logbook page should be referenced and attached to the logbook to prevent separation.

Other events and observations that should be recorded include:

- Changes in weather that impact field activities.
- Deviations from procedures outlined in any governing documents. Also record the reason for any noted deviation.
- Problems, downtime, or delays.
- Upgrade or downgrade of personal protection equipment.

Field Logbook Content and Control

SOP 4-1

Revision: 5

Date: March 1, 2004

Page 4 of 4

5.3 Post-Operation

To guard against loss of data due to damage or disappearance of logbooks, completed pages shall be periodically photocopied (weekly, at a minimum) and forwarded to the field or project office. Other field records shall be photocopied and submitted regularly and as promptly as possible to the office. When possible, electronic media such as disks and tapes should be copied and forwarded to the project office.

At the conclusion of each activity or phase of site work, the individual responsible for the logbook will ensure that all entries have been appropriately signed and dated, and that corrections were made properly (single lines drawn through incorrect information, then initialed and dated). The completed logbook shall be submitted to the records file.

6.0 Restrictions/Limitations

Field logbooks constitute the official record of onsite technical work, investigations, and data collection activities. Their use, control, and ownership are restricted to activities pertaining to specific field operations carried out by CDM personnel and their subcontractors. They are documents that may be used in court to indicate dates, personnel, procedures, and techniques employed during site activities. Entries made in these logbooks should be factual, clear, precise, and non-subjective. Field logbooks, and entries within, are not to be used for personal use.

7.0 References

Sandia National Laboratories, *Procedure for Preparing Sampling and Analysis Plan, Site-Specific Sampling Plan, and Field Operating Procedures*, QA-02-03, Albuquerque Environmental Program Department 3220, Albuquerque, New Mexico, 1991.

Sandia National Laboratories, Division 7723, *Field Operation Procedure for Field Logbook Content and Control*, Environmental Restoration Department, Albuquerque, New Mexico, 1992.

Project-Specific Modification

SOP No.: 4-2

SOP Title: Photographic Documentation of Field Activities

Project: Libby Asbestos Remedial Investigation (RI)

Project No.: 3282-137

Client: U.S. Environmental Protection Agency

Project Manager: [Signature] Date: 5/7/03

Technical Reviewer: [Signature] Date: 5/7/03

QA Reviewer: [Signature] Date: 5/12/03

EPA Approval: [Signature] Date: 5/19/03

Reason for and duration of modification: Site-specific procedures for photographs taken by digital cameras are different than the current SOP.

All photographs will be recorded in accordance with CDM Technical SOP 4-2, Photographic Documentation of Field Activities, with the following modifications:

Section 5.2.2, General Guidelines for Still Photography - A slate is not required for each new roll of film. The information for the slate will be recorded in the field logbook. The numbers assigned by the digital camera will be used instead of the photographer assigning the number. The caption information will either be on the back of the photograph or the photograph will be numbered or labeled and the caption information listed next to the number or label in the photograph log. On the digital photos, a caption will be included in the picture stating property address/location, date, and name of feature. All team members, as stated in the logbook, will be photographers and witnesses at the property. Slates are not required for close-up photographs. Instead the required information can be listed in the logbook or photograph log. A color strip is not required for close-up or feature photographs.

Section 5.2.4, Photographic Documentation - The name of the laboratory, time and date of drop-off, and receipt of film is not required to be recorded for this project.

Project-Specific Modification

Section 5.3.2, Archive Procedures - Digital photographs will be archived on compact discs. These discs will be assigned a document control number written on the disc case as well as well as the disc.

Photographic Documentation of Field Activities

SOP 4-2

Revision: 6

Date: March 1, 2004

Page 1 of 6

Prepared: David O. Johnson

Technical Review: Jo Nell Mullins

QA Review: Laura Splichal

Approved: Michael C. Mally 2/24/04

Issued:  2/18/04

Signature/Date

Signature/Date

1.0 Objective

The purpose of this standard operating procedure (SOP) is to provide standard guidelines and methods for photographic documentation, which include still and digital photography and videotape recordings of field activities and site features (geologic formations, core sections, lithologic samples, water samples, general site layout, etc.). This document shall provide guidelines designed for use by a professional or amateur photographer. This SOP is intended for circumstances when formal photographic documentation is required. Based on project requirements, it may not be applicable for all photographic activities.

2.0 Background

2.1 Definitions

Photographer – A photographer is the camera operator (professional or amateur) of still photography, including digital photography, or videotape recording whose primary function with regard to this SOP is to produce documentary or data-oriented visual media.

Identifier Component – Identifier components are visual components used within a photograph such as visual slates, reference markers, and pointers.

Standard Reference Marker – A standard reference marker is a reference marker that is used to indicate a feature size in the photograph and is a standard length of measure, such as a ruler, meter stick, etc. In limited instances, if a ruled marker is not available or its use is not feasible, it can be a common object of known size placed within the visual field and used for scale.

Slates – Slates are blank white index cards or paper used to present information pertaining to the subject/procedure being photographed. Letters and numbers on the slate will be bold and written with black, indelible marking pens.

Arrows and Pointers – Arrows and pointers are markers/pointers used to indicate and/or draw attention to a special feature within the photograph.

Contrasting Backgrounds – Contrasting backgrounds are backdrops used to lay soil samples, cores, or other objects on for clearer viewing and to delineate features.

Data Recording Camera Back – A data recording camera back is a camera attachment or built-in feature that will record, at the very least, frame numbers and dates directly on the film.

2.2 Discussion

Photographs and videotape recordings made during field investigations are used as an aid in documenting and describing site features, sample collection activities, equipment used, and possible

Photographic Documentation of Field Activities

SOP 4-2
Revision: 6
Date: March 1, 2004
Page 2 of 6

lithologic interpretation. This SOP is designed to illustrate the format and desired placement of identifier components, such as visual slates, standard reference markers, and pointers. These items shall become an integral part of the “visual media” that, for the purpose of this document, shall encompass still photographs, digital photographs, and videotape recordings (or video footage). The use of a photographic logbook and standardized entry procedures are also outlined. These procedures and guidelines will minimize potential ambiguities that may arise when viewing the visual media and ensure the representative nature of the photographic documentation.

2.3 Associated Procedures

- CDM Federal SOP 4-1, Field Logbook Content and Control

3.0 Responsibilities

Field Team Leader (FTL) – The FTL is responsible for ensuring that the format and content of photographic documentation are in accordance with this procedure. The FTL is responsible for directing the photographer to specific situations, site features, or operations that the photographer will be responsible for documenting.

Photographer – The photographer shall seek direction from the FTL and regularly discuss the visual documentation requirements and schedule. The photographer is responsible for maintaining a logbook per Sections 5.1, 5.2.4, and 5.3.1 of this SOP.

4.0 Required Equipment

The following is a general list of equipment that may be used:

- 35mm camera or disposable single use camera (35mm or panoramic use)
- Digital camera
- Extra batteries for 35mm camera
- Video camera
- Logbook
- Indelible black or blue ink pen
- Standard reference markers
- Slates
- Arrows or pointers
- Contrasting backgrounds
- Medium speed, or multi purpose fine-grain, color, 35 mm negative film or slide film (project dependent)
- Data recording camera back (if available)
- Storage medium for digital camera

5.0 Procedures

5.1 Documentation

A commercially available, bound logbook will be used to log and document photographic activities. Review the CDM Federal SOP 4-1, Field Logbook Content and Control and prepare all supplies needed for logbook entries.

Note: A separate photographic logbook is not required. A portion of the field logbook may be designated as the photographic log and documentation section.

Photographic Documentation of Field Activities

SOP 4-2

Revision: 6

Date: March 1, 2004

Page 3 of 6

5.1.1 Field - Health and Safety Considerations

There are no hazards that an individual will be exposed to specific to photographic documentation. However, site-specific hazards may arise depending on location or operation. Personal protective equipment used in this operation will be site-specific and dictated through requirements set by the site safety officer, site health and safety plan, and/or prescribed by the CDM Federal Corporate Health and Safety Program. The photographer should contact the site safety officer for health and safety orientation prior to commencing field activities. The site health and safety plan must be read prior to entry to the site, and all individuals must sign the appropriate acknowledgement that this has been done.

The photographer should be aware of any potential physical hazards while photographing the subject (e.g., traffic, low overhead hazard, edge of excavation).

5.2 Operation

5.2.1 General Photographic Activities in the Field

The following sections provide general guidelines that should be followed to visually document field activities and site features using still/digital cameras and video equipment. Listed below are general suggestions that the photographer should consider when performing activities under this SOP:

- The photographer should be prepared to make a variety of shots, from close-up to wide-angle. Many shots will be repetitive in nature or format especially close-up site feature photographs. Consideration should therefore be given to designing a system or technique that will provide a reliable repetition of performance.
- All still film photographs should be made using a medium speed, or multi purpose fine-grain, color negative film in the 35 mm format unless otherwise directed by the FTL.
- It is suggested that Kodak brand "Ektapress Gold Deluxe" film or equivalent be used as the standard film for the still photography requirements of the field activities. This film is stable at room temperature after exposure and will better survive the time lag between exposure and processing. It is suggested that film speed ASA 100 should be used for outdoor photographs in bright sunlight, ASA 200 film should be used in cloudy conditions, and ASA 400 film should be used indoors or for very low-light outdoor photographs.
- No preference of videotape brand or digital storage medium is specified and is left to the discretion of the photographer.
- The lighting for sample and feature photography should be oriented toward a flat condition with little or no shadow. If the ambient lighting conditions are inadequate, the photographer should be prepared to augment the light (perhaps with reflectors or electronic flash) to maintain the desired visual effect.
- Digital cameras have multiple photographic quality settings. A camera that obtains a higher resolution (quality) has a higher number of pixels and will store a fewer number of photographs per digital storage medium.

5.2.2 General Guidelines for Still Photography

Slate Information

When directed by the FTL, each new roll of film or digital storage medium shall contain on the first usable frame (for film) a slate with consecutively assigned control numbers (a consecutive, unique number that is assigned by the photographer as in sample numbers).

Photographic Documentation of Field Activities

SOP 4-2
Revision: 6
Date: March 1, 2004
Page 4 of 6

Caption Information

All still photographs will have a full caption permanently attached to the back or permanently attached to a photo log sheet. The caption should contain the following information (digital photographs should have a caption added after the photographs are downloaded):

- Film roll control number (if required) and photograph sequence number
- Date and time
- Description of activity/item shown (e.g., name of facility/site, specific project name, project no.)
- Direction (if applicable)
- Photographer

When directed by the FTL, a standard reference marker should be used in all documentary visual media. While the standard reference marker will be predominantly used in close-up feature documentation, inclusion in all scenes should be considered.

Digital media should be downloaded at least once each day.

Close-Up and Feature Photography

When directed by the FTL, close-up photographs should include a standard reference marker of appropriate size as an indication of the feature size and contain a slate marked with the site name and any identifying label, such as a well number or core depth, that clearly communicates to the viewer the specific feature being photographed.

Feature samples, core pieces, and other lithologic media should be photographed as soon as possible after they have been removed from their in situ locations. This enables a more accurate record of their initial condition and color. When directed by the FTL, include a standard reference color strip (color chart such as Munsell Soil Color Chart or that available from Eastman Kodak Co.) within the scene. This is to be included for the benefit of the viewer of the photographic document and serves as a reference aid to the viewer for formal lithologic observations and interpretations.

Site Photography

Site photography, in general, will consist predominantly of medium and wide-angle shots. A standard reference marker should be placed adjacent to the feature or, when this is not possible, within the same focal plane.

While it is encouraged that a standard reference marker and caption/slate be included in the scene, it is understood that situations will arise that preclude their inclusion within the scene. This will be especially true of wide-angle shots. In such a case, the film/tape control number shall be entered in the photographic logbook along with the frame number and all other information pertinent to the scene.

Panoramic

In situations where a wide-angle lens does not provide sufficient subject detail, a single-use disposable panoramic camera is recommended. If this type of camera is not available, a panoramic series of two or three photos would be appropriate. Panoramas can provide greater detail while covering a wide subject, such as an overall shot of a site.

Photographic Documentation of Field Activities

SOP 4-2
Revision: 6
Date: March 1, 2004
Page 5 of 6

To shoot a panoramic series using a standard 35 mm or digital camera, the following procedure is recommended.

- Use a stable surface or tripod to support the camera
- Allow a 20 to 30 percent overlap while maintaining a uniform horizon
- Complete two to three photos per series

5.2.3 General Photographic Documentation Using Video Cameras

As a reminder, it is not within the scope of this document to set appropriate guidelines for presentation or “show” videotape recording. The following guidelines are set for documentary videotape recordings only and should be implemented at the discretion of the FTL.

Documentary videotape recordings of field activities may include an audio slate for all scenes. At the beginning of each video session, an announcer will recite the following information: date, time (in military units), photographer, site ID number, and site location. This oral account may include any additional information clarifying the subject matter being recorded.

A standard reference marker may be used when taking close-up shots of site features with a video camera. The scene may also include a caption/slate. It should be placed adjacent and parallel to the feature being photographed.

It is recommended that a standard reference marker and caption/slate be included in all scenes. The caption information is vital to the value of the documentary visual media and should be included. If it is not included within the scene, it should be placed before the scene.

Original videotape recordings will not be edited. This will maintain the integrity of the information contained on the videotape. If editing is desired, a working copy of the original videotape recording can be made.

A label should be placed on the videotape with the appropriate identifying information (i.e., project name, project number, date, location, etc.).

5.2.4 Photographic Documentation

Photographic activities must be documented in a photographic logbook or in a section of the field logbook. The photographer will be responsible for making proper entries.

In addition to following the technical standards for logbook entry as referenced in CDM Federal SOP 4-1, the following information should be maintained in the appropriate logbook:

- Photographer name.
- If required, an entry shall be made for each new roll/tape control number assigned.
- Sequential tracking number for each photograph taken (for digital cameras, the camera-generated number may be used).
- Date and time (military time).
- Location.
- A description of the activity/item photographed.

Photographic Documentation of Field Activities

SOP 4-2
Revision: 6
Date: March 1, 2004
Page 6 of 6

- If needed, a description of the general setup, including approximate distance between the camera and the subject, may be recorded in the logbook.
- Record as much other information as possible to assist in the identification of the photographic document.

5.3 Post Operation

All film will be sent for development and printing to a photographic laboratory (to be determined by the photographer). The photographer will be responsible for arranging transport of the film from the field to the photographic laboratory. The photographer shall also be responsible for arranging delivery of the negatives and photographs, digital storage medium, or videotape to the project management representative.

5.3.1 Documentation

At the end of each day's photographic session, the photographer(s) will ensure that the appropriate logbook has been completely filled out and maintained as outlined in CDM Federal SOP 4-1.

5.3.2 Archive Procedures

1. Photographs and the associated set of uncut negatives, digital media, and original unedited documentary videotape recordings will be submitted to the project files and handled according to contract records requirements. The FTL will ensure their proper distribution.
2. Completed pages of the appropriate logbook will be copied weekly and submitted to the project files.

6.0 Restrictions/Limitations

This document is designed to provide a set of guidelines for the field amateur or professional photographer to ensure that an effective and standardized program of visual documentation is maintained.

It is not within the scope of this document to provide instruction in photographic procedures, nor is it within the scope of this document to set guidelines for presentation or "show" photography.

The procedures outlined herein are general by nature. The FTL is responsible for specific operational activity or procedure. Questions concerning specific procedures or requirements should be directed to the FTL.

Note: Some sites do not permit photographic documentation. Check with the site contact for any restrictions.

7.0 References

U.S. Army Corps of Engineers, *Requirements for the Preparation of Sampling and Analysis Plans*, EM 200-1-3, February 2001, Appendix F.

U.S. Environmental Protection Agency, Region IV, *Environmental Investigations Standard Operating Procedures and Quality Assurance Manual*, Athens, Georgia, November 2001.

U.S. Environmental Protection Agency, National Enforcement Investigations Center, *Multi-Media Investigation Manual*, EPA-330/9-89-003-R, Revised March 1992, p. 85.

Project-Specific Modification

SOP No.: 4-5

SOP Title: Field Equipment Decontamination at Nonradioactive Sites

Project: Libby Asbestos Remedial Investigation (RI)

Project No.: 3282-137

Client: U.S. Environmental Protection Agency

Project Manager: [Signature] Date: 5/7/03

Technical Reviewer: [Signature] Date: 5/7/03

QA Reviewer: [Signature] Date: 5/12/03

EPA Approval: [Signature] Date: 5/19/03

Reason for and duration of modification: Site-specific procedures for decontamination of Libby amphibole asbestos contaminated field equipment are different than CDM Technical SOP 4-5. These modifications are necessary for the entire duration of the project.

All equipment used to collect, handle, or measure soil samples will be decontaminated in accordance with CDM Technical SOP 4-5, Field Equipment Decontamination at Nonradioactive Sites, with the following modifications:

Section 4.0, Required Equipment - Plastic sheeting will not be used during decontamination procedures. American Society for Testing and Materials (ASTM) Type II water will not be used. Rather, locally available deionized (DI) water will be used.

Section 5.0, Procedures - Decontamination water will not be captured and will be discharged to the ground at the property.

Section 5.6, Waste Disposal - Decontamination water will not be captured and will not be packaged, labeled, or stored as investigation-derived waste (IDW).

Field Equipment Decontamination at Nonradioactive Sites

SOP 4-5
Revision: 6
Date: December 31, 2004


Prepared: Steven Fundingsland

Technical Review: Tim Turner

QA Review: Doug Updike

Approved: Michael C. Malloy 12/21/04

Issued:

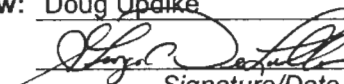
Signature/Date 12/20/04


Signature/Date

1.0 Objective

The objective of this standard operating procedure (SOP) is to describe the general procedures required for decontamination of field equipment at nonradioactive sites. This SOP serves as a guide and is applicable at most sites; however, it should be noted that site-specific conditions (i.e., type of contamination, type of media sampled) and the governing agency (i.e., EPA, DOE, USACE) may require modifications to the decontamination procedures provided in this SOP.

2.0 Background

2.1 Definitions

Acid Rinse - A solution of 10 percent nitric or hydrochloric acid made from reagent grade acid and analyte-free water.

Analyte-Free Water - Tap water that has been treated so that the water contains no detectable heavy metals or other inorganic compounds. Analyte-free water should be stored only in clean glass, stainless steel, or plastic containers that can be closed when not in use.

Clean - Free of visible contamination and when decontamination has been completed in accordance with this SOP.

Cross Contamination - The transfer of contaminants through equipment or personnel from the contamination source to less contaminated or noncontaminated samples or areas.

Decontamination - The process of rinsing or otherwise cleaning the surfaces of equipment to rid them of contaminants and to minimize the potential for cross contamination of samples or exposure of personnel.

Organic-Free/Analyte-Free Water - Tap water that has been treated so that the water meets the analyte-free water criteria and contains no detectable organic compounds. Organic-free/analyte-free water should be stored only in clean glass, Teflon™, or stainless steel containers that can be closed when not in use.

Potable Water - Tap water may be obtained from any municipal system. Chemical analysis of the water source may be required before it is used.

Soap - Low-sudsing, nonphosphate detergent such as Liquinox™.

Solvent Rinse - Pesticide grade, or better, isopropanol, acetone, or methanol.

2.2 Discussion

Decontamination of field equipment is necessary to ensure acceptable quality of samples by preventing cross contamination. Further, decontamination reduces health hazards and prevents the spread of contaminants offsite.

3.0 Responsibilities

Field Team Leader - The field team leader (FTL) ensures that field personnel are trained in the performance of this procedure and that decontamination is conducted in accordance with this procedure. The FTL may also be required to collect and document rinsate samples to provide quantitative verification that these procedures have been correctly implemented.

4.0 Required Equipment

- Stiff-bristle scrub brushes
- Plastic buckets and troughs
- Soap
- Nalgene or Teflon sprayers or wash bottles or 2- to 5-gallon, manual-pump sprayer (pump sprayer material must be compatible with the solution used)
- Plastic sheeting
- Disposable wipes, rags, or paper towels
- Potable water*
- Analyte-free water
- Organic-free/analyte-free water
- Gloves, safety glasses, and other protective clothing as specified in the site-specific health and safety plan
- High-pressure pump with soap dispenser or steam-spray unit (for large equipment only)
- Appropriate decontamination solutions pesticide grade or better and traceable to a source (e.g., 10 percent and/or 1 percent nitric acid [HNO₃], acetone, methanol, isopropanol, hexane)
- Tools for equipment assembly and disassembly (as required)
- 55-gallon drums or tanks (as required)
- Pallets for drums or tanks holding decontamination water (as required)

* Potable water may be required to be tested for contaminants before use. Check field plan for requirements.

5.0 Procedures

All reusable equipment (nondedicated) used to collect, handle, or measure samples will be decontaminated before coming into contact with any sample. Decontamination of equipment will occur either at a central decontamination station or at portable decontamination stations set up at the sampling location, drill site, or monitoring well location. The centrally located decontamination station will include an appropriately sized bermed and lined area on which equipment decontamination will occur and shall be equipped with a collection system and storage vessels. In certain circumstances, berming is not required when small quantities of water are being generated and for some short duration field activities (i.e., pre-remedial sampling). Equipment should be transported to the decontamination station in a manner to prevent cross contamination of equipment and/or area. Precautions taken may include enclosing augers in plastic wrap while being transported on a flatbed truck.

The decontamination area will be constructed so that contaminated water is either collected directly into appropriate containers (5-gallon buckets or steel wash tubs) or within the berms of the decontamination area that then drains into a collection system. Water from the collection system will be transferred into 55-gallon drums or portable tanks for storage. Typically, decontamination water will be staged until sampling results or waste characterization results are obtained and evaluated and the proper disposition of the waste is determined. The exact procedure for decontamination waste disposal should be discussed in the field plan. Also, solvent and acid rinse fluids may need to be segregated from other investigation-derived wastes.

All items that will come into contact with potentially contaminated media will be decontaminated before use and between sampling and/or drilling locations. If decontaminated items are not immediately used, they will be covered either with clean plastic or aluminum foil depending on the size of the item. All decontamination procedures for the equipment being used are as follows:

General Guidelines

- Potable, analyte-free, and organic-free/analyte-free water should be free of all contaminants of concern. Following the field plan, analytical data from the water source may be required.

Field Equipment Decontamination at Nonradioactive Sites

SOP 4-5
Revision: 6
Date: December 31, 2004

- Sampling equipment that has come into contact with oil and grease will be cleaned with methanol or other approved alternative to remove the oily material. This may be followed by a hexane rinse and then another methanol rinse. Regulatory or client requirements regarding solvent use will be stated in the field plan.
- All solvents and acids will be pesticide grade or better and traceable to a source. The corresponding lot numbers will be recorded in the appropriate logbook. Solvents and acids are potentially hazardous materials and must be handled, stored, and transported accordingly. Solvents should never be used in a closed building. See the site-specific health and safety plan and/or the chemical's Material Safety Data Sheet (MSDS) for specific information regarding the safe use of the chemical.
- Decontaminated equipment will be allowed to air dry before being used.
- Documentation for all cleaning will be recorded in the appropriate logbook.
- Gloves, boots, safety glasses, and any other personnel protective clothing and equipment will be used as specified in the site-specific health and safety plan.

5.1 Heavy Equipment Decontamination

Heavy equipment includes drilling rigs and backhoes. Follow these steps when decontaminating this equipment:

- Establish a bermed decontamination area that is large enough to fully contain the equipment to be cleaned. If available, an existing wash pad or appropriate paved and bermed area may be used; otherwise, use one or more layers of heavy plastic sheeting to cover the ground surface and berms. All decontamination pads should be upwind of the area under investigation.
- With the rig in place, spray areas (rear of rig or backhoe) exposed to contaminated soils using a hot water high-pressure sprayer. Be sure to spray down all surfaces, including the undercarriage.
- Use brushes, soap, and potable water to remove dirt whenever necessary.
- Remove equipment from the decontamination pad and allow it to air dry before returning it to the work site.
- Record the equipment type, date, time, and method of decontamination in the appropriate logbook.
- After decontamination activities are completed, collect all contaminated wastewater, plastic sheeting, and disposable gloves, boots, and clothing in separate containers or receptacles. All receptacles containing contaminated items must be properly labeled for disposal as detailed in the field plan. Liquids and solids must be drummed separately.

5.2 Downhole Equipment Decontamination

Downhole equipment includes hollow-stem augers, drill pipes, rods, stems, etc. Follow these steps when decontaminating this equipment:

- Set up a centralized decontamination area, if possible. This area should be set up to collect contaminated rinse waters and to minimize the spread of airborne spray.
- Set up a "clean" area upwind of the decontamination area to receive cleaned equipment for air-drying. At a minimum, clean plastic sheeting must be used to cover the ground, tables, or other surfaces on which decontaminated equipment is to be placed. All decontamination pads should be upwind of any areas under investigation.
- Place the object to be cleaned on aluminum foil or plastic-covered wooden sawhorses or other supports. The objects to be cleaned should be at least 2 feet above the ground to avoid splashback when decontaminating.

Field Equipment Decontamination at Nonradioactive Sites

SOP 4-5

Revision: 6

Date: December 31, 2004

- Using soap and potable water in the hot water high-pressure sprayer (or steam unit), spray the contaminated equipment. Aim downward to avoid spraying outside the decontamination area. Be sure to spray inside corners and gaps especially well. Use a brush, if necessary, to dislodge dirt.
- If using soapy water, rinse the equipment using clean, potable water. If using hot water, the rinse step is not necessary if the hot water does not contain a detergent. If the hot water contains a detergent, this final clean water rinse is required.
- Using a suitable sprayer, rinse the equipment thoroughly with analyte-free water.
- Remove the equipment from the decontamination area and place in a clean area upwind to air dry.
- Record equipment type, date, time, and method of decontamination in the appropriate logbook.
- After decontamination activities are completed, collect all contaminated wastewaters, plastic sheeting, and disposable gloves, boots, and clothing in separate containers or receptacles. All receptacles containing contaminated items must be properly labeled for disposal. Liquids and solids must be drummed separately.

5.3 Sampling Equipment Decontamination

Sampling equipment is defined as equipment that comes into direct contact with the sample media. Such equipment includes split spoon samplers, well casing and screens, and spatulas or bowls used to homogenize samples. Follow these steps when decontaminating this equipment:

- Set up a decontamination line on plastic sheeting. The decontamination line should progress from "dirty" to "clean." A clean area shall be established upwind of the decontamination wash/rinse activities to dry the equipment. At a minimum, clean plastic sheeting must be used to cover the ground, table, or other surfaces that the decontaminated equipment is placed for drying.
- Disassemble any items that may trap contaminants internally. Do not reassemble the items until decontamination and air drying are complete.
- Wash the items with potable water and soap using a stiff brush as necessary to remove particulate matter and surface films. The items may be steam cleaned using soap and hot water as an alternative to brushing. Note that polyvinyl chloride or plastic items should not be steam cleaned. Items that have come into contact with concentrated and/or oily contaminants may need to be rinsed with a solvent such as hexane and allowed to air dry prior to this washing step.
- Thoroughly rinse the items with potable water.
- If sampling for metals, thoroughly rinse the items with an acid solution (e.g., 10 percent nitric acid) followed by a rinse using analyte-free water. If sampling for organic compounds, thoroughly rinse the items with solvent (e.g., isopropanol) followed by a rinse using analyte-free water. The specific chemicals used for the acid rinse and solvent rinse phases should be specified in the work plan. The acid rinsate and solvent rinsate must each be containerized separately. Acids and solvents are potentially hazardous materials and care must be exercised when using these chemicals to prevent adverse health affects (e.g., skin burns, irritation to the eyes and respiratory system, etc.). Appropriate personal protective equipment must be worn when using these chemicals. These chemicals (including spent rinsate) must be managed and stored appropriately. Special measures such as proper labels, paperwork, notification, etc. may be required when transporting or shipping these chemicals.
- Rinse the items thoroughly using organic-free/analyte-free water.
- Allow the items to air dry completely.

- After drying, reassemble the parts as necessary and wrap the items in clean plastic wrap or in aluminum foil.
- Record equipment type, date, time, and method of decontamination in the appropriate logbook.
- After decontamination activities are completed, collect all contaminated waters, used solvents and acids, plastic sheeting, and disposable personal protective equipment. Place the contaminated items in properly labeled drums for disposal. Liquids and solids must be drummed separately. Refer to site-specific plans for labeling and waste management requirements.

5.4 Pump Decontamination

Follow the manufacturer's recommendation for specified pump decontamination procedures. At a minimum, follow these steps when decontaminating pumps:

- Set up the decontamination area and separate "clean" storage area using plastic sheeting to cover the ground, tables, and other surfaces. Set up four containers: the first container shall contain dilute (nonfoaming) soapy water, the second container shall contain potable water, the third container shall be empty to receive wastewater, and the fourth container shall contain analyte-free water.
- The pump should be set up in the same configuration as for sampling. Submerge the pump intake (or the pump, if submersible) and all downhole-wetted parts (tubing, piping, foot valve) in the soapy water of the first container. Place the discharge outlet in the wastewater container above the level of the wastewater. Pump soapy water through the pump assembly until it discharges to the waste container. Scrub the outside of the pump and other wetted parts with a metal brush.
- Move the pump assembly to the potable water container while leaving discharge outlet in the waste container. All downhole-wetted parts must be immersed in the potable water rinse. Pump potable water through the pump assembly until it runs clear.
- Move the pump intake to the analyte-free water container. Pump the water through the pump assembly. Pump the volume of water through the pump specified in the field plan. Usually, three pump-and-line-assembly volumes will be required.
- Decontaminate the discharge outlet by hand, following the steps outlined in Section 5.3.
- Remove the decontaminated pump assembly to the clean area and allow it to air dry upwind of the decontamination area. Intake and outlet orifices should be covered with aluminum foil to prevent the entry of airborne contaminants and particles.
- Record the equipment type, serial number, date, time, and method of decontamination in the appropriate logbook.

5.5 Instrument Probe Decontamination

Instrument probes used for field measurements such as pH meters, conductivity meters, etc. will be decontaminated between samples and after use with analyte-free, or better, water.

5.6 Waste Disposal

Refer to site-specific plans for waste disposal requirements. The following are guidelines for disposing of wastes:

- All wash water, rinse water, and decontamination solutions that have come in contact with contaminated equipment are to be handled, packaged, labeled, marked, stored, and disposed of as investigation-derived waste.
- Small quantities of decontamination solutions may be allowed to evaporate to dryness.

- If large quantities of used decontamination solutions will be generated, each type of waste should be contained in separate containers.
- Unless otherwise required, plastic sheeting and disposable protective clothing may be treated as solid, nonhazardous waste.
- Waste liquids should be sampled, analyzed for contaminants of concern in accordance with disposal regulations, and disposed of accordingly.

6.0 Restrictions/Limitations

Nitric acid and polar solvent rinses are necessary only when sampling for metals or organics respectively. These steps should not be used, unless required, because of the potential for acid burns and ignitability hazards.

If the field equipment is not thoroughly rinsed and allowed to completely air dry before use, volatile organic residue, which interferes with the analysis, may be detected in the samples. The occurrence of residual organic solvents is often dependent on the time of year sampling is conducted. In the summer, volatilization is rapid, and in the winter, volatilization is slow. Check with your EPA region, state, and client for approved decontamination solvents.

7.0 References

American Society for Testing and Materials. 2002. *Standard Practice for Decontamination of Field Equipment at Nonradioactive Waste Sites*, ASTM D5088-02. January 10.

Department of Energy. Hazardous Waste Remedial Actions Program. 1996. *Standard Operating Procedures for Site Characterization*, DOE/HWP-100/R1. September.

_____. Hazardous Waste Remedial Actions Program. 1996. *Quality Control Requirements for Field Methods*, DOE/HWP-69/R2. September.

U. S. Environmental Protection Agency. 1987. *A Compendium of Superfund Field Operations Methods*, EPA/540/P-87/001.1.

_____. Region 2. 1989. *CERCLA Quality Assurance Manual*, Revision 1.

_____. Region 4. 2001. *Engineering Support Branch Standard Operating Procedures and Quality Assurance Manual*. November.

Control of Measurement and Test Equipment

SOP 5-1

Revision: 7

Date: December 31, 2004

Prepared: Dave Johnson

Technical Review: Mike Clark

QA Review: Doug Updike

Approved: Michael C. Mally 12/21/04

Issued:

[Signature] 12/28/04
Signature/Date

Signature/Date

1.0 Objective

The objective of this standard operating procedure (SOP) is to establish the baseline requirements, procedures, and responsibilities inherent to the control and use of all measurement and test equipment (M&TE). Contractual obligations may require more specific or stringent requirements that must also be implemented.

2.0 Background

2.1 Definitions

Traceability - The ability to trace the history, application, or location of an item and like items or activities by means of recorded identification.

2.2 Discussion

M&TE may be government furnished (GF), rented or leased from an outside vendor, or purchased. It is essential that measurements and tests resulting from the use of this equipment be of the highest accountability and integrity. To facilitate that, the equipment shall be used in full understanding and compliance with the instructions and specifications included in the manufacturer's operations and maintenance and calibration procedures and in accordance with any other related project-specific requirements.

2.3 Associated Procedures

- CDM Federal (CDM) Technical SOP 4-1
- CDM Quality Procedures (QPs) 2.1 and 2.3
- Manufacturer's operating and maintenance and calibration procedures

3.0 Responsibilities

All staff with responsibility for the direct control and/or use of M&TE are responsible for being knowledgeable of and understanding and implementing the requirements contained herein as well as any other related project-specific requirements.

The project manager (PM) or designee (equipment coordinator, quality assurance coordinator, field team leader, etc.) is responsible for initiating and tracking the requirements contained herein.

4.0 Required Equipment

- Determine and implement M&TE related project-specific requirements
- The maintenance and calibration procedures must be followed when using M&TE
- Obtain the maintenance and calibration procedures if they are missing or incomplete
- Attach or include the maintenance and calibration procedures with the M&TE
- Prepare and record maintenance and calibration in an Equipment Log or a Field Log as appropriate (Figure 1)
- Maintain M&TE records
- Label M&TE requiring routine or scheduled calibration (when required)
- Perform maintenance and calibration using the appropriate procedure and calibration standards
- Identify and take action on nonconforming M&TE

5.0 Procedures

5.1 Determine if Other Related Project-Specific Requirements Apply

For All M&TE:

The PM or designee shall determine if M&TE related project-specific requirements apply. If M&TE related project-specific requirements apply, obtain a copy of them and review and implement as appropriate.

5.2 Obtain the Operating and Maintenance and Calibration Documents

For GF M&TE that is to be procured:

Requisitioner - Specify that the maintenance and calibration procedures be included.

For GF M&TE that is acquired as a result of a property transfer:

Receiver - Inspect the M&TE to determine whether maintenance and calibration procedures are included with the item. If missing or incomplete, order the appropriate documentation from the manufacturer.

For M&TE that is to be rented or leased from an outside vendor:

Requisitioner - Specify that the maintenance and calibration procedures, the latest calibration record, and the calibration standards certification be included. If this information is not delivered with the M&TE, ask Procurement to request it from the vendor.

5.3 Prepare and Record Maintenance and Calibration Records

For all M&TE:

PM or Designee - Record all maintenance and calibration events in a Field Log unless other project-specific requirements apply.

For GF M&TE only (does not apply to rented or leased M&TE):

If an Equipment Log is a project specific requirement, perform the following:

Receiver - Notify the PM or designee for the overall property control of the equipment of the receipt of an item of M&TE.

PM or Designee - Prepare a sequentially page numbered Equipment Log for the item using the maintenance and calibration form (or equivalent) from the *CDM Property Control Manual* (Figure 1).

PM or Designee and User - Record all maintenance and calibration events in an Equipment Log.

5.4 Label M&TE Requiring Calibration

For GF M&TE only (does not apply to rented or leased M&TE):

If calibration labeling is a project specific requirement, perform the following:

PM or Designee - Read the maintenance and calibration procedures to determine the frequency of calibration required.

PM or Designee - If an M&TE item requires calibration before use, affix a label to the item stating "Calibrate Before Use."

PM or Designee - If an M&TE item requires calibration at other scheduled intervals, e.g., monthly, annually, etc., affix a label listing the date of the last calibration, the date the item is next due for a calibration, the initials of the person who performed the calibration, and a space for the initials of the person who will perform the next calibration.

5.5 Operating, Maintaining or Calibrating an M&TE Item

For all M&TE:

PM or Designee and User - Operate, maintain, and calibrate M&TE in accordance with the maintenance and calibration procedures. Record maintenance and calibration actions in the Equipment Log or Field Log.

Control of Measurement and Test Equipment

SOP 5-1

Revision: 7

Date: December 31, 2004

Figure 1



A subsidiary of Camp Dresser & McKee Inc.

Maintenance and Calibration

Date: _____ Time: _____ (AM/PM)

Employee Name: _____

Equipment Description: _____

Contract/Project: _____

Equipment ID No.: _____

Activity: _____

Equipment Serial No.: _____

Maintenance

Maintenance Performed: _____

Comments: _____

Signature: _____

Date: _____

Calibration/Field Check

Calibration Standard: _____

Concentration of Standard: _____

Lot No. of Calibration Standard: _____

Expiration Date of Calibration Standard: _____

Pre-Calibration Reading: _____

Post-Calibration Reading: _____

Additional Readings: _____

Additional Readings: _____

Additional Readings: _____

Additional Readings: _____

Pre-Field Check Reading: _____

Post-Field Check Reading: _____

Adjustment(s): _____

Calibration: ☐ Passed ☐ Failed

Comments: _____

Signature: _____

Date: _____

5.6 Shipment

For GF M&TE:

Shipper - Inspect the item to ensure that the maintenance and calibration procedures are attached to the shipping case, or included, and that a copy of the most recent Equipment Log entry page (if required) is included with the shipment. If the maintenance and calibration procedures and/or the current Equipment Log page (if required) is missing or incomplete, do not ship the item. Immediately contact the PM or designee and request a replacement.

For M&TE that is rented or leased from an outside vendor:

Shipper - Inspect the item to ensure that the maintenance and calibration procedures and latest calibration and standards certification records are included prior to shipment. If any documentation is missing or incomplete, do not ship the item. Immediately contact Procurement and request that they obtain the documentation from the vendor.

5.7 Records Maintenance

For GF M&TE:

PM or Designee - Create a file upon the initial receipt of an item of M&TE or calibration standard. Organize the files by contract origin and by M&TE item and calibration standard. Store all files in a cabinet, file drawer, or other appropriate storage media at the pertinent warehouse or office location.

PM or Designee - Maintain all original documents in the equipment file except for the packing slip and Field Log.

Receiver - Forward the original packing slip to Procurement and a photocopy to the PM or designee.

PM or Designee - File the photocopy of the packing slip in the M&TE file.

PM or Designee and User - Record all maintenance and calibration in an Equipment Log or Field Log (as appropriate.) File the completed Equipment Logs in the M&TE records. Forward completed Field Logs to the PM for inclusion in the project files.

For M&TE rented or leased from an outside vendor:

Receiver - Forward the packing slip to Procurement.

User - Forward the completed Field Log to the PM for inclusion in the project files.

User - Retain the most current maintenance and calibration record and calibration standards certifications with the M&TE item and forward previous versions to the PM for inclusion in the project files.

5.8 Traceability of Calibration Standards

For all items of M&TE:

PM or Designee and User - When ordering calibration standards, request nationally recognized standards as specified or required. Request commercially available standards when not otherwise specified or required. Or, request standards in accordance with other related project-specific requirements.

PM or Designee and User - Require certifications for standards that clearly state the traceability.

PM or Designee and User - Note standards that are perishable and consume or dispose of them on or before the expiration date.

PM or Designee - Require Material Safety Data Sheet to be provided with standards.

Control of Measurement and Test Equipment

SOP 5-1

Revision: 7

Date: December 31, 2004

5.9 M&TE That Fails Calibration

For any M&TE item that cannot be calibrated or adjusted to perform accurately:

PM or Designee - Immediately discontinue use and segregate the item from other equipment. Notify the appropriate PM and take appropriate action in accordance with the CDM QP 2.3 for nonconforming items.

PM or Designee - Review the current and previous maintenance and calibration records to determine if the validity of current or previous measurement and test results could have been affected and notify the appropriate PM(s) of the results of the review.

6.0 Restrictions/Limitations

On an item-by-item basis, exemptions from the requirements of this SOP may be granted by the HDQ health and safety manager and/or HDQ quality assurance director. All exemptions shall be documented by the grantor and included in the equipment records as appropriate.

7.0 References

CDM Federal Programs Corporation *Property Control Manual*. 2002. March.



U.S. ENVIRONMENTAL PROTECTION AGENCY
REGION 8

STANDARD OPERATING PROCEDURE (SOP)
FOR THE SAMPLING OF ASBESTOS FIBERS IN AIR

Prepared by: *William D. Brattin*
(Author)

Date: 3/8/01

Reviewed by: *Chris*
(Project Director)

Date: 3/8/01

Janet Goldacre
(Quality Assurance Coordinator)

Date: 3/8/01

Approved by: *Chris for Paul Perreault*
(Project Manager)

Date: 3/9/01

REVISION LOG

Revision Date	Reason for Revision
02/28/01	--
03/07/01	Further define pump calibration procedures.

PROCEDURAL SECTION

1.0 Scope and Applicability

This Standard Operating Procedure (SOP) provides a standardized method for sampling air to measure the concentration of asbestos fibers. This SOP is applicable to any type of asbestos fiber (amphibole, chrysotile) that may exist in air (either indoor or outdoor), and is applicable to both personal and ambient air (referred as stationary air throughout this SOP) sampling techniques. Filters collected in this way are suitable for examination by a variety of microscopic techniques, including TEM, PCM, and SEM.

2.0 Summary of Method

This SOP is based on air sampling techniques described in EPA SOP 2015, ISO 10312, OSHA Technical Manual, NIOSH 7400 and NIOSH 7402.

Air is drawn through a fine-pore filter in order to trap any suspended particulate matter in the air, including suspended asbestos fibers and other mineralogic materials. The filters are then examined using an appropriate microscopic technique to observe, characterize and quantify the number of asbestos fibers on the filter. The concentration of fibers in air is then calculated by dividing the total number of fibers on the filter by the volume of air drawn through the filter.

3.0 Health and Safety Warnings

Asbestos fibers are hazardous to human health when inhaled. Exposure to excessive levels may increase the risk of lung cancer, mesothelioma, and asbestosis. All personnel engaged in collection of air samples in areas where asbestos fibers may be present must have adequate health and safety training and must wear an appropriate level of personal protective equipment (PPE). Refer to the Health and Safety Plan for further details.

4.0 Cautions

None, refer to Section 3.0.

5.0 Interferences

High levels of dust or other suspended particulates may clog or overload the filter and reduce the ability to observe and characterize asbestos fibers on the filters. Precautions should be taken to avoid any unnecessary sources of dust emissions or use of aerosol sprays. Sampling conditions

(flow rate, sampling time) should be adjusted accordingly to avoid filter overload.

6.0 Personnel Qualifications

Field personnel engaged in collection of filter cassettes must be trained in the proper use and calibration of the air sampling equipment (as specified in this SOP), as well as proper methods for data recording and sample handling. Additionally, all field personnel must maintain appropriate and current training and/or certifications to meet all federal, state, and local regulations.

7.0 Apparatus and Equipment

Filter Cassettes

All samples will be collected on conductive filter holders consisting of 25-mm diameter, three piece filter cassettes having a 50-mm long electrically conductive extension cowl. The cassette shall be pre-loaded with a mixed cellulose ester (MCE) filter with pore size 0.8 μm . Use of the 0.8 μm pore size is recommended for all samples so that samples collected using a high volume pump are comparable to samples collected with a low volume pump. The 0.8 μm pore size filters are used for samples collected with a low volume pump in order to decrease back-pressure and increase flow rate.

To reduce contamination and to hold the cassette tightly together, seal the crease between the cassette base and the cowl with a shrink band or adhesive tape. If particle deposition on the inside of the cowl is observed, it may be necessary to ground the cowl to reduce static charge. This is done by attaching one end of a length of flexible wire to the plastic cowl with a hose clamp and attaching the other end of the wire to a suitable ground (e.g., a cold water pipe).

Air Pumps

The sampling pump used shall provide a non-fluctuating airflow through the filter and shall maintain the initial flow rate within $\pm 10\%$ throughout the sampling period.

A variety of different types of air pump may be used, depending on the flow rates that are required to achieve the data quality objectives and desired analytical sensitivity of the project. In general, the pump should be selected to deliver a flow rate that is as high as possible without overloading the filter with dust or fibers. The minimum flow rate is 0.5 L/min, and rates up to 10 L/min may be appropriate in some cases.

For stationary air monitors, a high volume pump that operates on AC power is recommended. For personal air sampling, either a portable high volume AC powered sampler or a low volume

battery-operated pump are acceptable, depending on whether the activities of the individual are impaired by the tethering imposed by the power cord needed for the high volume pump.

Tripod

For stationary air monitors, a tripod or other similar device is required to hold the filter cassette at a specified elevation above the floor. As noted below, this will typically be a height that represents the breathing zone (1.5-2 meters).

Spring Clips

For personal air monitors, the filter cassette is held in place using spring clips or other similar devices.

Rotameter

A rotameter that has been calibrated to a primary calibration source is required to calibrate the air flow rate at the start and the end of each sampling period. Due to its dependency on changes in atmospheric pressure, the rotameter must be calibrated to a primary calibration source at the site location (e.g., City of Libby) prior to sampling and re-calibrated on-site every week. Record calibration and re-calibration to the primary standard in the field logbook.

Primary Calibration Source

A bubble buret or other primary calibration standard may be used to calibrate the rotameter.

Sample Labels

A pre-printed sheet of sample labels (2 identical labels per sample number) is required. One label should be attached to the filter cassette before the sample collection period begins, and the matching label should be attached to the field data sheet that records relevant data on the sample being collected.

Field Log Book

A field log book is required to record relevant information regarding the collection of samples (location, time, unusual conditions or problems, etc.).

Field Data Sheet

A personal air or stationary air monitoring field data sheet (as appropriate) is required to record the relevant sampling information. Refer to the Phase 2 QAPP (EPA, March 2001) for the form.

8.0 Instrument Calibration

External calibration devices such as a bubble buret or a rotameter that have been calibrated to a primary calibration source may be used to calibrate air flow rate prior to air sampling. The flow rate must also be measured by the same method at the end of the sampling period.

8.1 Calibrating a Rotameter with an Electronic Calibrator (DryCal)

- See manufacturer's manual for operational instructions.
- To set up the calibration train, attach one end of the tygon tubing to the outlet plug of the rotameter; attach the other end of the tubing to the inlet plug on the pump. Another piece of tubing is attached from the inlet plug of the rotameter to the outlet plug on the DryCal.
- Rest or firmly stabilize the rotameter so that it is vertical ($\pm 6^\circ$).
- Attach an isolating load with a pressure drop of about 10 to 20 inches of water column in series with a stable pump (a filter cassette of same lot number as will be used for field samples works well for this).
- Turn the DryCal and sampling pump on.
- Turn the flow adjust screw (or knob) on the pump until the desired flow rate is attained.
- Record the DryCal flow rate reading and the corresponding rotameter reading in the field logbook. The rotameter should be able to work within the desired flow range.
- Perform the calibration three times until the desired flow rate of $\pm 5\%$ is attained. Once at the sampling location, a secondary calibrator (e.g., rotameter) may be used to calibrate sampling pumps.

8.2 Calibrating an Air Pump with a Rotameter

A rotameter can be used provided it has been precalibrated to a primary calibration source at the site location (e.g., City of Libby). Three separate constant flow calibration readings should be obtained both before sampling and after sampling. The mean value of these flow rate measurements shall be used to calculate the total air volume sampled.

Turn on the sampling pump and run for 5 minutes before performing calibration.

- Remove the end plugs on the filter cassette. A cassette, representative of the lot planned for use in air sampling, must be used.
- To set up the calibration train, attach one end of the tygon tubing to the cassette base; attach the other end of the tubing to the inlet plug on the pump. Another piece of tubing is attached from the cassette cap to the rotameter.

- Rest or firmly stabilize the flow meter so that it is vertical ($\pm 6^\circ$).
- Turn the flow adjust screw (or knob) on the sampling pump until the center of the float ball on the rotameter meets the flow rate value specified in the project plan.

9.0 Sample Collection

Apply one of the pre-printed adhesive labels to the filter cassette and apply the other to the field data sheet for the sample.

Secure the filter cassette in the appropriate sampling location. For a fixed air monitor, this will generally be at a height that represents the breathing zone of the potentially exposed population (e.g., 1.5- 2 meters above the floor). For personal air monitoring, the cassette will typically be placed on the lapel just below the face of the individual being monitored. For personal air sampling for Scenarios 2 and 3 [Refer to Phase 2 QAPP (EPA March 2001)], secure the cassette on the lapel of the dominant hand of the worker. The distance from the nose/mouth of the person to the cassette should be about 10 cm. Secure the cassette on the collar or lapel using spring clips or other similar devices. In all cases, orient the cassette so the open face of the cowl is pointing downward to avoid any particles entering the filter by precipitation. Remove the protective cap over the open face of the cowl and turn on the calibrated pump. Record the starting time, the initial flow rate, and all other relevant sample data on the field data sheet for the sample. Store covers and end plugs in a clean area (e.g., a closed bag or box) during the sampling period.

For sampling events lasting longer than 2 hours, in-field pump checks should be performed approximately every 2 hours. These periodic checks should include the following activities:

- Observe the sampling apparatus (filter cassette, pump, tripod, etc.) to determine whether it's been disturbed.
- Check the pump to ensure it is working properly and the flow rate is stable at the prescribed flow rate.
- Inspect the filter for overloading and particle deposition. Inspect the filter using a small flashlight. Look for particle adhesion or deposition on the side of the cassette and check the filter surface for accumulation of visible dust or smoke particles. If particle deposition on the inside of the cowl is observed, it may be necessary to ground the cowl to reduce static charge.

After the specified sampling period has elapsed, measure the ending flow rate and ending clock time on the data sheet. Turn off the pump and remove the cassette from the pump. Attach and secure a sample seal around each sample cassette in such a way as to assure that the end cap and

base plug cannot be removed without destroying the seal. Tape the ends of the seal together since the seal is not long enough to be wrapped end-to-end. Initial and date the seal.

10. Sample Handling and Preservation

Package the cassettes so they will not rattle during shipment nor be exposed to static electricity. Place custody seals, dated and marked with the packager's signature, onto the shipping container. Do not ship samples in polystyrene peanuts, vermiculite, paper shreds, or excelsior. Tape sample cassettes to sheet bubbles and place in a container that will cushion the samples in such a manner that they will not rattle. For additional shipping requirements, see the project plan.

Ship the sealed cassette to the analytical laboratory under proper chain of custody procedures. No preservation of the cassette is required.

QUALITY CONTROL and QUALITY ASSURANCE

Pre-Project Filter ("Lot") Blanks

Before samples are collected, two cassettes from each filter lot of 100 cassettes should be randomly selected and submitted for analysis. The lot blanks will be analyzed for asbestos fibers by the same method as will be used for field samples. The entire batch of cassettes should be rejected if any asbestos fiber is detected on any filter.

Field Blanks

Blank samples are used to determine if any contamination has occurred during sample handling. Prepare two blanks (from the sample lot used for field sampling) for the first 1 to 20 samples. For sets containing greater than 20 samples, prepare blanks as 10% of the samples. Filter blanks should be taken to a sampling location and prepared there. Remove the caps on the filter cassette and hold the cassette open for about 30 seconds. Close and seal the cassette as described in Section 9. Store blanks for shipment with the sample cassettes.

REFERENCES

NIOSH 7400

NIOSH 7402

ISO 10312

OSHA Technical Manual

EPA SOP 2015

ATTACHMENT B

Indoor Activity-Based Sampling Script

Indoor Activity-Based Sampling (ABS) Script

The following provides guidance for contractors performing indoor activity based sampling as described in the current version of the Sampling and Analysis Plan (SAP) for Indoor Air, Operable Unit (OU 4) for the Libby, Montana Superfund Site.

Pre-Activity Sampling

Prior to beginning sample collection, each residential structure will be assessed to determine the number of rooms on each living floor of the main structure where sampling will be conducted. The total sampling time for each period (passive and active) will be divided evenly among the total number of rooms in which routine living activities occur.

For example, if the home is comprised of one floor that contains 6 rooms (e.g., living room, 1 bathroom, kitchen, and 3 bedroom), the total time of the passive sampling period (4 hours) would be divided evenly among the 6 rooms (240 minutes / 6 rooms = 40 minutes per room).

Passive Period Sampling

Activities conducted in the passive sampling period will be mostly sedentary with little movement. Movement will be restricted to walking between rooms and sitting on chairs, couches, etc. While seated, the contractor may read, watch television, or complete required paperwork (*paperwork may only be completed during the passive sampling period if the negative exposure assessment indicates a downgrade in PPE can occur*).

The contractor should transition to each room when required, walk around the perimeter of the room once upon initial entry, and then remain seated for the duration of the time required in the room.

Active Period Sampling

Activities conducted in the active sampling period will involve various levels of routine activities that a resident might typically engage in that are likely to cause disturbances of indoor dust. These activities will include walking about in main living areas, sitting down on and standing up from upholstered chairs and/or cushions, and sweeping non-carpeted floors. These three activities should be conducted for equal periods of time in each room. If only carpeted floors are present in a room, then the sweeping activity will be omitted and the time in that room will be divided evenly between walking about and sitting down/standing up activities.

ATTACHMENT C

Field Sample Data Sheets

LIBBY FIELD SAMPLE DATA SHEET (FSDS) FOR PERSONAL AIR

Field Logbook No: _____ Page No: _____ Sampling Date: _____
 Address: _____ Owner/Tenant: _____
 Business Name: _____
 Land Use: Residential School Commercial Mining Roadway Other ()
 Sampling Team: CDM Other _____ Names: _____
 Person Sampled: _____ SSN: _____ Task: _____

Data Item	Cassette 1	Cassette 2	Cassette 3
Index ID			
Location ID			
Sample Group			
Location Description			
Category (circle)	FS FB-(field blank) LB-(lot blank)	FS FB-(field blank) LB-(lot blank)	FS FB-(field blank) LB-(lot blank)
Matrix Type (circle)	Indoor Outdoor	Indoor Outdoor	Indoor Outdoor
Filter Diameter (circle)	25mm 37mm	25mm 37mm	25mm 37mm
Pore Size (circle)	TEM- .45 PCM- 0.8	TEM- .45 PCM- 0.8	TEM- .45 PCM- 0.8
Flow Meter Type (circle)	Rotometer DryCal NA	Rotometer DryCal NA	Rotometer DryCal NA
Pump ID Number			
Flow Meter ID No.			
Start Date			
Start Time			
Start Flow (L/min)			
Stop Date			
Stop Time			
Stop Flow (L/min)			
Pump fault? (circle)	No Yes NA	No Yes NA	No Yes NA
MET Station onsite?	No Yes NA	No Yes NA	No Yes NA
Sample Type	TWA EXC NA	TWA EXC NA	TWA EXC NA
Field Comments			
Cassette Lot Number: _____			
	Archive Blank (circle): Yes No	Archive Blank (circle): Yes No	Archive Blank (circle): Yes No
Entered (LFO) _____	Volpe: Entered _____ Validated _____	Volpe: Entered _____ Validated _____	Volpe: Entered _____ Validated _____

For Field Team Completion
(Provide Initials)

Completed by

QC by

LIBBY FIELD SAMPLE DATA SHEET (FSDS) FOR DUST

Field Logbook No: _____ Page No: _____ Sampling Date: _____
 Address: _____ Owner/Tenant: _____
 Business Name: _____
 Land Use: Residential School Commercial Mining Roadway Other ()
 Sampling Team: CDM Other _____ Names: _____

Data Item	Cassette 1	Cassette 2	Cassette 3
Index ID			
Location ID			
Sample Group (circle) (Subgroup of the property)	Garage, House, Shed, Pump House Other _____	Garage, House, Shed, Pump House Other _____	Garage, House, Shed, Pump House Other _____
Location Description (circle) (Detailed description point within the location)	Basement, Ground Floor, Second Level Other _____	Basement, Ground Floor, Second Level Other _____	Basement, Ground Floor, Second Level Other _____
Matrix Type (circle)	Horizontal Surfaces High Traffic Areas Other _____	Horizontal Surfaces High Traffic Areas Other _____	Horizontal Surfaces High Traffic Areas Other _____
Category (circle)	FS FB-(field blank) LB-(lot blank)	FS FB-(field blank) LB-(lot blank)	FS FB-(field blank) LB-(lot blank)
Sample Area (cm ²) (circle)	100 200 300 NA	100 200 300 NA	100 200 300 NA
Filter Diameter (circle)	25mm 37mm	25mm 37mm	25mm 37mm
Pore Size (circle)	TEM- .45 PCM- 0.8	TEM- .45 PCM- 0.8	TEM- .45 PCM- 0.8
Flow Meter Type (circle)	Rotometer Dry-Cal NA	Rotometer Dry-Cal NA	Rotometer Dry-Cal NA
Pump ID No.			
Flow Meter ID No.			
Start Time			
Start Flow (L/min)			
Stop Time			
Stop Flow (L/min)			
Pump Fault? (circle)	No Yes	No Yes	No Yes
Field Comments	100 cm ²	100 cm ²	100 cm ²
Cassette Lot Number: _____	100 cm ²	100 cm ²	100 cm ²
	100 cm ²	100 cm ²	100 cm ²
	Archive Blank (circle): Yes No	Archive Blank (circle): Yes No	Archive Blank (circle): Yes No
Entered (LFO) _____	Volpe: Entered _____ Validated _____	Entered _____ Validated _____	Entered _____ Validated _____

For Field Team Completion
(Provide Initials)

Completed by

QC by

ATTACHMENT D

Field Modification Form



Record of Modification

to the
Libby Sampling and Quality Assurance Project Plan
Field Activities
LFO-0000__

Instructions to Requester: Fax to contacts at bottom of form for review and approval.

File approved copy with Data Manager at the Libby Field Office (LFO).

Data Manager will maintain legible copies in a binder that can be accessed by LFO personnel.

Project QAPP (circle one): Phase I (approved 4/00) Phase II (approved 2/01)
 Removal Action (approved 7/00) Contaminant Screening Study (approved 5/02)
 Other (Title and approval date): _____

SOP (Number and Revision No.): _____

Other Document (Title, Number/Revision): _____

Requester: _____ Title: _____
Company: _____ Date: _____

Description of Modification (attach additional sheets if necessary; state section and page numbers of SQAPP when applicable): _____

Field logbook and page number Modification is documented on: _____

Implications of Modification: _____

Duration of Modification (circle one):
Temporary Date(s): _____
Resident address(es): _____

- If appropriate, attach a list of all applicable Index Identification numbers.

Permanent (complete Proposed Modification Section) Effective Date: _____

Potential Implications of Modification: _____

Technical Review and Approval: _____ Date: _____
(Volpe Project Manager or designate)

EPA Review and Approval: _____ Date: _____
(USEPA RPM or designate)