



ARCADIS of New York, Inc.
6723 Towpath Road
P O Box: 66
Syracuse
New York 13214-0066
Tel 315 446 9120
Fax 315 449 0017
www.arcadis-us.com

PCB Coordinator
U.S. EPA Region 5
Mailstop LU-9J
77 W. Jackson Blvd
Chicago, IL 60604

ENVIRONMENT

Subject:
GE Aviation – Altitude Test Facility
Data Summary of Nineteenth Air Sampling Event – October 2014

Date:
November 6, 2014

Dear PCB Coordinator:

On October 10, 2014, GE Aviation, an operating division of the General Electric Company (GE), performed indoor air testing activities at the Altitude Test Facility (ATF) at GE's facility in Evendale, Ohio, in accordance with EPA's January 16, 2014 amendment to EPA's December 19, 2012 approval allowing GE to use the ATF for jet engine testing pursuant to 40 CFR § 761.62(c). This report is being submitted pursuant to Consent Agreement and Final Order (TSCA-05-2014-0008) filed on April 28, 2014.

GE collected two air samples prior to conducting active jet engine testing at the ATF on October 10, 2014, and received the laboratory report containing the results on October 27, 2014. Both samples were "non-detect" for PCBs. Details on the sampling event follow.


Air test sample ATF-AR-C43-13, located adjacent to the #43 Test Cell Chamber of the ATF, and air test sample ATF-AR-CR2-19, located on the second floor of the compressor room, were both taken over an 8-hour interval. The samples were collected on October 10, 2014, prior to conducting active jet engine testing at the ATF. Calibration and preparation of the air samples followed Method TO-10A: Compendium of Methods for Toxic Organic Air Pollution. Both air pumps were placed in a manner such that the air sample would be collected from the breathing zone. The laboratory analytical results of the sampling event are provided in the Data Summary Table, attached as Table 1 and the sampling locations are provided on the attached Figure 1. As indicated in the attachments, sample ATF-AR-C43-13

(collected adjacent to Test Cell #43) was non-detected (ND) for PCBs, and sample ATF-AR-CR2-19 (collected from the second floor of the ATF compressor room) had non-detected (ND) PCBs. The laboratory quantitation limit (PQL) for these results was 41.7 ng/m³, with a final extraction volume of 5.0 mL. The specific operating parameters of the analytical instruments used by PACE Analytical during sample analysis are detailed in Attachment 1.

Please do not hesitate to contact John Rumpf, Counsel for Environmental Affairs at GE Aviation, at (513) 243-4256 or Christopher Bell at Greenberg Traurig LLP at (713) 374-3556 if you have any questions.

Sincerely,

ARCADIS of New York, Inc.



John F. Novotny, PE
Senior Engineer

Attachments

Table 1

Figure 1

Attachment 1

Copies:

John Rumpf, GE

Christopher Bell, Greenberg Traurig, LLP

Table 1
Data Summary - PCB Air Monitoring – October 2014

GE - Aviation - Altitude Test Facility
Cincinnati, Ohio

| Sampling ID | Date Collected | Time Collected | Sample Type | Total PCBs (ng/m ³) | Location Description |
|-----------------|----------------|----------------|-------------|---------------------------------|-------------------------------------|
| Event 19 | | | | | |
| ATF-AR-C43-13 | 10/10/2014 | 14:45 | Air | ND | Test Cell 43 open floor area |
| ATF-AR-CR2-19 | 10/10/2014 | 14:50 | Air | ND | Second floor of ATF Compressor Room |

Notes:


1. Samples collected by ARCADIS personnel and submitted to Pace Analytical Laboratory for analysis using USEPA Compendium Method TO-10A procedures.
2. Air pumps were set up at breathing zone height and operated over an 8-hour interval at an air intake rate of approximately 5 L/min, resulting in approximately 2,400 L of air pulled through the puff for each sample.
3. Event 19 took place at the ATF on October 10, 2014 conducted prior to active jet engine testing in October 2014.
4. Total PCBs - the sum of aroclors 1016 through 1268
5. The final extraction volume of 5.0 mL was conducted by the laboratory.
6. The initial injection volume of 1µL was conducted by the laboratory.
7. the Laboratory determined no sample breakthrough occurred on all sample media.
8. ND (Non-Detect) - Denotes analyte not detected at a concentration greater than the MDL
9. PQL (Practical Quantitation Limit) of 41.7 ng/m³ per aroclor. Denotes lowest analyte concentration reportable for the sample.
10. Time Collected, denotes the time which the air pumps completed the 8-hour run interval.

Abbreviations:

ATF - Altitude Test Facility
 AR - PCB air sample
 C43 - Test Cell #43
 CR2 - compressor room-second floor
 PCBs - polychlorinated biphenyls
 ng/m³ - nanograms per cubic meter

CITY: SYRACUSE, NY DIV/GROUP: ENV/CAD DB: LPOSENAUER LD: (Opt) PM: CAVERILL TM: (Opt) LVR: (Opt) ON: "OFF" REF: V:\ENV/CAD/SYRACUSE/ACT/MB0031335/2013/RES01/ATSR31335C15.dwg LAYOUT: 1 SAVED: 10/30/2014 10:49 AM ACADVER: 18.1S (LMS TECH) PAGES: 1 PLOT: 10/30/2014 10:49 AM BY: POSENAUER, USA

XREFS: IMAGES: 31335X00 31335X01.png

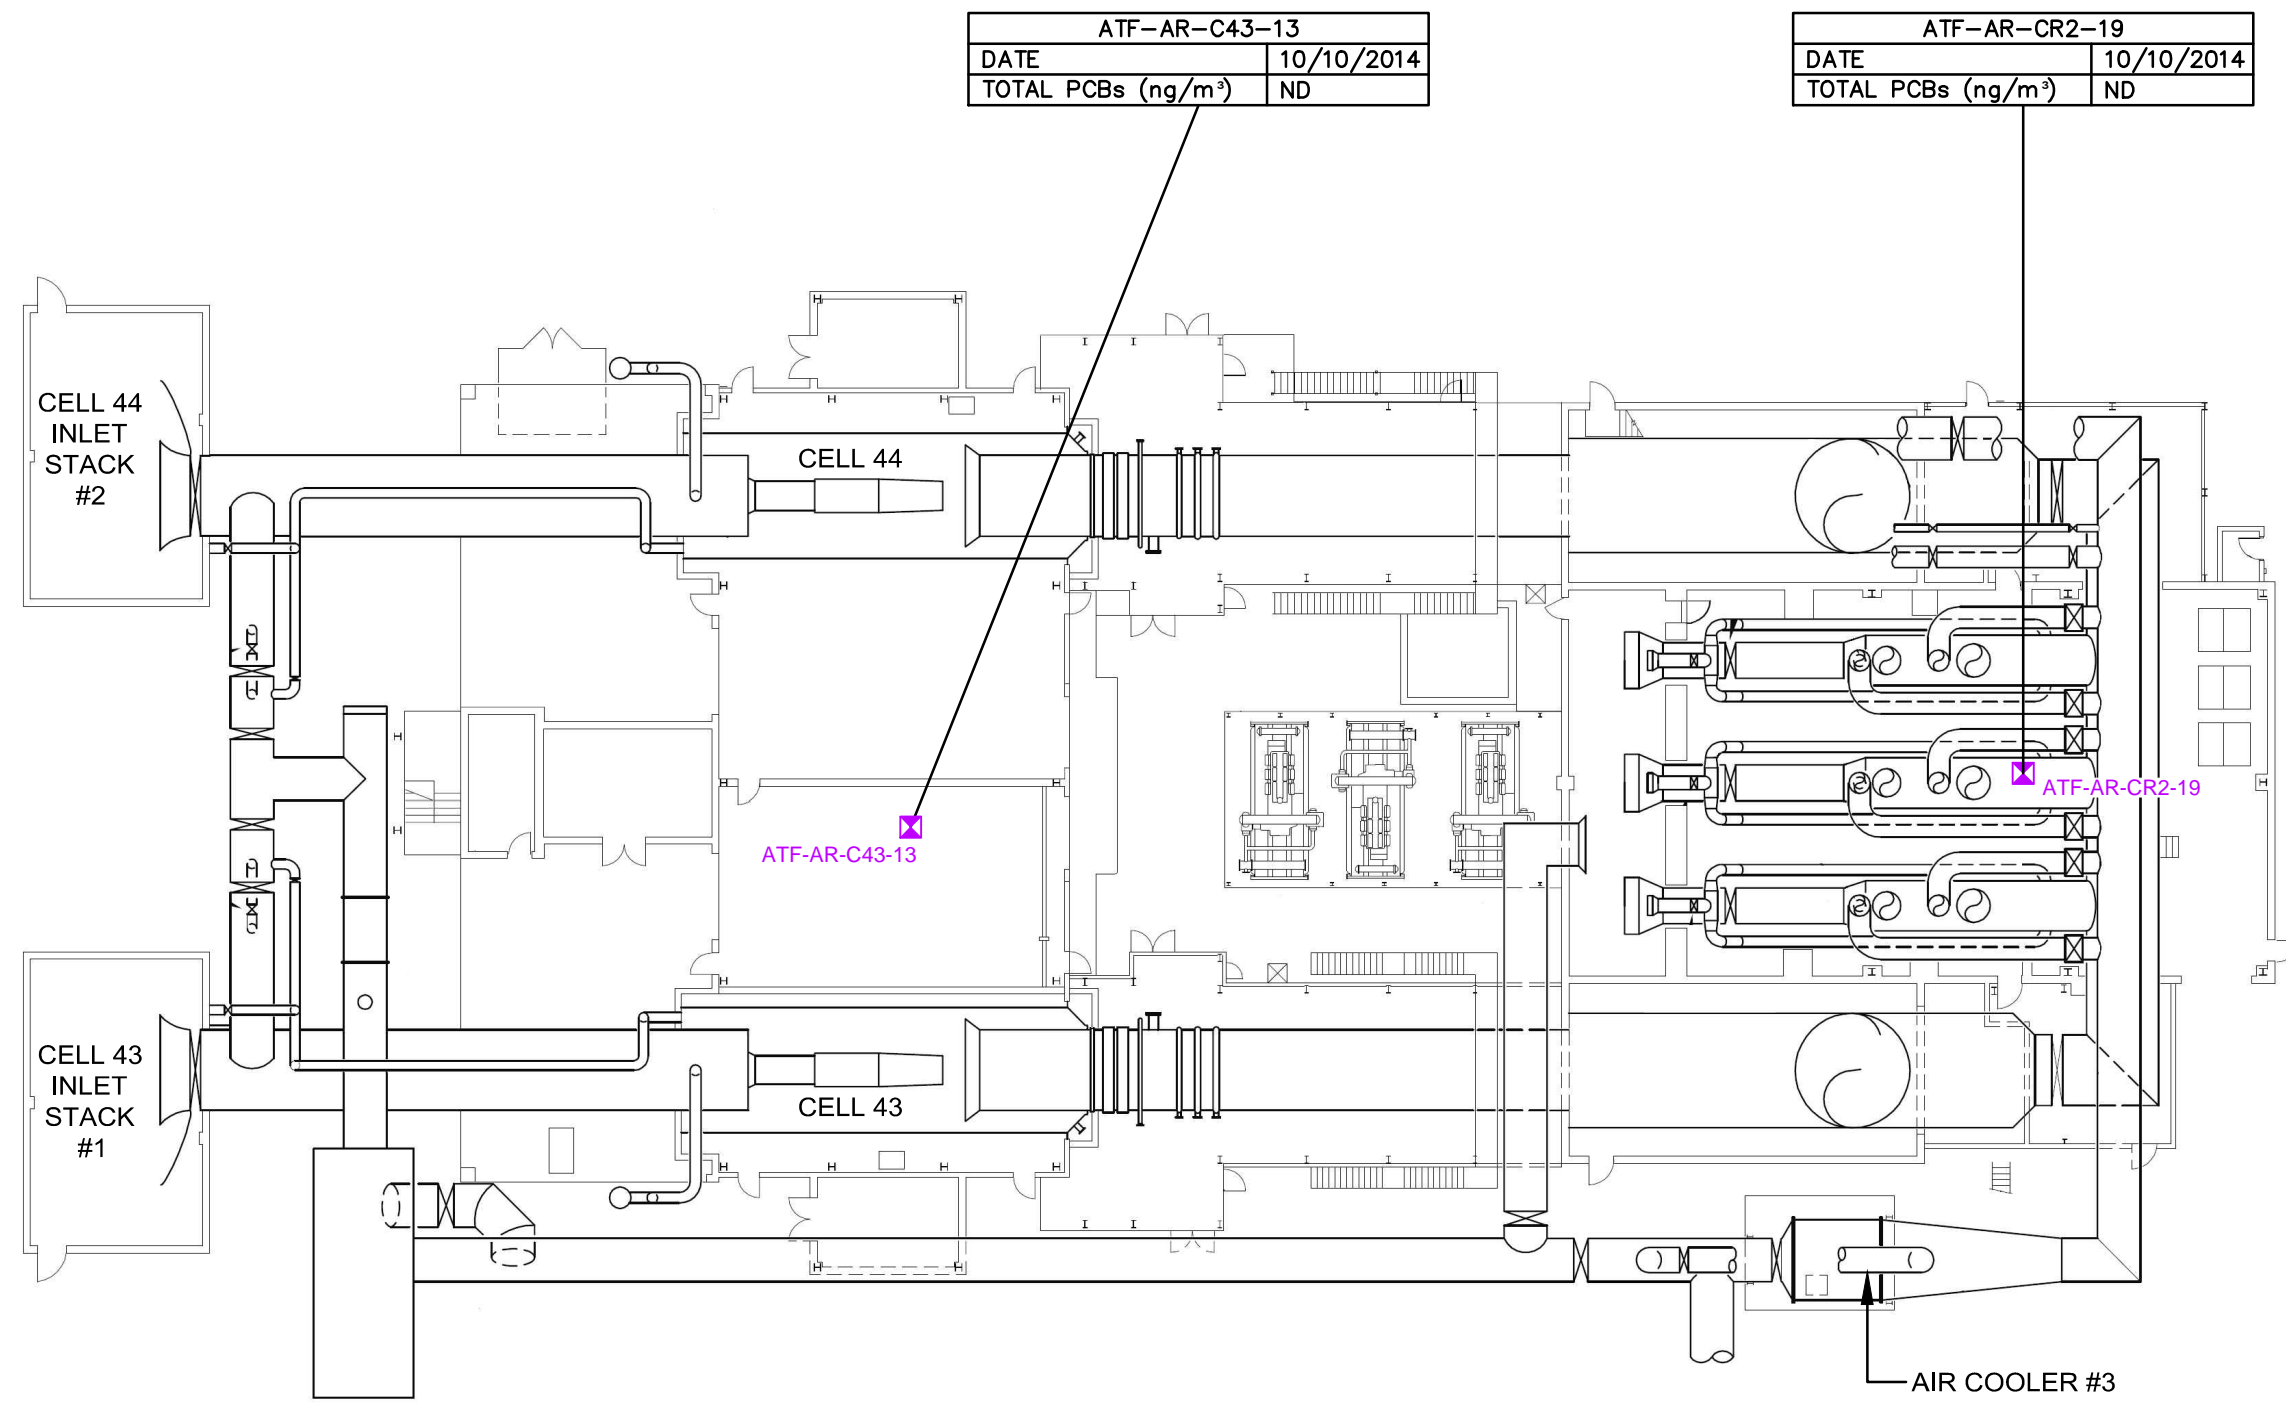

LEGEND:

✕ AMBIENT PCB AIR MONITORING LOCATION


SAMPLING NOMENCLATURE:

ATF – ALTITUDE TEST FACILITY
AR – PCB AIR SAMPLE
C43 – TEST CELL #43
CR2 – COMPRESSOR ROOM SECOND FLOOR

NOTES:

1. SAMPLING LOCATIONS ARE APPROXIMATE.
2. ng/m³ – NANOGRAMS PER CUBIC METER
3. TOTAL PCBs – THE SUM OF AROCLORS 1016 THROUGH 1268.
4. J – DENOTES AN ESTIMATED CONCENTRATION. THE CONCENTRATION RESULT IS GREATER THAN OR EQUAL TO THE METHOD DETECTION LIMIT (MDL) BUT LESS THAN THE PQL.

NOT TO SCALE

| | |
|---|--------------------|
| GE-AVIATION CINCINNATI, OHIO AIR TEST SUMMARY REPORT | |
| DATA SUMMARY - PCB RESULTS AMBIENT PCB AIR MONITORING | |
|  | FIGURE 1 |

GC #: GC-21 8082 High Level Method HYDROGEN
 Method: Method 3
 Column: GC21F ZB-1MS 20M 0.18mm 0.18um
 GC21B ZB-5 20M 0.18mm 0.18um
 Date: 2/15/2013
 Analyst: JKA
 File Name: C:\Users\KELLYH-1.NOR\AppData\Local\Temp\Xpgrpwise\GC21_Parameters_1.xls\8082 H2 HL

Sample Delivery: SEE LEAP PARAMETERS

Column Oven:

| Step | Temp (°C) | Rate (°C/min) | Hold (min) | Total (min) |
|---------|-----------|---------------|------------|-------------|
| Initial | 150 | ----- | 1.41 | 1.41 |
| 1 | 290 | 17.5 | 0.65 | 10.06 |

Stabilization Time (min): 0.50

Injector: Front CP-1177

1177 Oven Power: ON
 1177 Temperature (°C) 300

| Time | Split State | Split Ratio |
|---------|-------------|-------------|
| Initial | ON | 35 |

Flow/PSI(Front EFC, Type 1):

Carrier Gas: Helium

| Step | Pres (psi) | Rate (psi/min) | Hold (min) | Total (min) |
|---------|------------|----------------|------------|-------------|
| Initial | * | ----- | 10 | 10 |

Constant Flow Mode Enable: NO
 Column Flow Rate (ml/min): 2.3

Detector: Front ECD

ECD Oven Power: ON
 Temperature (°C) 300
 Electronics: ON
 Range: 1

| Time | Range | Autozero |
|---------|-------|----------|
| Initial | 1 | YES |

Front ECD Adjustment
 Time Constant: Fast
 Cell Current: CAP
 Contact Potential (mV): *

***values may change with use**

Front ECD Adjustments

Make-up Flow (mL/min): 30

Analog Output

Detectors: Front: ECD Attenuation 1
 Middle: ECD Attenuation 1
 Rear: None

| Time | Signal Source | Attenuation |
|---------|-----------------|-------------|
| Initial | Front Detector | 1 |
| Time | Signal Source | Attenuation |
| Initial | Middle Detector | 1 |
| Time | Signal Source | Attenuation |
| Initial | Rear Detector | 1 |

Valve Table:

| Time | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
|---------|------|------|------|------|------|------|------|
| Initial | None | None | None | None | None | None | None |

Initial valve state=Off

Injector: Middle CP-1177

1177 Oven Power: ON
 1177 Temperature (°C) 300

| Time | Split State | Split Ratio |
|---------|-------------|-------------|
| Initial | ON | 35 |

Flow/PSI(Front EFC, Type 1):

| Step | Pres (psi) | Rate (psi/min) | Hold (min) | Total (min) |
|---------|------------|----------------|------------|-------------|
| Initial | * | ----- | 10 | 10 |

Constant Flow Mode Enable: NO
 Column Flow Rate (ml/min): 2.6

Middle ECD

ECD Oven Power: ON
 Temperature (°C) 300
 Electronics: ON
 Range: 1

| Time | Range | Autozero |
|---------|-------|----------|
| Initial | 1 | YES |

Fast
 CAP
 *

Middle ECD Adjustments

Make-up Flow (mL/min): 35