

START

Superfund Technical Assessment and Response Team
- Region VIII

SDMS Document ID



2008510



United States
Environmental Protection Agency

Contract No. 68-W5-0031

APPENDIX D and APPENDIX E (CD ROM)

APPENDIX D - Analytical Data and Validation Reports

APPENDIX E - Data Ram And Meteorological Monitoring Data Files (Cd Rom)

FOR REMOVAL SUMMARY REPORT

VASQUEZ BOULEVARD AND I-70 SITE
Denver, Colorado

TDD No. 9809-0014

DECEMBER 23, 1998



URS

OPERATING SERVICES, INC.

TOPSOIL ANALYTICAL RESULTS

CASE NARRATIVE
November 19, 1998

Client: URS Operating Services, Inc.
Project: 75.80914.00
Date Rec'd: 10/15/98
SDG#: L20715
Lab Nos.: L20715-01 through L20715-03

Three samples for this SDG were received on 10/15/98. The samples were received in good condition. These samples were then logged into ACZ's LIMS as projects L20715.

The samples for this SDG were analyzed for the parameters outlined in the scope of work attached with the Chain of Custody documentation. The list contained inorganic parameters.

The data package is separated into four (4) sections as follows:

- Invoice and Case Narrative
- Inorganic Analytical Reports
- QC Summaries
- Chain of Custody Documentation

Items of note for this project:

This set of samples meets ACZ's data quality objectives.

If you have any questions please do not hesitate to call me at (800) 334-5493.



Scott Gustin, Project Manager

rec'd 11-23-98
K
COPY

ACZ Laboratories, Inc.
30400 Downhill Drive
Steamboat Springs, CO 80487
(800) 334-5493

Lab Sample ID: **L20715-01**
Client Sample ID: **VB-A1-1**
Client Project ID: **75.80914.00**
ACZ Report ID: **RG79615**

URS Operating Services, Inc.
1099 18th Street Suite 710
Denver, CO 80202-1908
Karen Kuoppula

Date Sampled: **10/13/98 14:00**
Date Received: **10/15/98**
Date Reported: **10/22/98**

Sample Matrix: **Soil**

Metals Analysis

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Aluminum, total (3051)	M6010B ICP	35400		mg/Kg	4	20	10/16/98	kr
Antimony, total (3051)	M7041 GFAA		U	mg/Kg	0.3	1	10/17/98	jb
Arsenic, total (3051)	M7060 GFAA	6.5		mg/Kg	0.6	3	10/16/98	jb
Barium, total (3051)	M6010B ICP	244		mg/Kg	0.4	1	10/16/98	kr
Beryllium, total (3051)	M6010B ICP	1.0		mg/Kg	0.3	1	10/16/98	kr
Cadmium, total (3051)	M7131 GFAA	0.52		mg/Kg	0.06	0.3	10/17/98	jb
Calcium, total (3051)	M6010B ICP	26700		mg/Kg	30	100	10/16/98	kr
Chromium, total (3051)	M6010B ICP	22		mg/Kg	1	6	10/16/98	kr
Cobalt, total (3051)	M6010B ICP	8		mg/Kg	1	6	10/16/98	kr
Copper, total (3051)	M6010B ICP	31		mg/Kg	1	6	10/16/98	kr
Iron, total (3051)	M6010B ICP	21300		mg/Kg	1	6	10/16/98	kr
Lead, total (3051)	M7421 GFAA	16.8		mg/Kg	0.5	3	10/16/98	jb
Magnesium, total (3051)	M6010B ICP	4880		mg/Kg	30	100	10/16/98	kr
Manganese, total (3051)	M6010B ICP	382		mg/Kg	0.6	1	10/16/98	kr
Mercury, total	M7471 CVAA	0.07	B	mg/Kg	0.02	0.1	10/20/98	ss
Nickel, total (3051)	M6010B ICP	22		mg/Kg	1	6	10/16/98	kr
Potassium, extractable (AB-DTPA)	M6010B ICP	320		mg/Kg	20	50	10/20/98	gg
Potassium, total (3051)	M6010B ICP	3650		mg/Kg	40	100	10/16/98	kr
Selenium, total (3051)	M7742 Modified, AA-Hydride	0.6		mg/Kg	0.1	0.6	10/21/98	kr
Silver, total (3051)	M7761 GFAA	0.32		mg/Kg	0.06	0.3	10/16/98	jb
Sodium, total (3051)	M6010B ICP	200		mg/Kg	40	100	10/16/98	kr
Thallium, total (3051)	M7841 GFAA		U	mg/Kg	0.3	1	10/17/98	jb
Vanadium, total (3051)	M6010B ICP	37.0		mg/Kg	0.6	3	10/17/98	kr
Zinc, total (3051)	M6010B ICP	91		mg/Kg	1	6	10/16/98	kr

Soil Analysis

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Conductivity @ 25C	M120.1 - Meter, w/ Saturated Paste Prep	1.820		mmhos/cm	0.001	0.01	10/16/98	cc
Organic Matter	USDA No.60 - Method 24	2.71		%	0.01	0.1	10/16/98	sw
pH, Saturated Paste	USDA No. 60 (21A)	7.8		units	0.1	0.1	10/16/98	cc
Sieve- 2000 um (2.0 mm)	ASA No.9 15-4.2.2	73.0		% Passing	0.1	0.5	10/16/98	cjv
Sieve-22400 um (7/8")	ASA No.9 15-4.2.2	100		% Passing	0.1	0.5	10/16/98	cjv
Solids, Percent	CLPSOW390, PART F, D-98	78.2		%	0.1	0.5	10/15/98	vv

Inorganic Constituents (based on EPA CLP 390)

U = Analyte was analyzed for but not detected at the indicated MDL
B = Analyte concentration detected at a value between MDL and PQL
PQL = Practical Quantitation Limit

R. V. Poulsen
Vice President of Operations: Ralph Poulsen

ACZ Laboratories, Inc.
30400 Downhill Drive
Steamboat Springs, CO 80487
(800) 334-5493

Lab Sample ID: L20715-01
Client Sample ID: VB-A1-1
Client Project ID: 75.80914.00
ACZ Report ID: RG79615

URS Operating Services, Inc.
1099 18th Street Suite 710
Denver, CO 80202-1908
Karen Kuoppula

Date Sampled: 10/13/98 14:00
Date Received: 10/15/98
Date Reported: 10/22/98

Sample Matrix: Soil

Texture by Hydrometer	ASTM D 422 Hydrometer						
Clay		20	%	1	5	10/16/98	cc
Sand		56	%	1	5	10/16/98	cc
Silt		24	%	1	5	10/16/98	cc
Texture Classification		SL-SCL				10/16/98	cc

Soil Preparation

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
AB-DPTA Extraction	ASA No. 9, 3-5.2.3						10/16/98	cjv
Air Dry at 34 Degrees C	USDA No. 1, 1972						10/15/98	vv
Digestion - Microwave	M3051, HNO3						10/16/98	cjv
Saturated Paste Extraction	USDA No. 60 (2)						10/16/98	cjv
Water Extraction	ASA No. 9 10-2.3.2						10/16/98	cjv

Wet Chemistry

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Nitrate as N, soluble (Water)	Calculation: NO3NO2 minus NO2	28.2		mg/Kg	0.5	3	10/22/98	calc
Nitrate/Nitrite as N, soluble (Water)	M353.2 - Automated Cadmium Reduction	32.9		mg/Kg	0.5	3	10/17/98	ss
Nitrite as N, soluble (Water)	M353.2 - Automated Cadmium Reduction	4.69		mg/Kg	0.05	0.3	10/17/98	ss
Phosphorus, extractable (AB-DTPA)	M365.1 - Automated Ascorbic Acid	23		mg/Kg	1	5	10/17/98	ss

Note: The Antimony, Cadmium and Silver analyses were performed using method of standard additions. The Silver value is estimated due to matrix interferences.

Inorganic Qualifiers (based on EPA CLP 3/90)

U = Analyte was analyzed for but not detected at the indicated MDL
B = Analyte concentration detected at a value between MDL and PQL
PQL = Practical Quantitation Limit

RVP

Vice President of Operations: Ralph Poulsen

ACZ Laboratories, Inc.
30400 Downhill Drive
Steamboat Springs, CO 80487
(800) 334-5493

Lab Sample ID: L20715-02
Client Sample ID: VB-A1-2
Client Project ID: 75.80914.00
ACZ Report ID: RG79616

URS Operating Services, Inc.
1099 18th Street Suite 710
Denver, CO 80202-1908
Karen Kuoppula

Date Sampled: 10/13/98 14:08
Date Received: 10/15/98
Date Reported: 10/22/98

Sample Matrix: Soil

Metals Analysis

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Aluminum, total (3051)	M6010B ICP	33800		mg/Kg	4	20	10/16/98	kr
Antimony, total (3051)	M7041 GFAA		U	mg/Kg	0.5	3	10/17/98	jb
Arsenic, total (3051)	M7060 GFAA	5.4		mg/Kg	0.6	3	10/16/98	jb
Barium, total (3051)	M6010B ICP	288		mg/Kg	0.4	1	10/16/98	kr
Beryllium, total (3051)	M6010B ICP	1.1		mg/Kg	0.3	1	10/16/98	kr
Cadmium, total (3051)	M7131 GFAA	0.58		mg/Kg	0.06	0.3	10/17/98	jb
Calcium, total (3051)	M6010B ICP	20700		mg/Kg	30	100	10/16/98	kr
Chromium, total (3051)	M6010B ICP	20		mg/Kg	1	6	10/16/98	kr
Cobalt, total (3051)	M6010B ICP	10		mg/Kg	1	6	10/16/98	kr
Copper, total (3051)	M6010B ICP	71		mg/Kg	1	6	10/16/98	kr
Iron, total (3051)	M6010B ICP	22200		mg/Kg	1	6	10/16/98	kr
Lead, total (3051)	M7421 GFAA	21.8		mg/Kg	0.6	3	10/16/98	jb
Magnesium, total (3051)	M6010B ICP	5060		mg/Kg	30	100	10/16/98	kr
Manganese, total (3051)	M6010B ICP	1320		mg/Kg	0.6	1	10/16/98	kr
Mercury, total	M7471 CVAA	0.04	B	mg/Kg	0.03	0.1	10/20/98	ss
Nickel, total (3051)	M6010B ICP	17		mg/Kg	1	6	10/16/98	kr
Potassium, extractable (AB-DTPA)	M6010B ICP	420		mg/Kg	20	50	10/20/98	gg
Potassium, total (3051)	M6010B ICP	4050		mg/Kg	40	100	10/16/98	kr
Selenium, total (3051)	M7742 Modified, AA-Hydride	0.7		mg/Kg	0.1	0.6	10/21/98	kr
Silver, total (3051)	M7761 GFAA	0.7		mg/Kg	0.1	0.6	10/16/98	jb
Sodium, total (3051)	M6010B ICP	430		mg/Kg	40	100	10/16/98	kr
Thallium, total (3051)	M7841 GFAA		U	mg/Kg	0.5	3	10/17/98	jb
Vanadium, total (3051)	M6010B ICP	46.8		mg/Kg	0.6	3	10/17/98	kr
Zinc, total (3051)	M6010B ICP	116		mg/Kg	1	6	10/16/98	kr

Soil Analysis

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Conductivity @ 25C	M120.1 - Meter, w/ Saturated Paste Prep	1.300		mmhos/cm	0.001	0.01	10/16/98	cc
Organic Matter	USDA No.60 - Method 24	5.09		%	0.01	0.1	10/16/98	sw
pH, Saturated Paste	USDA No. 60 (21A)	7.7		units	0.1	0.1	10/16/98	cc
Sieve- 2000 um (2.0 mm)	ASA No.9 15-4.2.2	64.5		% Passing	0.1	0.5	10/16/98	cjv
Sieve-22400 um (7/8")	ASA No.9 15-4.2.2	100		% Passing	0.1	0.5	10/16/98	cjv
Solids, Percent	CLPSOW390, PART F, D-98	77.9		%	0.1	0.5	10/15/98	vv

Inorganic Qualifiers (based on EPA CLP 390)

U = Analyte was analyzed for but not detected at the indicated MDL
B = Analyte concentration detected at a value between MDL and PQL
PQL = Practical Quantitation Limit


Vice President of Operations: Ralph Poulsen

ACZ Laboratories, Inc.
30400 Downhill Drive
Steamboat Springs, CO 80487
(800) 334-5493

URS Operating Services, Inc.
1099 18th Street Suite 710
Denver, CO 80202-1908
Karen Kuoppula

Lab Sample ID: L20715-02
Client Sample ID: VB-A1-2
Client Project ID: 75.80914.00
ACZ Report ID: RG79616

Date Sampled: 10/13/98 14:08
Date Received: 10/15/98
Date Reported: 10/22/98

Sample Matrix: Soil

Texture by Hydrometer	ASTM D 422 Hydrometer						
Clay		6	%	1	5	10/16/98	cc
Sand		81	%	1	5	10/16/98	cc
Silt		13	%	1	5	10/16/98	cc
Texture Classification		LS				10/16/98	cc

Soil Preparation

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
AB-DPTA Extraction	ASA No. 9, 3-5.2.3						10/16/98	cjv
Air Dry at 34 Degrees C	USDA No. 1, 1972						10/15/98	vv
Digestion - Microwave	M3051, HNO3						10/16/98	cjv
Saturated Paste Extraction	USDA No. 60 (2)						10/16/98	cjv
Water Extraction	ASA No. 9 10-2.3.2						10/16/98	cjv

Wet Chemistry

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Nitrate as N, soluble (Water)	Calculation: NO3NO2 minus NO2	11.5		mg/Kg	0.1	0.5	10/22/98	calc
Nitrate/Nitrite as N, soluble (Water)	M353.2 - Automated Cadmium Reduction	12.8		mg/Kg	0.1	0.5	10/17/98	ss
Nitrite as N, soluble (Water)	M353.2 - Automated Cadmium Reduction	1.31		mg/Kg	0.05	0.3	10/17/98	ss
Phosphorus, extractable (AB-DTPA)	M365.1 - Automated Ascorbic Acid	43		mg/Kg	1	5	10/17/98	ss

Note: The Antimony, Cadmium and Silver analyses were performed using method of standard additions. The Silver value is estimated due to matrix interferences.

Inorganic Qualifiers (based on EPA CLP 3/90)

U = Analyte was analyzed for but not detected at the indicated MDL
B = Analyte concentration detected at a value between MDL and PQL
PQL = Practical Quantitation Limit

ACZ

**Inorganic
QC Summary**

30400 Downhill Drive
Steamboat Springs, CO 80487
(800) 334-5493
Fax: (970) 879-2216

QC Report ID: QC2046-D

ACZ Project ID: L20715

REPORT TO:

Karen Kuoppula
URS Operating Services, Inc.
1099 18th Street Suite 710
Denver, CO 80202-1908
Monday, November 16, 1998



Bradley W. Craig, Quality Assurance Officer



Scott Gustin, Project Manager

REPQC001.07.97.03

11.19.98

Date

11-19-98

Date

ACZ Laboratories, Inc.
30400 Downhill Drive
Steamboat Springs, CO 80487
(800) 334-5493

URS Operating Services, Inc.
1099 18th Street Suite 710
Denver, CO 80202-1908
Kent Alexander

Lab Sample ID: **L20987-01**
Client Sample ID: **VB-SP-1VS**
Client Project ID: **75.80914.00**
ACZ Report ID: **RG81096**

Date Sampled: **10/23/98 15:10**
Date Received: **11/4/98**
Date Reported: **11/12/98**

Sample Matrix: **Soil**

Soil Analysis

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Conductivity @25C	MI20.1 - Meter, w/ Saturated Paste Prep	2.380		mmhos/cm	0.001	0.01	11/9/98	vv
Organic Matter	USDA No.60 - Method 24	4.03		%	0.01	0.1	11/9/98	as
pH, Saturated Paste	USDA No. 60 (21A)	7.7		units	0.1	0.1	11/9/98	vv
Sieve- 2000 um (2.0 mm)	ASA No.9 15-4.2.2	56.8		% Passing	0.1	0.5	11/6/98	vv
Sieve-22400 um (7/8")	ASA No.9 15-4.2.2	100		% Passing	0.1	0.5	11/6/98	vv
Solids, Percent	CLPSOW390, PART F, D-98	83.2		%	0.1	0.5	11/5/98	as
Texture by Hydrometer	ASTM D 422 Hydrometer							
Clay		10		%	1	5	11/11/98	as
Sand		53		%	1	5	11/11/98	as
Silt		37		%	1	5	11/11/98	as
Texture Classification		SL/L					11/11/98	as

Soil Preparation

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
AB-DPTA Extraction	ASA No. 9, 3-5.2.3						11/9/98	vv
Air Dry at 34 Degrees C	USDA No. 1, 1972						11/5/98	as
Saturated Paste Extraction	USDA No. 60 (2)						11/9/98	vv
Water Extraction	ASA No. 9 10-2.3.2						11/9/98	vv

Wet Chemistry

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Nitrate as N, soluble (Water)	Calculation: NO3NO2 minus NO2	42.0		mg/Kg	0.5	3	11/12/98	calc
Nitrate/Nitrite as N, soluble (Water)	M353.2 - Automated Cadmium Reduction	42.5		mg/Kg	0.5	3	11/10/98	ss
Nitrite as N, soluble (Water)	M353.2 - Automated Cadmium Reduction	0.48		mg/Kg	0.05	0.3	11/10/98	ss
Phosphorus, extractable (AB-DTPA)	M365.1 - Automated Ascorbic Acid	16		mg/Kg	1	5	11/12/98	ss

Note: Duplicate precision for Conductivity and Nitrate/Nitrite exceeds ACZ's QC limit.

Reporting Conventions (based on EPA CLP 3/90)

U = Analyte was analyzed for but not detected at the indicated MDL
B = Analyte concentration detected at a value between MDL and PQL
PQL = Practical Quantitation Limit

RVPoulsen

Vice President of Operations: Ralph Poulsen

ACZ Laboratories, Inc.
30400 Downhill Drive
Steamboat Springs, CO 80487
(800) 334-5493

Lab Sample ID: **L20987-02**
Client Sample ID: **VB-SP-1S**
Client Project ID: **75.80914.00**
ACZ Report ID: **RG81097**

URS Operating Services, Inc.
1099 18th Street Suite 710
Denver, CO 80202-1908
Kent Alexander

Date Sampled: **10/23/98 15:15**
Date Received: **11/4/98**
Date Reported: **11/12/98**

Sample Matrix: **Soil**

Soil Analysis

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Conductivity @25C	M120.1 - Meter, w/ Saturated Paste Prep	2.610		mmhos/cm	0.001	0.01	11/9/98	vv
Organic Matter	USDA No.60 - Method 24	3.85		%	0.01	0.1	11/9/98	as
pH, Saturated Paste	USDA No. 60 (21A)	7.7		units	0.1	0.1	11/9/98	vv
Sieve- 2000 um (2.0 mm)	ASA No.9 15-4.2.2	99.7		% Passing	0.1	0.5	11/6/98	vv
Sieve-22400 um (7/8")	ASA No.9 15-4.2.2	100		% Passing	0.1	0.5	11/6/98	vv
Solids, Percent	CLPSOW390, PART F, D-98	81.5		%	0.1	0.5	11/5/98	as
Texture by Hydrometer	ASTM D 422 Hydrometer							
Clay		10		%	1	5	11/11/98	as
Sand		55		%	1	5	11/11/98	as
Silt		35		%	1	5	11/11/98	as
Texture Classification		SL					11/11/98	as

Soil Preparation

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
AB-DPTA Extraction	ASA No. 9, 3-5.2.3						11/9/98	vv
Air Dry at 34 Degrees C	USDA No. 1, 1972						11/5/98	as
Saturated Paste Extraction	USDA No. 60 (2)						11/9/98	vv
Water Extraction	ASA No. 9 10-2.3.2						11/9/98	vv

Wet Chemistry

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Nitrate as N, soluble (Water)	Calculation: NO3NO2 minus NO2	72.0		mg/Kg	0.5	3	11/12/98	calc
Nitrate/Nitrite as N, soluble (Water)	M353.2 - Automated Cadmium Reduction	72.5		mg/Kg	0.5	3	11/10/98	ss
Nitrite as N, soluble (Water)	M353.2 - Automated Cadmium Reduction	0.50		mg/Kg	0.05	0.3	11/10/98	ss
Phosphorus, extractable (AB-DTPA)	M365.1 - Automated Ascorbic Acid	18		mg/Kg	1	5	11/12/98	ss

Note: Duplicate precision for Conductivity and Nitrate/Nitrite exceeds ACZ's QC limit.

Organic Qualifiers (based on EPA CLP 3/90)

U = Analyte was analyzed for but not detected at the indicated MDL

B = Analyte concentration detected at a value between MDL and PQL

PQL = Practical Quantitation Limit

RVPoulsen

Vice President of Operations: Ralph Poulsen

ACZ Laboratories, Inc.
30400 Downhill Drive
Steamboat Springs, CO 80487
(800) 334-5493

Lab Sample ID: L20861-01
Client Sample ID: VB-SP-1US
Client Project ID: Vasquez Blvd
ACZ Report ID: RG80219

URS Operating Services, Inc.
1099 18th Street Suite 710
Denver, CO 80202-1908
Karen Kuoppula

Date Sampled: 10/23/98 15:10
Date Received: 10/24/98
Date Reported: 10/29/98

Sample Matrix: Soil

Metals Analysis

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Aluminum, total (3051)	M6010B ICP	26700		mg/Kg	4	20	10/28/98	gg
Antimony, total (3051)	M7041 GFAA		U	mg/Kg	0.2	1	10/28/98	bg
Arsenic, total (3051)	M7060 GFAA	5.9		mg/Kg	0.5	2	10/27/98	jb
Barium, total (3051)	M6010B ICP	192		mg/Kg	0.4	1	10/28/98	gg
Beryllium, total (3051)	M6010B ICP	0.8	B	mg/Kg	0.2	1	10/28/98	gg
Cadmium, total (3051)	M7131 GFAA	0.8		mg/Kg	0.1	0.6	10/28/98	bg
Calcium, total (3051)	M6010B ICP	21000		mg/Kg	20	100	10/28/98	gg
Chromium, total (3051)	M6010B ICP	18		mg/Kg	1	6	10/28/98	gg
Cobalt, total (3051)	M6010B ICP	6		mg/Kg	1	6	10/28/98	gg
Copper, total (3051)	M6010B ICP	26		mg/Kg	1	6	10/28/98	gg
Iron, total (3051)	M6010B ICP	17200		mg/Kg	1	6	10/28/98	gg
Lead, total (3051)	M7421 GFAA	23.0		mg/Kg	0.5	2	10/28/98	bg
Magnesium, total (3051)	M6010B ICP	4420		mg/Kg	20	100	10/28/98	gg
Manganese, total (3051)	M6010B ICP	340		mg/Kg	0.6	1	10/28/98	gg
Mercury, total	M7471 CVAA	0.03	B	mg/Kg	0.02	0.1	10/28/98	bg
Nickel, total (3051)	M6010B ICP	18		mg/Kg	1	6	10/28/98	gg
Potassium, total (3051)	M6010B ICP	3310		mg/Kg	40	100	10/28/98	gg
Selenium, total (3051)	M7742 Modified, AA-Hydride	0.5	B	mg/Kg	0.1	0.6	10/28/98	bg
Silver, total (3051)	M7761 GFAA	0.29	B	mg/Kg	0.06	0.3	10/28/98	jb
Sodium, total (3051)	M6010B ICP	200		mg/Kg	40	100	10/28/98	gg
Thallium, total (3051)	M7841 GFAA	0.3	B	mg/Kg	0.2	1	10/28/98	bg
Vanadium, total (3051)	M6010B ICP	31.2		mg/Kg	0.6	3	10/28/98	gg
Zinc, total (3051)	M6010B ICP	93		mg/Kg	1	6	10/28/98	gg

Soil Analysis

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Solids, Percent	CLPSOW390, PART F, D-98	83.6		%	0.1	0.5	10/27/98	cc

Soil Preparation

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Digestion - Microwave	M3051, HNO3						10/27/98	sw

Note: Duplicate precision for Chromium and Vanadium exceeds ACZ's QC limit of 20% RPD. The Silver analysis was performed using method of standard additions. The Silver value is estimated due to matrix interferences.

Inorganic Quantities (based on EPA CLP 390)

U = Analyte was analyzed for but not detected at the indicated MDL
B = Analyte concentration detected at a value between MDL and PQL
PQL = Practical Quantitation Limit

COPY

R. Poulsen

Vice President of Operations: Ralph Poulsen

ACZ Laboratories, Inc.
30400 Downhill Drive
Steamboat Springs, CO 80487
(800) 334-5493

Lab Sample ID: L20861-02
Client Sample ID: VB-SP-1S
Client Project ID: Vasquez Blvd
ACZ Report ID: RG80220

URS Operating Services, Inc.
1099 18th Street Suite 710
Denver, CO 80202-1908
Karen Kuoppula

Date Sampled: 10/23/98 15:15
Date Received: 10/24/98
Date Reported: 10/29/98

Sample Matrix: Soil

Metals Analysis

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Aluminum, total (3051)	M6010B ICP	26800		mg/Kg	4	20	10/28/98	gg
Antimony, total (3051)	M7041 GFAA		U	mg/Kg	0.2	1	10/28/98	bg
Arsenic, total (3051)	M7060 GFAA	6.2		mg/Kg	0.5	2	10/27/98	jb
Barium, total (3051)	M6010B ICP	197		mg/Kg	0.4	1	10/28/98	gg
Beryllium, total (3051)	M6010B ICP	0.8	B	mg/Kg	0.2	1	10/28/98	gg
Cadmium, total (3051)	M7131 GFAA	0.4	B	mg/Kg	0.1	0.6	10/28/98	bg
Calcium, total (3051)	M6010B ICP	22600		mg/Kg	20	100	10/28/98	gg
Chromium, total (3051)	M6010B ICP	16		mg/Kg	1	6	10/28/98	gg
Cobalt, total (3051)	M6010B ICP	7		mg/Kg	1	6	10/28/98	gg
Copper, total (3051)	M6010B ICP	27		mg/Kg	1	6	10/28/98	gg
Iron, total (3051)	M6010B ICP	16500		mg/Kg	1	6	10/28/98	gg
Lead, total (3051)	M7421 GFAA	22.3		mg/Kg	0.5	2	10/28/98	bg
Magnesium, total (3051)	M6010B ICP	4370		mg/Kg	20	100	10/28/98	gg
Manganese, total (3051)	M6010B ICP	357		mg/Kg	0.6	1	10/28/98	gg
Mercury, total	M7471 CVAA	0.04	B	mg/Kg	0.02	0.1	10/28/98	bg
Nickel, total (3051)	M6010B ICP	18		mg/Kg	1	6	10/28/98	gg
Potassium, total (3051)	M6010B ICP	3110		mg/Kg	40	100	10/28/98	gg
Selenium, total (3051)	M7742 Modified, AA-Hydride	0.4	B	mg/Kg	0.1	0.6	10/28/98	bg
Silver, total (3051)	M7761 GFAA	0.42		mg/Kg	0.06	0.3	10/28/98	jb
Sodium, total (3051)	M6010B ICP	200		mg/Kg	40	100	10/28/98	gg
Thallium, total (3051)	M7841 GFAA	0.3	B	mg/Kg	0.2	1	10/28/98	bg
Vanadium, total (3051)	M6010B ICP	28.1		mg/Kg	0.6	3	10/28/98	gg
Zinc, total (3051)	M6010B ICP	87		mg/Kg	1	6	10/28/98	gg

Soil Analysis

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Solids, Percent	CLPSOW390, PART F, D-98	82.3		%	0.1	0.5	10/27/98	cc

Soil Preparation

Parameter	EPA Method	Result	Qual	Units	MDL	PQL	Date	Analyst
Digestion - Microwave	M3051, HNO3						10/27/98	sw

Note: Duplicate precision for Chromium and Vanadium exceeds ACZ's QC limit of 20% RPD. The Cadmium and Silver analyses were performed using method of standard additions. The Silver value is estimated due to matrix interferences.

Inorganic Qualifiers (based on EPA CLP 390)

U = Analyte was analyzed for but not detected at the indicated MDL
B = Analyte concentration detected at a value between MDL and PQL
PQL = Practical Quantitation Limit


Vice President of Operations: Ralph Poulsen

**PARTICULATE FILTER CASSETTE
ANALYTICAL RESULTS**



300 UNION BOULEVARD, SUITE 600, LAKEWOOD, CO 80228

TECHLAW INC.

PHONE: (303) 763-7188
FAX: (303) 763-4896

December 21, 1998

Ms. Lori Raschke
URS Operating Services, Inc.
1099 18th Street, Suite 710
Denver, CO 80202

**RE: Transmittal of Data Validation Reports
Vasquez and I-70
TDD No. 75-80914
Report Nos. 98-10-306, 98-10-234, 983003, and 302114**

Dear Ms. Raschke:

Please find the enclosed data validation reports for TDD No. 75-80914 for the Vasquez and I-70 project. These reports are for the validation of metals (arsenic, cadmium, and lead) analyses by SW-846 methods.

If you have any questions regarding the enclosed reports, please contact me at (303) 763-7188.

Yours sincerely,
TECHLAW, INC.

Lisa Burnley
Associate Consultant

enclosure
IF: 0252-167



**REGION VIII
SUMMARY OF DATA QUALITY ASSURANCE REVIEW
INORGANIC**

TDD No.	Site Name		Operable Unit
75-80914	Vasquez & I-70		
RPM/OSC Name			
Pete Stevenson			
Contractor Laboratory	Contract No.	Report No.	Laboratory DPO/Region
Paragon Analytics, Inc.	OS-98-P-5459	98-10-306	

Review Assigned Date December 2, 1998Data Validator Bill FearReview Completion Date December 21, 1998Report Reviewer Amy Ballow

Sample ID	Laboratory ID	Matrix	Analysis
4940STN-10-22	9810306-1	Filter	Metals (Arsenic, Cadmium, and Lead) by SW-846 Method 6010
4940STS-10-22	9810306-2		
4940STE-10-22	9810306-3		
4771VI-WEST	9810306-4		
4771VI-SOUTH	9810306-5		
4771VI-EAST	9810306-6		
4771VI-EAST D	9810306-7		

DATA QUALITY STATEMENT

- () Data are ACCEPTABLE according to EPA Functional guidelines with no qualifiers (flags) added by the reviewer.
- () Data are UNACCEPTABLE according to EPA Functional Guidelines.
- (X) Data are acceptable with QUALIFICATIONS noted in review.

Telephone/Communication Logs Enclosed? Yes _____ No X

TPO Attention Required? Yes _____ No X If yes, list the items that require attention:

INORGANIC DATA QUALITY ASSURANCE REVIEW**REVIEW NARRATIVE SUMMARY**

This data package was reviewed according to "USEPA Contract Laboratory Program National Functional Guidelines for Inorganic Data Review," February 1994, modified for the method used. Qualification taken on sample results based on the Functional Guidelines that differ from method requirement are identified within the report.

The data package TDD No.75-80914, Report No. 9810306, consisted of seven filter samples for arsenic, cadmium, and lead analyses by SW-846 Method 6010.

The following table lists the data qualifiers added to the sample analyses. Please see Data Qualifier Definitions, attached to the end of this report.

Sample ID	Elements	Qualifiers	Reason for Qualification	Review Section
98-10-306-1, 98-10-306-3, 98-10-306-6	Lead	UJ	Negative blank contamination	VII
98-10-306-2, 98-10-306-4, 98-10-306-5, 98-10-306-7		J		

Method/SOW Number SW-846, Method 6010

Revision 0.0

Inorganic Deliverables Completeness Checklist

<u>P</u>	Inorganic Cover Page		
<u>P</u>	Inorganic Analysis Data Sheets		
<u>P</u>	Initial Calibration and Calibration Verification Results		
<u>P</u>	Continuing Calibration Verification Results		
<u>NA</u>	CRDL Standard for ICP and AA		
<u>P</u>	Blank Analysis Results		
<u>P</u>	ICP Interference Check Sample Results		
<u>P</u>	Spiked Sample Results		
<u>NA</u>	Post-digest spiked Sample Analysis		
<u>P</u>	Duplicate Sample Results		
<u>P</u>	Instrument Detection Limits		
<u>P</u>	Laboratory Control Sample results		
<u>NA</u>	Standard Addition Results		
<u>P</u>	ICP Serial Dilution Results		
<u>NA</u>	Holding Times Summary Sheet		
<u>P</u>	ICP Interelement Correction Factors		
<u>P</u>	ICP Linear Ranges		
<u>P</u>	Raw Data		
<u>P</u>	Samples	<u>P</u>	Calibration Standards
<u>P</u>	Duplicates	<u>P</u>	ICP QC (ICS and Serial Dilution
<u>NA</u>	Furnace AA	<u>NA</u>	Mercury Analysis
<u>NA</u>	Percent Solids Calculations - Solids Only	<u>P</u>	Blanks
<u>P</u>	Sample Prep/Digestion Logs	<u>P</u>	Spikes
<u>P</u>	Analysis Run Log	<u>P</u>	LCS
<u>P</u>	Chain-of-Custody	<u>NA</u>	Cyanide Analysis
<u>P</u>	Sample Description		
<u>P</u>	Case Narrative		
<u>P</u>	Method References		

KEY:

P = Provided in original data package, as required by the SOW
 R = Provided as Resubmission
 NP = Not provided in original data package or as resubmission
 NR = Not required under the SOW
 NA = Not applicable to this data package or analysis

I. DELIVERABLES

All deliverables were present.

Yes X No

Comments: None.

II. HOLDING TIMES AND PRESERVATION CRITERIA

All holding times and preservations criteria were met.

Yes No X

Comments: The samples were analyzed within holding times; however, the temperature at the time of sample receipt was not recorded. No action was taken.

III. INSTRUMENT CALIBRATIONS: STANDARDS AND BLANKS

Initial instrument calibrations were performed according to requirements.

Yes X No

Comments: None.

The instruments were calibrated daily and each time an analysis run was performed.

Yes X No

Comments: None.

The instruments were calibrated using one blank and the appropriate number of standards.

Yes X No

Comments: None.

IV. FORM 1 - SAMPLE ANALYSIS RESULTS

Sample analyses were entered correctly on Form Is.

Yes X No

Comments: None.

V. FORM 2A - INITIAL AND CONTINUING CALIBRATION VERIFICATION

The initial and continuing calibration verification standards (ICV and CCV, respectively) met requirements.

Yes X No

Comments: None.

The calibration verification results were within 90-110% recovery for metals, 85-115% for cyanide, and 80-120% for mercury.

Yes X No

Comments: None.

The continuing calibration standards were run at 10% frequency.

Yes X No

Comments: None.

VI. FORM 2B - CRDL STANDARD FOR ICP AND AA

ICP Analysis: Standards (CRI) at two times the CRDL or the IDL (whichever were greater) were analyzed at the beginning and the end of each sample run, or at a minimum of twice per eight hours, whichever was more frequent.

Yes X No

Comments: A CRDL standard was not required for method 6010.

GFAA Analysis: Standards (CRA) at two times CRDL were analyzed at the beginning of each sample run.

Yes___ No___ NA X

Comments: None.

The CRI and/or the CRA were analyzed after the ICV.

Yes___ No___ NA X

Comments: None.

VII. FORM 3 - BLANKS

The initial and continuing calibration blanks (ICB and CCB, respectively) met requirements.

Yes X No___

Comments: None.

The continuing calibration blanks were run at 10% frequency.

Yes X No___

Comments: Continuing calibration blanks were run every 10 samples.

A laboratory/preparation blank was run at the frequency of one per twenty samples, or per sample delivery group (whichever is more frequent), and for each matrix analyzed.

Yes X No___

Comments: None.

All analyzed blanks were free of contamination.

Yes___ No X

Comments: The following table lists the blanks with contamination, elements present, affected samples, and data qualifiers.

Blank Contaminants

Blank ID	Date	Contaminant	Concentration Found in Blank (ug/filter)	IDL (ug/L)	Associated Samples	Concentration Found in Sample (ug/filter)	Qualifier/Adjustment
PB	11/03/98	Lead	-0.186	1.0	98-10-306-1 98-10-306-3 98-10-306-6	0.1 U	UJ
					98-10-306-2 98-10-306-4 98-10-306-5 98-10-306-7	0.19 0.13 0.12 0.11	J

For negative blank contamination, detected sample results less than 5 times the absolute value of the blank were qualified as estimated (J) and non-detected results were qualified as estimated (UJ).

VIII. FORM 4 - ICP INTERFERENCE CHECK SAMPLE

The ICP interference check sample (ICS) was run twice per eight hour shift and/or at the beginning and end of each sample set analysis sequence (whichever is more frequent).

Yes X No

Comments: None.

Percent recovery of the analytes in solution ICSAB were within the range of 80-120%.

Yes X No

Comments: Arsenic, cadmium, and lead recoveries from the ICSAB solution were within QC criteria. ICSA data were not required for method 6010.

IX. FORM 5A - MATRIX SPIKE SAMPLE ANALYSIS

A matrix spike sample was analyzed with every twenty or fewer samples of a similar matrix, or one per sample delivery group (whichever is more frequent).

Yes X No

Comments: Because these samples are filters and only one filter for each sample was provided the laboratory could not perform a pre-digestion spike. Therefore, the post digestion spikes are evaluated as a pre-digestion spike.

The percent recoveries (%R) were calculated correctly.

$$\% \text{ Recovery} = \frac{(SSR - SR)}{SA} \times 100$$

SSR = spiked sample result

SR = sample result

SA = spike added

Yes X No

Comments: None.

Spike recoveries were within the range of 75-125% (an exception is granted where the sample concentration is four times the spike concentration).

Yes X No

Comments: None.

X. FORM 5B - POST DIGEST SPIKE RECOVERY

A post-digest spike was performed for those elements that did not meet the specified criteria (i.e., Pre-digestion/pre-distillation spike recovery falls outside of control limits and sample result is less than four times the spike amount added, exception: Ag, Hg).

Yes No NA X

Comments: Post digestion spikes were evaluated as the matrix spikes.

XI. FORM 6 - DUPLICATE SAMPLE ANALYSIS

Duplicate sample analysis was performed with every twenty or fewer samples of a similar matrix, or one per sample delivery group (whichever is more frequent).

Yes No X

Comments: Duplicate data were performed using a laboratory control sample duplicate due to insufficient sample size. (One filter per sample.)

The RPDs were calculated correctly.

$$RPD = \frac{(S - D)}{(S + D)/2} \times 100$$

S = sample
D = duplicate

Yes X No

Comments: None.

For sample concentrations greater than five times the CRDL, RPDs were within $\pm 20\%$ (limits of $\pm 35\%$ apply for soil/sediments/tailings samples).

Yes X No

Comments: None.

For sample concentrations less than five times the CRDL, duplicate analysis results were within the control window of \pm CRDL (two times CRDL for soils).

Yes X No

Comments: None.

XII. GFAA QC

Duplicate injections were performed on all GFAA samples and the RSD was within $\pm 20\%$.

Yes No NA X

Comments: None.

Analytical spikes were performed on all GFAA samples and the percent recovery was 85 - 115%.

Yes No NA X

Comments: None.

MSAs were analyzed when required and the correlation coefficient was > 0.995 .

Yes No NA X

Comments: None.

XIII. FORM 7 - LABORATORY CONTROL SAMPLE

The laboratory control sample (LCS) was prepared and analyzed with every twenty or fewer samples of a similar matrix, or one per sample delivery group (whichever is more frequent).

Yes X No

Comments: None.

All results were within control limits.

Yes X No

Comments: None.

XIV. FORM 8 - STANDARD ADDITION RESULTS

Results from graphite furnace standard additions were entered on Form VIII.

Yes No NA X

Comments: None.

XV. FORM 9 - ICP QC

A serial dilution was performed for ICP analysis with every twenty or fewer samples of a similar matrix, or one per sample delivery group, whichever is more frequent.

Yes X No

Comments: None.

The serial dilution was without interference problems.

Yes X No

Comments: None.

XVI. FORM 10 - QUARTERLY INSTRUMENT DETECTION LIMITS (IDL)

IDLs were provided for all elements on the target analyte list.

Yes X No

Comments: None.

Reported IDLs met requirements.

Yes X No

Comments: None.

XVII. FORM 11 - INTERELEMENT CORRECTION FACTORS FOR ICP

Interelement corrections for ICP were reported.

Yes X No

Comments: The interelement corrections provided were obtained more than a year prior to sample analysis. No action was required.

XVIII. FORM 12 - ICP LINEAR RANGES

ICP linear ranges were reported.

Yes X No

Comments: None.

XIX. LINEAR RANGE VERIFICATION ANALYSIS

Linear Range Verification Analysis (LRA) was performed and results were within control limits of $\pm 5\%$ of the true value.

Yes No NA X

Comments: None.

XX. FORM 13 - PREPARATION LOG

Information on the preparation of samples for analysis was reported on Form XIII.

Yes X No

Comments: None.

XXI. FORM 14 - ANALYSIS RUN LOG

A Form XIV with the required information was filled out for each analysis run in the data package.

Yes X No

Comments: None.

XXII. Additional Comments or Problems/Resolutions Not Addressed Above

Yes X No

Comments: Only the results for arsenic, cadmium, and lead were reported on the Form 1s for the metal analyses.

INORGANIC DATA QUALITY ASSURANCE REVIEW**Region VIII****DATA QUALIFIER DEFINITIONS**

For the purpose of Data Validation, the following code letters and associated definitions are provided for use by the data validator to summarize the data quality. Use of additional qualifiers should be carefully considered. Definitions for all qualifiers used should be provided with each report.

GENERAL QUALIFIERS for use with both INORGANIC and ORGANIC DATA

- R - Reported value is "rejected." Resampling or reanalysis may be necessary to verify the presence or absence of the compound.
- J - The associated numerical value is an estimated quantity because the Quality Control criteria were not met.
- U J - The reported amount is estimated because Quality Control criteria were not met. Element or compound was not detected.
- N J - The analysis indicates the presence of an analyte that has been "tentatively identified" and the associated numerical value represents its approximate concentration.
- N - The analysis indicates the presence of an analyte for which there is presumptive evidence to make a tentative identification.
- U - The material was analyzed for, but was not detected above the level of the associated value. The associated value is either the sample quantitation limit or the sample detection limit.

ACRONYMS

AA	Atomic Absorption
Ag	Silver
CCB	Continuing Calibration Blank
CCV	Continuing Calibration Verification
CFR	Code of Federal Regulations
CLP	Contract Laboratory Program
CRA	CRDL standard required for AA
CRDL	Contract Required Detection Limit
CRI	CRDL standard required for ICP
CV	Cold Vapor
EPA	U.S. Environmental Protection Agency
GFAA	Graphite Furnace Atomic Absorption
Hg	Mercury
ICB	Initial Calibration Blank
ICP	Inductively Coupled Plasma
ICS	Interference Check Sample
ICSA	Interference Check Sample (Solution A)
ICSAB	Interference Check Sample (Solution AB)
ICV	Initial Calibration Verification
IDL	Instrument Detection Limit
LCS	Laboratory Control Sample
LRA	Linear Range Verification Analysis
MSA	Method of Standard Additions
PDS	Post Digestion Spike
QC	Quality Control
RPD	Relative Percent Difference
RPM	Regional Project Manager
RSD	Percent Relative Standard Deviation
SA	Spike Added
SAS	Special Analytical Services
SDG	Sample Delivery Group
SOW	Statement of Work
SR	Sample Result
SSR	Spiked Sample Result
TPO	Technical Project Officer

1

INORGANIC ANALYSES DATA SHEET

EPA SAMPLE NO.

4940STN

Lab Name: PARAGON ANALYTICS Contract:

Lab Code: NA **Case No.:** **SAS No.:** **SDG No.:** VASQUE

Matrix (soil/water): FILTER Lab Sample ID: 9810306-1

Level (low/med): LOW Date Received: 10/30/98

% Solids:	100.0
-----------	-------

Concentration Units (ug/L or mg/kg dry weight): UG/FILTER

[illegible]

45

RF 12/14/98

Color Before: WHITE Clarity Before: N/A Texture: FINE

Color After: COLORLESS Clarity After: CLEAR Artifacts:

Comments:

FULL CLIENT SAMPLE ID IS 4940STN-10-22.

1

INORGANIC ANALYSES DATA SHEET

4940STS

Concentration Units (ug/L or mg/kg dry weight): UG/FILTER

[illegible]

RF 12/14/8

FULL CLIENT SAMPLE ID IS 4940STS-10-22.

000011

1

INORGANIC ANALYSES DATA SHEET

4940STE

FULL CLIENT SAMPLE ID IS 4940STE-10-22.

1

INORGANIC ANALYSES DATA SHEET

4771VI-WEST

1

INORGANIC ANALYSES DATA SHEET

EPA SAMPLE NO.

4771VI-SOUTH

Lab Name: PARAGON ANALYTICS Contract: _____

Lab Code: NA Case No.: SAS No.: _____ SDG No.: VASQUE

Matrix (soil/water): FILTER

Lab Sample ID: 9810306-5

Level (low/med) : LOW

Date Received: 10/30/98

% Solids:	100.0
-----------	-------

Concentration Units (ug/L or mg/kg dry weight): UG/FILTER

[illegible]

RF 12/14/11

Color Before: WHITE

Clarity Before: N/A

Texture: FINE

Color After: COLORLESS

Clarity After: CLEAR

Artifacts:

Comments:

000014

1

INORGANIC ANALYSES DATA SHEET

EPA SAMPLE NO.

4771VI-EASTD

Lab Name: PARAGON ANALYTICS Contract:

Lab Code: NA Case No.: SAS No.: SDG No.: VASQUE

Matrix (soil/water): FILTER

Lab Sample ID: 9810306-7

Level (low/med) : LOW

Date Received: 10/30/98

% Solids:	100.0
-----------	-------

Concentration Units (ug/L or mg/kg dry weight): UG/FILTER

[illegible]

Color Before: WHITE

Clarity Before: N/A

Texture: FINE

Color After: COLORLESS

Clarity After: CLEAR

Artifacts:

Comments:

BATCH: 98-10-306

URS-

Actions

1. If holding times are exceeded, all sample results are estimated (J)/(JJ).
2. If holding times are grossly exceeded ($\geq 2 \times$ holding time), detected results are estimated (J), and non-detected results are rejected (R).

Date:

Bill for 12-4-98

Date _____

Amy Ballow 12-17-98

$$\text{Holding Time} = \text{Analysis Date} - \text{Collection Date}$$

BATCH: 9810-304

[illegible]

ICV/CCV Actions:

		PERCENT RECOVERY				
	<75%	75-89%	90-110%	111-125%	>125%	
Detected results	R	J	V	J	F	
Non-detected Results	R	UJ	V	V	V	

- meZa'tochla ~ 204.

IIB METAL ANALYSIS WORKSHEET -- AA CALIBRATIONS

BATCH:

List all AA analytes that did not meet the percent recovery criteria for initial calibration verification (ICV) and continuing calibration verification (CCV).

[illegible]

Action 5

ICV/CCV Actions:

		PERCENT RECOVERY				
		<75%	75-89%	90-110%	111-125%	>125%
Detected results	R	J	V	J		
Non-detected Results	R	UJ	V			

1. If three standards and a blank were not used for initial calibration, or the instrument was not calibrated daily and each time the instrument was set up, quality the data as rejected (R).
2. If the initial calibration correlation coefficient was less than 0.999, quality sample results as estimated (J/J/J).

BATCH:

[illegible]

COMMENTS

	<65%	65-79%	80-120%	121-135%	>135%
Detected results	R	J	V	J	R
Non-detected results	R	UJ	V	V	V

1. If four standards and a blank were not used for initial calibration, or the instrument was not calibrated daily and each time the instrument was set up, qualify the data as rejected (R).
2. If the initial calibration correlation coefficient was less than 0.995, qualify sample results as estimated (J)/(UJ).

BATCH:

List all cyanide results that did not meet the percent recovery criteria for the ICV and/or CCV standards.

[illegible]

PERCENT RECOVERY:

	<70%	70-84%	85-115%	116-130%	>130%
Detected results	R	J	V	J	R
Non-detected results	R	U	V	V	V

1. If three standards and a blank were not used for initial calibration or the instrument was not calibrated daily and each time the instrument was set up, qualify the data as reported (R).
2. If the initial calibration correlation coefficient was less than 0.995, qualify sample results as estimated (J)/(U).
3. If a mid-range standard (or ICV) was not distilled, qualify sample results as estimated (J)/(U).

III METAL ANALYSIS WORKSHEET -- BLANKS

MATRIX: filter

BATCH: 98-10-304

Matrix: soil BATCH: 28-10-314

List the highest positive AND negative blank result $\geq |IDL|$ below. Use one worksheet for soil matrix and another for water matrix.

ICB	CCB	usIL	Blank			

[illegible]

NOTE: Verify that the absolute value of any analyte concentration in the PB or MB is < CRDL

COMMENTS

Actions:

1. If $|\text{Blank}| < \text{IDL}$, no action is taken.
2. If $|\text{Blank}| \geq \text{IDL}$, then all sample results $\geq \text{IDL}$ and $< 5 * \text{Blank}$ are non-detected (U).
3. If $|\text{Blank}| = -\text{IDL}$, all sample results $\geq \text{IDL}$ and $< 5 * |\text{Blank}|$ are estimated (U).
4. If $|\text{Blank}| = -\text{IDL}$ and raw data sample result is $\leq \text{IDL}$ then non-detected results are estimated (UU).

IVA METAL ANALYSIS WORKSHEET -- ICP INTERFERENCE CHECK SAMPLE

BATCH:

NOTE: The sample results can be accepted without qualification, if the sample concentrations of Al, Ca, Fe, and Mg are less than or equal to the concentration found in the ICSA solution.

Examine the sample results in ug/l and list any Al, Ca, Fe, or Mg results that are greater than the ICSA values.

[illegible]

List any analytes in the ICS AB solution that did not meet the criteria of 80–120% R.

[illegible]

Were Interference Check Samples run at the beginning and end of each sample analysis run, or a minimum of twice per 8-hour shift (whichever is more frequent)? Yes No

COMMENTS

Actions:

PERCENT RECOVERY			
<50%	50-79%	80-123%	>120%
R	J	V	J
R	UJ	V	V

IVB METAL ANALYSIS WORKSHEET -- ICP INTERFERENCE CHECK SAMPLE

BATCH: 9870-304

Report the concentration of any analytes detected in the ICSA solution > |IDL| that should not be present.

[illegible]

Actions:

If the ICSEA value > the positive IDL:

1. For non-detected results, no action is taken.
2. Estimate (J) all detected results $\leq 5 \cdot \text{ICSA}$.

If the ICSA value $< -IDL$:

1. Estimate (J) detected results $\leq 5 \cdot |CSA|$.
2. Estimate (W) non-detected results.

V METAL ANALYSIS WORKSHEET -- PRE-DIGESTION MATRIX SPIKE

MATRIX:

filter

BATCH:

88-10-306

List all parameters that do not meet the percent recovery criteria. Note: The pre-digestion spike recovery criteria are not evaluated for Ca, Mg, K, Na, Al, and Fe for soil samples, and Ca, Mg, K, and Na for water samples. If the sample result exceeds the spike added by a factor of 4 or more, no action is taken.

[illegible]

1. Was a pre-digestion matrix spike prepared at the required frequency of once every 20 samples, or every SDG (whichever is more frequent)? Yes No *As post due to filter sample* ✓

2. Was a post-digestion matrix spike analyzed for all ICP elements, except Silver, that did not meet the pre-digestion matrix spike recovery criteria? Yes No *NA post used as spike* ✓

COMMENTS

1. If any analyte does not meet the % R criteria, qualify all associated samples using the following criteria:
Actions:

	Percent Recovery			
	<30%	30-74%	75-125%	>125%
Detected results	J	J	V	J
Non-detected results	R	UJ	V	V

MATRIX:

Fr 14

BATCH: 98-10-304

[illegible]

CCS / LCD ~~data~~ sensor size :
due to

1. AQUEOUS

If sample value $> 5 \times \text{CRDL}$, estimate (J) all sample results of the same matrix if the RPD is $> 20\%$.

If sample value $< 5 \cdot CRDL$, and the difference between the duplicate and the original is $> CRDL$, estimate $(J)/(U)$ all sample results of the same matrix.

If sample value $> 5 \times \text{CRDL}$, estimate (J) all sample results of the same matrix if the RPD is $> 35\%$.

If sample value $< 5 \cdot CRDL$, and the difference between the duplicate and the original is $> 2 \cdot CRDL$, estimate $(J)/(U)$ all sample results of the same matrix.

*Difference = | Sample result - Duplicate sample result |

VII METAL ANALYSIS WORKSHEET--LABORATORY CONTROL SAMPLES

MATRIX: F-14

BATCH: 98-10-306

List all parameters that do not meet the percent recovery criteria.

[illegible]

Actions:

Exception: antimony and silver have no control limits. An aqueous LCS is not required for CN and mercury.

PERCENT RECOVERY

1. AQUEOUS LCS

Detected results

Non-detected results

< 50%

נכד

10

30-739

!

11

80-1207

3

3

> 120%

4

v

2. SOLID LCS

Detected results

Non-detected results

BELOW
CONTROLLING

•

11

WEAPON
CONTROL LIMITS

•

•

ABOVE
CONTROL LIMITS

1

U

VIIIA METAL ANALYSIS WORKSHEET -- ANALYTICAL SPIKE ANALYSIS

BATCH:

List all samples whose analytical spike recovery did not meet the 85–115 % recovery criteria.

[illegible]

If the sample result is $<50\%$ of the spike result, or the sample result is $>50\%$ of the spike result, and the percent recovery is $<40\%$ or between $85-115\%$, the following apply:

Actions:	PERCENT RECOVERY			
	<10%	10-84%	85-115%	>115%
Detected results	J	J	V	J
Non-detected results	R	UJ	V	V

*Spike result = |spiked sample result - sample result|

BATCH:

List all samples for which an MSA analysis was required but not performed, or MSA results were outside control limits.

[illegible]

if a reanalysis was not performed, or the reanalysis correlation coefficient was < 0.995 , or result from the highest correlation coefficient was not reported.

[illegible]

2. Estimate (J) all sample results if duplicate injections were not performed.

X METAL ANALYSIS WORKSHEET -- SAMPLE RESULT VERIFICATION

BATCH: _____

1. Describe any raw data anomalies (i.e. baseline shifts, negative absorbances, transcription or calculation errors, legibility, etc.)

None

2. List results that fall outside the linear range of the ICP instrument or the calibrated range of the AA or Cyanide instrument, and were not reanalyzed.

*None*3. Were ICP linear ranges obtained within 3 months of, and preceding, the sample analyses? - ☒ Yes ☐ No ☐ NA4. Were ICP interelement corrections obtained within 12 months of, and preceding, the sample analyses? Yes ☒ No ☐ NA*just over 12 months*5. Were Instrument detection limits present, found to be less than or equal to the CRDL, and obtained within 3 months of, and preceding the sample analyses? ☒ Yes ☐ No ☐ NA6. Were all sample results reported down to the IDL? ☒ Yes ☐ No7. Were sample weights, volumes, percent solids, and dilutions used correctly when reporting the results? Yes ☐ No ☐

COMMENTS

$$As = 3 \mu\text{g/L} \times \frac{0.1 \text{ L}}{1 \text{ filter}} = 0.3 \mu\text{g/filter}$$

U.S. EPA - CLP

10

Instrument Detection Limits (Quarterly)

Lab Name: PARAGON_ANALYTICS_____ Contract: _____

Lab Code: NA Case No.: SAS No.: SDG No.: VASQUE

ICP ID Number: TJA_61E_4 Date: 10/15/98

Flame AA ID Number : _____

Furnace AA ID Number : _____

[illegible]

Comments :

11A

ICP INTERELEMENT CORRECTION FACTORS (ANNUALLY)

ICP ID Number: TJA 61E 4 Date: 10/15/97

Comments:

11B
ICP INTERELEMENT CORRECTION FACTORS (ANNUALLY)

Lab Name: PARAGON ANALYTICS Contract: _____

Lab Code: NA Case No.: SAS No.: SDG No.: VASQUE

ICP ID Number: TJA 61E 4 Date: 10/15/97

[illegible]

Comments:

11B

ICP INTERELEMENT CORRECTION FACTORS (ANNUALLY)

[illegible]

12
ICP LINEAR RANGES (QUARTERLY)

ICP ID Number: TJA 61E 4____ Date: 10/15/98

[illegible]

Comments:

13
PREPARATION LOG

Contract: _____

SDG No. : VASQUE

[illegible]

U.S. EPA - CLP

14
ANALYSIS RUN LOG

Lab Name: PARAGON_ANALYTICS_____

Contract: _____

Lab Code: NA_____ Case No.: _____

SAS No.: _____ SDG No.: VASQUE

Instrument ID Number: TJA 61E 4_____

Method: P_____

Start Date: 11/03/98

End Date: 11/03/98

EPA Sample No.	D/F	Time	% R	Analytes																									
				A S	C D	P B																							
MIX	1.00	1042		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
MIX	1.00	1044		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ICV	1.00	1048		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ICB	1.00	1054		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1057					-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ICSA	1.00	1100		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ICSAB	1.00	1103		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
CCV	1.00	1106		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
CCB	1.00	1112		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1115		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1118		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1124		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1127		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	5.00	1130		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1132		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1135		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1140		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1143		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1145		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
CCV	1.00	1148		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
CCB	1.00	1152		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1154		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1158		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1202		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1205		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1208		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1211		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	5.00	1214		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1217		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1222		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
CCV	1.00	1227		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
CCB	1.00	1232		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		

**REGION VIII
SUMMARY OF DATA QUALITY ASSURANCE REVIEW
INORGANIC**

TDD No.	Site Name		Operable Unit
75-80914	Vasquez & I-70		
RPM/OSC Name			
Pete Stevenson			
Contractor Laboratory	Contract No.	Report No.	Laboratory DPO/Region
Paragon Analytics, Inc.	OS-98-P-5459	98-10-234	

Review Assigned Date December 2, 1998Data Validator Bill FearReview Completion Date December 21, 1998Report Reviewer Amy Ballow

Sample ID	Laboratory ID	Matrix	Analysis
2000 47 N	9810234-1	Filter	Metals (Arsenic, Cadmium, and Lead) by SW-846 Method 6010
2000 47 E	9810234-2		
2000 47 S	9810234-3		
4691 V1 N	9810234-4		
4691 V1 E	9810234-5		
4691 V1 S	9810234-6		
4691 V1 N	9810234-7		
4691 V1 E	9810234-8		
4691 V1 S	9810234-9		
4691 V1 N	9810234-10		
4691 V1 E	9810234-11		
4691 V1 S	9810234-12		
4711 TH E	9810234-13		

Sample ID	Laboratory ID	Matrix	Analysis
4711 TH S	9810234-14	Filter	Metals (Arsenic, Cadmium, and Lead) by SW-846 Method 6010
4711 TH N	9810234-15		
4940 ST S	9810234-16		
4940 ST N	9810234-17		
4940 ST E	9810234-18		
4940 ST N	9810234-19		
4940 ST S	9810234-20		
4940 ST E	9810234-21		

DATA QUALITY STATEMENT

- () Data are ACCEPTABLE according to EPA Functional guidelines with no qualifiers (flags) added by the reviewer.
- () Data are UNACCEPTABLE according to EPA Functional Guidelines.
- (X) Data are acceptable with QUALIFICATIONS noted in review.

Telephone/Communication Logs Enclosed? Yes _____ No X

TPO Attention Required? Yes _____ No X If yes, list the items that require attention:

INORGANIC DATA QUALITY ASSURANCE REVIEW**REVIEW NARRATIVE SUMMARY**

This data package was reviewed according to "USEPA Contract Laboratory Program National Functional Guidelines for Inorganic Data Review," February 1994, modified for the method used. Qualification taken on sample results based on the Functional Guidelines that differ from method requirement are identified within the report.

The data package TDD No.75-80914, Report No. 9810234, consisted of 21 filter samples for arsenic, cadmium, and lead analyses by SW-846 Method 6010.

The following table lists the data qualifiers added to the sample analyses. Please see Data Qualifier Definitions, attached to the end of this report.

Sample ID	Elements	Qualifiers	Reason for Qualification	Review Section
98-10-234-3, 98-10-234-10	Cadmium	U	Blank contamination	VII
98-10-234-21	Lead			

Method/SOW Number SW-846, Method 6010Revision 0.0

Inorganic Deliverables Completeness Checklist

<u>P</u>	Inorganic Cover Page		
<u>P</u>	Inorganic Analysis Data Sheets		
<u>P</u>	Initial Calibration and Calibration Verification Results		
<u>P</u>	Continuing Calibration Verification Results		
<u>NA</u>	CRDL Standard for ICP and AA		
<u>P</u>	Blank Analysis Results		
<u>P</u>	ICP Interference Check Sample Results		
<u>P</u>	Spiked Sample Results		
<u>NA</u>	Post-digest spiked Sample Analysis		
<u>P</u>	Duplicate Sample Results		
<u>P</u>	Instrument Detection Limits		
<u>P</u>	Laboratory Control Sample results		
<u>NA</u>	Standard Addition Results		
<u>P</u>	ICP Serial Dilution Results		
<u>NA</u>	Holding Times Summary Sheet		
<u>P</u>	ICP Interelement Correction Factors		
<u>P</u>	ICP Linear Ranges		
<u>P</u>	Raw Data		
<u>P</u>	Samples	<u>P</u>	Calibration Standards
<u>P</u>	Duplicates	<u>P</u>	ICP QC (ICS and Serial Dilution
<u>NA</u>	Furnace AA	<u>NA</u>	Mercury Analysis
<u>NA</u>	Percent Solids Calculations - Solids Only	<u>P</u>	Blanks
<u>P</u>	Sample Prep/Digestion Logs	<u>P</u>	Spikes
<u>P</u>	Analysis Run Log	<u>P</u>	LCS
<u>P</u>	Chain-of-Custody	<u>NA</u>	Cyanide Analysis
<u>P</u>	Sample Description		
<u>P</u>	Case Narrative		
<u>P</u>	Method References		

KEY:

P = Provided in original data package, as required by the SOW
R = Provided as Resubmission
NP = Not provided in original data package or as resubmission
NR = Not required under the SOW
NA = Not applicable to this data package or analysis

I. DELIVERABLES

All deliverables were present.

Yes___ No X

Comments: Prior to submittal for data validation, the laboratory was requested to provide new sample Form 1s with the results reported to the IDLs. (Results were originally reported to the CRDL.) However, the laboratory did not provide a new Form 10 showing the correct IDLs. A Form 10 with correct IDLs was found in SDG 98-10-306. Additionally, new Form 3s for blank contamination in which blank results were reported to the IDL were not provided. The blanks were evaluated to the IDL during validation using the raw data. Refer to the blank section of this data validation report for action taken.

II. HOLDING TIMES AND PRESERVATION CRITERIA

All holding times and preservations criteria were met.

Yes___ No X

Comments: The samples were analyzed within holding times. However, according to the case narrative, the samples were received at 17°C. Based on professional judgement, no action was taken.

III. INSTRUMENT CALIBRATIONS: STANDARDS AND BLANKS

Initial instrument calibrations were performed according to requirements.

Yes X No___

Comments: None.

The instruments were calibrated daily and each time an analysis run was performed.

Yes X No___

Comments: None.

The instruments were calibrated using one blank and the appropriate number of standards.

Yes X No

Comments: None.

IV. FORM 1 - SAMPLE ANALYSIS RESULTS

Sample analyses were entered correctly on Form Is.

Yes X No

Comments: None.

V. FORM 2A - INITIAL AND CONTINUING CALIBRATION VERIFICATION

The initial and continuing calibration verification standards (ICV and CCV, respectively) met requirements.

Yes X No

Comments: None.

The calibration verification results were within 90-110% recovery for metals, 85-115% for cyanide, and 80-120% for mercury.

Yes X No

Comments: None.

The continuing calibration standards were run at 10% frequency.

Yes X No

Comments: None.

VI. FORM 2B - CRDL STANDARD FOR ICP AND AA

ICP Analysis: Standards (CRI) at two times the CRDL or the IDL (whichever were greater) were analyzed at the beginning and the end of each sample run, or at a minimum of twice per eight hours, whichever was more frequent.

Yes X No

Comments: A CRDL standard was not required for method 6010.

GFAA Analysis: Standards (CRA) at two times CRDL were analyzed at the beginning of each sample run.

Yes No NA X

Comments: None.

The CRI and/or the CRA were analyzed after the ICV.

Yes No NA X

Comments: None.

VII. FORM 3 - BLANKS

The initial and continuing calibration blanks (ICB and CCB, respectively) met requirements.

Yes X No

Comments: None.

The continuing calibration blanks were run at 10% frequency.

Yes X No

Comments: Continuing calibration blanks were run every 10 samples.

A laboratory/preparation blank was run at the frequency of one per twenty samples, or per sample delivery group (whichever is more frequent), and for each matrix analyzed.

Yes X No

Comments: None.

All analyzed blanks were free of contamination.

Yes___ No X

Comments: The following table lists the blanks with contamination, elements present, affected samples, and data qualifiers.

Blank Contaminants

Blank ID	Date	Contaminant	Concentration Found in Blank (ug/L)	IDL (ug/L)	Associated Samples	Concentration Found in Sample (ug/filter)	Qualifier/ Adjustment
ICB	10/23/98	Cadmium	0.47	0.2	98-10-234-3 98-10-234-10	0.02 0.03	U
PB	10/26/98	Lead	1.3	1.0	98-10-234-21	0.20	

The blank results reported on the Form 3s were only reported to the CRDL rather than to the IDL. No elements were found above the CRDL. Therefore, the raw data were evaluated in order to obtain values above the IDL. The values reported above were taken from the raw data and above the IDL, but less than the CRDL.

VIII. FORM 4 - ICP INTERFERENCE CHECK SAMPLE

The ICP interference check sample (ICS) was run twice per eight hour shift and/or at the beginning and end of each sample set analysis sequence (whichever is more frequent).

Yes X No___

Comments: None.

Percent recovery of the analytes in solution ICSAB were within the range of 80-120%.

Yes X No___

Comments: Arsenic, cadmium, and lead recoveries from the ICSAB solution were within QC criteria. ICSA data were not required for method 6010.

IX. FORM 5A - MATRIX SPIKE SAMPLE ANALYSIS

A matrix spike sample was analyzed with every twenty or fewer samples of a similar matrix, or one per sample delivery group (whichever is more frequent).

Yes X No___

Comments: Because these samples are filters and only one filter for each sample was provided the laboratory could not perform a pre-digestion spike. Therefore, the post digestion spikes were evaluated as a pre-digestion spike.

The percent recoveries (%R) were calculated correctly.

$$\% \text{ Recovery} = \frac{(SSR - SR)}{SA} \times 100$$

SSR = spiked sample result
SR = sample result
SA = spike added

Yes X No

Comments: None.

Spike recoveries were within the range of 75-125% (an exception is granted where the sample concentration is four times the spike concentration).

Yes X No

Comments: None.

X. FORM 5B - POST DIGEST SPIKE RECOVERY

A post-digest spike was performed for those elements that did not meet the specified criteria (i.e., Pre-digestion/pre-distillation spike recovery falls outside of control limits and sample result is less than four times the spike amount added, exception: Ag, Hg).

Yes No NA X

Comments: Post digestion spikes were evaluated as the matrix spikes.

XI. FORM 6 - DUPLICATE SAMPLE ANALYSIS

Duplicate sample analysis was performed with every twenty or fewer samples of a similar matrix, or one per sample delivery group (whichever is more frequent).

Yes No X

Comments: Duplicate data were performed using a laboratory control sample duplicate due to insufficient sample size. (One filter per sample.)

The RPDs were calculated correctly.

$$RPD = \frac{(S - D)}{(S + D)/2} \times 100$$

S = sample
D = duplicate

Yes X No

Comments: None.

For sample concentrations greater than five times the CRDL, RPDs were within $\pm 20\%$ (limits of $\pm 35\%$ apply for soil/sediments/tailings samples).

Yes X No

Comments: None.

For sample concentrations less than five times the CRDL, duplicate analysis results were within the control window of \pm CRDL (two times CRDL for soils).

Yes X No

Comments: None.

XII. GFAA QC

Duplicate injections were performed on all GFAA samples and the RSD was within $\pm 20\%$.

Yes No NA X

Comments: None.

Analytical spikes were performed on all GFAA samples and the percent recovery was 85 - 115%.

Yes No NA X

Comments: None.

MSAs were analyzed when required and the correlation coefficient was > 0.995 .

Yes No NA X

Comments: None.

XIII. FORM 7 - LABORATORY CONTROL SAMPLE

The laboratory control sample (LCS) was prepared and analyzed with every twenty or fewer samples of a similar matrix, or one per sample delivery group (whichever is more frequent).

Yes X No

Comments: None.

All results were within control limits.

Yes X No

Comments: None.

XIV. FORM 8 - STANDARD ADDITION RESULTS

Results from graphite furnace standard additions were entered on Form VIII.

Yes No NA X

Comments: None.

XV. FORM 9 - ICP QC

A serial dilution was performed for ICP analysis with every twenty or fewer samples of a similar matrix, or one per sample delivery group, whichever is more frequent.

Yes X No

Comments: None.

The serial dilution was without interference problems.

Yes X No

Comments: None.

XVI. FORM 10 - QUARTERLY INSTRUMENT DETECTION LIMITS (IDL)

IDLs were provided for all elements on the target analyte list.

Yes___ No X

Comments: The Form 10 in the data package did not report the correct IDLs. The correct Form 10 was obtained from SDG 98-10-306 and attached to the worksheets.

Reported IDLs met requirements.

Yes X No___

Comments: None.

XVII. FORM 11 - INTERELEMENT CORRECTION FACTORS FOR ICP

Interelement corrections for ICP were reported.

Yes X No___

Comments: The interelement corrections provided were obtained more than a year prior to sample analysis. No action was required.

XVIII. FORM 12 - ICP LINEAR RANGES

ICP linear ranges were reported.

Yes X No___

Comments: The instrument linear ranges were not obtained within three months of sample analysis. No action was required.

XIX. LINEAR RANGE VERIFICATION ANALYSIS

Linear Range Verification Analysis (LRA) was performed and results were within control limits of $\pm 5\%$ of the true value.

Yes___ No___ NA X

Comments: None.

XX. FORM 13 - PREPARATION LOG

Information on the preparation of samples for analysis was reported on Form XIII.

Yes X No

Comments: None.

XXI. FORM 14 - ANALYSIS RUN LOG

A Form XIV with the required information was filled out for each analysis run in the data package.

Yes X No

Comments: None.

XXII. Additional Comments or Problems/Resolutions Not Addressed Above

Yes X No

Comments: Only the results for arsenic, camium and lead were reported on the Form 1s for the metal analyses.

INORGANIC DATA QUALITY ASSURANCE REVIEW**Region VIII****DATA QUALIFIER DEFINITIONS**

For the purpose of Data Validation, the following code letters and associated definitions are provided for use by the data validator to summarize the data quality. Use of additional qualifiers should be carefully considered. Definitions for all qualifiers used should be provided with each report.

GENERAL QUALIFIERS for use with both INORGANIC and ORGANIC DATA

- R - Reported value is "rejected." Resampling or reanalysis may be necessary to verify the presence or absence of the compound.
- J - The associated numerical value is an estimated quantity because the Quality Control criteria were not met.
- U J - The reported amount is estimated because Quality Control criteria were not met. Element or compound was not detected.
- N J - The analysis indicates the presence of an analyte that has been "tentatively identified" and the associated numerical value represents its approximate concentration.
- N - The analysis indicates the presence of an analyte for which there is presumptive evidence to make a tentative identification.
- U - The material was analyzed for, but was not detected above the level of the associated value. The associated value is either the sample quantitation limit or the sample detection limit.

ACRONYMS

AA	Atomic Absorption
Ag	Silver
CCB	Continuing Calibration Blank
CCV	Continuing Calibration Verification
CFR	Code of Federal Regulations
CLP	Contract Laboratory Program
CRA	CRDL standard required for AA
CRDL	Contract Required Detection Limit
CRI	CRDL standard required for ICP
CV	Cold Vapor
EPA	U.S. Environmental Protection Agency
GFAA	Graphite Furnace Atomic Absorption
Hg	Mercury
ICB	Initial Calibration Blank
ICP	Inductively Coupled Plasma
ICS	Interference Check Sample
ICSA	Interference Check Sample (Solution A)
ICSAB	Interference Check Sample (Solution AB)
ICV	Initial Calibration Verification
IDL	Instrument Detection Limit
LCS	Laboratory Control Sample
LRA	Linear Range Verification Analysis
MSA	Method of Standard Additions
PDS	Post Digestion Spike
QC	Quality Control
RPD	Relative Percent Difference
RPM	Regional Project Manager
RSD	Percent Relative Standard Deviation
SA	Spike Added
SAS	Special Analytical Services
SDG	Sample Delivery Group
SOW	Statement of Work
SR	Sample Result
SSR	Spiked Sample Result
TPO	Technical Project Officer

1

INORGANIC ANALYSES DATA SHEET

2000 47 N

1
INORGANIC ANALYSES DATA SHEET

2000 47 E

Concentration Units (ug/L or mg/kg dry weight): UG/FILTER

[illegible]

Comments :

1

INORGANIC ANALYSES DATA SHEET

4691 V1 E

1

INORGANIC ANALYSES DATA SHEET

4691 V1 S

Concentration Units (ug/L or mg/kg dry weight): UG/FILTER

[illegible]

Artifacts:

Comments:

1

INORGANIC ANALYSES DATA SHEET

4691 V1 N

1

INORGANIC ANALYSES DATA SHEET

4691 V1 S

Concentration Units (ug/L or mg/kg dry weight): UG/FILTER

[illegible]

RK 12/14/68

Color After: COLORLESS Clarity After: CLEAR Artifacts:

Comments:

1

INORGANIC ANALYSES DATA SHEET

4691 V1 S

Concentration Units (ug/L or mg/kg dry weight): UG/FILTER

[illegible]

Artifacts:

Comments:

1

INORGANIC ANALYSES DATA SHEET

4711 TH E

1

INORGANIC ANALYSES DATA SHEET

4711 TH S

Concentration Units (ug/L or mg/kg dry weight): UG/FILTER

R 12/14/98

Artifacts:

Comments:

1

INORGANIC ANALYSES DATA SHEET

4940 ST S

1

INORGANIC ANALYSES DATA SHEET

EPA SAMPLE NO.

4940 ST N

Lab Name: PARAGON ANALYTICS Contract: _____

Lab Code: NA Case No.: SAS No.: SDG No.: VASQUE

Matrix (soil/water): FILTER Lab Sample ID: 9810234-17

Level (low/med): LOW Date Received: 10/23/98

% Solids:	100.0
-----------	-------

Concentration Units (ug/L or mg/kg dry weight): UG/FILTER

[illegible]

RF 12114198

Color Before: WHITE Clarity Before: N/A Texture: FINE

Color After: COLORLESS Clarity After: CLEAR Artifacts:

Comments:

1

INORGANIC ANALYSES DATA SHEET

4940 ST E

Contract: _____

Case No. : _____

SAS No. : _____

SDG No. : VASQUE

Lab Sample ID: 9810234-18

Date Received: 10/23/98

100.0

UG/FILTER

[illegible]

AF 12/14/98

Texture: FINE

Artifacts:

1

INORGANIC ANALYSES DATA SHEET

4940 ST N

Concentration Units (ug/L or mg/kg dry weight): UG/FILTER_

[illegible]

Pof 12/14/18

Comments :

1

INORGANIC ANALYSES DATA SHEET

EPA SAMPLE NO.

4940 ST E

Lab Name: PARAGON ANALYTICS Contract: _____

Lab Code: NA Case No.: SAS No.: SDG No.: VASQUE

Matrix (soil/water): FILTER Lab Sample ID: 9810234-21

Level (low/med) : LOW Date Received: 10/23/98

% Solids:	100.0
-----------	-------

Concentration Units (ug/L or mg/kg dry weight): UG/FILTER

[illegible]

Color Before: WHITE Clarity Before: N/A Texture: FINE

Color After: COLORLESS Clarity After: CLEAR Artifacts: _____

Comments:

RF 12/14/58

I METAL ANALYSIS WORKSHEET --- HOLDING TIMES

BATCH: 98-10-234

List all analytes which do not meet holding time criteria

LAB
ID

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

SAMPLE ID	Matrix	PRE-SERVED Y/N	DATE COLLECTED	METALS ANALYSIS DATE/S	Hg CVAA ANALYSIS DATE	CN ANALYSIS DATE	ANALYSIS DATE/S	NO. OF DAYS PAST HOLDING TIME	ACT
2000-47-209	6.1/10	NA	10-17-98	10-23-98				-6-	None
E02			↓						
803			↓						
4691-01-004			10-20						
E05			↓						
06			↓						
03			10-21						
08			↓						
09			↓						
10			10-22						
11			↓						
12			↓						
13			10-19						
14			↓						
15			↓						
16			10-20						
17			↓						
18			↓						
19			10-21	10-23-98					
20	✓	✓	↓	10/26	(SIC)				
21		✓	↓						

COMMENTS For As, Cd, Pb
rec'd at 17°C ✓

Actions:

1. If holding times are exceeded, all sample results are estimated (J)/(UJ).
2. If holding times are grossly exceeded ($\geq 2 \times$ holding time), detected results are estimated (J), and non-detected results are rejected (R).

Validated By:

Date:

B. J. E. 12-14-98

Reviewed By:

Date:

Amy Ballou 12-17-98

ANALYTE	HOLDING TIME	PRESERVATIVE	
		AQUEOUS	SOIL
Metals	180 days	pH < 2 w/HNO ₃ , 4 Deg. C	4 Deg. C
Mercury	28 days	pH < 2 w/HNO ₃ , 4 Deg. C	4 Deg. C
Cyanide	14 days	pH > 12 w/NaOH, 4 Deg. C	4 Deg. C

Holding Time = Analysis Date - Collection Date

List all ICP analytes that did not meet the percent recovery criteria for initial calibration verification (ICV) and continuing calibration verification (CCV).

BATCH: 98-10-224

[illegible]

Actions:

ICV/CCV Actions:

	PERCENT RECOVERY				
	<75%	75-89%	90-110%	111-125%	>125%
Detected results	R	J	V	J	F
Non-detected Results	R	UJ	V	V	V

1. If the instrument was not calibrated daily and each time the instrument was set up, qualify the data as rejected (R).

BATCH:

List all AA analytes that did not meet the percent recovery criteria for initial calibration verification (ICV) and continuing calibration verification (CCV).

[illegible]

Action 5

ICV/CCV Actions:

	PERCENT RECOVERY				
	<75%	75-89%	90-110%	111-125%	>125%
Detected results	R	J	V	J	R
Non-detected Results	R	UJ	V	V	V

1. If three standards and a blank were not used for initial calibration, or the instrument was not calibrated daily and each time the instrument was set up, quality data are rejected (R).
2. If the initial calibration correlation coefficient was less than 0.995, quality sample results are estimated (J_1/UJ).

IIC METAL ANALYSIS WORKSHEET -- Hg CALIBRATIONS

BATCH:

List all mercury results that did not meet the percent recovery criteria for the ICV and/or CCV standards.

[illegible]

1. Were the correct number of standards and blanks used to calibrate the instrument? Yes No

2. Is the initial calibration correlation coefficient > 0.995 ?	Yes	No
---	-----	----

If no, list affected samples:

3. Was a CRDL check sample (CRA) analyzed at the beginning of each sample run? Yes No

COMMENTS

Actions

PERCENT RECOVERY

	<65%	65-79%	80-120%	121-135%	>135%
Detected results	R	J	V	J	R
Non-detected results	R	UU	V	V	V

1. If four standards and a blank were not used for initial calibration, or the instrument was not calibrated daily and each time the instrument was set up, qualify the data as rejected (R).
2. If the initial calibration correlation coefficient was less than 0.995, qualify sample results as estimated (J)/(UJ).

IID METAL ANALYSIS WORKSHEET -- CN CALIBRATIONS

BATCH:

List all cyanide results that did not meet the percent recovery criteria for the KCV and/or CCV standards.

[illegible]

1. Were the correct number of standards and blanks used to calibrate the instrument? Yes No

2. Is the initial calibration correlation coefficient > 0.995 ?	Yes	No
---	-----	----

If no, list affected samples:

3. Was a mid-range calibration standard and an ICV distilled? Yes ☒ No ☐

If no, list affected samples:

~~COMMENTS~~

Actions:

		PERCENT RECOVERY				
		<70%	70-84%	85-115%	116-130%	>130%
Detected results	R	J	V	J	R	
Non-detected results	R	U	V	V	V	

1. If three standards and a blank were not used for initial calibration, or the instrument was not calibrated daily and each time the instrument was set up, qualify the data as rejected (R).
2. If the initial calibration correlation coefficient was less than 0.995, qualify samples results as estimated (J)/(UJ).
3. If a mid-range standard (or ICV) was not distilled, qualify sample results as estimated (J)/(UJ).

III METAL ANALYSIS WORKSHEET -- BLANKS

MATRIX:

u912

BATCH:

Use the highest positive AND negative blank result $\geq |IDL|$ below. Use one worksheet for soil matrix and another for water matrix.

[illegible]

Actions:

1. If $|\text{Blank}| < \text{IDL}$, no action is taken.
2. If $\text{Blank} \geq \text{IDL}$, then all sample results $\geq \text{IDL}$ and $< 5 * \text{Blank}$ are non-detected (U).
3. If $\text{Blank} = -\text{IDL}$, all sample results $\geq \text{IDL}$ and $< 5 * |\text{Blank}|$ are estimated (J).
4. If $\text{Blank} = -\text{IDL}$ and raw data sample result is $\leq \text{IDL}$ then non-detected results are estimated (UU).

(1252) 10/2, PB-OK
as 10/2

(only 21 is w)

(10/20 P13)
analysis

IVA METAL ANALYSIS WORKSHEET -- ICP INTERFERENCE CHECK SAMPLE

BATCH: _____

NOTE: The sample results can be accepted without qualification, if the sample concentrations of Al, Ca, Fe, and Mg are less than or equal to the concentration found in the ICSA solution.

Examine the sample results in ug/l and list any Al, Ca, Fe, or Mg results that are greater than the ICSA values.

SAMPLE ID	ANALYTE	SAMPLE RESULT	ICS VALUE	COMMENTS

List any analytes in the ICS AB solution that did not meet the criteria of 80-120% R.

ANALYTE	% R	ACTION	SAMPLES AFFECTED

Were Interference Check Samples run at the beginning and end of each sample analysis run, or a minimum of twice per 8-hour shift (whichever is more frequent)? Yes No

COMMENTS

Actions:

	PERCENT RECOVERY			
	<50%	50-79%	80-125%	>120%
Detected results	R	J	V	J
Non-detected results	R	UJ	V	V

BATCH:

[illegible]

1. Estimate (J) detected results $\leq 5 * |CSA|$.
2. Estimate (W) non-detected results.

V METAL ANALYSIS WORKSHEET -- PRE-DIGESTION MATRIX SPIKE

MATRIX:

filter

BATCH:

List all parameters that do not meet the percent recovery criteria. Note: The pre-digestion spike recovery criteria are not evaluated for Ca, Mg, K, Na, Al, and Fe for soil samples, and Ca, Mg, K, and Na for water samples. If the sample result exceeds the spike added by a factor of 4 or more, no action is taken.

[illegible]

1. If any analyte does not meet the % R criteria, qualify all associated samples using the following criteria:
Actions:

	Percent Recovery			
	<30%	30-74%	75-125%	>125%
Detected results	J	J	V	J
Non-detected results	R	UJ	V	V

VI METAL ANALYSIS WORKSHEET -- LABORATORY DUPLICATES

MATRIX:

Filters

BATCH:

List all parameters that do not meet % difference or CRDL criteria.

[illegible]

Actions:

1. AQUEOUS

If sample value $> 5 \times \text{CRDL}$, estimate (J) all sample results of the same matrix if the RPD is $> 20\%$.

If sample value $< 5 \cdot \text{CRDL}$, and the difference between the duplicate and the original is $> \text{CRDL}$, estimate $(J)/(UJ)$ all sample results of the same matrix.

2. SOLID

If sample value $> 5 \times \text{CRDL}$, estimate (J) all sample results of the same matrix if the RPD is $> 35\%$.

If sample value $< 5 \cdot \text{CRDL}$, and the difference between the duplicate and the original is $> 2 \cdot \text{CRDL}$, estimate (J)/(U) all sample results of the same matrix.

- **Difference = |Sample result – Duplicate sample result|**

VII METAL ANALYSIS WORKSHEET--LABORATORY CONTROL SAMPLES

MATRIX: Sol. 2

BATCH: _____

List all parameters that do not meet the percent recovery criteria.

[illegible]

Actions:

Exception: antimony and silver have no control limits. An aqueous LCS is not required for CN and mercury.

PERCENT RECOVERY

	<50%	50-75%	80-120%	>120%
Detected results	R	J	V	J
Non-detected results	R	U	V	V

2. SOLID LCS

	BELOW CONTROL LIMITS	WITHIN CONTROL LIMITS	ABOVE CONTROL LIMITS
Detected results	J	V	J
Non-detected results	UB	V	V

BATCH: _____

[illegible]

Actions:	PERCENT RECOVERY			
	<10%	10-84%	85-115%	>115%
Detected results	J	J	V	J
Non-detected results	R	UJ	V	V

*Spike result = |spiked sample result - sample result|

BATCH:

List all samples for which an MSA analysis was required but not performed, or MSA results were outside control limits.

[illegible]

1. Estimate (J) if an MSA was required and not performed.
2. If the correlation coefficient was < 0.995 , the MSA should be performed a second time. Estimate (J) all sample results if a reanalysis was not performed, or the reanalysis correlation coefficient was < 0.995 , or result from the highest correlation coefficient was not reported.

[illegible]

Actions

1. Estimate (J) detected results greater than the CRDL if duplicate injections are out to 20% RSD.
2. Estimate (J) all sample results if duplicate injections were not performed.

IX METAL ANALYSIS WORKSHEET -- ICP SERIAL DILUTION ANALYSIS

MATRIX: F-1 ter

BATCH: _____

Serial dilution criteria only applies if the original sample result is at least 50*DL and %D >10%.

[illegible]

INDUCTIVELY COUPLED PLASMA SERIAL DILUTION ANALYSIS:

Serial dilutions were performed for each matrix and results of the diluted sample analysis agreed within ten percent of the original undiluted analysis. Yes No

Serial dilutions were not performed for the following:

COMMENTS SD on Sample 1 & 21

Actions

Estimate (J) detected results if %D is $> 10\%$.

X METAL ANALYSIS WORKSHEET -- SAMPLE RESULT VERIFICATION

BATCH: _____

1. Describe any raw data anomalies (i.e. baseline shifts, negative absorbances, transcription or calculation errors, legibility, etc.)

2. List results that fall outside the linear range of the ICP instrument or the calibrated range of the AA or Cyanide instrument, and were not reanalyzed.

3. Were ICP linear ranges obtained within 3 months of, and preceding, the sample analyses? - Yes ☒ No ☐ NA *4.1 - 3 months*4. Were ICP interelement corrections obtained within 12 months of, and preceding, the sample analyses? Yes ☐ No ☒ NA*just over 1 year*5. Were instrument detection limits present, found to be less than or equal to the CRDL, and obtained within 3 months of, and preceding the sample analyses? ☒ Yes ☐ No ☐ NA *Notation 3 months 2/1/96 10/23**IDL = CRDL*6. Were all sample results reported down to the IDL? ☒ Yes ☐ No *IDL = CRDL 1*7. Were sample weights, volumes, percent solids, and dilutions used correctly when reporting the results? Yes ☐ No ☐

COMMENTS

New Form 10 Found in other SOG 98-10-306

Lab was requested to re-submit Form 15 w/ results reported to the IDL. However, the Form 3s for 4 blanks were only reported to CRDL. (Used raw data) 11/10 & New Form 10 was not provided we was found in SOG 98-10-306.

*As. IDL = 3.0 ug/L**3.0 ug/L x $\frac{0.1 L}{1 \text{ filter}}$ = 0.3 ug/filter*

10

Instrument Detection Limits (Quarterly)

Instrument Detection Limits (Quarterly)

Furnace AA ID Number : _____

Copied from SDG 98-10-306 of 12/14/98

000032

10

Instrument Detection Limits (Quarterly)

Contract: _____

SDG No. : VASQUE

Date: 02/01/98

Flame AA ID Number : _____

Furnace AA ID Number : _____

[illegible]

Comments:

11A

ICP INTERELEMENT CORRECTION FACTORS (ANNUALLY)

ICP ID Number: TJA 61E Date: 10/01/97

[illegible]

Comments:

11B
ICP INTERELEMENT CORRECTION FACTORS (ANNUALLY)

ICP ID Number: TJA 61E_____ Date: 10/01/97

Comments:

12
ICP LINEAR RANGES (QUARTERLY)

ICP ID Number: TJA 61E Date: 02/01/98

[illegible]

Comments:

U.S. EPA - CLP

13
PREPARATION LOG

Lab Name: PARAGON_ANALYTICS_____

Contract: _____

Lab Code: NA_____

Case No.: _____

SAS No.: _____

SDG No.: VASQUE

Method: P_

EPA Sample No.	Preparation Date	Weight (gram)	Volume (mL)
2000 47	10/23/98	1.00	100
2000 47	10/23/98	1.00	100
2000 47	10/23/98	1.00	100
4691 V1	10/23/98	1.00	100
4691 V1	10/23/98	1.00	100
4691 V1	10/23/98	1.00	100
4691 V1	10/23/98	1.00	100
4691 V1	10/23/98	1.00	100
4691 V1	10/23/98	1.00	100
4691 V1	10/23/98	1.00	100
4691 V1	10/23/98	1.00	100
4691 V1	10/23/98	1.00	100
4691 V1	10/23/98	1.00	100
4711 TH	10/23/98	1.00	100
4711 TH	10/23/98	1.00	100
4711 TH	10/23/98	1.00	100
4940 ST	10/23/98	1.00	100
4940 ST	10/23/98	1.00	100
4940 ST	10/23/98	1.00	100
4940 ST	10/23/98	1.00	100
4940 ST	10/23/98	1.00	100
4940 ST	10/23/98	1.00	100
LCSS	10/23/98	1.00	100
LCSS	10/23/98	1.00	100
LCSSD	10/23/98	1.00	100
LCSSD	10/23/98	1.00	100
PBS	10/23/98	1.00	100
PBS	10/23/98	1.00	100

14
ANALYSIS RUN LOG

End Date: 10/23/98

FORM XIV - IN

000063

14
ANALYSIS RUN LOG

End Date: 10/23/98

FORM XIV - IN

000064

14
ANALYSIS RUN LOG

Contract:

SAS No. : SDG No. : VASQUE

Method: P

End Date: 10/23/98

FORM XIV - IN

000065

U.S. EPA - CLP

14
ANALYSIS RUN LOG

Lab Name: PARAGON_ANALYTICS_____

Contract: _____

Lab Code: NA_____ Case No.: _____

SAS No.: _____ SDG No.: VASQUE


Instrument ID Number: TJA 61E_____

Method: P_

Start Date: 10/26/98

End Date: 10/26/98

EPA Sample No.	D/F	Time	% R	Analytes																									
				A S	C D	P B																							
MIX	1.00	1150		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
MIX	1.00	1152		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ICV	1.00	1155		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ICB	1.00	1201		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1204					-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ICSA	1.00	1206		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ICSAB	1.00	1209		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
CCV	1.00	1212		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
CCB	1.00	1217		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
PBS	1.00	1220		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
LCSS	1.00	1223		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
LCSSD	1.00	1225		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
4940 ST	1.00	1230		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
4940 ST	5.00	1233		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
4940 ST	1.00	1235		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	10.00	1239		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	50.00	1242		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	50.00	1246		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	10.00	1249		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
CCV	1.00	1252		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
CCB	1.00	1256		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	10.00	1258		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1301		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	5.00	1304		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1306		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	10.00	1311		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	10.00	1322		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	500.00	1325		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1329		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1334		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
ZZZZZZ	1.00	1336		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
CCV	1.00	1339		X	X	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		

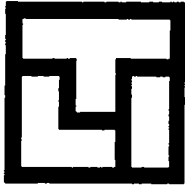

300 UNION BOULEVARD, SUITE 600, LAKEWOOD, CO 80228

TECHLAW INC.

PHONE: (303) 763-7188

FAX: (303) 763-4896

December 21, 1998

Ms. Lori Raschke
URS Operating Services, Inc.
1099 18th Street, Suite 710
Denver, CO 80202

**RE: Transmittal of Data Validation Report
Vasquez and I-70
TDD No. 75-80914
Report No. 302244**

Dear Ms. Raschke:

Please find the enclosed data validation report for TDD No. 75-80914 for the Vasquez and I-70 project. This report is for the validation of five filter samples for metals (arsenic, cadmium, and lead) analyses by SW-846 methods.

If you have any questions regarding the enclosed report, please contact me at (303) 763-7188.

Yours sincerely,
TECHLAW, INC.

Lisa Burnley
Associate Consultant

enclosure
IF: 0252-176



**REGION VIII
SUMMARY OF DATA QUALITY ASSURANCE REVIEW
INORGANIC**

TDD No.	Site Name		Operable Unit
75-80914	Vasquez & I-70		
RPM/OSC Name			
Pete Stevenson			
Contractor Laboratory	Contract No.	Report No.	Laboratory DPO/Region
Quanterra, Inc.	OS-98-P-5436	302244	

Review Assigned Date December 2, 1998Data Validator Bill FearReview Completion Date December 21, 1998Report Reviewer Amy Ballow

Sample ID	Laboratory ID	Matrix	Analysis
ND-FC-01	302244-0001	Filter	Metals (Arsenic, Cadmium, and Lead) by SW-846 Method 6010B
ND-FC-02	302244-0002		
ND-FC-03	302244-0003		
ND-FC-04	302244-0004		
ND-FC-05	302244-0012		

DATA QUALITY STATEMENT

- (X) Data are ACCEPTABLE according to EPA Functional guidelines with no qualifiers (flags) added by the reviewer.
- () Data are UNACCEPTABLE according to EPA Functional Guidelines.
- () Data are acceptable with QUALIFICATIONS noted in review.

Telephone/Communication Logs Enclosed? Yes _____ No X

TPO Attention Required? Yes _____ No X If yes, list the items that require attention:

INORGANIC DATA QUALITY ASSURANCE REVIEW

REVIEW NARRATIVE SUMMARY

This data package was reviewed according to "USEPA Contract Laboratory Program National Functional Guidelines for Inorganic Data Review," February 1994, modified for the method used. Qualification taken on sample results based on the Functional Guidelines that differ from method requirement are identified within the report.

The data package TDD No.75-80914, Report No. 302244, consisted of 5 filter samples for arsenic, cadmium, and lead analyses by SW-846 Method 6010B.

The following table lists the data qualifiers added to the sample analyses. Please see Data Qualifier Definitions, attached to the end of this report.

Sample ID	Elements	Qualifiers	Reason for Qualification	Review Section
None	None	None	None	None

Method/SOW Number SW-846, Method 6010

Revision B

Inorganic Deliverables Completeness Checklist

<u>P</u>	Inorganic Cover Page		
<u>P</u>	Inorganic Analysis Data Sheets		
<u>P</u>	Initial Calibration and Calibration Verification Results		
<u>P</u>	Continuing Calibration Verification Results		
<u>NA</u>	CRDL Standard for ICP and AA		
<u>P</u>	Blank Analysis Results		
<u>P</u>	ICP Interference Check Sample Results		
<u>NP</u>	Spiked Sample Results		
<u>NA</u>	Post-digest spiked Sample Analysis		
<u>P</u>	Duplicate Sample Results		
<u>NP</u>	Instrument Detection Limits		
<u>P</u>	Laboratory Control Sample results		
<u>NA</u>	Standard Addition Results		
<u>NA</u>	ICP Serial Dilution Results		
<u>NA</u>	Holding Times Summary Sheet		
<u>NP</u>	ICP Interelement Correction Factors		
<u>NP</u>	ICP Linear Ranges		
<u>P</u>	Raw Data		
<u>P</u>	Samples	<u>P</u>	Calibration Standards
<u>P</u>	Duplicates	<u>P</u>	ICP QC (ICS and Serial Dilution)
<u>NA</u>	Furnace AA	<u>NA</u>	Mercury Analysis
		<u>P</u>	Blanks
		<u>NP</u>	Spikes
		<u>P</u>	LCS
		<u>NA</u>	Cyanide Analysis
<u>NA</u>	Percent Solids Calculations - Solids Only		
<u>P</u>	Sample Prep/Digestion Logs		
<u>P</u>	Analysis Run Log		
<u>P</u>	Chain-of-Custody		
<u>P</u>	Sample Description		
<u>P</u>	Case Narrative		
<u>P</u>	Method References		

KEY:

P = Provided in original data package, as required by the SOW
 R = Provided as Resubmission
 NP = Not provided in original data package or as resubmission
 NR = Not required under the SOW
 NA = Not applicable to this data package or analysis

I. DELIVERABLES

All deliverables were present.

Yes___ No X

Comments: The summary forms provided for the calibrations, blanks, and interference check samples did not correspond to the raw data. Therefore, the raw data were used to evaluate this data. Matrix spike analyses could not performed on these filter samples.

II. HOLDING TIMES AND PRESERVATION CRITERIA

All holding times and preservations criteria were met.

Yes X No___

Comments: The samples were analyzed within holding times. No shipping or receiving problems were noted.

III. INSTRUMENT CALIBRATIONS: STANDARDS AND BLANKS

Initial instrument calibrations were performed according to requirements.

Yes X No___

Comments: None.

The instruments were calibrated daily and each time an analysis run was performed.

Yes X No___

Comments: None.

The instruments were calibrated using one blank and the appropriate number of standards.

Yes X No___

Comments: None.

IV. FORM 1 - SAMPLE ANALYSIS RESULTS

Sample analyses were entered correctly on Form Is.

Yes X No

Comments: None.

V. FORM 2A - INITIAL AND CONTINUING CALIBRATION VERIFICATION

The initial and continuing calibration verification standards (ICV and CCV, respectively) met requirements.

Yes X No

Comments: None.

The calibration verification results were within 90-110% recovery for metals, 85-115% for cyanide, and 80-120% for mercury.

Yes X No

Comments: None.

The continuing calibration standards were run at 10% frequency.

Yes X No

Comments: None.

VI. FORM 2B - CRDL STANDARD FOR ICP AND AA

ICP Analysis: Standards (CRI) at two times the CRDL or the IDL (whichever were greater) were analyzed at the beginning and the end of each sample run, or at a minimum of twice per eight hours, whichever was more frequent.

Yes No NA X

Comments: A CRDL standard was not required for method 6010.

GFAA Analysis: Standards (CRA) at two times CRDL were analyzed at the beginning of each sample run.

Yes___ No___ NA_X

Comments: None.

The CRI and/or the CRA were analyzed after the ICV.

Yes___ No___ NA_X

Comments: A CRI was analyzed but the data were not summarized as this analysis was not required for this method.

VII. FORM 3 - BLANKS

The initial and continuing calibration blanks (ICB and CCB, respectively) met requirements.

Yes_X No___

Comments: None.

The continuing calibration blanks were run at 10% frequency.

Yes_X No___

Comments: Continuing calibration blanks were run every 10 samples.

A laboratory/preparation blank was run at the frequency of one per twenty samples, or per sample delivery group (whichever is more frequent), and for each matrix analyzed.

Yes_X No___

Comments: None.

All analyzed blanks were free of contamination.

Yes_X No___

Comments: None.

VIII. FORM 4 - ICP INTERFERENCE CHECK SAMPLE

The ICP interference check sample (ICS) was run twice per eight hour shift and/or at the beginning and end of each sample set analysis sequence (whichever is more frequent).

Yes X No

Comments: None.

Percent recovery of the analytes in solution ICSAB were within the range of 80-120%.

Yes X No

Comments: Arsenic, cadmium, and lead recoveries from the ICSAB solution were within QC criteria. No action was required for the ICSA analysis

IX. FORM 5A - MATRIX SPIKE SAMPLE ANALYSIS

A matrix spike sample was analyzed with every twenty or fewer samples of a similar matrix, or one per sample delivery group (whichever is more frequent).

Yes No X

Comments: Matrix spike analyses were not performed. Apparently, because these samples are filters and only one filter for each sample was provided, the laboratory could not perform matrix spike analyses. The laboratory analyzed two laboratory control samples to evaluate the data for accuracy.

The percent recoveries (%R) were calculated correctly.

$$\% \text{ Recovery} = \frac{(SSR - SR)}{SA} \times 100$$

SSR = spiked sample result

SR = sample result

SA = spike added

Yes No NA X

Comments: None.

Spike recoveries were within the range of 75-125% (an exception is granted where the sample concentration is four times the spike concentration).

Yes No NA X

Comments: Matrix spike analyses could not be performed due to insufficient sample amounts.

X. FORM 5B - POST DIGEST SPIKE RECOVERY

A post-digest spike was performed for those elements that did not meet the specified criteria (i.e., Pre-digestion/pre-distillation spike recovery falls outside of control limits and sample result is less than four times the spike amount added, exception: Ag, Hg).

Yes____ No____ NA X

Comments: Post digestion spikes were not performed.

XI. FORM 6 - DUPLICATE SAMPLE ANALYSIS

Duplicate sample analysis was performed with every twenty or fewer samples of a similar matrix, or one per sample delivery group (whichever is more frequent).

Yes____ No X

Comments: Duplicate data were performed using a laboratory control sample duplicate due to insufficient sample size. (One filter per sample.)

The RPDs were calculated correctly.

$$RPD = \frac{(S - D)}{(S + D)/2} \times 100$$

S = sample
D = duplicate

Yes X No____

Comments: None.

For sample concentrations greater than five times the CRDL, RPDs were within $\pm 20\%$ (limits of $\pm 35\%$ apply for soil/sediments/tailings samples).

Yes X No____

Comments: None.

For sample concentrations less than five times the CRDL, duplicate analysis results were within the control window of \pm CRDL (two times CRDL for soils).

Yes X No____

Comments: None.

XII. GFAA QC

Duplicate injections were performed on all GFAA samples and the RSD was within $\pm 20\%$.

Yes___ No___ NA X

Comments: None.

Analytical spikes were performed on all GFAA samples and the percent recovery was 85 - 115%.

Yes___ No___ NA X

Comments: None.

MSAs were analyzed when required and the correlation coefficient was > 0.995 .

Yes___ No___ NA X

Comments: None.

XIII. FORM 7 - LABORATORY CONTROL SAMPLE

The laboratory control sample (LCS) was prepared and analyzed with every twenty or fewer samples of a similar matrix, or one per sample delivery group (whichever is more frequent).

Yes X No___

Comments: None.

All results were within control limits.

Yes X No___

Comments: None.

XIV. FORM 8 - STANDARD ADDITION RESULTS

Results from graphite furnace standard additions were entered on Form VIII.

Yes___ No___ NA X

Comments: None.

XV. FORM 9 - ICP QC

A serial dilution was performed for ICP analysis with every twenty or fewer samples of a similar matrix, or one per sample delivery group, whichever is more frequent.

Yes X No

Comments: A serial dilution was performed, however, the serial dilution data were not reported or required as cadmium, lead, and arsenic were reported as non-detected in the original sample analyses.

The serial dilution was without interference problems.

Yes X No

Comments: None.

XVI. FORM 10 - QUARTERLY INSTRUMENT DETECTION LIMITS (IDL)

IDLs were provided for all elements on the target analyte list.

Yes No X

Comments: Only the reporting limits were provided. IDLs and CRDLs were not provided for these 6010 analyses.

Reported IDLs met requirements.

Yes X No

Comments: Required IDLs were not provided for validation.

XVII. FORM 11 - INTERELEMENT CORRECTION FACTORS FOR ICP

Interelement corrections for ICP were reported.

Yes No X

Comments: The interelement corrections provided were not provided. Interference was evaluated using the interference check samples.

XVIII. FORM 12 - ICP LINEAR RANGES

ICP linear ranges were reported.

Yes___ No___ NA_ X _

Comments: The instrument linear ranges were not provided or required as all samples results were below the reporting limits.

XIX. LINEAR RANGE VERIFICATION ANALYSIS

Linear Range Verification Analysis (LRA) was performed and results were within control limits of $\pm 5\%$ of the true value.

Yes___ No___ NA_ X _

Comments: None.

XX. FORM 13 - PREPARATION LOG

Information on the preparation of samples for analysis was reported on Form XIII.

Yes_ X _ No___

Comments: A digestion log was provided.

XXI. FORM 14 - ANALYSIS RUN LOG

A Form XIV with the required information was filled out for each analysis run in the data package.

Yes_ X _ No___

Comments: Instrument run logs were provided.

XXII. Additional Comments or Problems/Resolutions Not Addressed Above

Yes_ X _ No___

Comments: Only the results for arsenic, cadmium and lead were reported on the Form 1s for these filter metal analyses.

INORGANIC DATA QUALITY ASSURANCE REVIEW**Region VIII****DATA QUALIFIER DEFINITIONS**

For the purpose of Data Validation, the following code letters and associated definitions are provided for use by the data validator to summarize the data quality. Use of additional qualifiers should be carefully considered. Definitions for all qualifiers used should be provided with each report.

GENERAL QUALIFIERS for use with both INORGANIC and ORGANIC DATA

- R - Reported value is "rejected." Resampling or reanalysis may be necessary to verify the presence or absence of the compound.
- J - The associated numerical value is an estimated quantity because the Quality Control criteria were not met.
- U J - The reported amount is estimated because Quality Control criteria were not met. Element or compound was not detected.
- N J - The analysis indicates the presence of an analyte that has been "tentatively identified" and the associated numerical value represents its approximate concentration.
- N - The analysis indicates the presence of an analyte for which there is presumptive evidence to make a tentative identification.
- U - The material was analyzed for, but was not detected above the level of the associated value. The associated value is either the sample quantitation limit or the sample detection limit.

ACRONYMS

AA	Atomic Absorption
Ag	Silver
CCB	Continuing Calibration Blank
CCV	Continuing Calibration Verification
CFR	Code of Federal Regulations
CLP	Contract Laboratory Program
CRA	CRDL standard required for AA
CRDL	Contract Required Detection Limit
CRI	CRDL standard required for ICP
CV	Cold Vapor
EPA	U.S. Environmental Protection Agency
GFAA	Graphite Furnace Atomic Absorption
Hg	Mercury
ICB	Initial Calibration Blank
ICP	Inductively Coupled Plasma
ICS	Interference Check Sample
ICSA	Interference Check Sample (Solution A)
ICSAB	Interference Check Sample (Solution AB)
ICV	Initial Calibration Verification
IDL	Instrument Detection Limit
LCS	Laboratory Control Sample
LRA	Linear Range Verification Analysis
MSA	Method of Standard Additions
PDS	Post Digestion Spike
QC	Quality Control
RPD	Relative Percent Difference
RPM	Regional Project Manager
RSD	Percent Relative Standard Deviation
SA	Spike Added
SAS	Special Analytical Services
SDG	Sample Delivery Group
SOW	Statement of Work
SR	Sample Result
SSR	Spiked Sample Result
TPO	Technical Project Officer

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: ND-FC-01

Lab ID: 302244-0001-SA

Matrix: FILTER

Authorized: 22 OCT 98

Sampled: 15 OCT 98

Prepared: See Below

Received: 22 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	22 OCT 98	22 OCT 98
Cadmium	ND	total ug	0.20	6010B	22 OCT 98	22 OCT 98
Lead	ND	total ug	2.0	6010B	22 OCT 98	22 OCT 98

ND = Not detected
NA = Not applicable

RF 12/21/98

Reported By: Wennilyn Fua

Approved By: Mei Lai

The cover letter is an integral part of this report.
Rev 230787

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: ND-FC-02

Lab ID: 302244-0002-SA

Matrix: FILTER

Authorized: 22 OCT 98

Sampled: 15 OCT 98

Prepared: See Below

Received: 22 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	22 OCT 98	22 OCT 98
Cadmium	ND	total ug	0.20	6010B	22 OCT 98	22 OCT 98
Lead	ND	total ug	2.0	6010B	22 OCT 98	22 OCT 98

ND = Not detected
NA = Not applicable

RF 12/21/98

Reported By: Wennilyn Fua

Approved By: Mei Lai

The cover letter is an integral part of this report.
Rev 230787

007 7

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: ND-FC-03

Lab ID: 302244-0003-SA

Matrix: FILTER

Authorized: 22 OCT 98

Sampled: 15 OCT 98

Prepared: See Below

Received: 22 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	22 OCT 98	22 OCT 98
Cadmium	ND	total ug	0.20	6010B	22 OCT 98	22 OCT 98
Lead	ND	total ug	2.0	6010B	22 OCT 98	22 OCT 98

ND = Not detected
NA = Not applicable

Reported By: Wennilyn Fua

Approved By: Mei Lai

The cover letter is an integral part of this report.

Rev 230787

R 12/21/98

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: ND-FC-04

Lab ID: 302244-0004-SA

Matrix: FILTER

Authorized: 22 OCT 98

Sampled: 16 OCT 98

Prepared: See Below

Received: 22 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	22 OCT 98	22 OCT 98
Cadmium	ND	total ug	0.20	6010B	22 OCT 98	22 OCT 98
Lead	ND	total ug	2.0	6010B	22 OCT 98	22 OCT 98

ND = Not detected
NA = Not applicable

Reported By: Wennilyn Fua

Approved By: Mei Lai

The cover letter is an integral part of this report.

Rev 230787

R 12/21/98

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: ND-FC-05

Lab ID: 302244-0005-SA

Matrix: FILTER

Authorized: 22 OCT 98

Sampled: 16 OCT 98

Prepared: See Below

Received: 22 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	22 OCT 98	22 OCT 98
Cadmium	ND	total ug	0.20	6010B	22 OCT 98	22 OCT 98
Lead	ND	total ug	2.0	6010B	22 OCT 98	22 OCT 98

ND = Not detected
NA = Not applicable

Reported By: Wennilyn Fua

Approved By: Mei Lai

The cover letter is an integral part of this report.
Rev 230787

AF 12/21/98

VERSIO
SEPT.

BATCH:

302244

of 12/1/19

[illegible]

Actions:

1. If holding times are exceeded, all sample results are estimated (J)/(UJ).
2. If holding times are grossly exceeded ($\geq 2 \times$ holding time), detected results are estimated (J), and non-detected results are rejected (R).

Validated By:

Date:

B'NF—

12/19/94

Reviewed By:

Date:

by: Amy Ballou

12-21-98

ANALYTE	HOLDING TIME	PRESERVATIVE	
		AQUEOUS	SOIL
Metals	180 days	pH < 2 w/HNO ₃ 4 Dec C	4 Dec C
Mercury	28 days	pH < 2 w/HNO ₃ 4 Dec C	4 Dec C
Cyanide	14 days	pH > 12 w/NaOH 4 Dec C	4 Dec C

$$\text{Holding Time} = \text{Analysis Date} - \text{Collection Date}$$

BATCH: 302244

[illegible]

ICV/CCV Actions:

1. If the instrument was not calibrated daily and each time the instrument was set up, qualify the data as rejected (R).

III METAL ANALYSIS WORKSHEET -- BLANKS

MATRIX: Solr 2 / F. 1 A-

BATCH: 302244

Use the highest positive AND negative blank result $\geq |IDL|$ below. Use one worksheet for soil matrix and another for water matrix.

[illegible]

NOTE: Verify that the absolute value of any analyte concentration in the PB or MB is < CRDL

COMMENTS	Forms incorrect det.
----------	----------------------

Actions:

1. If $|Blank| < IDL$, no action is taken.
2. If $Blank \geq IDL$, then all sample results $\geq IDL$ and $< 5 * Blank$ are non-detected (U).
3. If $Blank \leq -IDL$, all sample results $\geq IDL$ and $< 5 * |Blank|$ are estimated (J).
4. If $Blank \leq -IDL$ and raw data sample result is $\leq IDL$ then non-detected results are estimated (UJ).

Raw Data / IRLS as back calculated using
us / Filter RLs

AS 0.1

 $\alpha = 0.005$

Pb. 0.05

BATCH: 302244

Examine the sample results in ug/l and list any Al, Ca, Fe, or Mg results that are greater than the ICSC values.

[illegible][illegible]

COMMENTS

PERCENT RECOVERY			
<50%	50-79%	80-123%	>120%
R	J	V	J
R	UJ	V	V

used Row for $\pm CSB$
true 1.0

BATCH: _____

[illegible]

1. Estimate (J) detected results $\leq 5 * |CSA|$.
2. Estimate (W) non-detected results.

MATRIX:

Feb 14, 1953

BATCH:

102244

[illegible]

COMMENTS

✓ Filters	NO	ms/msd	105	analyzed	LCS/LCSD
-----------	----	--------	-----	----------	----------

	Percent Recovery			
	<30%	30-74%	75-125%	>125%
Detected results	J	J	V	J
Non-detected results	R	UJ	V	V

MATRIX:

BATCH: B02244

[illegible]

1. AQUEOUS

If sample value $> 5 \cdot \text{CRDL}$, estimate (J) all sample results of the same matrix if the RPD is $> 20\%$.

If sample value $< 5 \cdot \text{CRDL}$, and the difference between the duplicate and the original is $> \text{CRDL}$, estimate $(J)/(U)$ all sample results of the same matrix.

2. SOLID

If sample value $> 5 \cdot \text{CRDL}$, estimate (J) all sample results of the same matrix if the RPD is $> 35\%$.

If sample value $< 5 \cdot \text{CRDL}$, and the difference between the duplicate and the original is $> 2 \cdot \text{CRDL}$, estimate $(J)/(U)$ all sample results of the same matrix.

*Difference = |Sample result – Duplicate sample result|

VII METAL ANALYSIS WORKSHEET--LABORATORY CONTROL SAMPLES

MATRIX:

F. 1 L.

BATCH: 302244

List all parameters that do not meet the percent recovery criteria.

[illegible]

Actions:

Exception: antimony and silver have no control limits. An aqueous LCS is not required for CN and mercury.

PERCENT RECOVERY

1. AQUEOUS LCS

Detected results

Non-detected results

< 50%

Q

R

53-754

ج

U.

30-120%

V

V

> 120%

J

Y

2. SOLID LCS

De:acted results

Non-detected results

BELOW
CONTROL LIMITS

;

۱۶

WITHIN
CONTROL LIMITS

۷

V

ABOVE
CONTROL LIMITS

1

v

VIIIA METAL ANALYSIS WORKSHEET -- ANALYTICAL SPIKE ANALYSIS

BATCH:

List all samples whose analytical spike recovery did not meet the 85–115 % recovery criteria.

[illegible]

If the sample result is <50% of the spike result, or the sample result is >50% of the spike result* and the percent recovery is <40% or between 65–115%, the following apply:

Actions:	PERCENT RECOVERY			
	<10%	10-84%	85-115%	>115%
Detected results	J	J	V	J
Non-detected results	R	UJ	V	V

*Spike result = |spiked sample result - sample result|

BATCH: _____

List all samples for which an MSA analysis was required but not performed, or MSA results were outside control limits.

[illegible]

1. Estimate (J) if an MSA was required and not performed.
2. If the correlation coefficient was < 0.995 , the MSA should be performed a second time. Estimate (J) all sample results. If a reanalysis was not performed, or the reanalysis correlation coefficient was < 0.995 , or result from the highest correlation coefficient was not reported.

[illegible]

1. Estimate (J) detected results greater than the CRDL if duplicate injections are outside 20% RSD.
2. Estimate (J) all sample results if duplicate injections were not performed.

MATRIX:

BATCH: 302244

[illegible]

Serial dilutions were performed for each matrix and results of the diluted sample analysis agreed within ten percent of the original undiluted analysis. Yes No A+ 4X but no hints in

Serial dilutions were not performed for the following:

Sample thus SD not required.

COMMENTS

(if no hits $\geq 50\%$)

Estimate (J) detected results if %D is $> 10\%$.

X METAL ANALYSIS WORKSHEET -- SAMPLE RESULT VERIFICATION

BATCH: 302244

1. Describe any raw data anomalies (i.e. baseline shifts, negative absorbances, transcription or calculation errors, legibility, etc.)

None

2. List results that fall outside the linear range of the ICP instrument or the calibrated range of the AA or Cyanide Instrument, and were not reanalyzed.

None

3. Were ICP linear ranges obtained within 3 months of, and preceding, the sample analyses? - Yes ☒ No ☐ NA ☐ Not provided

not provided

4. Were ICP Interlement corrections obtained within 12 months of, and preceding, the sample analyses? Yes ☒ No ☐ NA

not provided

5. Were Instrument detection limits present, found to be less than or equal to the CRDL, and obtained within 3 months of, and preceding, the sample analyses? Yes ☒ No ☐ NA only provided RL values in ug / filter

yes on pg 71

6. Were all sample results reported down to the IDL? Yes ☐ No ☒ ?7. Were sample weights, volumes, percent solids, and dilutions used correctly when reporting the results? Yes ☐ No ☒

no hits

COMMENTS

1 filter → 40 ml

Raw data in mg/L

$$\frac{\text{X mg/L} \times \text{dilution}}{\text{ug/ml} \times \text{volume}}$$

As = 0.1 mg/L
 Cd = 0.005
 Pb = 0.05 ↓

**REGION VIII
SUMMARY OF DATA QUALITY ASSURANCE REVIEW
INORGANIC**

TDD No.	Site Name		Operable Unit
75-80914	Vasquez & I-70		
RPM/OSC Name			
Pete Stevenson			
Contractor Laboratory	Contract No.	Report No.	Laboratory DPO/Region
Quanterra, Inc.	OS-98-P-5436	302114	

Review Assigned Date December 2, 1998Data Validator Bill FearReview Completion Date December 21, 1998Report Reviewer Amy Ballow

Sample ID	Laboratory ID	Matrix	Analysis
200047N-10-15	302114-0001	Filter	Metals (Arsenic, Cadmium, and Lead) by SW-846 Method 6010B
200047E-10-15	302114-0002		
200047S-10-15	302114-0003		
4711THN-10-15	302114-0004		
4711THE-10-15	302114-0005		
4711THS-10-15	302114-0006		
200047N-10-16	302114-0007		
200047E-10-16	302114-0008		
200047S-10-16	302114-0009		
4711THN-10-16	302114-0010		
4711THE-10-16	302114-0011		
4711THS-10-16	302114-0012		

DATA QUALITY STATEMENT

- (X) Data are ACCEPTABLE according to EPA Functional guidelines with no qualifiers (flags) added by the reviewer.
- () Data are UNACCEPTABLE according to EPA Functional Guidelines.
- () Data are acceptable with QUALIFICATIONS noted in review.

Telephone/Communication Logs Enclosed? Yes _____ No X

TPO Attention Required? Yes _____ No X If yes, list the items that require attention:

INORGANIC DATA QUALITY ASSURANCE REVIEW**REVIEW NARRATIVE SUMMARY**

This data package was reviewed according to "USEPA Contract Laboratory Program National Functional Guidelines for Inorganic Data Review," February 1994, modified for the method used. Qualification taken on sample results based on the Functional Guidelines that differ from method requirement are identified within the report.

The data package TDD No.75-80914, Report No. 302114, consisted of 12 filter samples for arsenic, cadmium, and lead analyses by SW-846 Method 6010B.

The following table lists the data qualifiers added to the sample analyses. Please see Data Qualifier Definitions, attached to the end of this report.

Sample ID	Elements	Qualifiers	Reason for Qualification	Review Section
None	None	None	None	None

Method/SOW Number SW-846. Method 6010Revision 0.0**Inorganic Deliverables Completeness Checklist**

<u>P</u>	Inorganic Cover Page		
<u>P</u>	Inorganic Analysis Data Sheets		
<u>P</u>	Initial Calibration and Calibration Verification Results		
<u>P</u>	Continuing Calibration Verification Results		
<u>NA</u>	CRDL Standard for ICP and AA		
<u>P</u>	Blank Analysis Results		
<u>P</u>	ICP Interference Check Sample Results		
<u>NP</u>	Spiked Sample Results		
<u>NA</u>	Post-digest spiked Sample Analysis		
<u>P</u>	Duplicate Sample Results		
<u>NP</u>	Instrument Detection Limits		
<u>P</u>	Laboratory Control Sample results		
<u>NA</u>	Standard Addition Results		
<u>NA</u>	ICP Serial Dilution Results		
<u>NA</u>	Holding Times Summary Sheet		
<u>NP</u>	ICP Interelement Correction Factors		
<u>NP</u>	ICP Linear Ranges		
<u>P</u>	Raw Data		
<u>P</u>	Samples	<u>P</u>	Calibration Standards
<u>P</u>	Duplicates	<u>P</u>	ICP QC (ICS and Serial Dilution)
<u>NA</u>	Furnace AA	<u>NA</u>	Mercury Analysis
		<u>P</u>	Blanks
		<u>P</u>	LCS
		<u>NP</u>	Spikes
		<u>NA</u>	Cyanide Analysis
<u>NA</u>	Percent Solids Calculations - Solids Only		
<u>P</u>	Sample Prep/Digestion Logs		
<u>P</u>	Analysis Run Log		
<u>P</u>	Chain-of-Custody		
<u>P</u>	Sample Description		
<u>P</u>	Case Narrative		
<u>P</u>	Method References		

KEY:

P = Provided in original data package, as required by the SOW
R = Provided as Resubmission
NP = Not provided in original data package or as resubmission
NR = Not required under the SOW
NA = Not applicable to this data package or analysis

I. DELIVERABLES

All deliverables were present.

Yes____ No X

Comments: Appropriate data were provided for method 6010 analyses. However, matrix spike analyses could not be performed on these filter samples.

II. HOLDING TIMES AND PRESERVATION CRITERIA

All holding times and preservation criteria were met.

Yes X No____

Comments: The samples were analyzed within holding times. No shipping or receiving problems were noted.

III. INSTRUMENT CALIBRATIONS: STANDARDS AND BLANKS

Initial instrument calibrations were performed according to requirements.

Yes X No____

Comments: None.

The instruments were calibrated daily and each time an analysis run was performed.

Yes X No____

Comments: None.

The instruments were calibrated using one blank and the appropriate number of standards.

Yes X No____

Comments: None.

IV. FORM 1 - SAMPLE ANALYSIS RESULTS

Sample analyses were entered correctly on Form Is.

Yes X No

Comments: None.

V. FORM 2A - INITIAL AND CONTINUING CALIBRATION VERIFICATION

The initial and continuing calibration verification standards (ICV and CCV, respectively) met requirements.

Yes X No

Comments: None.

The calibration verification results were within 90-110% recovery for metals, 85-115% for cyanide, and 80-120% for mercury.

Yes X No

Comments: None.

The continuing calibration standards were run at 10% frequency.

Yes X No

Comments: None.

VI. FORM 2B - CRDL STANDARD FOR ICP AND AA

ICP Analysis: Standards (CRI) at two times the CRDL or the IDL (whichever were greater) were analyzed at the beginning and the end of each sample run, or at a minimum of twice per eight hours, whichever was more frequent.

Yes No NA X

Comments: A CRDL standard was not required for method 6010.

GFAA Analysis: Standards (CRA) at two times CRDL were analyzed at the beginning of each sample run.

Yes___ No___ NA X

Comments: None.

The CRI and/or the CRA were analyzed after the ICV.

Yes___ No___ NA X

Comments: A CRI was analyzed but the data were not summarized as this analysis was not required for this method.

VII. FORM 3 - BLANKS

The initial and continuing calibration blanks (ICB and CCB, respectively) met requirements.

Yes X No___

Comments: None.

The continuing calibration blanks were run at 10% frequency.

Yes X No___

Comments: Continuing calibration blanks were run every 10 samples.

A laboratory/preparation blank was run at the frequency of one per twenty samples, or per sample delivery group (whichever is more frequent), and for each matrix analyzed.

Yes X No___

Comments: None.

All analyzed blanks were free of contamination.

Yes X No___

Comments: None.

VIII. FORM 4 - ICP INTERFERENCE CHECK SAMPLE

The ICP interference check sample (ICS) was run twice per eight hour shift and/or at the beginning and end of each sample set analysis sequence (whichever is more frequent).

Yes X No

Comments: None.

Percent recovery of the analytes in solution ICSAB were within the range of 80-120%.

Yes X No

Comments: Arsenic, cadmium, and lead recoveries from the ICSAB solution were within QC criteria. No action was required for the ICSA analysis.

IX. FORM 5A - MATRIX SPIKE SAMPLE ANALYSIS

A matrix spike sample was analyzed with every twenty or fewer samples of a similar matrix, or one per sample delivery group (whichever is more frequent).

Yes No X

Comments: Matrix spike analyses were not performed. Apparently because these samples are filters and only one filter for each sample was provided, the laboratory could not perform matrix spike analyses. The laboratory analyzed two laboratory control samples to evaluate the data for accuracy.

The percent recoveries (%R) were calculated correctly.

$$\% \text{ Recovery} = \frac{(SSR - SR)}{SA} \times 100$$

SSR = spiked sample result

SR = sample result

SA = spike added

Yes No NA X

Comments: None.

Spike recoveries were within the range of 75-125% (an exception is granted where the sample concentration is four times the spike concentration).

Yes No NA X

Comments: Matrix spike analyses could not be performed due to insufficient sample amounts.

X. FORM 5B - POST DIGEST SPIKE RECOVERY

A post-digest spike was performed for those elements that did not meet the specified criteria (i.e., Pre-digestion/pre-distillation spike recovery falls outside of control limits and sample result is less than four times the spike amount added, exception: Ag, Hg).

Yes___ No___ NA X

Comments: Post digestion spikes were not performed.

XI. FORM 6 - DUPLICATE SAMPLE ANALYSIS

Duplicate sample analysis was performed with every twenty or fewer samples of a similar matrix, or one per sample delivery group (whichever is more frequent).

Yes___ No X

Comments: Duplicate data were performed using a laboratory control sample duplicate due to insufficient sample size. (One filter per sample.)

The RPDs were calculated correctly.

$$RPD = \frac{(S - D)}{(S + D)/2} \times 100$$

S = sample
D = duplicate

Yes X No___

Comments: None.

For sample concentrations greater than five times the CRDL, RPDs were within $\pm 20\%$ (limits of $\pm 35\%$ apply for soil/sediments/tailings samples).

Yes X No___

Comments: None.

For sample concentrations less than five times the CRDL, duplicate analysis results were within the control window of \pm CRDL (two times CRDL for soils).

Yes X No___

Comments: None.

XII. GFAA QC

Duplicate injections were performed on all GFAA samples and the RSD was within $\pm 20\%$.

Yes___ No___ NA X

Comments: None.

Analytical spikes were performed on all GFAA samples and the percent recovery was 85 - 115%.

Yes___ No___ NA X

Comments: None.

MSAs were analyzed when required and the correlation coefficient was > 0.995 .

Yes___ No___ NA X

Comments: None.

XIII. FORM 7 - LABORATORY CONTROL SAMPLE

The laboratory control sample (LCS) was prepared and analyzed with every twenty or fewer samples of a similar matrix, or one per sample delivery group (whichever is more frequent).

Yes X No___

Comments: None.

All results were within control limits.

Yes X No___

Comments: None.

XIV. FORM 8 - STANDARD ADDITION RESULTS

Results from graphite furnace standard additions were entered on Form VIII.

Yes___ No___ NA X

Comments: None.

XV. FORM 9 - ICP QC

A serial dilution was performed for ICP analysis with every twenty or fewer samples of a similar matrix, or one per sample delivery group, whichever is more frequent.

Yes X No

Comments: A serial dilution was performed, however, the serial dilution data were not reported or required as cadmium, lead, and arsenic were reported as non-detected in the original sample analyses.

The serial dilution was without interference problems.

Yes X No

Comments: None.

XVI. FORM 10 - QUARTERLY INSTRUMENT DETECTION LIMITS (IDL)

IDLs were provided for all elements on the target analyte list.

Yes No X

Comments: Only the reporting limits were provided. IDLs and CRDLs were not provided for these 6010 analyses.

Reported IDLs met requirements.

Yes X No

Comments: Required IDLs were not provided for validation.

XVII. FORM 11 - INTERELEMENT CORRECTION FACTORS FOR ICP

Interelement corrections for ICP were reported.

Yes No X

Comments: The interelement corrections were not provided. Interference was evaluated using the interference check samples.

XVIII. FORM 12 - ICP LINEAR RANGES

ICP linear ranges were reported.

Yes___ No___ NA_ X _

Comments: The instrument linear ranges were not provided or required as all samples results were below the reporting limits.

XIX. LINEAR RANGE VERIFICATION ANALYSIS

Linear Range Verification Analysis (LRA) was performed and results were within control limits of $\pm 5\%$ of the true value.

Yes___ No___ NA_ X _

Comments: None.

XX. FORM 13 - PREPARATION LOG

Information on the preparation of samples for analysis was reported on Form XIII.

Yes_ X _ No___

Comments: A digestion log was provided.

XXI. FORM 14 - ANALYSIS RUN LOG

A Form XIV with the required information was filled out for each analysis run in the data package.

Yes_ X _ No___

Comments: Instrument run logs were provided.

XXII. Additional Comments or Problems/Resolutions Not Addressed Above

Yes_ X _ No___

Comments: Only the results for arsenic, cadmium, and lead were reported on the Form 1s for these filter metal analyses.

INORGANIC DATA QUALITY ASSURANCE REVIEW**Region VIII****DATA QUALIFIER DEFINITIONS**

For the purpose of Data Validation, the following code letters and associated definitions are provided for use by the data validator to summarize the data quality. Use of additional qualifiers should be carefully considered. Definitions for all qualifiers used should be provided with each report.

GENERAL QUALIFIERS for use with both INORGANIC and ORGANIC DATA

- R - Reported value is "rejected." Resampling or reanalysis may be necessary to verify the presence or absence of the compound.
- J - The associated numerical value is an estimated quantity because the Quality Control criteria were not met.
- U J - The reported amount is estimated because Quality Control criteria were not met. Element or compound was not detected.
- N J - The analysis indicates the presence of an analyte that has been "tentatively identified" and the associated numerical value represents its approximate concentration.
- N - The analysis indicates the presence of an analyte for which there is presumptive evidence to make a tentative identification.
- U - The material was analyzed for, but was not detected above the level of the associated value. The associated value is either the sample quantitation limit or the sample detection limit.

ACRONYMS

AA	Atomic Absorption
Ag	Silver
CCB	Continuing Calibration Blank
CCV	Continuing Calibration Verification
CFR	Code of Federal Regulations
CLP	Contract Laboratory Program
CRA	CRDL standard required for AA
CRDL	Contract Required Detection Limit
CRI	CRDL standard required for ICP
CV	Cold Vapor
EPA	U.S. Environmental Protection Agency
GFAA	Graphite Furnace Atomic Absorption
Hg	Mercury
ICB	Initial Calibration Blank
ICP	Inductively Coupled Plasma
ICS	Interference Check Sample
ICSA	Interference Check Sample (Solution A)
ICSAB	Interference Check Sample (Solution AB)
ICV	Initial Calibration Verification
IDL	Instrument Detection Limit
LCS	Laboratory Control Sample
LRA	Linear Range Verification Analysis
MSA	Method of Standard Additions
PDS	Post Digestion Spike
QC	Quality Control
RPD	Relative Percent Difference
RPM	Regional Project Manager
RSD	Percent Relative Standard Deviation
SA	Spike Added
SAS	Special Analytical Services
SDG	Sample Delivery Group
SOW	Statement of Work
SR	Sample Result
SSR	Spiked Sample Result
TPO	Technical Project Officer

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: 200047N-10-15

Lab ID: 302114-0001-SA

Matrix: FILTER

Authorized: 19 OCT 98

Sampled: 15 OCT 98

Prepared: See Below

Received: 19 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	19 OCT 98	19 OCT 98
Cadmium	ND	total ug	0.20	6010B	19 OCT 98	19 OCT 98
Lead	ND	total ug	2.0	6010B	19 OCT 98	19 OCT 98

ND = Not detected
NA = Not applicable

Reported By: Wennilyn Fua

Approved By: John Barnett

The cover letter is an integral part of this report.

Rev 230787

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: 200047E-10-15

Lab ID: 302114-0002-SA

Matrix: FILTER

Authorized: 19 OCT 98

Sampled: 15 OCT 98

Prepared: See Below

Received: 19 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	19 OCT 98	19 OCT 98
Cadmium	ND	total ug	0.20	6010B	19 OCT 98	19 OCT 98
Lead	ND	total ug	2.0	6010B	19 OCT 98	19 OCT 98

ND = Not detected
NA = Not applicable

Reported By: Wennilyn Fua

Approved By: John Barnett

The cover letter is an integral part of this report.

Rev 230787

OK 12/14/98

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: 200047S-10-15

Lab ID: 302114-0003-SA

Matrix: FILTER

Authorized: 19 OCT 98

Sampled: 15 OCT 98

Prepared: See Below

Received: 19 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	19 OCT 98	19 OCT 98
Cadmium	ND	total ug	0.20	6010B	19 OCT 98	19 OCT 98
Lead	ND	total ug	2.0	6010B	19 OCT 98	19 OCT 98

ND = Not detected
NA = Not applicable

Reported By: Wennilyn Fua

Approved By: John Barnett

The cover letter is an integral part of this report.

Rev 230787

Handwritten: R-21114

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: 4711THN-10-15

Lab ID: 302114-0004-SA

Matrix: FILTER

Authorized: 19 OCT 98

Sampled: 15 OCT 98

Prepared: See Below

Received: 19 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	19 OCT 98	19 OCT 98
Cadmium	ND	total ug	0.20	6010B	19 OCT 98	19 OCT 98
Lead	ND	total ug	2.0	6010B	19 OCT 98	19 OCT 98

ND = Not detected
NA = Not applicable

Reported By: Wennilyn Fua

Approved By: John Barnett

The cover letter is an integral part of this report.

Rev 230787

12/15/98

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: 4711THE-10-15

Lab ID: 302114-0005-SA

Matrix: FILTER

Authorized: 19 OCT 98

Sampled: 15 OCT 98

Prepared: See Below

Received: 19 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	19 OCT 98	19 OCT 98
Cadmium	ND	total ug	0.20	6010B	19 OCT 98	19 OCT 98
Lead	ND	total ug	2.0	6010B	19 OCT 98	19 OCT 98

*RF 12/15/98*ND = Not detected
NA = Not applicable

Reported By: Wennilyn Fua

Approved By: John Barnett

The cover letter is an integral part of this report.
Rev 230787

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: 4711THS-10-15

Lab ID: 302114-0006-SA

Matrix: FILTER

Authorized: 19 OCT 98

Sampled: 15 OCT 98

Prepared: See Below

Received: 19 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	19 OCT 98	19 OCT 98
Cadmium	ND	total ug	0.20	6010B	19 OCT 98	19 OCT 98
Lead	ND	total ug	2.0	6010B	19 OCT 98	19 OCT 98

ND = Not detected
NA = Not applicable

Reported By: Wennilyn Fua

Approved By: John Barnett

The cover letter is an integral part of this report.

Rev 230787

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: 200047N-10-16

Lab ID: 302114-0007-SA

Matrix: FILTER

Authorized: 19 OCT 98

Sampled: 16 OCT 98

Prepared: See Below

Received: 19 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	19 OCT 98	19 OCT 98
Cadmium	ND	total ug	0.20	6010B	19 OCT 98	19 OCT 98
Lead	ND	total ug	2.0	6010B	19 OCT 98	19 OCT 98

ND = Not detected
NA = Not applicable

Reported By: Wennilyn Fua

Approved By: John Barnett

The cover letter is an integral part of this report.

Rev 230787

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: 200047E-10-16

Lab ID: 302114-0008-SA

Matrix: FILTER

Authorized: 19 OCT 98

Sampled: 16 OCT 98

Prepared: See Below

Received: 19 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	19 OCT 98	19 OCT 98
Cadmium	ND	total ug	0.20	6010B	19 OCT 98	19 OCT 98
Lead	ND	total ug	2.0	6010B	19 OCT 98	19 OCT 98

ND = Not detected
NA = Not applicable

Reported By: Wennilyn Fua

Approved By: John Barnett

The cover letter is an integral part of this report.

Rev 230787

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: 200047S-10-16

Lab ID: 302114-0009-SA

Matrix: FILTER

Authorized: 19 OCT 98

Sampled: 16 OCT 98

Prepared: See Below

Received: 19 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	19 OCT 98	19 OCT 98
Cadmium	ND	total ug	0.20	6010B	19 OCT 98	19 OCT 98
Lead	ND	total ug	2.0	6010B	19 OCT 98	19 OCT 98

*At 12/18/98*ND = Not detected
NA = Not applicable

Reported By: Wennilyn Fua

Approved By: John Barnett

The cover letter is an integral part of this report.

Rev 230787

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: 4711THN-10-16

Lab ID: 302114-0010-SA

Matrix: FILTER

Authorized: 19 OCT 98

Sampled: 16 OCT 98

Prepared: See Below

Received: 19 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	19 OCT 98	19 OCT 98
Cadmium	ND	total ug	0.20	6010B	19 OCT 98	19 OCT 98
Lead	ND	total ug	2.0	6010B	19 OCT 98	19 OCT 98

ND = Not detected
NA = Not applicable

Reported By: Wennilyn Fua

Approved By: John Barnett

The cover letter is an integral part of this report.

Rev 230787

R 12/19/98

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: 4711THE-10-16

Lab ID: 302114-0011-SA

Matrix: FILTER

Authorized: 19 OCT 98

Sampled: 16 OCT 98

Prepared: See Below

Received: 19 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	19 OCT 98	19 OCT 98
Cadmium	ND	total ug	0.20	6010B	19 OCT 98	19 OCT 98
Lead	ND	total ug	2.0	6010B	19 OCT 98	19 OCT 98

ND = Not detected
NA = Not applicable

Reported By: Wennilyn Fua

Approved By: John Barnett

The cover letter is an integral part of this report.

Rev 230787

Total Metals

Client Name: URS Operating Services, Inc.

Client ID: 4711THS-10-16

Lab ID: 302114-0012-SA

Matrix: FILTER

Authorized: 19 OCT 98

Sampled: 16 OCT 98

Prepared: See Below

Received: 19 OCT 98

Analyzed: See Below

Parameter	Result	Units	Reporting Limit	Analytical Method	Prepared Date	Analyzed Date
Arsenic	ND	total ug	4.0	6010B	19 OCT 98	19 OCT 98
Cadmium	ND	total ug	0.20	6010B	19 OCT 98	19 OCT 98
Lead	ND	total ug	2.0	6010B	19 OCT 98	19 OCT 98

ND = Not detected
NA = Not applicable

Reported By: Wennilyn Fua

Approved By: John Barnett

The cover letter is an integral part of this report.
Rev 230787*AF 12/19/98*

BATCH: 302114

[illegible]

1. If holding times are exceeded, all sample results are estimated (J)/(JJ).
2. If holding times are grossly exceeded ($\geq 2 \times$ holding time), detected results are estimated (J), and non-detected results are rejected (R).

Date: _____

Reviewed By:

12/21/98 Date:

11/21/98

ANALYTE	HOLDING TIME	PRESERVATIVE	
		AQUEOUS	SOIL
Metals	180 days	pH < 2 w/HNO ₃ , 4 Dec. C	4 Dec. C
Mercury	28 days	pH < 2 w/HNO ₃ , 4 Dec. C	4 Dec. C
Cyanide	14 days	pH > 12 w/NaOH, 4 Dec. C	4 Dec. C

met1/techlaw/policy7

BATCH:

[illegible]

IOV/CCV Actions:

1. If the instrument was not calibrated daily and each time the instrument was set up, qualify the data as rejected (R).

III METAL ANALYSIS WORKSHEET -- BLANKS

MATRIX: 7.5/1 hr

BATCH:

Use the highest positive AND negative blank result \geq |IDL| below. Use one worksheet for soil matrix and another for water matrix.

[illegible]

NOTE: Verify that the absolute value of any analyte concentration in the PB or MB is < CRDL

COMMENTS

Actions:

1. If $|Blank| < IDL$, no action is taken.
2. If $Blank \geq IDL$, then all sample results $\geq IDL$ and $< 5 \cdot Blank$ are non-detected (U).
3. If $Blank = -IDL$, all sample results $\geq IDL$ and $< 5 \cdot |Blank|$ are estimated (J).
4. If $Blank = -IDL$ and raw data sample result is $\leq IDL$ then non-detected results are estimated (UJ).

As. 0.1
Cl- 0.005
Pb 0.05

IVA METAL ANALYSIS WORKSHEET -- ICP INTERFERENCE CHECK SAMPLE

BATCH: _____

NOTE: The sample results can be accepted without qualification, if the sample concentrations of Al, Ca, Fe, and Mg are less than or equal to the concentration found in the ICSA solution.

Examine the sample results in ug/l and list any Al, Ca, Fe, or Mg results that are greater than the ICSA values.

SAMPLE ID	ANALYTE	SAMPLE RESULT	ICS VALUE	COMMENTS

List any analytes in the ICS AB solution that did not meet the criteria of 80-120% R.

ANALYTE	% R	ACTION	SAMPLES AFFECTED

Were Interference Check Samples run at the beginning and end of each sample analysis run, or a minimum of twice per 8-hour shift (whichever is more frequent)? Yes No

COMMENTS

Actions:

	PERCENT RECOVERY			
	<50%	50-75%	80-120%	>120%
Detected results	R	J	V	J
Non-detected results	R	UJ	V	V

IVB METAL ANALYSIS WORKSHEET -- ICP INTERFERENCE CHECK SAMPLE

BATCH:

Report the concentration of any analytes detected in the ICSEA solution > |IDL| that should not be present.

[illegible]

Actions:

If the ICSEA value > the positive IDL:

1. For non-detected results, no action is taken.
2. Estimate (J) all detected results $\leq 5 \cdot \text{ICSA}$.

If the ICSA value $< -IDL$:

1. Estimate (J) detected results $\leq 5 * |CSA|$.
2. Estimate (W) non-detected results.

V METAL ANALYSIS WORKSHEET -- PRE-DIGESTION MATRIX SPIKE

MATRIX:

L-14.

BATCH:

List all parameters that do not meet the percent recovery criteria. Note: The pre-digestion spike recovery criteria are not evaluated for Ca, Mg, K, Na, Al, and Fe for soil samples, and Ca, Mg, K, and Na for water samples. If the sample result exceeds the spike added by a factor of 4 or more, no action is taken.

[illegible]

1. Was a pre-digestion matrix spike prepared at the required frequency of once every 20 samples, or every SDG (whichever is more frequent)? Yes No

2. Was a post-digestion matrix spike analyzed for all ICP elements, except Silver, that did not meet the pre-digestion matrix spike recovery criteria?	Yes	No

COMMENTS

NO MS/MS due to insufficient sample
1 μ -lter / Sample

1. If any analyte does not meet the % R criteria, qualify all associated sample as using the following criteria:

Actions:

Percent Recovery

<30%

30-7±%

75-125%

> 125%

Detected results

J

۱

Y

3

Non-detected results

R

UJ

v

v

MATRIX:

F. 14-

BATCH:

[illegible]

1. AQUEOUS

If sample value $> 5 \cdot \text{CRDL}$, estimate (J) all sample results of the same matrix if the RPD is $> 20\%$.

If sample value $< 5 \cdot \text{CRDL}$, and the difference between the duplicate and the original is $> \text{CRDL}$, estimate $(J)/(W)$ all sample results of the same matrix.

If sample value $> 5 \cdot \text{CRDL}$, estimate (J) all sample results of the same matrix if the RPD is $> 35\%$.

If sample value $< 5 \cdot \text{CRDL}$, and the difference between the duplicate and the original is $> 2 \cdot \text{CRDL}$, estimate $(J)/(U)$ all sample results of the same matrix.

- Difference = |Sample result - Duplicate sample result|

VII METAL ANALYSIS WORKSHEET--LABORATORY CONTROL SAMPLES

MATRIX:

f: 115

BATCH:

List all parameters that do not meet the percent recovery criteria.

[illegible]

Actions:

Exception: antimony and silver have no control limits. An aqueous LCS is not required for CN and mercury.

PERCENT RECOVERY

1. AQUEOUS LCS

Detected results

Non-detected results

< 50%

B

B

50-75%

1

!!

80 - 20%

•

•

> 120%

1

v

2. SOLID LCS

Detected results

Non-detected results

BELCA
CONTROL LIMITS

;

14.

CONTROL LIMITS

•

•

ABOVE
CONTROL LIMITS

1

Y

VIII. METAL ANALYSIS WORKSHEET -- ANALYTICAL SPIKE ANALYSIS

BATCH: _____

List all samples whose analytical spike recovery did not meet the 85-115 % recovery criteria.

[illegible]

If the sample result is <50% of the spike result, or the sample result is >50% of the spike result* and the percent recovery is <40% or between 85 – 115%, the following apply:

	PERCENT RECOVERY			
Actions:	<10%	10-84%	85-115%	>115%
Detected results	J	J	V	J
Non-detected results	R	UJ	V	V

*Spike result: = |spiked sample result - sample result|

BATCH: _____

List all samples for which an MSA analysis was required but not performed, or MSA results were outside control limits.

[illegible]

1. Estimate (J) if an MSA was required and not performed.

- List all samples > CRDL whose duplicate injections did not agree within 20% FSD or CV, or samples in which duplicate injections were not performed

[illegible]

Actions

1. Estimate (J) detected results greater than the CRDL if duplicate injections are outside 20% RSD.
2. Estimate (J) all sample results if duplicate injections were not performed.

MATRIX:

Falk.

BATCH:

Serial dilution criteria only applies if the original sample result is at least 50*DL and %D >10%.

INDUCTIVELY COUPLED PLASMA SERIAL DILUTION ANALYSIS:

Serial dilutions were performed for each matrix and results of the diluted sample analysis agreed within ten percent of the original undiluted analysis. Yes ☒ No ☐

Serial dilutions were not performed for the following:

COMMENTS

Estimate (J) detected results if %D is $> 10\%$.

X METAL ANALYSIS WORKSHEET -- SAMPLE RESULT VERIFICATION

BATCH: _____

1. Describe any raw data anomalies (i.e. baseline shifts, negative absorbances, transcription or calculation errors, legibility, etc.)

2. List results that fall outside the linear range of the ICP instrument or the calibrated range of the AA or Cyanide instrument, and were not reanalyzed.

3. Were ICP linear ranges obtained within 3 months of, and preceding, the sample analyses? - Yes No NA *not provided but no units*4. Were ICP interelement corrections obtained within 12 months of, and preceding, the sample analyses? Yes No NA5. Were instrument detection limits present, found to be less than or equal to the CRDL, and obtained within 3 months of, and preceding, the sample analyses? Yes No NA *only CRDLs provided*

6. Were all sample results reported down to the IDL? Yes No

7. Were sample weights, volumes, percent solids, and dilutions used correctly when reporting the results? Yes No

COMMENTS

$$AS- \quad 0.1 \text{ mg/L} \times 40 \text{ mL} = 4 \text{ ug (R-14)}$$