

JOB NO: 5057

BASF

EIT 115

5/96

HER 00603

Time Sheets

**FOREMAN'S DAILY TIME REPORT**

**DESCRIPTION OF WORK PERFORMED (BY FOREMAN)**

TOTAL HOURS

strip + blow dry  
debailast, mitrag<sup>2</sup>  
repair, loading  
valve

[illegible]

HER 00604

40

**CODED  
AND**

**APPROVED**

# HERCULES

MARINE SERVICES CORPORATION

P. O. Drawer O • Freeport, Texas 77541

INVOICE NO. : 3417  
DATE : May 31, 1996  
Job No. : 5057  
Location : Freeport, TX

TO:

BASF  
607 Copper Rd.  
Freeport, TX 77541

PLEASE REMIT PAYMENTS TO:  
11011 RICHMOND  
SUITE 500  
HOUSTON, TX. 77042

Terms : Net 30

FOR:

Service to the ETT 115 as follows:

Set up equipment  
Strip out all free product  
Blow cargo pipeline and stripping system  
Vacuum: blow dry cargo tanks  
Sweep powder rust from cargo tank floor  
Pressure test cargo pipeline 40 PSI  
Clean off deck  
Remove equipment  
Close Barge

Deballast  
Nitrogen pad  
Repair loading valve

LABOR:	Foreman	6 hr.	@	38.00	228.00
	Journeyman	33.5 hr	@	32.50	1,088.75
STOCK:	33.30	Plus 25%	=	8.33	41.63
EQUIPMENT:	Compressor	10	@	48.00	480.00
	Air Movers	20	@	5.00	160.00
	Vacuum	4	@	30.00	120.00
	Hand Hose	4	@	12.00	48.00
	3" gas pump	12	@	18.00	216.00
	2" strip pump	12	@	15.00	180.00

TOTAL AMOUNT DUE \$2,502.38

PHONE: (409) 233-6371

Strength through Experience, Equipment, Know-How

HER 00605

# JOB WORKSCOPE/BREAKDOWN

JOB NO: 5057 CUSTOMER: BASE BARCE: ETT 115

FOREMAN:	S/T	<u>6</u>	@	38.00	\$ <u>228.00</u>
	O/T		@	53.25	
LEADMAN:	S/T		@	35.00	
	O/T		@	49.50	
JOURNEY:	S/T	<u>33.5</u>	@	32.50	<u>1,088.75</u>
	O/T		@	45.75	

DISPOSAL:	Stop Oil		@	.60	
	Water		@	.35	
WATER:		5.00	per	1,000 gals.	

MATERIAL :		Plus 25%		
STOCK:	<u>33.30</u>	Plus 25%	<u>8.33</u>	<u>41.63</u>

EQUIPMENT:	Compressor	<u>10</u>	@	48.00	<u>480.00</u>
	Air Movers	<u>20</u>	@	5.00	<u>100.00</u>
	Fordlift		@	30.00	
	Tugboat		@	100.00	
	Steam rig		@	100.00	
	Vacuum	<u>4</u>	@	30.00	<u>120.00</u>
	Hand Hose	<u>4</u>	@	12.00	<u>48.00</u>
	Weld Machine		@	15.00	
	Cherry picker		@	70.00	
	Crane		@	130.00	
	3" gas pump	<u>12</u>	@	18.00	<u>216.00</u>
	2" strip pump	<u>12</u>	@	15.00	<u>180.00</u>
	Butterworth		@	10.00	
	4" Elect. Pump		@	15.00	
	Cutting rig		@	8.00	
	Haul Out		@	1100.00	

ARRIVED:	COMPLETED:	DEPARTED:
PRODUCT:	LOAD:	

TOTAL INVOICE: 2,502.38

HER 00606

# HERCULES OFFSHORE CO.

## MARINE REPAIR

ORDER No. 5057

MARINE OPERATIONS FACILITY

INVOICE NO. \_\_\_\_\_

CUSTOMER P.O. \_\_\_\_\_

DATE	ORDER WRITTEN	5/28/96	ETA	5/29/96 0800
	ARRIVAL			
	COMPLETION DATE			
	DEPARTURE DATE	5-30-96 7:30:51 30/PL: 2:30pm		
M/V	BARGE <input checked="" type="checkbox"/> ETT 115			
NAME	LOA			
FOREMAN				
LAST PRODUCT				
GAS FREEING	YES <input type="checkbox"/>	CERTIFICATE REQUIRED	YES <input type="checkbox"/>	
	NO <input type="checkbox"/>		NO <input type="checkbox"/>	
HAUL OUT FOR INSPECTION AND REPAIR	YES <input type="checkbox"/>		NO <input type="checkbox"/>	
ON WAYS	DATE: _____			
ON WAYS	DATE: _____			

CUSTOMER	NAME	BASE
	BILLING ADDRESS	607 Copper Road
	CITY AND STATE	Freeport, TX 77541
	PHONE NUMBER	409-238-6100
WORK AUTHORIZED BY	OFF AUTHORIZED BY	
STOCK MATERIAL	<input type="checkbox"/> YES <input type="checkbox"/> NO	
IF YES, COMPLETE STOCK MATERIAL TRANSFER TICKET		
OUTSIDE SERVICES	<input type="checkbox"/> YES <input type="checkbox"/> NO	
IF YES, LIST		

### ITEM NUMBERS

- 1 strip, blow dry, deballast, put nitrogen pad on board for loading
- 2 repair loading valve  
Used: Three pair of Respirator Filters, Two Flashlight Batteries, Two Paper White Coveralls.
- 3 Repack 3 valve - used 3'x 3/4" packing material (gasket)
- 5
- 6
- 7
- 8
- 9
- 10

THIS SHALL SERVE AS YOUR AUTHORIZATION TO PROCEED WITH THE ABOVE.

Signed: Paula D. Smith

Date: 5-30-96

HER 00607



Strength through environmental awareness and customer service

P.O. Drawer O  
Freeport, Texas 77541

Office (409) 233-6371  
Fax. (409) 233-6375

EQUIPMENT	HOURS USED	HOURLY RATE	TOTAL PRICE
COMPRESSOR	8	44.00	
2 MOVERS	20	5.00	
ACUUM	3	20.00	
OILER		80.00	
AND HOSE	3	10.00	
UTTERWORTH		10.00	
" STRIP PUMP	8	12.00	
" DIESEL PUMP	12	14.00	
ELECT PUMP		15.00	
RANE		130.00	
HERRYPICKER		50.00	
ORKLIFT		20.00	
UG BOAT		80.00	
ELD MACHINE		15.00	
UTTING RIG		8.00	
ORK BARGE		35.00	
AUL OUT		1100.00	

DATE: 5-30-86 JOB NO: 5052 BARGE NAME: ETT2114

HER 00608



**HERCULES**

OFFSHORE CORPORATION

Strength through experience, equipment, know-how

P.O. Drawer Q  
Freeport, Texas 77541

Office: (409) 233-6371  
Fax: (409) 233-6375

**FINAL CHECK LIST**

DATE: 5-30-86

BARGE: ETC-115

BLIND NUMBER CHECKED 2 REPLACED GASKET YES    NO     
CATE VALVE NUMBER CHECKED 6 REPLACED GASKET YES    NO     
PLUGS NUMBER CHECKED 1 REPLACED PLUG YES    NO     
\* CHECK VALVE NUMBER CHECKED N/A REPLACED GASKET YES    NO     
DEEPWELL BLIND NUMBER CHECKED N/A REPLACED GASKET YES    NO     
  
BELOW DECK CARGO PIPELINE BLIND NUMBER 2 REPLACED GASKET YES    NO     
BELOW DECK CARGO PIPELINE BLIND REMOVED YES    NO     
DRIP PANS VALVES: CLOSED BY LUCIO  
DRIP PANS COVER: CLOSED BY N/A  
CONTAINMENT ARE PLUG OR VALVES: CLOSED BY N/A

AIR TEST CARGO LINE - 40psi - USING SOAP

SIGNATURE OF TESTER: Richard Duarte

WITNESS: Lucio

- \* CHECK VALVE GASKET WILL BE REPLACED
- \* AIR TEST IS LAST THING TO BE DONE BEFORE RELEASING BARGE.

HER 00609

# DECLARATION OF INSPECTION PRIOR TO BULK CARGO TRANSFER

VESSELS

ETT-115  
BASF

TRANSFER FACILITY

H.B. CULLEN & SONS FREE DOCK

LOCATION

FREEMPORT TX.

The following list refers to requirements set forth in detail in 33 CFR 156.120 and 46 CFR 35.35-30 (printed on reverse). The spaces adjacent to items on the list are provided to indicate that the detailed requirement has been met.

1. Communication System/Language Fluency (156.120 (m) (p))
2. Warning Signs and red Warning Signals. (35.35-30)
3. Vessels Mooring. (156.120 (a))
4. Transfer System Alignment. (156.120 (d))
5. Transfer System; unused components. (156.120 (e))
6. Transfer Systems; fixed piping. (156.120 (f))
7. Overboard Discharges/Sea Suction Valves. (156.120 (g))
8. Hoses or Loading Arms condition. (156.120 (h) (156.170))
9. Hoses; length and support. (156.120 (b) (c))
10. Connections. (156.130)
11. Discharge Containment Systems. (156.120 (j) (k))
12. Slopers or Drains. (156.120 (k))
13. Emergency Shutdown. (156.120 (n))
14. Repair Work Authorization. (35.35-30)
15. Boiler and Galley Fire Safety. (35.35-30)
16. Fires or Open Flames. (35.35-30)
17. Lighting (sunset to sunrise). (156.120 (l))
18. Safe Smoking Spaces. (35.35-30)
19. Spill and Emergency shutdown procedures. (156.120 (q))
20. Sufficient Personnel. (156.120 (e) (s))
21. Transfer Conference. (156.120 (q))
22. Agreement to begin transfer. (156.120 (r))

DELIVERER	RECEIVER
/	/
/	/
/	/
/	/
/	/
/	/
/	/
/	/
/	/
/	/
/	/
/	/
/	/
N/A	N/A
N/A	N/A
N/A	N/A
/	/
/	/
/	/
/	/
/	/
/	/

I do certify that I have personally inspected this facility or vessel with reference to the requirements printed on reverse and that opposite each of them I have indicated that the regulations have been complied with.

Person in Charge Receiving Unit

Charles Smith

TITLE

FOYMAN

TIME & DATE

5-30-96 2:30

Person in Charge Delivering Unit

Charles Smith

FUEL PERSON

TIME COMPLETED 5-30-96 2:30 PM

\* Rules and Regulations for Tank Vessels.

HER 00610



# BARGE CLEANING REPORT

JOB NO \_\_\_\_\_  
 BARGE NO E7E-115  
 CUSTOMER BASF  
 PRODUCT CYCLOHEXANOL

ETA \_\_\_\_\_  
 DATE/TIME ARRIVAL 5-30-96 2:00  
 DATE/TIME STARTED 5-30-96 2:20  
 DATE/TIME COMPLETED 5-30-96 2:30

AMOUNT STRIPPED 350

CLEANING INSTRUCTION BY Robert Peter  
 COMPLETION SCHEDULE BY \_\_\_\_\_  
 OVERTIME AUTHORIZED BY \_\_\_\_\_  
 BARGE INSPECTED BY Charles Ours DATE/TIME \_\_\_\_\_  
 BARGE RELEASED TO \_\_\_\_\_ DATE/TIME \_\_\_\_\_  
 DEEPWELL OPENED \_\_\_\_\_  
 YES \_\_\_ NO ☒ CLOSED BY \_\_\_\_\_ NEW CASSET YES \_\_\_ NO \_\_\_  
 BELOW DECK CARGO PIPELINE \_\_\_\_\_  
 BLIND OPEN YES ☒ NO \_\_\_ CLOSED BY 4:10 NEW CASSET ☒ YES \_\_\_  
 DECK CHECK VALVE OPENED \_\_\_\_\_  
 YES \_\_\_ NO ☒ CLOSED BY \_\_\_\_\_ NEW CASSET YES \_\_\_ NO \_\_\_  
 DECK HEADER BLINDS OPENED yes INSPECTED BY CALEB BRETT \_\_\_\_\_  
 DECK HEADER DRAIN PLUG OPEN yes  
 YES \_\_\_ NO \_\_\_ CLOSED BY 4:10  
 VAPOR RECOVERY HEADER OPENED \_\_\_\_\_  
 YES ☒ NO \_\_\_ CLOSED BY 2:00 NEW CASSET YES \_\_\_ NO ☒  
 RUST SCALE \_\_\_\_\_  
 YES \_\_\_ NO ☒ WASHED OUT \_\_\_\_\_ BUCKETED OUT \_\_\_\_\_  
 NUMBER OF CARGO TANKS \_\_\_\_\_ CALIBRATION OF CARGO VALVES \_\_\_\_\_  
 SLOP TANK STRIPPED YES NO  
 DRY PANS STRIPPED YES ☒ NO \_\_\_  
 WEATHER TEMP 90 RAIN \_\_\_ FOG \_\_\_ HUMIDITY \_\_\_ OVERCAST \_\_\_ CLOUDY \_\_\_ CLEAR ☒  
 PIPELINE WASHED no PIPELINE BLOWN yes INSPECTED BY CALEB BRETT \_\_\_\_\_  
 BOW RAKE CHECKED YES ☒ NO \_\_\_ STERN RAKE YES ☒ NO \_\_\_  
 VOIDS YES ☒ NO \_\_\_ SAFETY EQUIPMENT USED \_\_\_\_\_  
 SUMPS INSPECTED \_\_\_\_\_

## NOTICE

The barges cleaned for BASF will be inspected by Caleb Brett. The inspector will fill out paperwork for the Hercules foreman in charge to sign. The foreman will put two copies in the document mailbox. One copy will stay in the mailbox and the captain of the tugboat will not be called until the inspection is completed and documentation is in the mailbox. If any problems, BASF logistics representative must be contacted.

Inspected 5-30-96 Time in 12:50 Time out 1:30

inspected by: John Pali

NO BASF BARGE THAT HAS BEEN CLEANED WILL BE RELEASED UNTIL CALEB BRETT HAS SIGNED TIME RELEASE PAPERS. CALEB BRETT WILL BE GIVEN A COPY OF THIS FORM.

HER 00611

Caleb Brett

## TIME LOG

YOUR REFERENCE
OUR REFERENCE

ETI 115	PRODUCT/CARGO CYCLOHEXANE	POLYMER/RESIN HERCULES	DATE MAY 30, 1996
---------	------------------------------	---------------------------	----------------------

[illegible]

Sp

**SECRET**

4-95

HER 00612

Caleb Brett

# VISUAL TANK INSPECTION REPORT

VESSEL ETT 115	PRODUCT / CARGO CYCLOHEXANE	PORT / TERMINAL HERCULES	DATE MAY 30 1996
-------------------	--------------------------------	-----------------------------	---------------------

Tank Number	1,2,3C						
Tank Coating	---						
Last Cargo	CYCLO						
Second Last Cargo	CYCLO						
Third Last Cargo	CYCLO						
Time/Date Inspected	5-30-96 1300						
Visual Cleanliness <u>Accepted</u> /Rejected*	ACCEPTED						
Reason for Rejection							

Method said to have been used to clean tanks:	TK#	
	TK# 1,2,3C	STRIP + BLOW STRIP PRODUCT VENT TANK FOR 4 HOURS AND
	TK#	AIR BLOW FOR 45 MIN PER TANK
	TK#	
	TK#	
	TK#	

Information regarding previous cargoes, tank coating and cleaning method was obtained from vessel personnel and cannot be guaranteed as accurate by Caleb Brett U.S.A., Inc. and no liability can be assumed for errors resulting from improper information supplied. This report, of necessity, is based on such information.

- \* The cleanliness of inspected tank(s) is/are based on visual inspection of tank surfaces and line system at accessible areas only. This document does not cover the cleanliness of tank surfaces and line system at inaccessible spots and/or possible release of components of previous cargoes during loading, discharge or transport of the cargo in question, for which the vessel is fully responsible. Suitability of tank coating for intended cargo must be guaranteed by vessel's owner or by suppliers of the coating.

0000 1910.1200

OSHA 1910.1200  
EMPLOYEE HAZARDOUS MATERIALS TRAINING PROGRAM  
26

Date 5-30-96

Plant Acer

SPAS Free Dock

Supervisor Charles Smith  
Client's name

Client Safety

The following listed materials are considered to be hazardous to the employees working in this area:

CYCLOHEXANE

CYCLOHEXANE

The employees assigned to work in this area have been informed of the hazardous materials in this area, the hazards they present to the workers, the location of hazards listed, the protective equipment that has been provided and where it is located, and procedures to be followed in case of an accidental exposure. I have received the training listed above and will so designate by signing this form.

NAME \_\_\_\_\_

NAME \_\_\_\_\_

**PLACE**

# Index

BADC:

**HER 00614**

**CYCLOHEXANE, 98%**

# **DANGER!**

**EXTREMELY FLAMMABLE - VAPORS MAY IGNITE  
EXPLOSIVELY. POSSIBLE ASPIRATION HAZARD.**

**DANGER: CONTAINS BENZENE - CANCER HAZARD.**

**Benzene is a known human carcinogen - overex-  
posure may create cancer risk, blood changes or  
chromosome changes. Benzene has caused fetal  
death in animals.**

## **PRECAUTIONS:**

**Keep away from heat, sparks and flame. Keep container closed.  
Use with adequate ventilation. Avoid contact with eyes, skin or  
clothing. Wash thoroughly after handling. Launder contaminated  
clothing before reuse. Do not swallow. May be aspirated into the  
lungs.**

## **FIRST AID**

**In case of contact, flush eyes with water. Flush skin with water for  
15 minutes. If inhaled, remove from exposure. If breathing is dif-  
ficult, give oxygen, seek medical attention. If swallowed, do not in-  
duce vomiting. Seek immediate medical assistance. NOTE TO  
PHYSICIAN: Gastric lavage using a cuffed endotracheal tube may  
be performed at your discretion.**

**FOR ADDITIONAL INFORMATION, SEE MATERIAL SAFETY DATA SHEET.**

**MANUFACTURED BY  
PHILLIPS 66 COMPANY  
A SUBSIDIARY OF PHILLIPS PETROLEUM COMPANY  
BARTLESVILLE, OK 74004  
UNITED STATES OF AMERICA**

**FORM 12500-S 12-89**

**HER 00615**

# HERCULES OFFSHORE CO.

MARINE REPAIR

ORDER No. 5057

MARINE OPERATIONS FACILITY

INVOICE NO. \_\_\_\_\_

CUSTOMER P.O. \_\_\_\_\_

DATE	ORDER WRITTEN	5/28/96	BY	5/29/96 DB00
	ARRIVAL			
	COMPLETION DATE			
	DEPARTURE DATE			
M/V <input type="checkbox"/> BARGE <input checked="" type="checkbox"/>				
NAME <u>ETT 115</u>				
LOA		WIDTH		
FOREMAN				
LAST PRODUCT				
GAS FREEING YES <input type="checkbox"/> NO <input type="checkbox"/>		CERTIFICATE REQUIRED YES <input type="checkbox"/> NO <input type="checkbox"/>		
HAUL OUT FOR INSPECTION AND REPAIR		YES <input type="checkbox"/> NO <input type="checkbox"/>		
ON WAYS		DATE: _____		
ON WAYS		DATE: _____		

CUSTOMER	NAME	BASF
	BILLING ADDRESS	607 Copper Road
	CITY AND STATE	Freeport, TX 77541
	PHONE NUMBER	409-238-6100
WORK AUTHORIZED BY		OFF AUTHORIZED BY
STOCK MATERIAL <input type="checkbox"/> YES <input type="checkbox"/> NO		
IF YES, COMPLETE STOCK MATERIAL TRANSFER TICKET		
OUTSIDE SERVICES <input type="checkbox"/> YES <input type="checkbox"/> NO		
IF YES, LIST		

## ITEM NUMBERS

- 1 strip, blow dry, deballast, put nitrogen pad on board for loading
- 2 repair loading valve
- 3 (called Air Liquide for service)
- 4 5/30/96 1:30pm
- 5
- 6
- 7
- 8
- 9
- 10

THIS SHALL SERVE AS YOUR AUTHORIZATION TO PROCEED WITH THE ABOVE.

Signed: \_\_\_\_\_

Date: \_\_\_\_\_

HER 00616

**BASF Corporation**

**BASF**

**BASF BARGE SCHEDULE FOR HERCULES**

**May 28, 1996**

**\*\*\* REVISED \*\*\***

**Tuesday, May 28, 1996 - 0730**

**ETT 114 - Deballast, strip and blow dry and release to Brown Canal.**

**ETT 115 - Deballast, and release to Brown Water IV.**

**Wednesday, May 29, 1996 - 0800**

~~**ETT 115 - Strip, blow dry and deballast. Rust in bottom of tank. Repair on board for loading (NEOL). Release to Brown Water IV.**~~

~~**Repair loading valve. Valve is sticking and can not be opened with just a wrench.**~~

**BASF Corporation****BASF****BASF BARGE SCHEDULE FOR HERCULES****May 28, 1996****Tuesday, May 26, 1996 - 0730**

ETT 114 - Deballast, strip and blow dry and release to Brown Canal.

ETT 113 - Deballast, and release to Brown Water IV.

**Wednesday, May 29, 1996 - 0800**

ETT 115 - Strip, blow dry and deballast. Put Nitrogen pad on board for loading (NEOL). Release to Brown Water IV.



## SHIPPING ORDER

DATE ORDERED  
5/22/96

DATE SHIPPED  
5/22/96

Big Three Merchant Gases and Equipment, Inc.

## Industrial Nitrogen Services

General Office: P.O. BOX 3647 HOUSTON, TEXAS 77253 713/868-0333

Remit Payment to: P.O. BOX 200411 HOUSTON, TEXAS 77216-0411

SHIPPING ORDER NO.  
118-003736

SERVICE DATE

INVOICE NO.

Account No.		SHIP TO	Customer	BASF
Customer			Location	Free Lakes Docks
Address			Unit Name	Ense # ETT 115
City	State		Zip	
			Services Rendered	
			City	Surfside State Texas Zip

CUSTOMER ORDER NO.	ORDERED BY	ORIGIN	FROM	TO	Tax %	CREDIT APPROVAL
	JO ANN	118	118	118		

**WARNING** 1. PRE-JOB DISCUSSION WAS HELD & SAFETY CHECK LIST COMPLETED.  
2. CUSTOMER HAS RECEIVED A COPY OF SAFETY PRECAUTIONS.

THE UNDERSIGNED CUSTOMER AGREES TO BIG THREE INDUSTRIES' GENERAL TERMS AND CONDITIONS OF SERVICE INCLUDING THOSE APPEARING ON THE REVERSE HEREOF.

AUTHORIZED SIGNATURE: *Anger S. S. S.* TITLE: DATE:

QUANTITY ORDERED	PART NO.	DESCRIPTION	QUANTITY SHIPPED	UNIT COST	AMOUNT
		Service Charge	1		
		Time Charges Pumping	2		
		Time Charges Transport	0		
		Mileage Pumping	1.50		
		Mileage Transport	0		
		Nitrogen Charges	95,000 SCF		
		GOVERNMENT AGENCY REGULATORY COMPLIANCE CHARGE	2		
		Subtotal			
		Tax			
		Total			

Credit: ☐ 210 Pressure Test/purge ☐ 220 Cool down ☐ 230 Regeneration ☐ 240 Dryout ☐ 250 Satdown ☐ 270 Pipeline ☐ 280 Ship Purge

EQUIPMENT	UNIT 1	TYPE	UNIT 2	TYPE	UNIT 3	TYPE	UNIT 4	TYPE
Unit No. & Type	3149							
Start & Time Started	5-30-96	13:30						
Stop & Time Completed	5-30-96	15:30						
TOTAL N <sub>2</sub> UNIT HOURS		2						
Rate SCFM								
TOTAL N <sub>2</sub> USED								

## EQUIPMENT MILEAGE

Roundtrip Miles From: Houston TX

TOTAL CHARGEABLE MILES: 150 No. of Units: 1

## TRANSPORT MILEAGE AND TIME

Roundtrip Miles From: Houston TX

TOTAL CHARGEABLE MILES: X No. of Transports

Total Transport Time On Site

Total Chargeable Transport Time

I acknowledge that the above information is correct, and the services have been completed.

Authorized Signature: *Anger S. S. S.* Date: \_\_\_\_\_

Big Three Operators: *Joe*

Remarks:

Big Three I.N.S. Representative: *Joe*

HER 00619

**I**ndustrial                  &                  **S**pecial  
**N**itrogen                                      **O**xxygen  
**S**ervice                                        **S**ervice



**This envelope contains:**

- ☐ Nitrogen MSDS                      ☐ Safety Checklist  
☐ Oxygen MSDS                      ☐ Safety Precautions Pamphlet  
☐ Other: \_\_\_\_\_

HER 00620

M A T E R I A L S A F E T Y D A T A S H E E T

I - G E N E R A L I N F O R M A T I O N

PRODUCT NAME NITROGEN, REFRIGERATED LIQUID  
EMERGENCY TELEPHONE NO. 713-868-0302  
MANUFACTURERS NAME AIR LIQUIDE AMERICA CORP.  
TRADE NAME/SYNONYMS LIQUID NITROGEN (LIN)  
CHEMICAL NAME AND SYNONYMS  
NITROGEN, REFRIGERATED LIQUID  
REVISION DATE: 08/24/89 PRODUCT ID. UN 1977 FORMULA N2  
CHEMICAL FAMILY INERT GAS CAS NUMBER 7727-37-9

STILL CURRENT

5-1-96 ALAC/REP.

\*\*\*\*\* SECTION NOTES \*\*\*\*\*

MSDS INFORMATION NUMBER: (713) 896-2140

I I - H A Z A R D O U S I N G R E D I E N T S

HAZARDOUS MIXTURES OF LIQUIDS AND GASES

0/0 TLV

NITROGEN  
\*\* NONE ESTABLISHED

100 \*\*

I I I - P H Y S I C A L D A T A

BOILING POINT -320.4F (-195.8C) @ 1 ATM  
SPECIFIC GRAVITY (H2O = 1): 0.8083 @ BOILING PT. @ 1 ATM  
VAPOR PRESSURE N/A  
PERCENT VOLATILE BY VOLUME (0/0) N/A  
DENSITY 50.49 LB/CU FT @ BOILING PT. @ 1 ATM  
EVAPORATION RATE N/A  
SOLUBILITY IN WATER N/A  
MATERIAL AT NORMAL CONDITION LIQUID  
EXPANSION RATIO (LIQUID TO GAS) 1:696.5

APPEARANCE AND ODOR

COLORLESS, ODORLESS GAS

I V - F I R E A N D E X P L O S I O N H A Z A R D D A T A

FLASH POINT N/A  
FLASH POINT (METHOD USED)  
FLAMMABILITY LIMITS IN AIR (0/0 BY VOL) LOWER N/A UPPER N/A

EXTINGUISHING MEDIA

MATERIAL IS NONFLAMMABLE. NITROGEN NEITHER BURNS NOR SUPPORTS COMBUSTION. USE EXTINGUISHING MEDIA APPROPRIATE FOR SURROUNDING FIRE.

SPECIAL FIRE FIGHTING PROCEDURES

NONE. NITROGEN WILL ACT AS A SIMPLE ASPHYXIAN IT IT REPLACES OXYGEN. LIQUID NITROGEN WHEN SPILLED WILL VAPORIZE RAPIDLY CAUSING A VAPOR CLOUD THAT WILL CREATE AN OXYGEN-DEFICIENT ATMOSPHERE. EVACUATE THE AREA OF THIS VAPOR CLOUD UNLESS WEARING SELF-CONTAINED BREATHING APPARATUS.

UNUSUAL FIRE AND EXPLOSION HAZARD

CONTACT WITH "COLD" LIQUID OR GASEOUS NITROGEN MAY CAUSE FROSTBITE. VISIBILITY MAY BE OBSCURED IN THIS "VAPOR CLOUD".

AUTOCIGNITION TEMPERATURE: N/A

HER 00621

M A T E R I A L S A F E T Y D A T A S H E E T  
PRODUCT NAME NITROGEN, REFRIGERATED LIQUID

ELECTRICAL CLASSIFICATION: NONHAZARDOUS

V - H E A L T H H A Z A R D D A T A

THRESHOLD LIMIT VALUE NONE ESTABLISHED  
UNUSUAL CHRONIC TOXICITY \*SEE OVEREXPOSURE SECTION\*  
CARCINOGENICITY NOT LISTED BY IARD, NTP, OSHA  
RCUTES OF EXPOSURE INHALATION, EYE/SKIN CONTACT  
EFFECTS OF OVEREXPOSURE

NITROGEN IS NONTOXIC, BUT MAY CAUSE SUFFOCATION BY DIS-  
PLACING THE OXYGEN IN THE AIR. EXPOSURE TO OXYGEN-DEFICIENT  
ATMOSPHERES MAY CAUSE DIZZINESS, NAUSEA, VOMITING, DIMINI-  
SHED MENTAL ALERTNESS, LOSS OF CONSCIOUSNESS, AND DEATH. IT  
SHOULD BE RECOGNIZED THAT COLLAPSE AND ASPHYXIATION MAY  
OCCUR WITHOUT EXPERIENCING ANY OF THE ABOVE SYMPTOMS. PRO-  
LONGED BREATHING OF VERY COLD ATMOSPHERES CAN CAUSE LUNG  
DAMAGE AND HYPOTHERMIA. FROZEN TISSUES, CAUSED BY FROSTBITE  
ARE PAINLESS AND APPEAR WAXY WITH A POSSIBLE YELLOW COLOR.  
THEY WILL BECOME SWOLLEN, PAINFUL, AND PRONE TO INFECTION  
WHEN THAWED.

TOXICOLOGICAL PROPERTIES:

NITROGEN IS A SIMPLE ASPHYXIAN.

CONTACT WITH COLD LIQUID OR PIPING MAY CAUSE COLD CONTACT  
BURNS, "FROSTBITE".

EMERGENCY AND FIRST AID PROCEDURES

PERSONS SUFFERING FROM LACK OF OXYGEN SHOULD BE MOVED INTO  
FRESH AIR. IF VICTIM IS NOT BREATHING, ADMINISTER ARTI-  
FICIAL RESPIRATION. IF BREATHING IS DIFFICULT, ADMINISTER  
OXYGEN. OBTAIN PROMPT MEDICAL ATTENTION.

SELF-CONTAINED BREATHING APPARATUS MAY BE REQUIRED FOR RES-  
CUE WORKERS.

IF CONTACT WITH CRYOGENIC LIQUID NITROGEN HAS CAUSED FROST-  
BITE, DO NOT RUB THE AFFECTED AREA, AS TISSUE DAMAGE MAY  
OCCUR. FLUSH THE AFFECTED AREAS WITH WARM WATER. DO NOT  
USE HOT WATER. OBTAIN PROMPT MEDICAL ATTENTION.

VI - R E A C T I V I T Y D A T A

STABILITY STABLE

CONDITIONS TO AVOID

NONE.

INCOMPATABILITY (MATERIALS TO AVOID)

NONE.

HAZARDOUS DECOMPOSITION PRODUCTS

NONE.

HER 00622

MATERIAL SAFETY DATA SHEET  
PRODUCT NAME NITROGEN, REFRIGERATED LIQUID

HAZARDOUS POLYMERIZATION WILL NOT OCCUR

CONDITIONS TO AVOID

None.

VII - SPILL OR LEAK PROCEDURES

STEPS TO BE TAKEN IN CASE MATERIAL IS RELEASED OR SPILLED

EVACUATE ALL UNNECESSARY PERSONNEL FROM VAPOR CLOUD AREA WHERE AN OXYGEN-DEFICIENT ATMOSPHERE IS PROBABLE. SHUT OFF NITROGEN SOURCE IF POSSIBLE. AVOID CONTACT WITH LIQUID NITROGEN OR ITS COLD BOIL-OFF GAS. TO INCREASE RATE OF EVAPORATION SPRAY WITH LARGE AMOUNTS OF WATER FROM UPWIND. IF LEAKING FROM CONTAINER OR CONNECTION, CONTACT THE CLOSEST BIG THREE INDUSTRIES LOCATION, OR YOUR SUPPLIER. SELF-CONTAINED BREATHING APPARATUS WILL BE REQUIRED IN OXYGEN-DEFICIENT AREAS SUCH AS NITROGEN VAPOR CLOUDS.

WASTE DISPOSAL METHOD

DO NOT ATTEMPT TO DISPOSE OF RESIDUAL OR UNUSED QUANTITIES. RETURN TO YOUR SUPPLIER FOR DISPOSAL. FOR EMERGENCY DISPOSAL, ALLOW LIQUID NITROGEN TO EVAPORATE IN A WELL-VENTILATED OUTDOOR LOCATION.

VIII - SPECIAL PROTECTIVE INFORMATION

RESPIRATORY PROTECTION (SPECIFY TYPE)

USE SELF-CONTAINED BREATHING APPARATUS OR POSITIVE PRESSURE AIR LINE WITH MASK IN OXYGEN-DEFICIENT ATMOSPHERES. RESPIRATORS WILL NOT FUNCTION.

VENTILATION

\*SEE NOTES\*

PROTECTIVE GLOVES

LOOSE-FITTING THERMAL INSULATED/LEATHER

EYE PROTECTION

FULL FACE SHIELD AND SAFETY GLASSES ARE RECOMMENDED WHEN HANDLING N<sub>2</sub> LIQUID

OTHER PROTECTIVE EQUIPMENT

LONG SLEEVE SHIRT FOR LIQUID HANDLING.  
SAFETY SHOES IF HANDLING CYLINDERS.

\*\*\*\*\* SECTION NOTES \*\*\*\*\*

ADEQUATE TO AVOID LOWERING OXYGEN CONTENT TO BELOW 19.5 % (OXYGEN-DEFICIENT ATMOSPHERE).

LOCAL EXHAUST: YES  
MECHANICAL: YES

IX - SPECIAL PRECAUTIONS

PRECAUTIONS TO BE TAKEN IN HANDLING AND STORING

HER 00623

M A T E R I A L S A F E T Y D A T A S H E E T  
PRODUCT NAME NITROGEN, REFRIGERATED LIQUID

---

STORE AND USE WITH ADEQUATE VENTILATION. CONTAINERS SHOULD BE STORED UPRIGHT AND FIRMLY SECURED TO PREVENT FALLING OR BEING KNOCKED OVER. PROTECT CONTAINERS FROM PHYSICAL DAMAGE; DO NOT DRAG, ROLL, SLIDE, OR DROP. USE A SUITABLE HAND TRUCK FOR CONTAINER MOVEMENT. LIQUID CONTAINERS (I.E.: 4L CYLINDERS) WILL VENT NITROGEN IF INTERNAL PRESSURE BUILDS UP, SO THESE CONTAINERS SHOULD BE STORED IN WELL-VENTILATED AREAS.

D.O.T. LABELING

NONFLAMMABLE GAS - GREEN LABEL

VALVE CONNECTION

295 FOR LIQUID, 580 FOR GAS

OTHER PRECAUTIONS

LIQUID NITROGEN EXPANDS AT A RATIO OF 696.5 TO 1, AND IF TRAPPED IN A CONTAINER OR PIPE, IT WILL PRODUCE ENORMOUS PRESSURES WHICH WILL RUPTURE THE CONTAINER. ANY AREA WHERE LIQUID NITROGEN COULD BE TRAPPED MUST BE PROTECTED BY A PRESSURE RELIEF DEVICE. PIPING MUST BE DESIGNED FOR EXTREME COLD. MANY MATERIALS, SUCH AS CARBON STEEL, WILL BECOME BRITTLE AND MAY FRACTURE WHEN EXTREMELY COLD. DO NOT TOUCH COLD PIPING AS FROSTBITE MAY OCCUR.

DOT PLACARD: NONFLAMMABLE GAS

DOT PROPER SHIPPING NAME: NITROGEN, REFRIGERATED LIQUID

MISCELLANEOUS INFORMATION:

FURTHER INFORMATION ABOUT LIQUID NITROGEN CAN BE FOUND IN THE FOLLOWING PAMPHLETS PUBLISHED BY:

THE COMPRESSED GAS ASSOCIATION (CGA)  
1235 JEFFERSON DAVIS HIGHWAY  
ARLINGTON, VA 22202  
(703) 979-4341

- G-10.1: "COMMODITY SPECIFICATION FOR NITROGEN"
- P-1: "SAFE HANDLING OF COMPRESSED GASES IN CONTAINERS"
- P-9: "THE INERT GASES ARGON, NITROGEN, AND HELIUM"
- P-12: "SAFE HANDLING OF CRYOGENIC LIQUID"
- P-14: "ACCIDENT PREVENTION IN OXYGEN-RICH AND OXYGEN-DEFICIENT ATMOSPHERES"
- SE-2: "OXYGEN-DEFICIENT ATMOSPHERES"
- AV-5: "SAFE HANDLING OF LIQUEFIED NITROGEN & ARGON"

• NFPA RATINGS:  
HEALTH: 3  
FLAMMABILITY: 0  
REACTIVITY: 0

• HMIS RATINGS:  
HEALTH: 3  
FLAMMABILITY: 0  
REACTIVITY: 0

• CERCLA RATINGS:  
HEALTH: 0  
FIRE: 0  
REACTIVITY: 0  
PERSISTENCE: 3

• LISTED IN TSCA INVENTORY: YES

AIR LIQUIDE AMERICA CORPORATION  
P. O. BOX 3047  
HOUSTON, TX 77253

PAGE 5

M A T E R I A L S A F E T Y D A T A S H E E T  
PRODUCT NAME NITROGEN, REFRIGERATED LIQUID

---

-----  
THIS PRODUCT SAFETY DATA SHEET IS OFFERED SOLELY FOR YOUR INFORMATION,  
CONSIDERATION, INVESTIGATION, IN COMPLIANCE WITH HAZARD COMMUNICATION STANDARD  
29 CFR 1900.1200. AIR LIQUIDE AMERICA CORP. PROVIDES NO WARRANTIES, EITHER  
EXPRESS OR IMPLIED.  
-----

HER 00625

M A T E R I A L S A F E T Y D A T A S H E E T

I - G E N E R A L I N F O R M A T I O N

PRODUCT NAME NITROGEN

EMERGENCY TELEPHONE NO. 713-868-0302  
MANUFACTURERS NAME AIR LIQUIDE AMERICA CORP.  
TRADE NAME/SYNONYMS NITROGEN; NITROGEN NF  
CHEMICAL NAME AND SYNONYMS  
NITROGEN

REVISION DATE: 08/24/89  
CHEMICAL FAMILY INERT GAS

PRODUCT ID. UN 1066 FORMULA N2  
CAS NUMBER 7727-37-9

STILL CURRENT

3-1-96 ALAC/RLP

\*\*\*\*\* SECTION NOTES \*\*\*\*\*

MSDS INFORMATION NUMBER: (713) 896-2140

I I - H A Z A R D O U S I N G R E D I E N T S

HAZARDOUS MIXTURES OF LIQUIDS AND GASES

O/O TLV

NITROGEN

\*\* NONE ESTABLISHED

100 \*\*

I I I - P H Y S I C A L D A T A

BOILING POINT -320.4F (-195.8C) @ 1 ATM  
SPECIFIC GRAVITY (AIR = 1): 0.967 @ 70 F (21.1C) @ 1 ATM  
VAPOR PRESSURE N/A  
PERCENT VOLATILE BY VOLUME (O/O) N/A (GAS)  
DENSITY 0.07245 LB/CU FT  
@ 70 F (21.1 C) @ 1 ATM  
EVAPORATION RATE N/A (GAS)  
SOLUBILITY IN WATER 2.33SCC/100CC H2O @ 32 F (0 C)  
MATERIAL AT NORMAL CONDITION GAS  
EXPANSION RATIO (LIQUID TO GAS) N/A (GAS)

APPEARANCE AND COLOR

COLORLESS, COLORLESS, TASTELESS GAS

I V - F I R E A N D E X P L O S I O N H A Z A R D D A T A

FLASH POINT N/A  
FLASH POINT (METHOD USED)  
FLAMMABILITY LIMITS IN AIR (O/O BY VOL) LOWER N/A UPPER N/A

EXTINGUISHING MEDIA

MATERIAL IS NONFLAMMABLE. NITROGEN NEITHER BURNS NOR SUPPORTS COMBUSTION. USE EXTINGUISHING MEDIA APPROPRIATE FOR SURROUNDING FIRE.

SPECIAL FIRE FIGHTING PROCEDURES

NONE. NITROGEN WILL ACT AS A SIMPLE ASPHYXIAN IF IT DISPLACES OXYGEN. IF POSSIBLE, REMOVE NITROGEN CYLINDERS FROM FIRE AREA OR COOL WITH WATER TO AVOID EXCESSIVE PRESSURE BUILDUP. SELF-CONTAINED BREATHING APPARATUS MAY BE REQUIRED FOR RESCUE WORKERS.

UNUSUAL FIRE AND EXPLOSION HAZARD

PRESSURE CAN BUILD UP DUE TO HEAT AND CYLINDER MAY EXPLODE IF PRESSURE RELIEF DEVICES SHOULD FAIL TO RELIEVE PRESSURE.

AUTOIGNITION TEMPERATURE: N/A

HER 00626



M A T E R I A L S A F E T Y D A T A S H E E T  
PRODUCT NAME NITROGEN

ELECTRICAL CLASSIFICATION: NONHAZARDOUS

V - H E A L T H H A Z A R D D A T A

THRESHOLD LIMIT VALUE NONE ESTABLISHED  
UNUSUAL CHRONIC TOXICITY \*SEE OVEREXPOSURE SECTION\*  
CARCINOGENICITY NOT LISTED BY IARC, NTP, OSHA  
ROUTES OF EXPOSURE INHALATION  
EFFECTS OF OVEREXPOSURE

NITROGEN IS NONTOXIC, BUT MAY CAUSE SUFFOCATION BY DIS-  
PLACING THE OXYGEN IN THE AIR. EXPOSURE TO OXYGEN-DEFICIENT  
ATMOSPHERES MAY CAUSE DIZZINESS, NAUSEA, VOMITING, DIMINI-  
SHED MENTAL ALERTNESS, LOSS OF CONSCIOUSNESS, AND DEATH. IT  
SHOULD BE RECOGNIZED THAT COLLAPSE AND ASPHYXIATION MAY  
OCCUR WITHOUT EXPERIENCING ANY OF THE ABOVE SYMPTOMS.

TOXICOLOGICAL PROPERTIES:

NITROGEN IS A SIMPLE ASPHYXIAN.

EMERGENCY AND FIRST AID PROCEDURES

PERSONS SUFFERING FROM LACK OF OXYGEN SHOULD BE MOVED INTO  
FRESH AIR. IF VICTIM IS NOT BREATHING, ADMINISTER ARTI-  
FICIAL RESPIRATION. IF BREATHING IS DIFFICULT, ADMINISTER  
OXYGEN. OBTAIN PROMPT MEDICAL ATTENTION.

SELF-CONTAINED BREATHING APPARATUS MAY BE REQUIRED FOR RES-  
CUE WORKERS.

VI - R E A C T I V I T Y D A T A

STABILITY STABLE  
CONDITIONS TO AVOID  
NONE.  
INCOMPATIBILITY (MATERIALS TO AVOID)

NONE.

HAZARDOUS DECOMPOSITION PRODUCTS

NONE.

HAZARDOUS POLYMERIZATION WILL NOT OCCUR

CONDITIONS TO AVOID

NONE.

VII - S P I L L O R L E A K P R O C E D U R E S

STEPS TO BE TAKEN IN CASE MATERIAL IS RELEASED OR SPILLED

HER 00627

M A T E R I A L S A F E T Y D A T A S H E E T  
PRODUCT NAME NITROGEN

EVACUATE ALL UNNECESSARY PERSONNEL FROM AFFECTED AREA. SHUT OFF SOURCE OF NITROGEN IF POSSIBLE. VENTILATE ENCLOSED AREAS OR REMOVE CYLINDERS TO AN OUTDOOR LOCATION TO PREVENT FORMATION OF OXYGEN-DEFICIENT ATMOSPHERES. IF LEAKING FROM CONTAINER OR VALVE, CONTACT THE CLOSEST BIG THREE INDUSTRIES LOCATION, OR YOUR SUPPLIER.

WASTE DISPOSAL METHOD

DO NOT ATTEMPT TO DISPOSE OF RESIDUAL OR UNUSED QUANTITIES. RETURN TO YOUR SUPPLIER FOR DISPOSAL. FOR EMERGENCY DISPOSAL, SECURE CYLINDER AND VENT SLOWLY TO THE ATMOSPHERE IN A WELL-VENTILATED AREA OR OUTDOORS.

V I I I - S P E C I A L P R O T E C T I V E I N F O R M A T I O N

RESPIRATORY PROTECTION (SPECIFY TYPE)

USE SELF-CONTAINED BREATHING APPARATUS OR POSITIVE PRESSURE AIR LINE WITH MASK IN OXYGEN-DEFICIENT ATMOSPHERES. RESPIRATORS WILL NOT FUNCTION.

VENTILATION

\*SEE NOTES\*

PROTECTIVE GLOVES

N/A

EYE PROTECTION

SAFETY GLASSES ARE RECOMMENDED WHEN HANDLING HIGH PRESSURE CYLINDERS.

OTHER PROTECTIVE EQUIPMENT

SAFETY SHOES WHEN HANDLING CYLINDERS.

\*\*\*\*\* SECTION NOTES \*\*\*\*\*

ADEQUATE TO AVOID LOWERING OXYGEN CONTENT TO BELOW 19.5 % (OXYGEN-DEFICIENT ATMOSPHERE).

LOCAL EXHAUST: YES  
MECHANICAL: YES

I X - S P E C I A L P R E C A U T I O N S

PRECAUTIONS TO BE TAKEN IN HANDLING AND STORING

STORE AND USE WITH ADEQUATE VENTILATION. CYLINDERS SHOULD BE STORED UPRIGHT WITH VALVE PROTECTION CAP IN PLACE AND FIRMLY SECURED TO PREVENT FALLING OR BEING KNOCKED OVER. PROTECT CYLINDERS FROM PHYSICAL DAMAGE; DO NOT DRAG, ROLL, SLICE, OR DROP. USE A SUITABLE HAND TRUCK FOR CYLINDER MOVEMENT. DO NOT ALLOW THE TEMPERATURE WHERE CYLINDERS ARE STORED TO EXCEED 125 F (52 C).

D.C.T. LABELING

NONFLAMMABLE GAS - GREEN LABEL

VALVE CONNECTION

HER 00628

M A T E R I A L S A F E T Y D A T A S H E E T  
PRODUCT NAME NITROGEN

580

OTHER PRECAUTIONS

NEVER STRIKE A WELDING ARC ON ANY COMPRESSED GAS CYLINDER.  
REFILLING CYLINDERS WITHOUT THE CONSENT OF THE CYLINDER  
OWNER IS A VIOLATION OF FEDERAL LAW (49 CFR).

DOT PLACARD: NONFLAMMABLE GAS

DOT PROPER SHIPPING NAME: NITROGEN, COMPRESSED

MISCELLANEOUS INFORMATION:

FURTHER INFORMATION ABOUT NITROGEN CAN BE FOUND IN THE  
FOLLOWING PAMPHLETS PUBLISHED BY:

THE COMPRESSED GAS ASSOCIATION (CGA)  
1235 JEFFERSON DAVIS HIGHWAY  
ARLINGTON, VA 22202  
(703) 979-4341

- G-10.1: "COMMODITY SPECIFICATION FOR NITROGEN"
- P-1: "SAFE HANDLING OF COMPRESSED GASES IN CONTAINERS"
- P-9: "THE INERT GASES ARGON, NITROGEN, AND HELIUM"
- P-14: "ACCIDENT PREVENTION IN OXYGEN-RICH AND OXYGEN-  
DEFICIENT ATMOSPHERES"
- SB-2: "OXYGEN DEFICIENT ATMOSPHERES"

NEPA RATINGS:  
HEALTH: 0  
FLAMMABILITY: 0  
REACTIVITY: 0

HMIS RATINGS:  
HEALTH: 0  
FLAMMABILITY: 0  
REACTIVITY: 0

CERCLA RATINGS:  
HEALTH: 0  
FIRE: 0  
REACTIVITY: 0  
PERSISTENCE: 3

LISTED IN TSCA INVENTORY: YES

THIS PRODUCT SAFETY DATA SHEET IS OFFERED SOLELY FOR YOUR INFORMATION,  
CONSIDERATION, INVESTIGATION, IN COMPLIANCE WITH HAZARD COMMUNICATION STANDARD  
29 CFR 1900.1200. AIR LIQUIDE AMERICA CORP. PROVIDES NO WARRANTIES, EITHER  
EXPRESS OR IMPLIED.

HER 00629

M A T E R I A L S A F E T Y D A T A S H E E T

I - G E N E R A L I N F O R M A T I O N

PRODUCT NAME OXYGEN

EMERGENCY TELEPHONE NO. 713-868-0302  
MANUFACTURERS NAME AIR LIQUIDE AMERICA CORP. *3-1-96 ALAC/REP.*  
TRADE NAME/SYNONYMS OXYGEN; OXYGEN USP; AVIATORS BREATHING OXYGEN (ABO)  
CHEMICAL NAME AND SYNONYMS  
OXYGEN  
REVISION DATE: 09/05/89 PRODUCT ID. UN 1072 FORMULA O2  
CHEMICAL FAMILY OXIDIZER CAS NUMBER 7782-44-7

\*\*\*\*\* SECTION NOTES \*\*\*\*\*

MSDS INFORMATION NUMBER: (713) 896-2140

II - H A Z A R D O U S I N G R E D I E N T S

HAZARDOUS MIXTURES OF LIQUIDS AND GASES

O/O TLV

OXYGEN

100 \*\*

\*\* NONE ESTABLISHED

III - P H Y S I C A L D A T A

BOILING POINT -297.3F (-183.0C) @ 1 ATM  
SPECIFIC GRAVITY (AIR = 1): 1.1049 @ 70F (21.1C) @ 1 ATM  
VAPOR PRESSURE N/A  
PERCENT VOLATILE BY VOLUME (O/O) N/A (GAS)  
DENSITY 0.09279 LB/CU FT  
@ 70 F (21.1 C) @ 1 ATM  
EVAPORATION RATE N/A (GAS)  
SOLUBILITY IN WATER 4.89SCC/100CC H2O @ 32 F (0 C)  
MATERIAL AT NORMAL CONDITION GAS  
EXPANSION RATIO (LIQUID TO GAS) N/A (GAS)

APPEARANCE AND ODOR

COLORLESS, ODORLESS, TASTELESS GAS

IV - F I R E A N D E X P L O S I O N H A Z A R D D A T A

FLASH POINT N/A  
FLASH POINT (METHOD USED)  
FLAMMABILITY LIMITS IN AIR (O/O BY VOL) LOWER N/A UPPER N/A

EXTINGUISHING MEDIA

MATERIAL IS NONFLAMMABLE. USE EXTINGUISHING MEDIA APPROPRIATE FOR SURROUNDING FIRE.

SPECIAL FIRE FIGHTING PROCEDURES

THOUGH NOT FLAMMABLE ITSELF, OXYGEN VIGOROUSLY ACCELERATES COMBUSTION. IF POSSIBLE, SHUT OFF OXYGEN GAS AND REMOVE CYLINDERS FROM FIRE AREA OR COOL WITH WATER TO AVOID EXCESSIVE PRESSURE BUILD UP.

UNUSUAL FIRE AND EXPLOSION HAZARD

MATERIALS WHICH DO NOT BURN IN AIR MAY BURN IN AN OXYGEN-ENRICHED ATMOSPHERE WHERE THE OXYGEN CONTENT EXCEEDS 21%. OXYGEN MAY FORM EXPLOSIVE COMPOUNDS WHEN EXPOSED TO COMBUSTIBLE MATERIALS OR OIL, GREASE, AND OTHER HYDROCARBON MATERIALS. PRESSURE CAN BUILD UP DUE TO HEAT AND CYLINDER MAY EXPLODE IF PRESSURE RELIEF DEVICES SHOULD FAIL TO

MATERIAL SAFETY DATA SHEET  
PRODUCT NAME OXYGEN

RELIEVE PRESSURE.

V - HEALTH HAZARD DATA

THRESHOLD LIMIT VALUE NONE ESTABLISHED  
UNUSUAL CHRONIC TOXICITY \*SEE OVEREXPOSURE SECTION\*  
CARCINOGENICITY NOT LISTED BY IARC, NTP, OSHA  
ROUTES OF EXPOSURE INHALATION  
EFFECTS OF OVEREXPOSURE

BREATHING 80% OR MORE OXYGEN AT ATMOSPHERIC PRESSURE FOR MORE THAN A FEW HOURS MAY CAUSE NASAL STUFFINESS, COUGH, SORE THROAT, CHEST PAIN AND BREATHING DIFFICULTY. BREATHING OXYGEN AT HIGHER PRESSURE INCREASES THE LIKELIHOOD OF ADVERSE EFFECTS WITHIN A SHORTER TIME PERIOD. EXPOSURE TO OXYGEN AT HIGHER PRESSURES FOR PROLONGED PERIODS HAS BEEN FOUND TO AFFECT VISION, NEUROMUSCULAR COORDINATION AND ATTENTIVE POWERS.

TOXICOLOGICAL PROPERTIES:

AT NORMAL CONCENTRATION AND PRESSURE, OXYGEN POSES NO TOXICITY HAZARDS. HOWEVER, AT ELEVATED CONCENTRATIONS AND PRESSURES, OXYGEN MAY CAUSE ADVERSE EFFECTS (SEE ABOVE).

EMERGENCY AND FIRST AID PROCEDURES

REDUCE OXYGEN PRESSURES TO 1 ATM AND/OR MOVE VICTIM INTO FRESH AIR.

RESCUE PERSONNEL SHOULD BE AWARE OF EXTREME FIRE HAZARDS ASSOCIATED WITH OXYGEN-ENRICHED ATMOSPHERES.

VI - REACTIVITY DATA

STABILITY STABLE

CONDITIONS TO AVOID

NONE.

INCOMPATIBILITY (MATERIALS TO AVOID)

OXYGEN REACTS EXPLOSIVELY WITH ETHERS, ALCOHOLS, AND HYDROCARBON MATERIALS. KEEP OXYGEN CONTAINERS FREE OF OIL AND/OR GREASE.

HAZARDOUS DECOMPOSITION PRODUCTS

NONE.

HAZARDOUS POLYMERIZATION WILL NOT OCCUR

CONDITIONS TO AVOID

NONE.

VII - SPILL OR LEAK PROCEDURES

HER 00631

M A T E R I A L S A F E T Y D A T A S H E E T  
PRODUCT NAME OXYGEN

STEPS TO BE TAKEN IN CASE MATERIAL IS RELEASED OR SPILLED

EVACUATE ALL UNNECESSARY PERSONNEL FROM AFFECTED AREA. SHUT OFF SOURCE OF OXYGEN IF POSSIBLE. VENTILATE AREA TO PREVENT OXYGEN-ENRICHED ATMOSPHERE. REMOVE SOURCES OF HEAT OR IGNITION. IF LEAKING FROM CONTAINER OR VALVE, CONTACT THE CLOSEST BIG THREE INDUSTRIES LOCATION, OR YOUR SUPPLIER.

WASTE DISPOSAL METHOD

DO NOT ATTEMPT TO DISPOSE OF RESIDUAL OR UNUSED QUANTITIES. RETURN TO YOUR SUPPLIER FOR DISPOSAL. FOR EMERGENCY DISPOSAL, SECURE THE CYLINDER AND BLOW DOWN SLOWLY TO THE ATMOSPHERE IN A WELL-VENTILATED AREA OR OUTDOORS.

V I I I - S P E C I A L P R O T E C T I V E I N F O R M A T I O N

RESPIRATORY PROTECTION (SPECIFY TYPE)

NONE.

VENTILATION

NATURAL OR MECHANICAL WHERE GAS IS PRESENT -- \*SEE NOTES\*

PROTECTIVE GLOVES

IF USED, MUST BE CLEAN AND GREASE FREE

EYE PROTECTION

SAFETY GLASSES ARE RECOMMENDED WHEN HANDLING HIGH PRESSURE CYLINDERS.

OTHER PROTECTIVE EQUIPMENT

SAFETY SHOES WHEN HANDLING CYLINDERS.

\*\*\*\*\* SECTION NOTES \*\*\*\*\*

LOCAL EXHAUST: SUFFICIENT TO PREVENT OXYGEN-ENRICHED ATMOSPHERES OF OVER 21% OXYGEN.

I X - S P E C I A L P R E C A U T I O N S

PRECAUTIONS TO BE TAKEN IN HANDLING AND STORING

STORE AND USE WITH ADEQUATE VENTILATION. OXYGEN IS HEAVIER THAN AIR AND LEAKING GAS COULD ACCUMULATE IN LOW AREAS OR CONFINED SPACES CAUSING AN OXYGEN-ENRICHED ATMOSPHERE. CYLINDERS SHOULD BE STORED UPRIGHT WITH VALVE PROTECTION CAP IN PLACE AND FIRMLY SECURED TO PREVENT FALLING OR BEING KNOCKED OVER. PROTECT CYLINDERS FROM PHYSICAL DAMAGE; DO NOT DRAG, ROLL, SLIDE, OR DROP. USE A SUITABLE HAND TRUCK FOR CYLINDER MOVEMENT. DO NOT ALLOW THE TEMPERATURE WHERE CYLINDERS ARE STORED TO EXCEED 125 F (52 C). DO NOT STORE OXYGEN CLOSER THAN 20 FEET FROM FLAMMABLE OR COMBUSTIBLE MATERIALS. KEEP CYLINDERS FREE FROM OIL AND GREASE.

D.O.T. LABELING

OXYGEN --- YELLOW LABEL

VALVE CONNECTION

HER 00632

M A T E R I A L   S A F E T Y   D A T A   S H E E T  
PRODUCT NAME OXYGEN

CGA 540 OR CGA 870 (PIN INDEXED)

OTHER PRECAUTIONS

ALL GAUGES, VALVES, REGULATORS, PIPING AND EQUIPMENT TO BE USED IN OXYGEN SERVICE MUST BE CLEANED FOR OXYGEN SERVICE IN ACCORDANCE WITH CGA PAMPHLET G-4.1. OXYGEN IS NOT TO BE USED AS A SUBSTITUTE FOR COMPRESSED AIR. NEVER STRIKE A WELDING ARC ON ANY COMPRESSED GAS CYLINDER. REFILLING CYLINDERS WITHOUT THE CONSENT OF THE CYLINDER OWNER IS A VIOLATION OF FEDERAL LAW (49 CFR).

DOT PLACARD: OXYGEN

DOT PROPER SHIPPING NAME: OXYGEN, COMPRESSED

MISCELLANEOUS INFORMATION:

FURTHER INFORMATION ABOUT OXYGEN CAN BE FOUND IN THE FOLLOWING PAMPHLETS PUBLISHED BY:

THE COMPRESSED GAS ASSOCIATION (CGA)  
1235 JEFFERSON DAVIS HIGHWAY  
ARLINGTON, VA 22202  
(703) 979-4341

G-4.3: "COMMODITY SPECIFICATION FOR OXYGEN"

G-4: "OXYGEN"

G-4.1: "CLEANING EQUIPMENT FOR OXYGEN SERVICE"

P-1: "SAFE CLEANING OF COMPRESSED GASES IN CONTAINERS"

P-14: "ACCIDENT PREVENTION IN OXYGEN-RICH AND OXYGEN-DEFICIENT ATMOSPHERES"

SR-8: "USE OF OXY-FUEL GAS WELDING AND CUTTING APPARATUS"

AV-8: "CHARACTERISTICS AND SAFE HANDLING OF CRYOGENIC LIQUID AND GASEOUS OXYGEN"

NFPA RATINGS:

HEALTH: 0  
FLAMMABILITY: C  
REACTIVITY: C

HMS RATINGS:

HEALTH: 0  
FLAMMABILITY: C  
REACTIVITY: C

CERCLA RATINGS:

HEALTH: 0  
FIRE: C  
REACTIVITY: C  
PERSISTENCE: 3

LISTED IN TSCA INVENTORY: YES

THIS PRODUCT SAFETY DATA SHEET IS OFFERED SOLELY FOR YOUR INFORMATION, CONSIDERATION, INVESTIGATION, IN COMPLIANCE WITH HAZARD COMMUNICATION STANDARD 29 CFR 1900.1200. AIR LIQUIDE AMERICA CORP. PROVIDES NO WARRANTIES, EITHER EXPRESS OR IMPLIED.

P. O. BOX 3047  
HOUSTON, TX 77253

PURCHASE ORDER 2024594 BV

## M A T E R I A L S A F E T Y D A T A S H E E T

## I - G E N E R A L I N F O R M A T I O N

PRODUCT NAME OXYGEN, REFRIGERATED LIQUID

EMERGENCY TELEPHONE NO. 713-868-0302

MANUFACTURERS NAME AIR LIQUIDE AMERICA CORP.

TRADE NAME/SYNONYMS LIQUID OXYGEN (LOX)

CHEMICAL NAME AND SYNONYMS

OXYGEN, REFRIGERATED LIQUID

REVISION DATE: 09/05/89

PRODUCT ID. UN 1073 FORMULA 02

CHEMICAL FAMILY OXIDIZER

CAS FAMILY 7782-44-7

\*\*\*\*\* SECTION NOTES \*\*\*\*\*

MSDS INFORMATION NUMBER: (713) 896-2140

## I I - H A Z A R D O U S I N G R E D I E N T S

HAZARDOUS MIXTURES OF LIQUIDS AND GASES

O/O

TLV

OXYGEN

\*\* NONE ESTABLISHED

100

\*\*

## I I I - P H Y S I C A L D A T A

BOILING POINT -297.3F (-183.0C) @ 1 ATM

SPECIFIC GRAVITY (H2O = 1): 1.14 @ BOILING PT &amp; 1 ATM

VAPOR PRESSURE N/A

PERCENT VOLATILE BY VOLUME (O/O) N/A

DENSITY 71.22 LB/CU FT

@ BOILING PT &amp; 1 ATM

EVAPORATION RATE N/A

SOLUBILITY IN WATER N/A

MATERIAL AT NORMAL CONDITION LIQUID

EXPANSION RATIO (LIQUID TO GAS) 1:860.6

APPEARANCE AND ODOR

PALE BLUE, ODORLESS LIQUID

## I V - F I R E A N D E X P L O S I O N H A Z A R D D A T A

FLASH POINT N/A

FLASH POINT (METHOD USED)

FLAMMABILITY LIMITS IN AIR (O/O BY VOL) LOWER N/A

UPPER N/A

EXTINGUISHING MEDIA

MATERIAL IS NONFLAMMABLE. USE EXTINGUISHING MEDIA APPROPRIATE FOR SURROUNDING FIRE.

SPECIAL FIRE FIGHTING PROCEDURES

THOUGH NOT FLAMMABLE ITSELF, OXYGEN VIGOROUSLY ACCELERATES COMBUSTION. LIQUID OXYGEN, WHEN SPILLED, WILL EVAPORATE RAPIDLY CAUSING A VAPOR CLOUD THAT WILL BE HIGHLY OXYGEN-ENRICHED, WHICH CAN CAUSE MATERIALS IN THIS CLOUD TO IGNITE EASILY. EVACUATE THE CLOUD AREA AND REMOVE ANY IGNITION SOURCES.

UNUSUAL FIRE AND EXPLOSION HAZARD

HER 00634



M A T E R I A L S A F E T Y D A T A S H E E T  
PRODUCT NAME OXYGEN, REFRIGERATED LIQUID

MATERIALS WHICH DO NOT BURN IN AIR MAY BURN IN OXYGEN-ENRICHED ATMOSPHERES WHERE THE OXYGEN CONTENT EXCEEDS 21%. OXYGEN MAY FORM EXPLOSIVE COMPOUNDS WHEN EXPOSED TO COMBUSTIBLE MATERIALS OR OIL, GREASE, AND OTHER HYDROCARBON MATERIALS. CONTACT WITH "COLD" REFRIGERATED LIQUID MAY CAUSE FROSTBITE. VISIBILITY MAY BE OBSCURED IN THIS VAPOR CLOUD.

AUTOIGNITION TEMPERATURE: N/A

ELECTRICAL CLASSIFICATION: NONHAZARDOUS

V - H E A L T H H A Z A R D D A T A

THRESHOLD LIMIT VALUE NONE ESTABLISHED  
UNUSUAL CHRONIC TOXICITY \*SEE OVEREXPOSURE SECTION\*  
CARCINOGENICITY NOT LISTED BY IARC, NTP, OSHA  
ROUTES OF EXPOSURE INHALATION, EYE/SKIN CONTACT  
EFFECTS OF OVEREXPOSURE

CONTACT WITH LIQUID OXYGEN CAN CAUSE SEVERE FROSTBITE AND FREEZE BURNS. PROLONGED BREATHING OF VERY COLD ATMOSPHERES CAN CAUSE LUNG DAMAGE AND HYPOTHERMIA. BREATHING 80% OR MORE OXYGEN AT ATMOSPHERIC PRESSURE FOR MORE THAN A FEW HOURS MAY CAUSE NASAL STUFFINESS, COUGH, SORE THROAT, CHEST PAIN AND BREATHING DIFFICULTY. BREATHING OXYGEN AT HIGHER PRESSURE INCREASES THE LIKELIHOOD OF ADVERSE EFFECTS WITHIN A SHORTER TIME PERIOD. EXPOSURE TO OXYGEN AT HIGHER PRESSURES FOR PROLONGED PERIODS HAS BEEN FOUND TO AFFECT VISION, NEUROMUSCULAR COORDINATION, AND ATTENTIVE POWERS.

TOXICOLOGICAL PROPERTIES:

AT NORMAL CONCENTRATION AND PRESSURE, OXYGEN POSES NO TOXICITY HAZARDS. HOWEVER, AT ELEVATED CONCENTRATIONS AND PRESSURES, OXYGEN MAY CAUSE ADVERSE EFFECTS (SEE ABOVE).

EMERGENCY AND FIRST AID PROCEDURES

REDUCE OXYGEN PRESSURES TO 1 ATM AND/OR MOVE VICTIM INTO FRESH AIR.

RESCUE PERSONNEL SHOULD BE AWARE OF EXTREME FIRE HAZARDS ASSOCIATED WITH OXYGEN-ENRICHED ATMOSPHERES.

IF CONTACT WITH CRYOGENIC LIQUID OXYGEN HAS CAUSED FROSTBITE DO NOT RUB THE AFFECTED AREA, AS TISSUE DAMAGE MAY OCCUR. FLUSH THE AFFECTED AREAS WITH WARM WATER. DO NOT USE HOT WATER. OBTAIN PROMPT MEDICAL ATTENTION.

V I - R E A C T I V I T Y D A T A

STABILITY STABLE  
CONDITIONS TO AVOID

PRODUCT NAME MATERIAL SAFETY DATA SHEET  
OXYGEN, REFRIGERATED LIQUID

NONE.

INCOMPATIBILITY (MATERIALS TO AVOID)

OXYGEN REACTS EXPLOSIVELY WITH ETHERS, ALCOHOLS, AND HYDRO-CARBON MATERIALS. KEEP OXYGEN CONTAINERS FREE OF OIL AND/OR GREASE.

HAZARDOUS DECOMPOSITION PRODUCTS

NONE.

HAZARDOUS POLYMERIZATION WILL NOT OCCUR

CONDITIONS TO AVOID

NONE.

VII - SPILL OR LEAK PROCEDURES

STEPS TO BE TAKEN IN CASE MATERIAL IS RELEASED OR SPILLED

EVACUATE ALL UNNECESSARY PERSONNEL FROM VAPOR CLOUD AREA WHERE AN OXYGEN-ENRICHED ATMOSPHERE IS FORMED, AND ELIMINATE ANY SOURCES OF HEAT OR IGNITION. SHUT OFF SOURCE OF OXYGEN IF POSSIBLE. VENTILATE AREA TO PREVENT OXYGEN-ENRICHED ATMOSPHERE. AVOID CONTACT WITH LIQUID OXYGEN OR ITS COLD BOIL-OFF GAS. TO INCREASE RATE OF EVAPORATION, SPRAY WITH LARGE AMOUNTS OF WATER FROM UPWIND. IF LEAKING FROM CONTAINER OR CONNECTION, CONTACT THE CLOSEST BIG THREE INDUSTRIES LOCATION, OR YOUR SUPPLIER.

WASTE DISPOSAL METHOD

DO NOT ATTEMPT TO DISPOSE OF RESIDUAL OR UNUSED QUANTITIES. RETURN TO YOUR SUPPLIER FOR DISPOSAL. FOR EMERGENCY DISPOSAL, ALLOW LIQUID OXYGEN TO EVAPORATE IN A WELL-VENTILATED, CLEAN (GREASE-FREE), OUTDOOR LOCATION. KEEP AREA FREE FROM SPARKS OR FLAMES AND ANY HYDROCARBON MATERIALS.

VIII - SPECIAL PROTECTIVE INFORMATION

RESPIRATORY PROTECTION (SPECIFY TYPE)

NONE.

VENTILATION

NATURAL OR MECHANICAL WHERE GAS IS PRESENT -- \*SEE NOTES\*

PROTECTIVE GLOVES

\*SEE NOTES\*

EYE PROTECTION

FULL FACE SHIELD AND SAFETY GLASSES ARE RECOMMENDED WHEN HANDLING LIQUID OXYGEN.

OTHER PROTECTIVE EQUIPMENT

HER 00636

M A T E R I A L S A F E T Y D A T A S H E E T  
PRODUCT NAME OXYGEN, REFRIGERATED LIQUID

LONG SLEEVE SHIRT FOR LIQUID HANDLING.  
SAFETY SHOES IF HANDLING CYLINDERS.

\*\*\*\*\* SECTION NOTES \*\*\*\*\*

LOCAL EXHAUST: SUFFICIENT TO PREVENT OXYGEN-ENRICHED  
ATMOSPHERES OF OVER 21% OXYGEN.

GLOVES: LOOSE FITTING THERMAL INSULATED OR LEATHER. GLOVES  
MUST BE CLEAN AND GREASE FREE.

I X - S P E C I A L P R E C A U T I O N S

PRECAUTIONS TO BE TAKEN IN HANDLING AND STORING

STORE AND USE WITH ADEQUATE VENTILATION. OXYGEN IS HEAVIER  
THAN AIR AND LEAKING GAS CAN ACCUMULATE IN LOW AREAS OR CON-  
FINED SPACES CAUSING AN OXYGEN-ENRICHED ATMOSPHERE. CON-  
TAINERS SHOULD BE STORED UPRIGHT AND FIRMLY SECURED TO PRE-  
VENT FALLING OR BEING KNOCKED OVER. PROTECT CONTAINERS FROM  
PHYSICAL DAMAGE: DO NOT DRAG, ROLL, SLIDE OR DROP. USE A  
SUITABLE HAND TRUCK FOR CONTAINER MOVEMENT. LIQUID CONTAI-  
NERS (I.E.: 4L CYLINDERS) WILL VENT OXYGEN IF INTERNAL  
PRESSURE BUILDS UP. SO THESE CONTAINERS SHOULD BE STORED IN  
WELL-VENTILATED AREAS. BULK OXYGEN STORAGE MUST MEET EXPO-  
SURE SEPARATION REQUIREMENTS OUTLINED IN NFPA PAMPHLET 50.

D.O.T. LABELING

OXYGEN -- YELLOW LABEL

VALVE CONNECTION

440 FOR LIQUID; 540 FOR GAS

OTHER PRECAUTIONS

LIQUID OXYGEN EXPANDS AT A RATIO OF 860.6 - 1, AND IF TRAP-  
PED IN A CONTAINER OR PIPE, IT WILL PRODUCE ENORMOUS PRES-  
SURES WHICH WILL RUPTURE THE CONTAINER. ANY AREA WHERE  
LIQUID OXYGEN COULD BE TRAPPED MUST BE PROTECTED BY A PRES-  
SURE RELIEF DEVICE. PIPING MUST BE DESIGNED FOR EXTREME  
COLD. MANY MATERIALS, SUCH AS CARBON STEEL, WILL BECOME  
BRITTLE AND MAY FRACTURE WHEN EXTREMELY COLD. DO NOT TOUCH  
COLD PIPING, AS FROSTBITE MAY OCCUR. ALL GAUGES, VALVES,  
REGULATORS, PIPING AND EQUIPMENT TO BE USED IN OXYGEN SER-  
VICE MUST BE CLEANED FOR OXYGEN SERVICE IN ACCORDANCE WITH  
CGA PAMPHLET G-4.1.

DOT PLACARD: OXYGEN

DOT PROPER SHIPPING NAME: OXYGEN, REFRIGERATED LIQUID

MISCELLANEOUS INFORMATION:

FURTHER INFORMATION ABOUT LIQUID OXYGEN CAN BE FOUND IN THE  
FOLLOWING PAMPHLETS PUBLISHED BY:

THE COMPRESSED GAS ASSOCIATION (CGA)  
1235 JEFFERSON DAVIS HIGHWAY  
ARLINGTON, VA 22202  
(703) 979-4341

G-4.3: "COMMODITY SPECIFICATION FOR OXYGEN"

M A T E R I A L   S A F E T Y   D A T A   S H E E T  
PRODUCT NAME OXYGEN, REFRIGERATED LIQUID

G-4: "OXYGEN"  
G-4.1: "CLEANING EQUIPMENT FOR OXYGEN SERVICE"  
P-1: "SAFE HANDLING OF COMPRESSED GASES IN CONTAINERS"  
P-12: "SAFE HANDLING OF CRYOGENIC LIQUIDS"  
P-14: "ACCIDENT PREVENTION IN OXYGEN-RICH AND OXYGEN-  
DEFICIENT ATMOSPHERES"  
SB-8: "USE OF OXY-FUEL GAS WELDING AND CUTTING APPARATUS"  
AV-8: "CHARACTERISTICS AND SAFE HANDLING OF CRYOGENIC  
LIQUID AND GASEOUS OXYGEN"

• NFPA RATINGS:  
HEALTH: 3  
FLAMMABILITY: 0  
REACTIVITY: 0

• HMIS RATINGS:  
HEALTH: 3  
FLAMMABILITY: 0  
REACTIVITY: 0

• CERCLA RATINGS:  
HEALTH: 0  
FIRE: 0  
REACTIVITY: 0  
PERSISTANCE: 3

• LISTED IN TSCA INVENTORY: YES

THIS PRODUCT SAFETY DATA SHEET IS OFFERED SOLELY FOR YOUR INFORMATION,  
CONSIDERATION, INVESTIGATION, IN COMPLIANCE WITH HAZARD COMMUNICATION STANDARD  
29 CFR 1900.1200. AIR LIQUIDE AMERICA CORPORATION PROVIDES NO WARRANTIES,  
EITHER EXPRESS OR IMPLIED.

HER 00638

# MOST EFFICIENT, ON-TIME PROFESSIONAL SUPPLIER

Please answer the questions below.

Detach and drop in the mail today.

We'll pay the postage.

Please help us by completing the following information for our delivery to you. Your comments are valuable and will help us to improve delivery service. Thank You.

Based on a scale of 1 to 4 (with 4 being Extremely Satisfied, and 1 being Extremely Unsatisfied), please rate our performance in the following areas specifically as they pertain to the delivery. The more specific information you provide, the better we can serve your needs.

	Extremely Dissatisfied 1	Dissatisfied 2	Satisfied 3	Extremely Satisfied 4
Ease of placing order?	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Product delivered on time?	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Driver courteous, neat and professional?	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Vehicle clean and appears well-maintained?	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Delivery performed to your expectations?	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Paperwork requirements met?	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Comments/Suggestions: \_\_\_\_\_

\_\_\_\_\_



Company: \_\_\_\_\_

Your Name (optional): \_\_\_\_\_

Telephone: \_\_\_\_\_



HER 00639

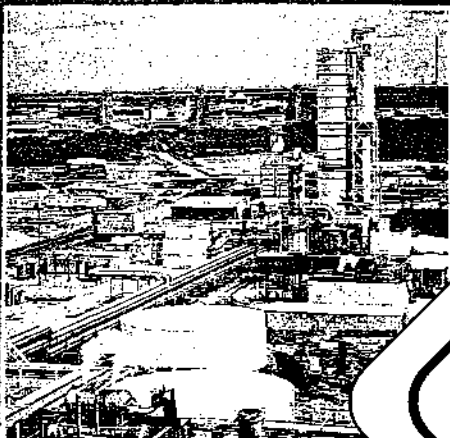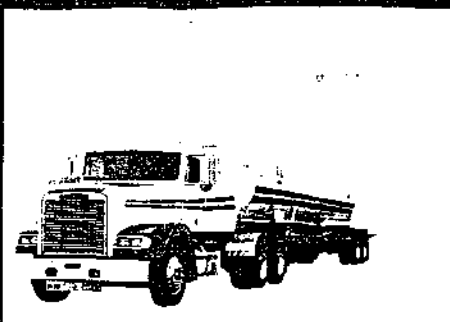

# **SAFETY PRECAUTIONS**

**HOW TO SAFELY  
HANDLE AND USE  
LIQUEFIED AND  
COMPRESSED GASES**



AIR LIQUIDE

HER 00641

# SAFETY PRECAUTIONS

**O**xxygen, nitrogen, argon, helium, compressed air, carbon dioxide, nitrous oxide, hydrogen, acetylene, and specialty gases have properties that can cause serious accidents, injuries, and even death if proper precautions and safety practices are not followed. Always use information found in Material Safety Data Sheets (MSDS) and the applicable standards as well as information

THIS SAFETY PRECAUTION PAMPHLET IS OFFERED SOLELY FOR YOUR INFORMATION, CONSIDERATION AND INVESTIGATION. THE COMPANY PROVIDES NO WARRANTIES, EITHER EXPRESS OR IMPLIED, AND ASSUMES NO RESPONSIBILITY FOR THE ACCURACY OR COMPLETENESS OF THE DATA CONTAINED HEREIN.


## THE FOLLOWING PROCEDURES SHOULD BE OBSERVED WHEN HANDLING COMPRESSED GAS CYLINDERS OR LIQUEFIED GAS CONTAINERS.

**1**

*Read the label on all cylinders or containers before use to identify their contents. If the label is not legible or is missing, do not assume that the cylinder contains a particular gas, but return the cylinder to the gas supplier.*

**NEVER RELY ON THE COLOR OF THE CYLINDER TO IDENTIFY ITS CONTENTS.**

### READ THE LABEL TO IDENTIFY THE GAS!

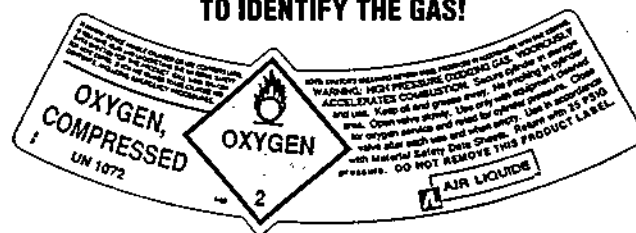

**2**

*Observe all warnings and safety precautions set forth on the cylinder label.*

**3**

*Always secure cylinders in storage and use. Never remove the valve protection cap until the cylinder is secured (chained, tied, etc.) and ready for use.*

### W A R N I N G

**IF A CYLINDER IS KNOCKED OVER AFTER THE CAP IS REMOVED, THE VALVE COULD BE BROKEN OFF CAUSING THE CYLINDER TO BE PROPELLED VIOLENTLY.**



*Never attempt to lift a cylinder by the valve protection cap.*



*Never attempt to transfer any gas from one cylinder to another or to mix any gases in a cylinder.*



*Always use a pressure-reducing regulator when withdrawing any gaseous product from a cylinder or other high pressure source. To minimize the chance of injury, stand to one side of the regulator when opening the cylinder valve.*



*Containers of liquefied compressed gases such as oxygen, nitrogen, argon, helium, hydrogen, carbon dioxide, and nitrous oxide must be kept in an upright position and secured to prevent them from being knocked over.*




*Never use an adaptor to connect a cylinder valve to a regulator or other piece of equipment. Specific valve outlet connections have been designed for most gases to prevent misuse and contamination. For further information, see CGA*

*(Compressed Gas Association) / ANSI (American National Standards Institute) pamphlet V-1, "Compressed Cylinder Outlet and Inlet Connections".*




*Always use a cart when moving cylinders or liquefied gas containers.*

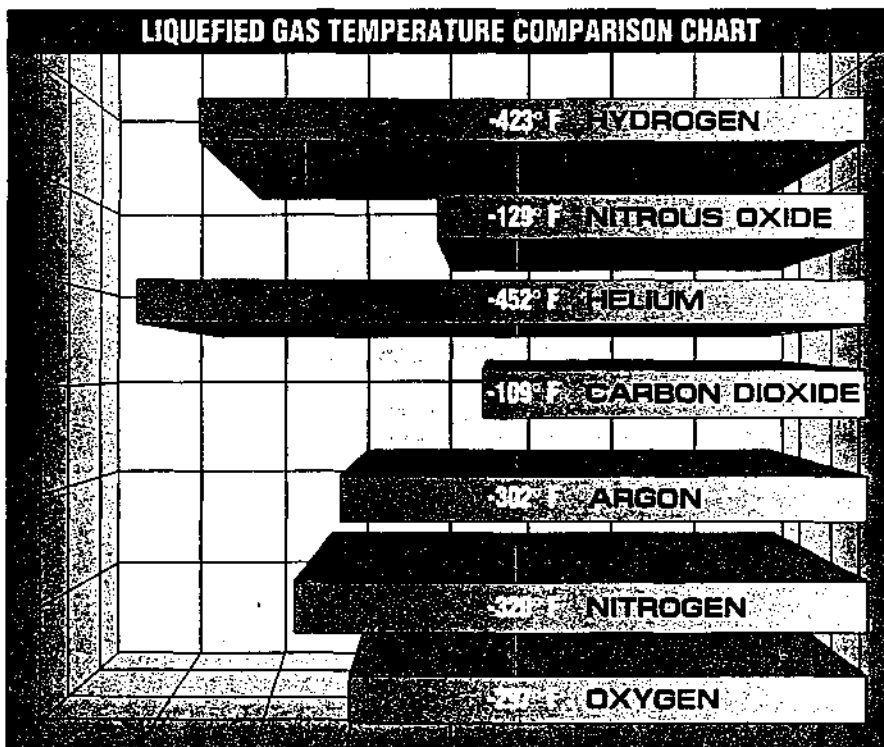

*Liquefied gases are extremely cold and these liquids or their cold "boil-off" vapors can cause cold contact burns or "frost-bite". In addition, many materials such as carbon steel will become brittle and may fracture when exposed to these cold temperatures. Piping for these cold liquids must be designed for extreme cold.*



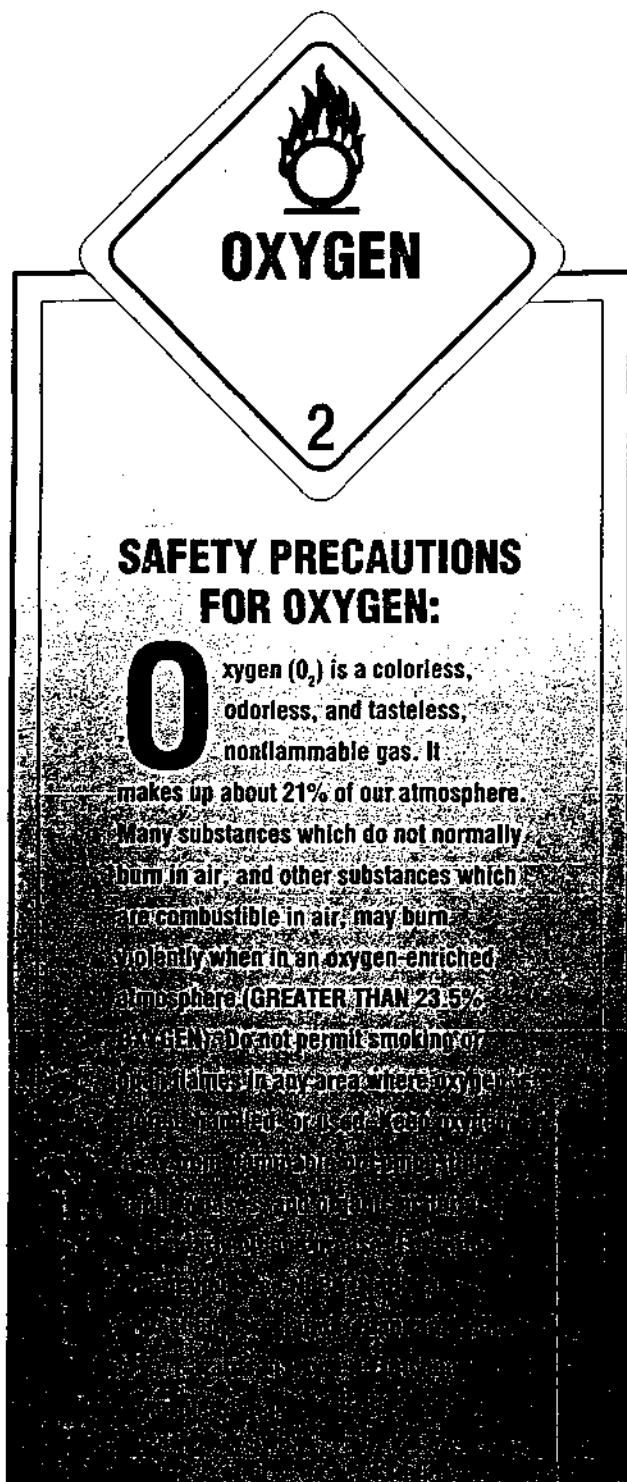

## SAFETY PRECAUTIONS FOR OXYGEN:

**O**xygen (O<sub>2</sub>) is a colorless, odorless, and tasteless, nonflammable gas. It

makes up about 21% of our atmosphere.

Many substances which do not normally

burn in air, and other substances which

are combustible in air, may burn

violently when in an oxygen-enriched

atmosphere (GREATER THAN 23.5%

OXYGEN). Do not permit smoking or

open flames in any area where oxygen

is being handled or stored. Oxygen

is not flammable or combustible

under normal conditions of use.

However, oxygen can support

combustion and can greatly accelerate

the burning of combustible materials.

Keep combustibles and ignition

sources away from where oxygen

is being used or stored.

For more information, see the

Material Safety Data Sheet (MSDS).

For more information, see the

Material Safety Data Sheet (MSDS).

For more information, see the

Material Safety Data Sheet (MSDS).

For more information, see the

Material Safety Data Sheet (MSDS).

For more information, see the

Material Safety Data Sheet (MSDS).

For more information, see the

Material Safety Data Sheet (MSDS).

For more information, see the

Material Safety Data Sheet (MSDS).

**KEEP ALL SURFACES WHICH MAY COME IN CONTACT  
WITH OXYGEN CLEAN TO PREVENT IGNITION.**

Even normal industrial soot and dirt can constitute a combustion hazard in the presence of oxygen. Do not place liquid oxygen equipment on asphalt or on any surface which may have oil or grease deposits. If liquid oxygen is spilled, do not walk on or roll equipment over the spill. Use cleaning agents which will not leave organic deposits on the cleaned surfaces. In handling equipment which may come in contact with oxygen, use only clean, lint-free gloves or hands washed clean of oil. Never lubricate oxygen valves, regulators, gauges, or fittings with oil, grease, or other lubricants that are not oxygen compatible. Check with your lubricant manufacturer or oxygen supplier for a source of oxygen compatible lubricants.

### W A R N I N G

**LIQUID OXYGEN IS EXTREMELY COLD  
(-297.0 °F), AND AS A LIQUID, OR  
COLD GAS MAY CAUSE SEVERE  
FROSTBITES TO THE EYES OR SKIN.**

Do not touch frosted pipes or valves. If accidental eye or skin contact with liquid oxygen occurs, consult a physician at once. Do not rub frozen body parts, as tissue damage may result. Remove any clothing that may restrict circulation to the frozen area. As soon as practical, place the affected part of the body in a warm water bath which has a temperature not to exceed 105°F (40°C). Never use dry heat.

### PROTECT EYES AND SKIN.

Always handle liquid so that it will not splash or spill. Protect your eyes with safety goggles or face shield, and cover the skin to prevent contact with the liquid or cold gas. Clean, protective gloves that can be quickly and easily removed, and long sleeves are recommended for arm protection. Cuffless trousers should be worn outside of boots or work shoes to shed spilled liquid. If clothing should be splashed with liquid oxygen or otherwise saturated with oxygen gas, it should not be considered safe to wear for at least 30 minutes, since it can be easily ignited while the concentrated oxygen remains.

### LIQUID-TO-GAS EXPANSION

Cryogenic liquids produce large quantities of gas when they vaporize. Liquid oxygen will expand at a ratio of 1:860, liquid to gas. If liquid oxygen is trapped in a sealed container or piping, it will vaporize producing enormous pressures which could cause the container to rupture violently if not protected by a pressure relief device.

---

## VAPOR CLOUD OR FOG

---

Cryogenic liquids and their "boil-off" vapors are extremely cold and have a built-in warning property that appears whenever they are exposed to the atmosphere. The cold "boil-off" gases condense the moisture in the air, creating a highly visible fog or vapor cloud. This fog normally extends over a larger area than the vaporizing gas.

If a large vapor cloud forms after a liquid spill, you should avoid this cloud because of possible oxygen enriched atmospheres or reduced visibility. In addition, all sources of ignition should be shut off in the path of the oxygen vapor cloud, if possible.

Small fog areas may appear during liquid transfer as the cold piping condenses moisture in the surrounding air.

---

## STORE OXYGEN CYLINDERS AND LIQUEFIED OXYGEN CONTAINERS IN ACCORDANCE WITH APPLICABLE SAFETY CODES.

---

Oxygen in storage must be separated from flammable liquids or gases and combustible materials (especially oil or grease), a minimum distance of 20 feet unless separated by a noncombustible barrier at least 5 feet high and having a fire resistance rating of at least one-half hour. For more information, see NFPA Standard No. 50, "Bulk Oxygen Systems At Consumer Sites".

---

## MAINTAIN ADEQUATE VENTILATION.

---

Adequate ventilation must be provided to prevent accumulation of oxygen and minimize combustion hazards in areas where oxygen is used and stored.

---

## CONTAINERS, EQUIPMENT, AND REPLACEMENT PARTS MUST BE SUITABLE FOR OXYGEN SERVICE.

---

Use only equipment, cylinders, containers and apparatus designed and approved for use with oxygen. Many materials, especially some non-metallic gaskets and seals, constitute a combustion hazard when in oxygen service, although they may be acceptable for use with other gases. Make no substitutions for recommended equipment, and be sure all replacement parts are compatible with oxygen and cleaned for oxygen service. Keep repair parts in sealed, clean plastic bags until ready for use.

---

## REGULATORS

---

Before attaching a regulator to a cylinder, visually inspect the cylinder valve outlet very carefully for traces of dirt, dust, oil or grease. Remove dirt and dust with a clean cloth, but if oil or grease is detected, do not use the cylinder; return it to your supplier. Before attaching the regulator to the cylinder valve, crack the cylinder valve momentarily to blow out any dust or

dirt that might have accumulated in the valve outlet. Visually inspect the regulator and the inlet connection to ensure that they are free of dirt, oil, grease or other hydrocarbon-type contaminants. These contaminants may ignite and burn violently when the cylinder valve is opened. Dirt and dust should be removed with a clean cloth. However, oil and grease cannot be easily removed, and the regulator should be returned to an authorized service facility for proper cleaning. Connect the regulator to the valve, back out the pressure-adjusting screw until it turns freely, open the cylinder valve slowly until maximum pressure is indicated on the high pressure gauge, then open the cylinder valve all the way to eliminate possible leaks through the packing. To minimize the chance of injury, stand to one side of the regulator when opening the cylinder valve.

**W A R N I N G**  
**REGULATORS WHICH HAVE BEEN USED WITH**  
**FLAMMABLE GASES SHOULD NEVER BE USED**  
**FOR OXYGEN SERVICE UNLESS CLEANED BY**  
**AUTHORIZED PERSONNEL.**

---

## OBSERVE ALL APPLICABLE SAFETY CODES WHEN INSTALLING OXYGEN EQUIPMENT.

---

Follow the recommendations of the NFPA Standard No. 50, "Bulk Oxygen Systems at Consumer Sites", NFPA Standard No. 51, "Oxygen-Fuel-Gas Systems for Cutting and Welding", American National Standards Institute Pamphlet No. Z49.1, "Safety In Welding and Cutting", and with all local safety codes when installing oxygen equipment or oxygen piping.

---

## OXYGEN FOR MEDICAL USE

---

Oxygen should be used for medical use only if it is labeled: "Oxygen U.S.P.", and it is administered by qualified persons; and, except in emergencies, under doctor's prescription.

For further information about medical gas systems, consult NFPA Standard No. 99, "Health Care Facilities".


Oxygen should never be substituted for breathing air when air supplied respiratory protection is used since regulators used in this service may contain substances which are not compatible with oxygen and may result in an explosion.

---

## IF IT IS NECESSARY TO DISPOSE OF WASTE GAS OR LIQUID, EXERCISE CAUTION.

---

Gaseous oxygen should be released only outdoors away from personnel, combustible materials, and sources of ignition. Liquid oxygen should be dumped into an outdoor pit filled with clean, grease and oil-free gravel, where it will evaporate safely.




**NON FLAMMABLE  
GAS**

**2**

**SAFETY PRECAUTIONS  
FOR:**

- NITROGEN
- ARGON
- HELIUM
- COMPRESSED AIR
- CARBON DIOXIDE
- NITROUS OXIDE

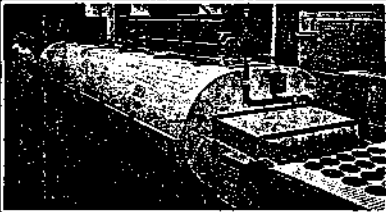

*Liquid nitrogen and carbon dioxide are used in food freezing operations. Cryogenic tunnel freezing enhances the quality of premium meat products.*

## NITROGEN, ARGON, AND HELIUM SAFETY PRECAUTIONS

Nitrogen ( $N_2$ ), argon (Ar), and helium (He) are inert, colorless, odorless, tasteless and nonflammable gases. The atmosphere that we breathe contains 21% oxygen, 78% nitrogen, 1% argon and trace amounts of other gases such as helium.

### W A R N I N G

**NITROGEN, ARGON, AND HELIUM ARE  
NONTOXIC, BUT THEY CAN CAUSE  
ASPHYXIATION AND DEATH IN CONFINED,  
POORLY VENTILATED AREAS BY  
DISPLACING THE OXYGEN WHICH IS  
NECESSARY TO SUSTAIN LIFE.**

Atmospheres which do not contain enough oxygen for breathing (at least 19.5%) can cause dizziness, unconsciousness, or even death.

Nitrogen, argon, and helium cannot be detected by the human senses and will be inhaled like air. If adequate ventilation is not provided, these gases may displace normal air without warning. Store containers outdoors or in other well-ventilated areas. Never enter any tank, pit, or other confined area where these gases may be present until purged with air and tested for a breathable atmosphere (at least 19.5% oxygen) using an oxygen analyzer.


### W A R N I N G

**LIQUID NITROGEN ( - 320.4 °F),  
ARGON ( - 302.5 °F), AND HELIUM ( - 452.0 °F)  
ARE EXTREMELY COLD, AND AS LIQUIDS  
OR COLD GASES CAN CAUSE SEVERE  
FROSTBITE TO THE EYES OR SKIN.**

Do not touch frosted pipes or valves. If accidental eye or skin contact with cryogenic liquids occur, consult a physician at once. Do not rub frozen body parts, as tissue damage may result. Remove any clothing that may restrict circulation to the frozen area. As soon as practical, place the affected part of the body in a warm water bath which has a temperature not to exceed 105°F (40°C). Never use dry heat.

### PROTECT EYES AND SKIN.

Always handle liquid so that it will not splash or spill. Protect your eyes with safety goggles or face shield, and cover the skin to prevent contact with the liquid or cold gas. Protective gloves that can be quickly and easily removed and long sleeves are recommended for arm protection. Wear cuffless trousers outside boots or over work shoes to shed spilled liquid.

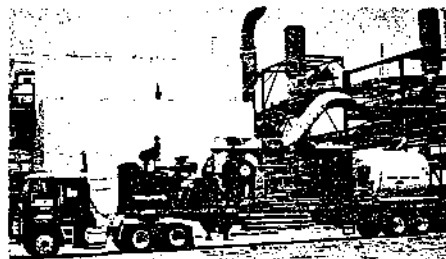

*High pressure mobile units respond to special applications for nitrogen and oxygen.*

### LIQUID-TO-GAS EXPANSION

Cryogenic liquids produce large quantities of gas when they vaporize. Liquid nitrogen will expand at a ratio of 1:696 liquid to gas, liquid argon will expand at a ratio of 1:842 liquid to gas, and liquid helium will expand at a ratio of 1:745 liquid to gas. If liquid nitrogen, argon or helium is trapped in a sealed container or piping, it will vaporize producing enormous pressures which could cause the container to rupture violently if not protected by a pressure relief device.

### VAPOR CLOUD OR FOG

Cryogenic liquids and their "boil-off" vapors are extremely cold and have a built-in warning property that appears whenever they are exposed to the atmosphere. The cold "boil-off" gases condense the moisture in the air, creating a highly visible fog or vapor cloud. This fog normally extends over a larger area than the vaporizing gas.

If a large vapor cloud forms after a liquid spill, you should avoid this cloud because of possible oxygen deficient atmospheres or reduced visibility.

Small fog areas may appear during liquid transfer as the cold piping condenses moisture in the surrounding air.


### LIQUID HELIUM SPECIAL PRECAUTIONS

The extremely low temperature of liquid helium (- 452.0 °F) can solidify any gas including air. Such solidified gases can plug pressure-relief passages and devices making them ineffective in relieving excess pressure from evaporating liquid. Always store and handle liquid helium under positive pressure and in closed systems to prevent infiltration and solidification of air or other gases.

Keep exterior surfaces of liquid helium equipment clean. Oxygen can condense from the air on exposed liquid helium or cold-gas equipment surfaces, such as vaporizers and piping. To prevent the possible ignition of grease, oil, or other combustible materials with the condensed oxygen, keep these surfaces clean.

### IF IT IS NECESSARY TO DISPOSE OF WASTE GAS OR LIQUID, EXERCISE CAUTION.

Gaseous nitrogen, argon, or helium should be released only in an outdoor area. Liquid nitrogen, argon or helium should be released into an outdoor pit filled with clean, grease and oil-free gravel, where it will evaporate rapidly and safely.

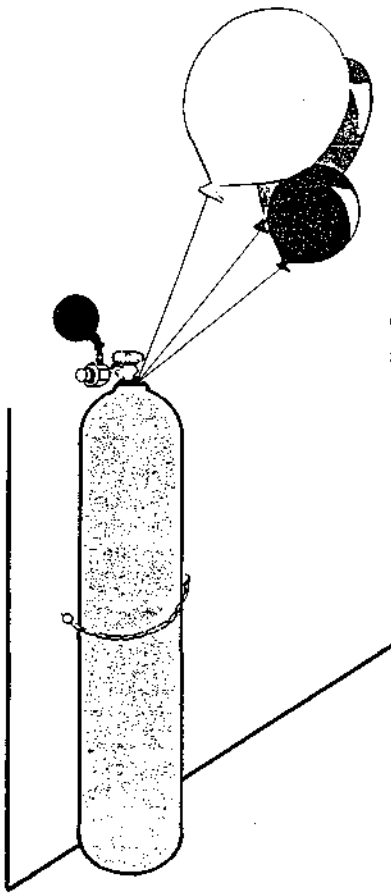

### HELIUM BALLOON WARNING

**HELIUM BALLOONS AND BALLOON FILLING EQUIPMENT ARE OFTEN MISUSED IN AN ATTEMPT TO ALTER VOICE CHARACTERISTICS BY INHALING HELIUM TO TALK LIKE "DONALD DUCK".**

**THIS IS AN EXTREMELY DANGEROUS PROCEDURE WHICH HAS RESULTED IN DEATHS THROUGH SUFFOCATION AND/OR LUNG DAMAGE.**


Observe the following precautions when handling helium cylinders for balloon filling. Don't let an accident spoil the fun of using helium filled balloons.

- Read and follow the safety precautions that appear on the cylinder label.
- Use only a regulator which is designed for balloon filling.
- Store and use helium cylinders in a well ventilated area, and transport cylinders only in well ventilated vehicles. Helium gas is odorless and non-toxic, but can cause suffocation by displacing the oxygen you breathe.
- Never remove the cylinder valve protection cap until the cylinder is secured (chained, tied, etc.) in an upright position and ready for use.
- Do not breathe helium from the cylinders, filling regulators or from helium filled balloons.
- Never allow children to operate balloon filling equipment.
- Close the cylinder valve after each use and when empty.
- Never leave the cylinder unattended with the regulator attached.



## COMPRESSED AIR SAFETY PRECAUTIONS

Compressed air is a colorless, odorless, tasteless and nonflammable gas that is produced by compression and filtration of atmospheric air or by synthetically mixing 21% oxygen and 79% nitrogen.

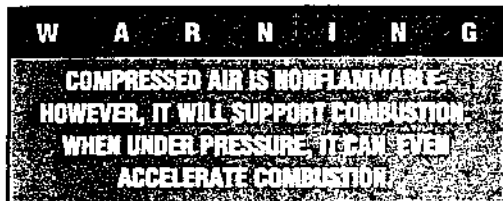

### BREATHING AIR

When using compressed air for breathing, ensure that you have a source of air (cylinder or compressor) that meets or exceeds the specification for CGA "Grade D" air that is required by OSHA.



*Fire fighters using breathing air in self-contained breathing apparatus (SCBA).*

Oxygen should never be substituted for breathing air when air-supplied respiratory protection is used since regulators used in this service may contain substances which are not compatible with oxygen and may result in an explosion.

### AIR FOR MEDICAL USE

If air is used for medical purposes, then you must use a medical grade of air "Compressed Air U.S.P."


### SPECIAL PRECAUTIONS FOR COMPRESSED AIR

Compressed air is often used to power pneumatic tools. Under no circumstances should oxygen be substituted for air to power tools since these tools contain lubricants which are not oxygen compatible and could cause an explosion resulting in severe injury or death.




## CARBON DIOXIDE SAFETY PRECAUTIONS

Carbon dioxide (CO<sub>2</sub>) is a colorless, odorless and nonflammable gas with a slightly acidic taste.

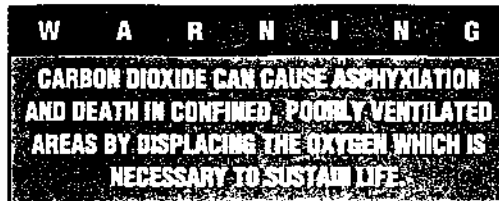

Concentrations of 10% carbon dioxide or greater will cause unconsciousness or death, without regard to oxygen concentration. In addition to the asphyxiation hazard, carbon dioxide acts as a stimulant and depressant on the central nervous system. At lower concentrations, increases in heart rate and blood pressure have been noted, and labored breathing, headaches, and dizziness may occur if exposure is prolonged, regardless of oxygen content. OSHA has adopted an 8-hour Permissible Exposure Limit (PEL), also known as Time Weighted Average (TWA) of 5,000 ppm (0.5%) for carbon dioxide. The American Conference of Governmental Industrial Hygienists (ACGIH) recommends a Short Term Exposure Limit (STEL) of 30,000 ppm (3%). Persons should not be permitted in areas with concentrations above these levels.

Carbon dioxide cannot be detected by the human senses and will be inhaled like air. If adequate ventilation is not provided, it may displace normal air without warning. Since carbon dioxide is more dense than air, high concentrations can persist in open pits, tanks, or low areas. Before entering any tank, pit, or other confined area where carbon dioxide may be present, carbon dioxide monitoring should be performed. If carbon dioxide is present, the area should be purged with air, or an air supplied respirator should be worn. Store containers outdoors or in other well-ventilated areas to avoid the accumulation of potentially harmful concentrations.

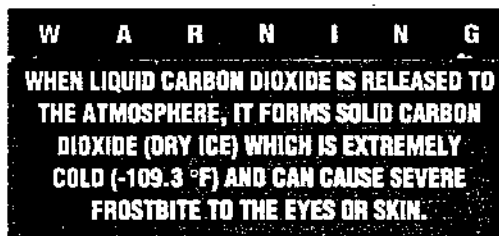

Do not touch frosted pipes or valves. If accidental eye or skin contact with cold gas or dry ice occurs, consult a physician at once. Do not rub frozen body parts, as tissue damage may result. Remove any clothing that may restrict circulation to the frozen area. As soon as practical, place the affected part of the

body in a warm water bath which has a temperature not to exceed 105°F (40°C). Never use dry heat.

### PROTECT EYES AND SKIN.

Protect your eyes with safety goggles and face shield, and cover the skin to prevent contact with the liquid, cold gas or solid. Protective gloves that can be quickly and easily removed and long sleeves are recommended for arm protection.

### CARBON DIOXIDE SPECIAL PRECAUTIONS


For small uses, carbon dioxide service is by withdrawal of gas from a cylinder. A small number of cylinders are equipped with a siphon or dip tube for liquid withdrawal. **NEVER CONNECT A REGULATOR TO A CYLINDER EQUIPPED WITH A SIPHON OR DIP TUBE.** The liquid will flash to gas and rupture the regulator. Cylinders equipped with siphon or dip tubes are identified by "siphon tube" stenciled on the cylinder sidewall.

### SOLID CARBON DIOXIDE (DRY ICE) SPECIAL PRECAUTIONS

Dry ice is an extremely cold solid (-109.3 °F). Avoid contact with exposed flesh as it can cause severe frostbite. Wear suitable clothing and gloves when handling dry ice.

Dry ice evaporates (sublimes) to form carbon dioxide gas which does not support life. Do not breathe gas. Store and use dry ice with adequate ventilation.

Do not store dry ice in tight containers. Pressure will develop as the dry ice evaporates which could burst air tight containers.

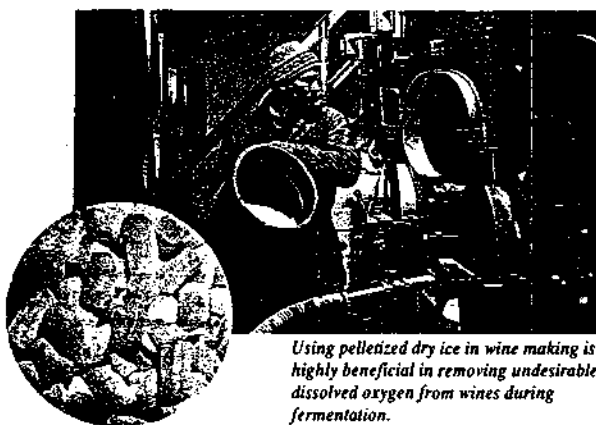

*Using pelletized dry ice in wine making is highly beneficial in removing undesirable dissolved oxygen from wines during fermentation.*


### IF IT IS NECESSARY TO DISPOSE OF WASTE GAS OR SOLID, EXERCISE CAUTION.

Carbon dioxide gas should be released only in an outdoor, well ventilated area. Allow dry ice to sublime (evaporate from solid to gas) in an outdoor, well ventilated area.




## NITROUS OXIDE SAFETY PRECAUTIONS


Nitrous oxide (N<sub>2</sub>O) is a colorless and nonflammable gas with a slightly sweetish odor and taste. Nitrous oxide is widely used as an anesthetic gas in concentrations of up to 50% with oxygen.

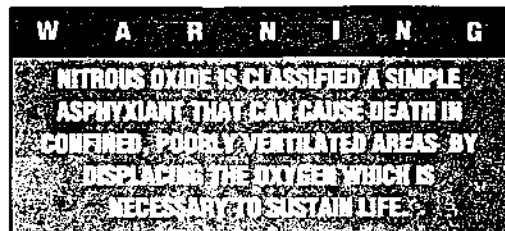


Atmospheres which do not contain enough oxygen for breathing (at least 19.5%) can cause dizziness, unconsciousness and death. When nitrous oxide is inhaled in high concentrations for a few seconds, it affects the central nervous system and may induce symptoms resembling intoxication, hence its nickname "Laughing Gas".

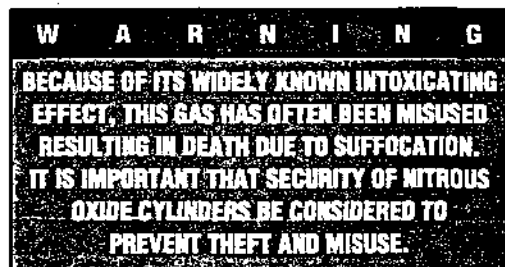

Although nitrous oxide is classified as a simple asphyxiant (nontoxic), there are studies that suggest a link to certain health hazards from long-term exposure to high concentrations of nitrous oxide in the operating room or dental office. Because of these studies, the ACGIH (American Conference of Governmental Industrial Hygienists) has recommended a TLV of 50 ppm and the NIOSH (National Institute for Occupational Safety and Health) has recommended a maximum exposure on an 8-hour time weighted average (TWA) of 25 ppm for anesthesia administration and 50 ppm for dental offices. REFER TO YOUR MATERIAL SAFETY DATA SHEET FOR MORE DETAILED INFORMATION ON THE HEALTH HAZARDS OF NITROUS OXIDE.

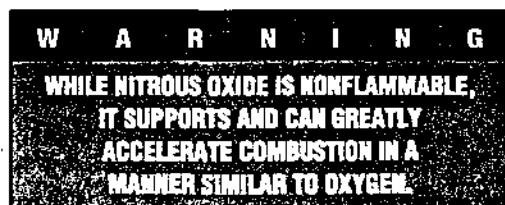

Nitrous oxide in storage must be separated from flammable liquids or gases and combustible materials (especially oil or grease) a minimum distance of 20 feet unless separated by a noncombustible barrier at least 5 feet high having a fire rating of at least one-half hour.

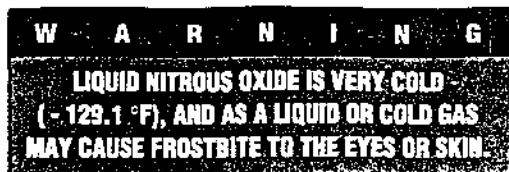

Do not touch frosted pipes or valves. If accidental eye or skin contact with liquid nitrous oxide occurs, consult a physician at once. Do not rub frozen body parts, as tissue damage may result. Remove any clothing that may restrict circulation to the frozen area. As soon as practical, place the affected part of the body in a warm water bath which has a temperature not to exceed 105°F (40°C). Never use dry heat.

---

**PROTECT EYES AND SKIN.**

---

Always handle liquid nitrous oxide so that it will not splash or spill. Protect eyes with safety goggles or face shield, and cover the skin to prevent contact with the liquid or cold gas. Clean, protective gloves that can be quickly and easily removed and long sleeves are recommended for arm protection. Cuffless trousers should be worn outside of boots or work shoes to shed spilled liquid.

---

**NITROUS OXIDE FOR MEDICAL USE**

---

Nitrous oxide should be used for anesthetic purposes only if it is labeled "Nitrous Oxide, U.S.P.", and it is administered by licensed practitioners.




*Nitrous Oxide is routinely used as an anesthetic gas in medical and dental applications.*

---

**IF IT IS NECESSARY TO DISPOSE OF WASTE GAS OR LIQUID, EXERCISE CAUTION.**


---

Gaseous and liquid nitrous oxide should be released only outdoors, downwind from personnel, combustible materials and sources of ignition.

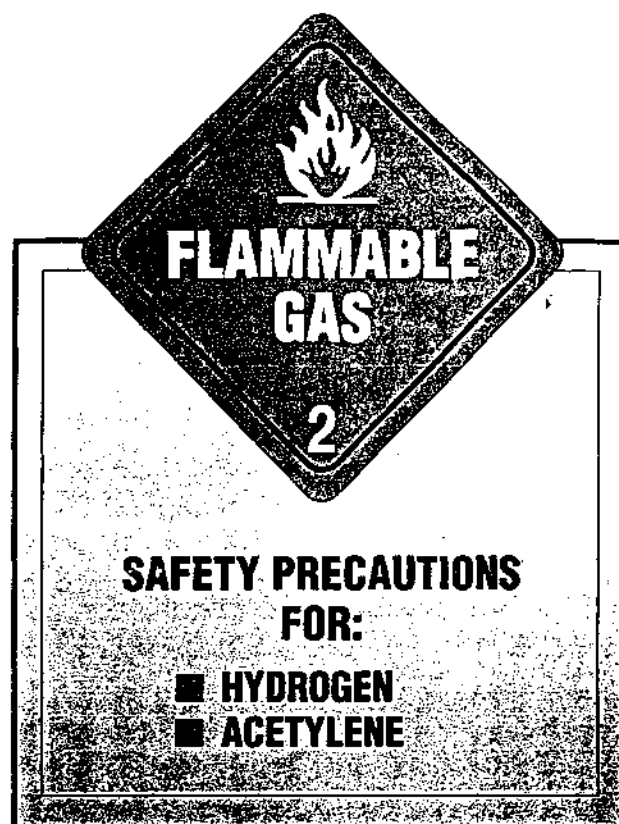

**HYDROGEN  
SAFETY PRECAUTIONS**

Hydrogen ( $H_2$ ) is a colorless, odorless, tasteless, nontoxic and flammable gas. It is the lightest of all elements.

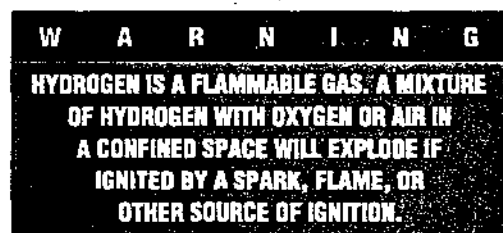

---

**KEEP HYDROGEN AWAY FROM SOURCES OF IGNITION,  
AND DO NOT PERMIT ANY ACCUMULATION OF GAS.**

---

Because it is lighter than air, hydrogen has a tendency to accumulate in the upper portions of confined areas. Concentrations of hydrogen between 4% and 75% by volume in air are relatively easy to ignite by a low-energy spark and may cause an explosion. Smoking, open flames, sparks, unapproved electrical equipment, and other ignition sources must not be permitted in hydrogen areas. Store containers outdoors or in a well-ventilated area away from ignition sources, flammable materials and oxidizers such as oxygen and nitrous oxide.

---

### **KEEP EQUIPMENT AREA WELL VENTILATED.**

---

Although hydrogen is nontoxic, it can cause asphyxiation in a confined area that does not have adequate ventilation. Hydrogen gas cannot be detected by human senses; and if adequate ventilation is not provided, may displace normal air without warning. Any atmosphere which does not contain enough oxygen for breathing (at least 19.5%) can cause dizziness, unconsciousness, or even death. Store containers outdoors, or in other well ventilated areas. **Never enter any tank, pit, or other confined area where hydrogen may be present until purged with air and tested to ensure that it has an oxygen content between 19.5% and 23.5%. In addition, the confined space must be tested to ensure that there are no flammable gases present that exceed 10% of their Lower Explosive Limit (LEL).**

**TAKE EVERY PRECAUTION AGAINST HYDROGEN LEAKS. ESCAPING HYDROGEN CANNOT BE DETECTED BY SMELL OR TASTE. HYDROGEN LEAKING UNDER PRESSURE CAN IGNITE DUE TO FRICTION AND WILL BURN WITH AN ALMOST INVISIBLE BLUE FLAME.**

All hydrogen connections should be leak checked using a leak detection solution before use. **NEVER USE A FLAME TO DETECT HYDROGEN LEAKS!**

### **W A R N I N G**

**LIQUID HYDROGEN IS EXTREMELY COLD (-423.0 °F) AND AS A LIQUID OR COLD GAS MAY CAUSE SEVERE FROSTBITE TO THE EYES OR SKIN.**

Do not touch frosted pipes or valves. If accidental eye or skin contact with liquid hydrogen occurs, consult a physician at once. **Do not rub frozen body parts, as tissue damage may result.** Remove any clothing that may restrict circulation to the frozen area. As soon as practical, place the affected part of the body in a warm water bath which has a temperature not to exceed 105°F (40°C). Never use dry heat.

---

### **PROTECT SKIN AND EYES.**

---

Always handle liquid hydrogen so that it will not splash or spill. Protect your eyes with safety goggles or face shield, and cover the skin to prevent contact with the liquid or cold gas. Clean, protective gloves that can be quickly and easily removed, and long sleeves are recommended for arm protection. Cuffless trousers should be worn outside boots or work shoes to shed spilled liquid.

---

### **LIQUID-TO-GAS EXPANSION**

---

Cryogenic liquids produce large quantities of gas when they vaporize. Liquid hydrogen will expand at a ratio of 1:850, liquid to gas. If liquid hydrogen is trapped in a sealed container or piping, it will vaporize, producing enormous pressures which could cause the container to rupture violently if not protected by a pressure relief device.

---

### **VAPOR CLOUD OR FOG**

---

Cryogenic liquids and their "boil-off" vapors are extremely cold and have a built-in warning property that appears whenever they are exposed to the atmosphere. The cold "boil-off" gases condense the moisture in the air, creating a highly visible fog or vapor cloud. This fog normally extends over a larger area than the vaporizing gas.

If a large vapor cloud forms after a liquid spill, you should avoid this cloud because of possible flammable atmospheres or reduced visibility. In addition, all sources of ignition should be shut off in the path of the vapor cloud, if possible.

Small fog areas may appear during liquid transfer as the cold piping condenses moisture in the surrounding air.

---

### **LIQUID HYDROGEN SPECIAL PRECAUTIONS**

---

The extremely low temperature of liquid hydrogen (-423.0 °F) can solidify any gas except helium. Such solidified gases can plug pressure-relief passages and devices, making them ineffective in relieving excess pressure from evaporating liquid. Always store and handle liquid hydrogen under positive pressure and in closed systems to prevent infiltration and solidification of air or other gases.

Keep exterior surfaces of liquid hydrogen equipment clean. Oxygen can condense from the air on exposed liquid hydrogen or cold-gas equipment surfaces, such as vaporizers and piping. To prevent the possible ignition of grease, oil, or other combustible materials with the condensed oxygen, keep these surfaces clean.

---

### **NEVER USE CONTAINERS, EQUIPMENT, OR REPLACEMENT PARTS OTHER THAN THOSE SPECIFICALLY DESIGNATED FOR USE IN HYDROGEN SERVICE.**

---

Observe all applicable safety codes when installing hydrogen equipment.

Follow the recommendations contained in NFPA Standards 50A, "Gaseous Hydrogen Systems at Consumer Sites", and 50B, "Liquefied Hydrogen Systems at Consumer Sites", and with all local safety codes when installing hydrogen equipment or systems.



---

**IF IT IS NECESSARY TO DISPOSE OF WASTE GAS OR LIQUID, EXERCISE CAUTION.**


---

Liquid and gaseous hydrogen must be disposed of outdoors in an isolated area away from personnel, combustible materials, and ignition sources. Liquid hydrogen for disposal should be completely vaporized and the vapor vented in a safe manner. Remember that a flammable mixture will exist for some distance downwind of the disposal area. A shallow aluminum pan makes a suitable flash evaporator for disposal of moderately small quantities of liquid hydrogen.



## **ACETYLENE SAFETY PRECAUTIONS**

Acetylene ( $C_2H_2$ ) is a colorless, non-toxic, flammable gas with a distinctive garlic-like odor.

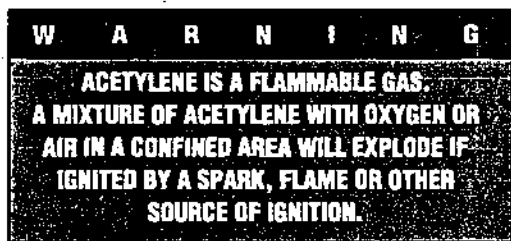

---

**KEEP ACETYLENE AWAY FROM SOURCES OF IGNITION,  
AND DO NOT PERMIT ANY ACCUMULATION OF GAS.**

---

Concentrations of acetylene between 2.5% and 81% by volume in air are relatively easy to ignite by low-energy sparks and may cause an explosion. Smoking, open flames, sparks, unapproved electrical equipment and other ignition sources must not be permitted in acetylene storage areas. Store cylinders outdoors or in other well ventilated areas away from ignition sources, other flammable materials, and oxidizers such as oxygen and nitrous oxide.

---

**NEVER USE EQUIPMENT OR CYLINDERS THAT  
ARE LEAKING ACETYLENE**

---

Be certain that the regulator-to-cylinder valve, hose-to-regulator and the torch-to-hose connections are leak tight by leak checking with a leak detection solution before starting work. **NEVER USE A FLAME TO DETECT ACETYLENE LEAKS!**

Regulators, hoses, and torches must be properly maintained to work correctly and safely. If an acetylene valve should leak around the cylinder-valve stem when the valve is opened, close the valve and tighten the packing gland nut. If this does not stop the leak, contact the supplier immediately.

---

**DO NOT TAMPER WITH FUSIBLE METAL PRESSURE  
RELIEF DEVICES OR CYLINDER VALVES.**

---

Acetylene cylinders are equipped with fusible metal pressure relief devices which melt at about 212 °F, the boiling point of water. These devices are designed to release the acetylene in the event of an abnormally high temperature, as in a fire. These fusible metal pressure relief devices are threaded into the top and/or bottom of most cylinders. Fusible-metal channels may also be provided in the valve body on smaller cylinders. Do not tamper with these fusible metal pressure relief devices or permit a torch flame to come in contact with them. Keep cylinders away from overhead and ground-level welding and cutting operations to prevent flying sparks and slag from accumulating on or around the cylinder which could cause fusible metal pressure relief devices to melt, releasing acetylene which could be ignited.

Protect all cylinders from falling objects and avoid rough handling of cylinders to prevent damage to the fusible plugs or cylinder valves. Always store, transport, and use acetylene cylinders in a vertical position.

---

**KEEP EQUIPMENT AREA WELL VENTILATED**


---

Although acetylene is nontoxic, it is an anesthetic and can cause asphyxiation in a confined area that does not have adequate ventilation. Any atmosphere which does not contain enough oxygen for breathing (at least 19.5%) can cause dizziness, unconsciousness, or death. If adequate ventilation is not provided, acetylene may displace normal air. Acetylene can be detected by its distinctive garlic-like odor. If the odor of acetylene is noticed, immediately attempt to locate the source of the leak and correct it. If a leak in a cylinder or connected apparatus cannot be stopped safely, contact the gas supplier. If possible, the cylinder should be moved to a well ventilated area away from possible ignition sources. Never store, use, or transport acetylene cylinders in confined or unventilated spaces, such as cabinets, closets, tool boxes, and especially in automobile trunks.

---

**ACETYLENE SPECIAL PRECAUTIONS**

---

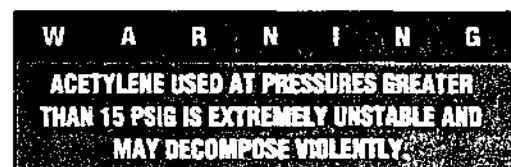

Always use a regulator designed for acetylene use. Never adjust the acetylene regulator to obtain a delivery pressure greater than 15 psig. Never open an acetylene cylinder valve more than one complete turn.

**W A R N I N G**  
**NEVER USE CONTAINERS, EQUIPMENT, PIPING**  
**OR REPLACEMENT PARTS OTHER THAN THOSE**  
**SPECIFICALLY DESIGNED FOR USE IN**  
**ACETYLENE SERVICE**

Under certain conditions, acetylene forms readily explosive compounds with copper, silver, and mercury. Contact should be avoided between acetylene and these metals, their salts, compounds, and high concentration alloys.

Acetylene cylinders differ from all other compressed gas cylinders in that they are packed with a porous mass that is saturated with a solvent, usually acetone. During the filling process acetylene gas is dissolved into this solvent to avoid the decomposition characteristics of gaseous acetylene.

Never under any circumstances, attempt to transfer acetylene from one cylinder to another or to mix any gas with acetylene in a cylinder.

---

**OBSERVE ALL APPLICABLE SAFETY CODES  
WHEN USING ACETYLENE.**

---

Follow the recommendations found in ANSI Standard Z49.1, "Safety in Welding and Cutting", and NFPA Standard No. 51, "Oxygen-Fuel Gas Systems for Welding and Cutting" before installing or using equipment and cylinders in acetylene service.




*An automated oxy-acetylene cutting machine.*

## **SPECIALTY GAS AND GAS MIXTURES**


**S**pecialty gases are special-purpose liquids, gases and multi-component mixtures in any compatible combination. They may include atmospheric gases, chemicals, and volatile liquids. Specialty gases are widely used for:

- Analytical and calibration standards
- Electron capture
- Lasers
- Welding
- Electronic component manufacturing
- Solidification
- Fuel gases for combustion engines
- Analytical applications

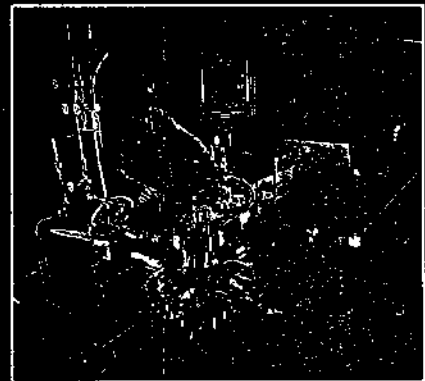

*The power and amplitude of this research laser is determined by the ultra-pure gas mixtures used.*

# SPECIALTY GAS AND GAS MIXTURES SAFETY PRECAUTIONS

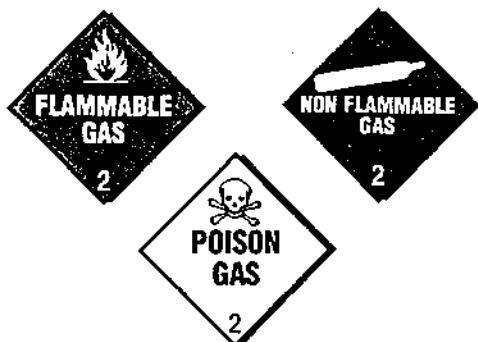

**W A R N I N G**

**MANY SPECIALTY GASES (INCLUDING MIXTURES) HAVE FLAMMABLE, TOXIC, CORROSIVE, OXIDIZING, PYROPHORIC, AND OTHER HAZARDOUS PROPERTIES. THESE GASES CAN CAUSE PROPERTY DAMAGE, AS WELL AS SERIOUS OR FATAL INJURIES IF PROPER SAFETY PRECAUTIONS ARE NOT FOLLOWED.**

**INHALATION OF SOME TOXIC SPECIALTY GASES CAN BE FATAL IN VERY LOW CONCENTRATIONS WHILE OTHERS CAN CAUSE SPECIFIC ORGAN DAMAGE AFTER REPEATED EXPOSURE.**

In addition, some specialty gases can cause simple asphyxiation by displacing the oxygen in the atmosphere, while corrosive gases can cause serious eye or skin damage upon contact; and flammable gases can present fire and explosion hazards.




*Highly precise reference gas for scientific instrumentation.*

## OBTAIN SAFETY INFORMATION BEFORE HANDLING SPECIALTY GASES

Because of the great number of specialty gases and gas mixtures available, and the variety of hazardous properties of these gases, it is not possible to cover all safety precautions for specialty gases in this pamphlet. If you are not familiar with the handling of specialty gases and their hazardous properties, contact your supplier. Also available are Material Safety Data Sheets (MSDS) presenting the hazardous properties and safe handling procedures for each specialty gas.

## READ THE PRECAUTIONARY LABEL ON THE CYLINDER.

### READ THE LABEL TO IDENTIFY THE GAS!

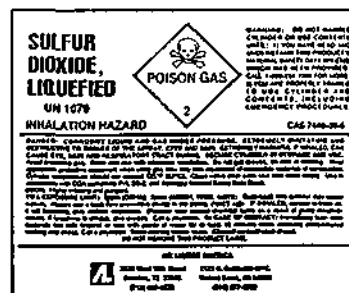

This is an important warning applying to all gas cylinders, but it is particularly important for specialty gases because of their unique and varied hazardous properties.

Users of specialty gases are urged to be certain that employees read and follow the precautionary information on all gas cylinder labels. If a cylinder is received with missing, damaged, or illegible precautionary labels, do not use the cylinder, call your gas supplier.

## DO NOT PERMIT UNTRAINED PERSONS TO HANDLE SPECIALTY GASES.

Because of the extremely hazardous properties of some specialty gases and their applications, employees must be trained in their safe handling and use.

## SPECIAL PRECAUTIONS

When two or more gases, or liquefied gases are mixed, their properties may combine to create additional hazards. Obtain and evaluate the safety information for each component and for the mixture before use.

Special handling and storage precautions must be taken when working with toxic, pyrophoric or corrosive specialty gases. Because of their hazardous nature, many gases may require the use of special personal protective equipment such as respirators, chemical resistant gloves and clothing and nearby eye wash and safety showers.



In many instances Federal, State or local fire codes and regulations may govern or restrict the handling and storage of these gases. One safe usage alternative is the use of a cylinder gas storage cabinet (left). These fully enclosed units will normally hold from one to four cylinders. The cabinets are designed to permit air changes with an exhaust system that will safely carry away any inadvertently released product and many are equipped with leak detection and fire suppression systems. The cabinets can be set up to

be fully automated or operated manually with little or no potential exposure to personnel.

#### **IF NECESSARY TO DISPOSE OF WASTE GAS, EXERCISE EXTREME CAUTION.**

No attempt should be made to dispose of any gas mixtures before determining the following:

1. What gases are in the mixture?
2. At what concentrations are they present?
3. What is the total quantity for disposal?
4. Is the mixture subject to environmental regulations?

In many cases, sophisticated and expensive scrubbing equipment is necessary to destroy residual gases. It is best to return the unused portion of any gas or gas mixture to your supplier for disposal.

#### **D I S C L A I M E R**

THIS SAFETY PRECAUTION PAMPHLET IS OFFERED SOLELY FOR YOUR INFORMATION, CONSIDERATION AND INVESTIGATION. THE COMPANY PROVIDES NO WARRANTIES, EITHER EXPRESS OR IMPLIED, AND ASSUMES NO RESPONSIBILITY FOR THE ACCURACY OR COMPLETENESS OF THE DATA CONTAINED HEREIN.

#### **ADDITIONAL INFORMATION**



For further technical information about any of these gases or other unlisted gases refer to the "Material Safety Data Sheet" (MSDS), the Air Liquide "Encyclopedie Des Gaz", or to the Air Liquide America video "Hazards of Liquefied and Compressed Gases."



Additional product information about these and other gases can be found in publications and videos produced by the Compressed Gas Association (CGA), 1725 Jefferson Davis Highway, Suite 1004, Arlington, Virginia, ZIP 22202, Tel.: 1 (703) 412-0900.

<b>G-1</b>	"Acetylene"
<b>G-1.1</b>	"Commodity Specification for Acetylene"
<b>G-4</b>	"Oxygen"
<b>G-4.1</b>	"Cleaning Equipment for Oxygen Service"
<b>G-4.3</b>	"Commodity Specification for Oxygen"
<b>G-5</b>	"Hydrogen"
<b>G-5.3</b>	"Commodity Specification for Hydrogen"
<b>G-6</b>	"Carbon Dioxide"
<b>G-6.2</b>	"Commodity Specification for Carbon Dioxide"
<b>G-7</b>	"Compressed Air for Human Respiration"
<b>G-7.1</b>	"Commodity Specification for Air"
<b>G-8.2</b>	"Commodity Specification for Nitrous Oxide"
<b>G-9.1</b>	"Commodity Specification for Helium"
<b>G-10.1</b>	"Commodity Specification for Nitrogen"
<b>G-11.1</b>	"Commodity Specification for Argon"
<b>P-1</b>	"Safe Handling of Compressed Gases in Containers"
<b>P-2</b>	"Characteristics and Safe Handling of Medical Gases"
<b>P-9</b>	"The Inert Gases Argon, Nitrogen and Helium"
<b>P-12</b>	"Safe Handling of Cryogenic Liquids"
<b>P-14</b>	"Accident Prevention in Oxygen-Rich and Oxygen-Deficient Atmospheres"
<b>SB-2</b>	"Oxygen-Deficient Atmospheres"
<b>SB-4</b>	"Handling Acetylene Cylinders in Fire Situations"
<b>SB-8</b>	"Use of Oxy-Fuel Gas Welding and Cutting Apparatus"
<b>SB-14</b>	"Helium Gas for Filling Balloons"
<b>AV-1</b>	"Safe Handling and Storage of Compressed Gases"
<b>AV-4</b>	"Characteristics and Safe Handling of Medical Gases"
<b>AV-5</b>	"Safe Handling of Liquefied Nitrogen and Argon"
<b>AV-6</b>	"Highway Transportation of Gases"
<b>AV-7</b>	"Characteristics and Safe Handling of Carbon Dioxide"
<b>AV-8</b>	"Characteristics and Safe Handling of Cryogenic Liquid and Gaseous Oxygen"
<b>AV-9</b>	"Handling Acetylene Cylinders in Fire Situations"


**IN THE EVENT OF AN EMERGENCY INVOLVING ANY TYPE OF  
GAS, CALL THE FOLLOWING EMERGENCY  
RESPONSE TELEPHONE NUMBER FOR THE AREA  
IN WHICH THE EMERGENCY HAS OCCURRED.**

These Emergency Response telephone numbers also appear on all Air  
Liquide America shipping papers.

**IN TEXAS, OKLAHOMA, and LOUISIANA... Call the Air Liquide America  
Operations Control Center in Houston, Texas: 1 (800) 364-7378**

**IN ALL OTHER STATES... Call CHEMTREC: 1 (800) 424-9300**

**AIR LIQUIDE AMERICA  
EMERGENCY RESPONSE  
TEAM LOCATIONS**

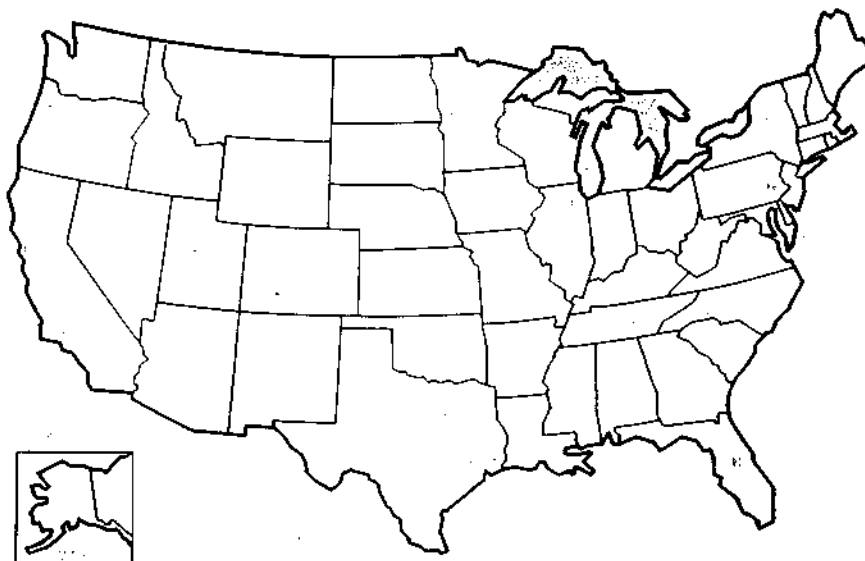


**PRIMARY  
RESPONSE TEAMS**

- Houston, TX
- Bayport, TX
- Dallas, TX
- Fremont, CA
- Long Beach, CA
- Tualatin, OR
- Orlando, FL
- Chicago, IL
- Morrisville, PA

**SECONDARY  
RESPONSE TEAMS**

- Austin, TX
- Corpus Christi, TX
- Odessa, TX
- Lubbock, TX
- Borger, TX
- Beaumont, TX
- Tulsa, OK
- Phoenix, AZ
- Anchorage, AK



**AIR LIQUIDE AMERICA**

3535 West 12th Street      2121 N. California Blvd.  
Houston, TX 77008      Walnut Creek, CA 94596  
(713) 868-0333      (510) 977-6500

**AIR LIQUIDE AMERICA GASES SUPPLIED BY:**

5/30/86

FOR: Long River

BY: *Charles*

[illegible]

O.N.#	DESCRIPTION OF TASK	B VALUE	Materials
5002	ATT-HS = STRIP & BRAN DRY / Repair MAIN VALVE		

DAILY TOTAL

4

HER 00657

5/30/26

FOR: *Leop. Quintana*

BY: Paula

[illegible]

TO #	DESCRIPTION OF TASK	Materials	DAILY	TOTAL
5052	ETC-115: STRIP + Blow Dry			
over 5050	Strip out old Oil from Drums			
17	Clean up inside containment area.			
5060	"N Ensoo: ? / Clean out (W) one cement Tank			

**HER 00658**



5/30/96

FOR: CASAS

BY: *Chad*

[illegible]

DATE	DESCRIPTION OF TASK
5053	27-115 = STRIP & BLOW DAY Vacuum out oil Dregs inside containment liner. Blow clearing inside containment Area.
5060	M/U Enco: ? / clean out (1) one cement Tomb.

## Materials

DAILY  
TOTAL

3

**HER 00659**



## DAILY PLANNER

FOR: Lee Chivers

BY: *[Signature]*

5/30/86

[illegible]

QTY	DESCRIPTION OF TASK	Materials	DAILY	TOTAL
5051	ETC-185: DROBALLAST 1/4" #4, AND LOW RANGE Vacuum out oil from D-100 inside containment Area. Clean up trash inside Containment Area.			
5060	7/8 Ence: ?			

HER 00660

5/30/86

BY: *Chad*

1000

## Materials

DAILY  
TOTAL

HER 00661

# DAILY PLANNER

FOR: Lucio

BY: Alvin

5/30/86

	6AM	7AM	8AM	9AM	10AM	11AM	12PM	1PM	2PM	3PM	4PM	5PM	6PM	7PM	8PM	9PM	HOURS ST. OT
5051																	6
5052																	1
																	2

JO #	DESCRIPTION OF TASK
5052	RT-115 Dredge Cast #4 And Bow Rake
	Vacuum out Oil Drums inside Containment Area.
	Clean up all trash inside Containment Area.
5060	% Over-Work But Clean out (1) Over-cast Tank.

Materials

DAILY

TOTAL

9

HER 00662

5/3/96

FOR: *Ruten m. l.*

BY: *Charles*

JOB #	DESCRIPTION OF TASK	Materials	DAILY	TOTAL
5052	ST-115: STRIP & BLOW Day vacuum out oil drums and clean up inside containment Area (Paper, Rags, TRASH, etc.)			8
5060	Clear out Cement Tank on HUSCO: ?)			

HER 00663

## SHIPPING ORDER

Big Three Merchant Gases and Equipment, Inc.

## Industrial Nitrogen Services

General Office: P.O. BOX 3047 HOUSTON, TEXAS 77253 713/868-0333  
Remit Payment to: P.O. BOX 200411 HOUSTON, TEXAS 77216-0411

SHIPPER'S ORDER NO.

118 - 003736

#INVOICE DATE

#INVOICE NO.

DATE ORDERED

5/30/96

WRITTEN BY

DATE SHIPPED

5/30/96

S  
O  
L  
D  
T  
O  
Account No.  
Customer  
Address  
City State ZipS  
H  
I  
P  
T  
OCustomer BASF  
Location Hecukes Docks  
Unit Name Barge # ETT 115  
Services Rendered  
City Surs. de State TEXAS Zip

CUSTOMER ORDER NO.

ORDERED BY

ORIGIN  
118FROM  
118TO  
118

TAX %

CREDIT APPROVAL

## WARNING

1. PRE-JOB DISCUSSION WAS HELD & SAFETY CHECK LIST COMPLETED.
2. CUSTOMER HAS RECEIVED A COPY OF SAFETY PRECAUTIONS.

INITIAL  
INITIAL

## WARNING

THE UNDERSIGNED CUSTOMER AGREES TO BIG THREE INDUSTRIES' GENERAL TERMS AND CONDITIONS OF SERVICE INCLUDING THOSE APPEARING ON THE REVERSE HEREOF.

AUTHORIZED SIGNATURE

TITLE

DATE

QUANTITY ORDERED	PART NO.	DESCRIPTION	QUANTITY SHIPPED	UNIT COST	AMOUNT
		Service Charge 1			
		Time Charges Pumper 2			
		Time Charges Transport 0			
		Mileage Pumper 150			
		Mileage Transport 0			
		Nitrogen Charges 95,000 SCF			
		GOVERNMENT AGENCY REGULATORY COMPLIANCE CHARGE 2			
		Subtotal			
		Tax			
		Total			

Credit ☐ 210 Pressure Test/purge ☐ 220 Cool down ☐ 230 Regeneration ☐ 240 Dryout ☐ 250 Salt dome ☐ 270 Pipeline ☐ 280 Ship Purge

EQUIPMENT	UNIT 1	TYPE	UNIT 2	TYPE	UNIT 3	TYPE	UNIT 4	TYPE
Unit No. & Type	3149							
Date & Time Started	5-30-96	13:30						
Date & Time Completed	5-30-96	15:30						
TOTAL N <sub>2</sub> UNIT HOURS		2						
Rate SCFM								
TOTAL N <sub>2</sub> USED								

## EQUIPMENT MILEAGE

Roundtrip Miles From:	Houston TX
TOTAL CHARGEABLE MILES	150 No. of Units 1

## TRANSPORT MILEAGE AND TIME

Roundtrip Miles From:	
TOTAL CHARGEABLE MILES	X No. of Transports
Total Transport Time On Site	
Total Chargeable Transport Time	

I hereby acknowledge that the above information is correct and the services have been completed.

Authorized Signature

Title

Big Three I.N.S. Representative

Big Three Operators:

Remarks:

HER 00664

3	Resp filters	18.00
3	batteries	6.75
3	coveralls	8.55
		<hr/>
		33.30

HER 00665