

SEVERN
TRENT

STL

Certificate of Analysis

December 9, 2003

STL Richland
2800 George Washington Way
Richland, WA 99352

Tel: 509 375 3131 Fax: 509 375 5590
www.stl-inc.com

CCI Analytical Laboratories, Inc.
8620 Holly Drive
Everett, WA 98208

Attention: Chuck Rancatti

Date Received in Lab	:	October 9, 2003
Sample Type	:	One (1) Water
SDG Number	:	24132

CASE NARRATIVE

I. Introduction

On October 9, 2003, one water sample was received at the STL Richland (STLR) laboratory for radiochemical analysis. Upon receipt, the sample was assigned the STLR identification number as described on the cover page of the Analytical Data Package report form. The sample was assigned to Lot Number J3J090311.

II. Sample Receipt

The sample was received in good condition and no anomalies were noted during check-in.

III. Analytical Results/Methodology

The analytical results for this report are presented by laboratory sample ID. Each set of data includes sample identification information; analytical results and the appropriate associated statistical uncertainties.

The analyses requested were:

Radium-226 by method RICH-RC-5005 (EPA 903.1)
Radium-228 by method RICH-RC-5005 (EPA 904.0)

CCI Analytical Laboratories, Inc.
December 9, 2003
Page 2

IV. Quality Control

The analytical result for each analysis performed includes a minimum of one laboratory control sample (LCS), and one reagent blank sample analysis. Any exceptions have been noted in the "Comments" section.

V. Comments

Radium-226 Analysis:

The LCS, batch blank and sample results are within acceptance limits.

Radium-228 Analysis:

The batch blank result was above half the RDL, but still below the RDL. The sample results are below the RDL and the data is accepted. Except as noted, the LCS, batch blank and sample results are within acceptance limits.

I certify that this Certificate of Analysis is in compliance with the SOW, both technically and for completeness, for other than the conditions detailed above. The Laboratory Manager or a designee, as verified by the following signature has authorized release of the data contained in this hard copy data package.

Reviewed and approved:



Garrett E. Knutson
Project Manager Assistant

Drinking Water Method Cross References

DRINKING WATER ASTM METHOD CROSS REFERENCES		
Referenced Method	Isotope(s)	STL Richland's SOP number
EPA 901.1	Cs-134, I-131	RICH-RC-5017
EPA 900.0	Alpha & Beta	RICH-RC-5014
EPA 903.1	Ra-226	RICH-RC-5005
EPA 904.0	Ra-228	RICH-RC-5005
EPA 905.0	Sr89/90	RICH-RC-5006
ASTM D2460	Total Radium	RICH-RC-5027
Standard Method 7500-U-C & ASTM D5174	Uranium	RICH-RC-5058
EPA 906.0	Tritium	RICH-RC-5007
NOTE:		
The Gross Alpha LCS is prepared with Am-241 (unless otherwise specified in the case narrative)		
The Gross Beta LCS is prepared with Sr/Y-90 (unless otherwise specified in the case narrative)		

Uncertainty Estimation

STL Richland has adopted the internationally accepted approach to estimating uncertainties described in "NIST Technical Note 1297, 1994 Edition". The approach, "Law of Propagation of Errors", involves the identification of all variables in an analytical method which are used to derive a result. These variables are related to the analytical result (R) by some functional relationship, $R = \text{constants} * f(x, y, z, \dots)$. The components (x, y, z) are evaluated to determine their contribution to the overall method uncertainty. The individual component uncertainties (u_i) are then combined using a statistical model that provides the most probable overall uncertainty value. All component uncertainties are categorized as type A, evaluated by statistical methods, or type B, evaluated by other means. Uncertainties not included in the components, such as sample homogeneity, are combined with the component uncertainty as the square root of the sum-of-the-squares of the individual uncertainties. The uncertainty associated with the derived result is the combined uncertainty (u_c) multiplied by the coverage factor (1, 2, or 3).

When three or more sample replicates are used to derive the analytical result, the type A uncertainty is the standard deviation of the mean value (S/\sqrt{n}), where S is the standard deviation of the derived results. The type B uncertainties are all other random or non-random components that are not included in the standard deviation.

The derivation of the general "Law of Propagation of Errors" equations and specific example are available on request.

Report Definitions

Action Lev	An agreed upon activity level used to trigger some action when the final result is greater than or equal to the Action Level. Often the Action Level is related to the Decision Limit.
Batch	The QC preparation batch number that relates laboratory samples to QC samples that were prepared and analyzed together.
Bias	Defined by the equation $(\text{Result}/\text{Expected}) - 1$ as defined by ANSI N13.30.
COC No	Chain of Custody Number assigned by the Client or STL Richland.
Count Error (#s)	Poisson counting statistics of the gross sample count and background. The uncertainty is absolute and in the same units as the result. For Liquid Scintillation Counting (LSC) the batch blank count is the background.
Total Uncert (#s) μ_c - Combined Uncertainty.	All known uncertainties associated with the preparation and analysis of the sample are propagated to give a measure of the uncertainty associated with the result, μ_c the combined uncertainty. The uncertainty is absolute and in the same units as the result.
(#s), Coverage Factor	The coverage factor defines the width of the confidence interval, 1, 2 or 3 standard deviations.
CRDL (RL)	Contractual Required Detection Limit as defined in the Client's Statement Of Work or STL Richland "default" nominal detection limit. Often referred to the reporting level (RL)
Lc	Decision Level based on instrument background or blank, adjusted by the Efficiency, Chemical Yield, and Volume associated with the sample. The Type I error probability is approximately 5%. $Lc = (1.645 * \sqrt{2 * (\text{BkgndCnt}/\text{BkgndCntMin}) / \text{SCntMin}}) * (\text{ConvFct}/(\text{Eff} * \text{Yld} * \text{Abn} * \text{Vol}) * \text{IngrFct})$. For LSC methods the batch blank is used as a measure of the background variability. Lc cannot be calculated when the background count is zero.
Lot-Sample No	The number assigned by the LIMS software to track samples received on the same day for a given client. The sample number is a sequential number assigned to each sample in the Lot.
MDC/MDA	Detection Level based on instrument background or blank, adjusted by the Efficiency, Chemical Yield, and Volume with a Type I and II error probability of approximately 5%. $MDC = (4.65 * \sqrt{(\text{BkgndCnt}/\text{BkgndCntMin}) / \text{SCntMin}}) + 2.71 / \text{SCntMin} * (\text{ConvFct}/(\text{Eff} * \text{Yld} * \text{Abn} * \text{Vol}) * \text{IngrFct})$. For LSC methods the batch blank is used as a measure of the background variability.
Primary Detector	The instrument identifier associated with the analysis of the sample aliquot.
Ratio U-234/U-238	The U-234 result divided by the U-238 result. The U-234/U-238 ratio for natural uranium in NIST SRM 4321C is 1.038.
Rst/MDC	Ratio of the Result to the MDC. A value greater than 1 may indicate activity above background at a high level of confidence. Caution should be used when applying this factor and it should be used in concert with the qualifiers associated with the result.
Rst/TotUcert	Ratio of the Result to the Total Uncertainty. If the uncertainty has a coverage factor of 2 a value greater than 1 may indicate activity above background at approximately the 95% level of confidence assuming a two-sided confidence interval. Caution should be used when applying this factor and it should be used in concert with the qualifiers associated with the result.
Report DB No	Sample Identifier used by the report system. The number is based upon the first five digits of the Work Order Number.
RER	The equation Replicate Error Ratio = $(S-D)/(\sqrt{(\text{TPUs}^2 + \text{TPUD}^2)})$ as defined by ICPT BOA where S is the original sample result, D is the result of the duplicate, TPUs is the total uncertainty of the original sample and TPUD is the total uncertainty of the duplicate sample.
SDG	Sample Delivery Group Number assigned by the Client or assigned by STL Richland upon sample receipt.
Sum Rpt Alpha Spec Rat(s)	The sum of the reported alpha spec results for tests derived from the same sample excluding duplicate result where the results are in the same units.
Work Order	The LIMS software assign test specific identifier.
Yield	The recovery of the tracer added to the sample such as Pu-242 used to trace a Pu-239/40 method.

Sample Results Summary
STL Richland STLR
 Ordered by Method, Batch No., Client Sample ID.

Date: 09-Dec-03

Report No. : 24328

SDG No: 24132

Batch	Client Id Work Order	Parameter	Result + Uncertainty (2s)	Qual	Units	Yield	MDC or MDA	CRDL	RER2
3286595 RICHRC5005									
	310124-1								
	F17MM1AA RA-226		5.75E-02 + 7.05E-02	U	pCi/L	100%	1.14E-01	1.00E+00	
	310124-1 DUP								
	F17MM1AD RA-226		-4.10E-02 + 1.47E-01	U	pCi/L	100%	2.89E-01	1.00E+00	
3288599 RICHRC5005									
	310124-1								
	F17MM1AC RA-228		8.80E-01 + 5.24E-01	J	pCi/L	82%	8.44E-01	3.00E+00	
	310124-1 DUP								
	F17MM1AE RA-228		1.17E+00 + 5.97E-01	J	pCi/L	83%	9.01E-01	3.00E+00	
No. of Results: 4									

STL Richland

rptSTLRchSaSum
 mary2 V4.04 AS7

RER2 - Replicate Error Ratio = $(S-D)/(\sqrt{sq(TFUs)+sq(TFUD)})$ as defined by ICPT BOA.

J Qual - No U/c qualifier has been assigned and the result is below the Reporting Limit, RL (CRDL) or Report Value is Estimated.

U Qual - Analyzed for, but the result is less than the Mdc/Mda/Total Uncert or gamma scan software did not identify the nuclide.

QC Results Summary

STL Richland STLR

Ordered by Method, Batch No, QC Type.

Date: 09-Dec-03

Report No. : 24328

SDG No.: 24132

Batch	Work Order	Parameter	Result + Uncertainty (2s)	Qual	Units	Yield	Recovery	Bias	MDC MDL
RICHRC5005									
3286598	BLANK QC								
F2F271AA	RA-226		3.95E-02 +- 1.47E-01	U	pCi/L	100%			2.71E-01
3286598	LCS								
F2F271AC	RA-226		3.10E+00 +- 7.30E-01		pCi/L	100%	100%	0.0	2.03E-01
RICHRC5005									
3286599	BLANK QC								
F2F291AA	RA-228		2.10E+00 +- 7.71E-01	J	pCi/L	84%			9.57E-01
3286599	LCS								
F2F291AD	RA-228		1.34E+01 +- 2.88E+00		pCi/L	83%	118%	0.2	8.17E-01
F2F291AC	RA-228		1.28E+01 +- 2.77E+00		pCi/L	84%	114%	0.1	8.94E-01
No. of Results: 5									

STL Richland Bias - (Result/Expected)-1 as defined by ANSI N13.30.
 rptSTLRchQcSummary V4.04 A97 J Qual - No U|< qualifier has been assigned and the result is below the Reporting Limit, RL (CRDL) or Report Value is Estimated.
 U Qual - Analyzed for, but the result is less than the Mdc/Mda/Total Uncert or gamma scan software did not identify the nuclide.

FORM I

SAMPLE RESULTS

Date: 09-Dec-03

Lab Name: STL Richland
 Lot-Sample No.: J3J090311-1
 Client Sample ID: 310124-1

SDG: 24132
 Report No.: 24328
 COC No.:

Collection Date: 10/7/2003 9:30:00 AM
 Received Date: 10/9/2003 11:50:00 AM
 Matrix: WATER

Ordered by Client Sample ID, Batch No.

Parameter	Result	Qual	Count Error (2 s)	Total Uncert(2 s)	MDC/MDA, Action Lev	Rpt Unit, Lc	Yield CRDL(RL)	Rst/MDC, Rst/TotUncert	Analysis, Prep Date	Total Sa Size	Aliquot Size	Primary Detector
Batch: 3286599	RICHRC8005				Work Order: F17MM1AA		Report DB ID: 8F17MM10					
RA-228	6.75E-02	U	6.97E-02	7.05E-02	1.14E-01	pCi/L	100%	0.51	12/3/03 05:28 p		0.5001	ASC1MB
							4.31E-02	1.00E+00	(1.6)		L	
Batch: 3286599	RICHRC8005				Work Order: F17MM1AC		Report DB ID: 8F17MM10					
RA-228	8.80E-01	J	4.97E-01	5.24E-01	8.44E-01	pCi/L	82%	(1.)	12/6/03 08:48 a		0.6001	GPC3C
							3.86E-01	3.00E+00	(3.4)		L	

No. of Results: 2 Comments:

TL Richland MDC/MDA, Lc - Detection, Decision Level based on instrument background or blank, adjusted by the sample Efficiency, Yield, and Volume.
 STL Rich Sample J Qual - No U/L qualifier has been assigned and the result is below the Reporting Limit, RL (CRDL) or Report Value is Estimated.
 4.04 A97 U Qual - Analyzed for, but the result is less than the Mdc/Mda/Total Uncert or gamma scan software did not identify the nuclide.

Mar-09-04 08:39am
 12/09/2003 11:51

From: CCI Analytical Laboratories, Inc.
 503-370-3330

4233562626

T-673 P. 014/018 F-376

FORM II

Date: 09-Dec-03

DUPLICATE RESULTS

Lab Name: STL Richland
 Lot-Sample No.: J3J090311-1
 Client Sample ID: 310124-1 DUP

SDG: 24132
 Report No.: 24328
 COC No.:

Collection Date: 10/7/2003 9:30:00 AM
 Received Date: 10/9/2003 11:50:00 AM
 Matrix: WATER

Parameter	Result, Orig Rst	Qual	Count Error (2 s)	Total Uncert(2 s)	MDC/MDA, Action Lev	Rpt Unit, CRDL	Yield	Rst/MDC, Rst/TotUncert	Analysis, Prep Date	Total Sa Size	Aliquot Size	Primary Detector
Batch: 3288598	RICHRC5005				Work Order: F17MM1AD	Report DB ID: F17MM1DR			Orig Sa DB ID: 9F17MM10			
RA-226	-4.10E-02	U	1.46E-01	1.47E-01	2.89E-01	pCi/L	100%	-0.14	12/3/03 05:27 p		0.5011	ASC2HA
	5.75E-02	U		RER2 1.2		1.00E+00		-0.56			L	
Batch: 3288599	RICHRC5005				Work Order: F17MM1AE	Report DB ID: F17MM1ER			Orig Sa DB ID: 9F17MM10			
RA-226	1.17E+00	J	5.53E-01	5.97E-01	9.01E-01	pCi/L	83%	(1.3)	12/6/03 08:46 a		0.5011	GPC3D
	8.80E-01	J		RER2 0.7		3.00E+00		(3.9)			L	

No. of Results: 2 Comments:

TL Richland RER2 - Replicate Error Ratio = $(8-D)/(\sqrt{(\text{sq}(\text{TPUa})+\text{sq}(\text{TPUd}))}$ as defined by ICPT BOA.

STLRehDupV4.0 MDC/MDA, Lc - Detection, Decision Level based on instrument background or blank, adjusted by the sample Efficiency, Yield, and Volume.

A97

J Qual - No U/c qualifier has been assigned and the result is below the Reporting Limit, RL (CRDL) or Report Value is Estimated.

U Qual - Analyzed for, but the result is less than the Mdc/Mda/Total Uncert or gamma scan software did not identify the nuclide.

Mar-09-04 08:38am From-CCI Analytical Laboratories, Inc
 12/09/2003 11:51 509-375-5590
 4253562626

T-673 P.015/018 F-376

FORM II BLANK RESULTS

Date: 09-Dec-03

Lab Name: STL Richland
Matrix: WATER

SDG: 24132
Report No.: 24328

Parameter	Result	Qual	Count Error (2 s)	Total Uncert(2 s)	MDC/MDA, Lc	Rpt Unit, CRDL	Yield	Rs/MDC, Rs/TotUncert	Analyst, Prep Date	Total Sa Size	Allquot Size	Primary Detector
Batch: 3286598	RICHRC5005				Work Order: F2F271AA	Report DB ID: F2F271AB						
RA-226	3.95E-02	U	1.47E-01	1.47E-01	2.71E-01	pCi/L	100%	0.15	12/3/03 05:31 p		0.5017	ASC3HB
					1.21E-01	1.00E+00		0.54			L	
Batch: 3286599	RICHRC5005				Work Order: F2F291AA	Report DB ID: F2F291AB						
RA-226	2.10E+00	J	6.58E-01	7.71E-01	9.57E-01	pCi/L	84%	(2.2)	12/6/03 08:46 a		0.5017	GPC4A
					4.41E-01	3.00E+00		(5.4)			L	

No. of Results: 2 Comments:

10

STL Richland MDC/MDA, Lc - Detection, Decision Level based on instrument background or blank, adjusted by the sample Efficiency, Yield, and Volume.
pISTLRchBlank J Qual - No Ujc qualifier has been assigned and the result is below the Reporting Limit, RL (CRDL) or Report Value is Estimated.
14.04 A97 U Qual - Analyzed for, but the result is less than the Mdc/Mda/Total Uncert or gamma scan software did not identify the nuclide.

Mar-09-04 08:39am From-CCI Analytical Laboratories, Inc 425362626
12/09/2003 11:51 509-375-5590 STL RICHLAND
T-673 P. 016/018 F-376

FORM II
LCS RESULTS

Date: 09-Dec-03

Lab Name: STL Richland

SDG: 24132

Matrix: WATER

Report No. : 24328

Parameter	Result	Qual	Count Error (2 s)	Total Uncert(2 s)	MDC/MDA	Report Unit	Yield	Expected	Expected Uncert	Recovery, Bias	Analysis, Prep Date	Allquot Size	Primary Detector
Batch: 3286598	RICHRC5005					Work Order: F2F271AC		Report DB ID: F2F271CS					
RA-228	3.10E+00		4.25E-01	7.30E-01	2.09E-01	pCi/L	100%	3.11E+00	1.72E-01	100%	12/3/03 05:30 p	0.5048	ASC5LC
							Rec Limits:	70	130	0.0		L	
Batch: 3286599	RICHRC5005					Work Order: F2F281AC		Report DB ID: F2F281CS					
RA-228	1.28E+01		1.30E+00	2.77E+00	8.94E-01	pCi/L	84%	1.12E+01	2.79E-01	114%	12/6/03 08:46 a	0.5046	GPC4B
							Rec Limits:	70	130	0.1		L	
Batch: 3286599	RICHRC5005					Work Order: F2F281AD		Report DB ID: F2F281DS					
RA-228	1.34E+01		1.35E+00	2.88E+00	9.17E-01	pCi/L	83%	1.13E+01	2.83E-01	118%	12/6/03 10:38 a	0.5085	GPC4C
							Rec Limits:	70	130	0.2		L	
No. of Results: 3 Comments:													

TL Richland Bias - (Result/Expected)-1 as defined by ANSI N13.30.

STL Richland
4.04 A97

Mar-09-04 08:40am From-CCI Analytical Laboratories, Inc
12/09/2003 11:51 509-375-5590
425362626
T-673 P.017/018 F-376

Certificate of Analysis

January 6, 2005

STL Richland
2800 George Washington Way
Richland, WA 99354

Tel: 509 375 3131 Fax: 509 375 5590
www.stl-inc.com

CCI Analytical Laboratories, Inc.
8620 Holly Drive
Everett, WA 98208

Attention: Chuck Rancatti

Date Received in Lab	:	October 29, 2004
Sample Type	:	One (1) Water
SDG Number	:	27309

CASE NARRATIVE

I. Introduction

On October 29, 2004, one water sample was received at the STL Richland (STLR) laboratory for radiochemical analysis. Upon receipt, the sample was assigned the STLR identification number as described on the cover page of the Analytical Data Package report form. This sample was assigned to Lot Number J4J290344.

II. Sample Receipt

The sample was received in good condition and no anomalies were noted during check-in.

III. Analytical Results/Methodology

The analytical results for this report are presented by laboratory sample ID. Each set of data includes sample identification information; analytical results and the appropriate associated statistical uncertainties.

The analyses requested were:

Radium-226 by method RICH-RC-5005 (EPA 903.1)

Radium-228 by method RICH-RC-5005 (EPA 904.0)

IV. Quality Control

The analytical result for each analysis performed includes a minimum of one laboratory control sample (LCS), and one reagent blank sample analysis. Any exceptions have been noted in the "Comments" section.

V. Comments

Radium-226 Analysis:

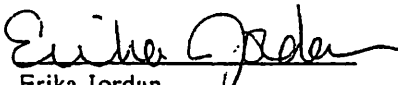
The LCS was spilled while processing. However, the data is accepted as spike recoveries as a whole show the procedure to be in control. Except as noted, the LCS, batch blank, sample and sample duplicate results are within acceptance limits.

Radium-228 Analysis:

Upon first analysis, the Ra228 analysis failed. The batch was re-analyzed with the remaining sample volume; the results are acceptable. Except as noted, the LCS, batch blank, sample and sample duplicate results are within acceptance limits.

I certify that this Certificate of Analysis is in compliance with the SOW, both technically and for completeness, for other than the conditions detailed above. The Laboratory Manager or a designee, as verified by the following signature has authorized release of the data contained in this hard copy data package.

Reviewed and approved:


Erika Jordan
Project Manager

Drinking Water Method Cross References

DRINKING WATER ASTM METHOD CROSS REFERENCES		
Referenced Method	Isotope(s)	STL Richland's SOP number
EPA 901.1	Cs-134, I-131	RICH-RC-5017
EPA 900.0	Alpha & Beta	RICH-RC-5014
EPA 903.1	Ra-226	RICH-RC-5005
EPA 904.0	Ra-228	RICH-RC-5005
EPA 905.0	Sr89/90	RICH-RC-5006
ASTM D2460	Total Radium	RICH-RC-5027
Standard Method 7500-U-C & ASTM D5174	Uranium	RICH-RC-5058
EPA 906.0	Tritium	RICH-RC-5007
NOTE:		
The Gross Alpha LCS is prepared with Am-241 (unless otherwise specified in the case narrative)		
The Gross Beta LCS is prepared with Sr/Y-90 (unless otherwise specified in the case narrative)		

Uncertainty Estimation

STL Richland has adopted the internationally accepted approach to estimating uncertainties described in "NIST Technical Note 1297, 1994 Edition". The approach, "Law of Propagation of Errors", involves the identification of all variables in an analytical method which are used to derive a result. These variables are related to the analytical result (R) by some functional relationship, $R = \text{constants} * f(x, y, z, \dots)$. The components (x, y, z) are evaluated to determine their contribution to the overall method uncertainty. The individual component uncertainties (u_i) are then combined using a statistical model that provides the most probable overall uncertainty value. All component uncertainties are categorized as type A, evaluated by statistical methods, or type B, evaluated by other means. Uncertainties not included in the components, such as sample homogeneity, are combined with the component uncertainty as the square root of the sum-of-the-squares of the individual uncertainties. The uncertainty associated with the derived result is the combined uncertainty (u_c) multiplied by the coverage factor (1, 2, or 3).

When three or more sample replicates are used to derive the analytical result, the type A uncertainty is the standard deviation of the mean value (S/\sqrt{n}), where S is the standard deviation of the derived results. The type B uncertainties are all other random or non-random components that are not included in the standard deviation.

The derivation of the general "Law of Propagation of Errors" equations and specific example are available on request.

Report Definitions

Action Lev	An agreed upon activity level used to trigger some action when the final result is greater than or equal to the Action Level. Often the Action Level is related to the Decision Limit.
Batch	The QC preparation batch number that relates laboratory samples to QC samples that were prepared and analyzed together.
Bias	Defined by the equation $(\text{Result}/\text{Expected}) - 1$ as defined by ANSI N13.30.
COC No	Chain of Custody Number assigned by the Client or STL Richland.
Count Error (#s)	Poisson counting statistics of the gross sample count and background. The uncertainty is absolute and in the same units as the result. For Liquid Scintillation Counting (LSC) the batch blank count is the background.
Total Uncert (#s) u_c - Combined Uncertainty.	All known uncertainties associated with the preparation and analysis of the sample are propagated to give a measure of the uncertainty associated with the result, u_c the combined uncertainty. The uncertainty is absolute and in the same units as the result.
(#s), Coverage Factor	The coverage factor defines the width of the confidence interval, 1, 2 or 3 standard deviations.
CRDL (RL)	Contractual Required Detection Limit as defined in the Client's Statement Of Work or STL Richland "default" nominal detection limit. Often referred to the reporting level (RL)
Lc	Decision Level based on instrument background or blank, adjusted by the Efficiency, Chemical Yield, and Volume associated with the sample. The Type I error probability is approximately 5%. $Lc = (1.645 * \text{Sqrt}(2 * (\text{BkgndCnt}/\text{BkgndCntMin}) / \text{SCntMin})) * (\text{ConvFct}/(\text{Eff} * \text{Yld} * \text{Abn} * \text{Vol})) * \text{IngrFct}$. For LSC methods the batch blank is used as a measure of the background variability. Lc cannot be calculated when the background count is zero.
Lot-Sample No	The number assigned by the LIMS software to track samples received on the same day for a given client. The sample number is a sequential number assigned to each sample in the Lot.
MDC/MDA	Detection Level based on instrument background or blank, adjusted by the Efficiency, Chemical Yield, and Volume with a Type I and II error probability of approximately 5%. $MDC = (4.65 * \text{Sqrt}((\text{BkgndCnt}/\text{BkgndCntMin}) / \text{SCntMin}) + 2.71 / \text{SCntMin}) * (\text{ConvFct}/(\text{Eff} * \text{Yld} * \text{Abn} * \text{Vol})) * \text{IngrFct}$. For LSC methods the batch blank is used as a measure of the background variability.
Primary Detector	The instrument identifier associated with the analysis of the sample aliquot.
Ratio U-234/U-238	The U-234 result divided by the U-238 result. The U-234/U-238 ratio for natural uranium in NIST SRM 4321C is 1.038.
Rst/MDC	Ratio of the Result to the MDC. A value greater than 1 may indicate activity above background at a high level of confidence. Caution should be used when applying this factor and it should be used in concert with the qualifiers associated with the result.
Rst/TotUcert	Ratio of the Result to the Total Uncertainty. If the uncertainty has a coverage factor of 2 a value greater than 1 may indicate activity above background at approximately the 95% level of confidence assuming a two-sided confidence interval. Caution should be used when applying this factor and it should be used in concert with the qualifiers associated with the result.
Report DB No	Sample Identifier used by the report system. The number is based upon the first five digits of the Work Order Number.
RER	The equation Replicate Error Ratio = $(S-D)/[\text{sqrt}(\text{TPUs}^2 + \text{TPUd}^2)]$ as defined by ICPT BOA where S is the original sample result, D is the result of the duplicate, TPUs is the total uncertainty of the original sample and TPUd is the total uncertainty of the duplicate sample.
SDG	Sample Delivery Group Number assigned by the Client or assigned by STL Richland upon sample receipt.
Sum Rpt Alpha Spec Rst(s)	The sum of the reported alpha spec results for tests derived from the same sample excluding duplicate result where the results are in the same units.
Work Order	The LIMS software assign test specific identifier.
Yield	The recovery of the tracer added to the sample such as Pu-242 used to trace a Pu-239/40 method.

Sample Results Summary

Date: 06-Jan-05

STL Richland STL

Ordered by Method, Batch No., Client Sample ID.

Report No. : 27620

SDG No: 27309

Batch	Client Id Work Order	Parameter	Result +/- Uncertainty (2s)	Qual	Units	Yield	MDC or MDA	CRDL	RER2
4303134	RICHRC5005								
	410110-26								
	GVVQJ1AA RA-226		1.39E-01 +- 6.99E-02	J	pCi/L	100%	7.40E-02	1.00E+00	
	4J21009-01 DUP								
	GVMVF1AF RA-226		1.72E+00 +- 4.27E-01		pCi/L	100%	1.24E-01	1.00E+00	
4352245	RICHRC5005								
	410110-26								
	GVVQJ3AC RA-228		2.85E-01 +- 2.56E-01	U	pCi/L	90%	4.20E-01	3.00E+00	
No. of Results: 3									

STL Richland

rptSTLRchSaSum
mary2 V4.10 A97

RER2 - Replicate Error Ratio = $(S-D)/[\sqrt{sq(TPUs)+sq(TPUD)}]$ as defined by ICPT BOA.

J Qual - No U|< qualifier has been assigned and the result is below the Reporting Limit, RL (CRDL) or Report Value is Estimated.
U Qual - Analyzed for, but the result is less than the Mdc/Mda/Total Uncert or gamma scan software did not identify the nuclide.

QC Results Summary

Date: 06-Jan-05

STL Richland STL

Ordered by Method, Batch No, QC Type,.

Report No. : 27620

SDG No.: 27319

Batch	Work Order	Parameter	Result +- Uncertainty (2s)	Qual	Units	Yield	Recovery	Bias	MDC MDA
RICHRC5005									
4303134 BLANK QC									
	GVR1E1AA	RA-226	7.40E-02 +- 4.95E-02	J	pCi/L	100%			6.38E-02
RICHRC5005									
4352245 BLANK QC									
	G1CHK1AA	RA-228	6.12E-01 +- 2.84E-01	J	pCi/L	90%			3.69E-01
4352245 LCS									
	G1CHK1AD	RA-228	5.05E+00 +- 1.11E+00		pCi/L	90%	98%	0.0	4.19E-01
	G1CHK1AC	RA-228	5.21E+00 +- 1.14E+00		pCi/L	90%	101%	0.0	4.23E-01
No. of Results: 4									

STL Richland Bias - (Result/Expected)-1 as defined by ANSI N13.30.

rptSTLRchQcSummary V4.10 A97 J Qual - No U|< qualifier has been assigned and the result is below the Reporting Limit, RL (CRDL) or Report Value is Estimated.

FORM I

Date: 06-Jan-05

SAMPLE RESULTS

Lab Name: STL Richland

SDG: 27309

Collection Date: 10/26/2004

Lot-Sample No.: J4J290344-1

Report No.: 27620

Received Date: 10/29/2004 11:00:00 AM

Client Sample ID: 410110-26

COC No.:

Matrix: WATER

Project: 410110

Ordered by Client Sample ID, Batch No.

Parameter	Result	Qual	Count Error (2 s)	Total Uncert(2 s)	MDC MDA, Action Lev	Rpt Unit, Lc	Yield CRDL(RL)	Rst MDC, Rst/TotUcert	Analysis, Prep Date	Total Sa Size	Aliquot Size	Primary Detector
Batch: 4303134	RICHRC5005				Work Order: GVVQJ1AA			Report DB ID: 9GVVQJ10				
RA-226	1.39E-01	J	6.45E-02	6.99E-02	7.40E-02	pCi/L	100%	(1.9)	12/10/04 11:25 a		0.8594	ASCHMA
						2.98E-02	1.00E+00	(4.)			L	
Batch: 4352245	RICHRC5005				Work Order: GVVQJ3AC			Report DB ID: 9GVVQJ30				
RA-228	2.85E-01	U	2.50E-01	2.56E-01	4.20E-01	pCi/L	90%	0.68	1/5/05 08:35 a		0.9795	GPC3D
						1.93E-01	3.00E+00	(2.2)			L	

No. of Results: 2
∞ Comments:

STL Richland MDC|MDA,Lc - Detection, Decision Level based on Instrument background or blank, adjusted by the sample Efficiency, Yield, and Volume.
rptSTLRchSample J Qual - No U|< qualifier has been assigned and the result is below the Reporting Limit, RL (CRDL) or Report Value is Estimated.
V4.10 A97 U Qual - Analyzed for, but the result is less than the Mdc/Mda|Total Uncert or gamma scan software did not identify the nuclide.

FORM II

Date: 06-Jan-05

DUPLICATE RESULTS

Lab Name: STL Richland

SDG: 27277

Collection Date: 10/21/2004 8:05:00 AM

Lot-Sample No.: J4J270337-1

Report No.: 27620

Received Date: 10/27/2004 3:40:00 PM

Client Sample ID: 4J21009-01 DUP

COC No.:

Matrix: WATER

Parameter	Result, Orig Rst	Qual	Count Error (2 s)	Total Uncert(2 s)	MDC MDA, Action Lev	Rpt Unit, CRDL	Yield	Rst/MDC, Rst/TotUcert	Analysis, Prep Date	Total Sa Size	Allquot Size	Primary Detector
Batch: 4303134	RICHRC5005				Work Order: GVMVF1AF	Report DB ID: GVMVF1FR			Orig Sa DB ID: 9GVMVF10			
RA-226	1.72E+00		2.37E-01	4.27E-01	1.24E-01	pCi/L	100%	(13.9)	12/10/04 10:58 a		0.9379	ASC3RA
	1.17E+00		RER2 2.2			1.00E+00		(8.1)			L	

No. of Results: 1 Comments:

6

STL Richland RER2 - Replicate Error Ratio = $(S-D)/(\sqrt{sq(TPUs)+sq(TPUD)})$ as defined by ICPT BOA.rptSTLRchDupV4.1 MDC|MDA,Lc - Detection, Decision Level based on instrument background or blank, adjusted by the sample Efficiency, Yield, and Volume.
0 A97

FORM II
BLANK RESULTS

Date: 06-Jan-05

Lab Name: STL Richland
Matrix: WATER

SDG: 27319
Report No. : 27620

Parameter	Result	Qual	Count Error (2 s)	Total Uncert(2 s)	MDC MDA, Lc	Rpt Unit, CRDL	Yield	Rs MDC, Rs TotUcert	Analysis, Prep Date	Total Sa Size	Allquot Size	Primary Detector
Batch: 4303134	RICHRC5005				Work Order: GVR1E1AA			Report DB ID: GVR1E1AB				
RA-226	7.40E-02	J	4.74E-02	4.95E-02	6.38E-02	pCi/L	100%	(1.2)	12/10/04 11:19 a		1.0031	ASCEHA
					2.57E-02	1.00E+00		(3.)			L	
Batch: 4352245	RICHRC5005				Work Order: G1CHK1AA			Report DB ID: G1CHK1AB				
RA-228	6.12E-01	J	2.59E-01	2.84E-01	3.69E-01	pCi/L	90%	(1.7)	1/5/05 08:35 a		1.0012	GPC4B
					1.68E-01	3.00E+00		(4.3)			L	
No. of Results: 2 Comments:												

10

FORM II
LCS RESULTS

Date: 06-Jan-05

Lab Name: STL Richland

SDG: 27319

Matrix: WATER

Report No. : 27620

Parameter	Result	Qual	Count Error (2 s)	Total Uncert(2 s)	MDC MDA	Report Unit	Yield	Expected	Expected Uncert	Recovery, Bias	Analysis, Prep Date	Allquot Size	Primary Detector
Batch: 4352245	RICHRC5005					Work Order: G1CHK1AC		Report DB ID: G1CHK1CS					
RA-228	5.21E+00		5.53E-01	1.14E+00	4.23E-01	pCi/L	90%	5.14E+00	1.27E-01	101%	1/5/05 08:36 a	1.0027	GPC4C
							Rec Limits:	70	130	0.0		L	
Batch: 4352245	RICHRC5005					Work Order: G1CHK1AD		Report DB ID: G1CHK1DS					
RA-228	5.05E+00		5.51E-01	1.11E+00	4.19E-01	pCi/L	90%	5.13E+00	1.27E-01	98%	1/5/05 08:36 a	1.003	GPC4D
							Rec Limits:	70	130	0.0		L	

No. of Results: 2 Comments:

11

Analytical Data Package Prepared For
CCI Analytical Laboratories

Radiochemical Analysis By

STL Richland

2800 G.W. Way, Richland Wa, 99354, (509)-375-3131.

Assigned Laboratory Code: STLR

Data Package Contains 12 Pages

Report No.: 32311

SDG No.	Order No.	Client Sample ID (List Order)	Lot-Sa No.	Work Order	Report DB ID	Batch No.
31532		604142-1	J6E010221-1	H4GNV1AA	9H4GNV10	6129148
		604142-1	J6E010221-1	H4GNV1AC	9H4GNV10	6129149

Certificate of Analysis

STL Richland
2800 George Washington Way
Richland, WA 99354

Tel: 509 375 3131 Fax: 509 375 5590
www.stl-inc.com

June 9, 2006

CCI Analytical Laboratories, Inc.
8620 Holly Drive
Everett, WA 98208

Attention: Chuck Rancatti

Date Received in Lab	:	May 1, 2006
Sample Type	:	One (1) Water
SDG Number	:	31532

CASE NARRATIVE

I. Introduction

On May 1, 2006, one water sample was received at the STL Richland (STLR) laboratory for radiochemical analysis. Upon receipt, the sample was assigned the STLR identification number as described on the cover page of the Analytical Data Package report form. This sample was assigned to Lot Number J6E010221.

II. Sample Receipt

The sample was received in good condition and no anomalies were noted during check-in.

III. Analytical Results/Methodology

The analytical results for this report are presented by laboratory sample ID. Each set of data includes sample identification information; analytical results and the appropriate associated statistical uncertainties.

The analyses requested were:

Radium-226 by method RICH-RC-5005 (EPA 903.1)
Radium-228 by method RICH-RC-5005 (EPA 904.0)

IV. Quality Control

The analytical result for each analysis performed includes a minimum of one laboratory control sample (LCS), and one reagent blank sample analysis. Any exceptions have been noted in the "Comments" section.

V. Comments

Radium-226 Analysis:

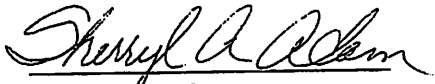
The LCS, batch blank, sample and sample duplicate results are within acceptance limits.

Radium-228 Analysis:

The LCS, batch blank, sample and sample duplicate results are within acceptance limits.

I certify that this Certificate of Analysis is in compliance with the SOW, both technically and for completeness, for other than the conditions detailed above. The Laboratory Manager or a designee, as verified by the following signature has authorized release of the data contained in this hard copy data package.

Reviewed and approved:


Sherryl A. Adam
Project Manager

Drinking Water Method Cross References

DRINKING WATER ASTM METHOD CROSS REFERENCES		
Referenced Method	Isotope(s)	STL Richland's SOP number
EPA 901.1	Cs-134, I-131	RICH-RC-5017
EPA 900.0	Alpha & Beta	RICH-RC-5014
EPA 903.1	Ra-226	RICH-RC-5005
EPA 904.0	Ra-228	RICH-RC-5005
EPA 905.0	Sr89/90	RICH-RC-5006
ASTM D2460	Total Radium	RICH-RC-5027
Standard Method 7500-U-C & ASTM D5174	Uranium	RICH-RC-5058
EPA 906.0	Tritium	RICH-RC-5007
NOTE:		
The Gross Alpha LCS is prepared with Am-241 (unless otherwise specified in the case narrative)		
The Gross Beta LCS is prepared with Sr/Y-90 (unless otherwise specified in the case narrative)		

Uncertainty Estimation

STL Richland has adopted the internationally accepted approach to estimating uncertainties described in "NIST Technical Note 1297, 1994 Edition". The approach, "Law of Propagation of Errors", involves the identification of all variables in an analytical method which are used to derive a result. These variables are related to the analytical result (R) by some functional relationship, $R = \text{constants} * f(x,y,z,...)$. The components (x,y,z) are evaluated to determine their contribution to the overall method uncertainty. The individual component uncertainties (u_i) are then combined using a statistical model that provides the most probable overall uncertainty value. All component uncertainties are categorized as type A, evaluated by statistical methods, or type B, evaluated by other means. Uncertainties not included in the components, such as sample homogeneity, are combined with the component uncertainty as the square root of the sum-of-the-squares of the individual uncertainties. The uncertainty associated with the derived result is the combined uncertainty (u_c) multiplied by the coverage factor (1,2, or 3).

When three or more sample replicates are used to derive the analytical result, the type A uncertainty is the standard deviation of the mean value (S/\sqrt{n}), where S is the standard deviation of the derived results. The type B uncertainties are all other random or non-random components that are not included in the standard deviation.

The derivation of the general "Law of Propagation of Errors" equations and specific example are available on request.

Report Definitions

Action Lev	An agreed upon activity level used to trigger some action when the final result is greater than or equal to the Action Level. Often the Action Level is related to the Decision Limit.
Batch	The QC preparation batch number that relates laboratory samples to QC samples that were prepared and analyzed together.
Bias	Defined by the equation $(\text{Result}/\text{Expected}) - 1$ as defined by ANSI N13.30.
COC No	Chain of Custody Number assigned by the Client or STL Richland.
Count Error (#s)	Poisson counting statistics of the gross sample count and background. The uncertainty is absolute and in the same units as the result. For Liquid Scintillation Counting (LSC) the batch blank count is the background.
Total Uncert (#s) u_c - Combined Uncertainty.	All known uncertainties associated with the preparation and analysis of the sample are propagated to give a measure of the uncertainty associated with the result, u_c the combined uncertainty. The uncertainty is absolute and in the same units as the result.
(#s), Coverage Factor CRDL (RL)	The coverage factor defines the width of the confidence interval, 1, 2 or 3 standard deviations. Contractual Required Detection Limit as defined in the Client's Statement Of Work or STL Richland "default" nominal detection limit. Often referred to the reporting level (RL)
Lc	Decision Level based on instrument background or blank, adjusted by the Efficiency, Chemical Yield, and Volume associated with the sample. The Type I error probability is approximately 5%. $L_c = (1.645 * \text{Sqrt}(2 * (\text{BkgndCnt}/\text{BkgndCntMin})/\text{SCntMin})) * (\text{ConvFct}/(\text{Eff} * \text{Yld} * \text{Abn} * \text{Vol}) * \text{IngrFct})$. For LSC methods the batch blank is used as a measure of the background variability. Lc cannot be calculated when the background count is zero.
Lot-Sample No	The number assigned by the LIMS software to track samples received on the same day for a given client. The sample number is a sequential number assigned to each sample in the Lot.
MDC MDA	Detection Level based on instrument background or blank, adjusted by the Efficiency, Chemical Yield, and Volume with a Type I and II error probability of approximately 5%. $MDC = (4.65 * \text{Sqrt}((\text{BkgndCnt}/\text{BkgndCntMin})/\text{SCntMin}) + 2.71/\text{SCntMin}) * (\text{ConvFct}/(\text{Eff} * \text{Yld} * \text{Abn} * \text{Vol}) * \text{IngrFct})$. For LSC methods the batch blank is used as a measure of the background variability.
Primary Detector	The instrument identifier associated with the analysis of the sample aliquot.
Ratio U-234/U-238	The U-234 result divided by the U-238 result. The U-234/U-238 ratio for natural uranium in NIST SRM 4321C is 1.038.
Rst/MDC	Ratio of the Result to the MDC. A value greater than 1 may indicate activity above background at a high level of confidence. Caution should be used when applying this factor and it should be used in concert with the qualifiers associated with the result.
Rst/TotUcert	Ratio of the Result to the Total Uncertainty. If the uncertainty has a coverage factor of 2 a value greater than 1 may indicate activity above background at approximately the 95% level of confidence assuming a two-sided confidence interval. Caution should be used when applying this factor and it should be used in concert with the qualifiers associated with the result.
Report DB No	Sample Identifier used by the report system. The number is based upon the first five digits of the Work Order Number.
RER	The equation Replicate Error Ratio $= (S - D) / [\text{sqrt}(\text{TPUs}^2 + \text{TPUd}^2)]$ as defined by ICPT BOA where S is the original sample result, D is the result of the duplicate, TPUs is the total uncertainty of the original sample and TPUd is the total uncertainty of the duplicate sample.
SDG	Sample Delivery Group Number assigned by the Client or assigned by STL Richland upon sample receipt.
Sum Rpt Alpha Spec Rst(s)	The sum of the reported alpha spec results for tests derived from the same sample excluding duplicate result where the results are in the same units.
Work Order	The LIMS software assign test specific identifier.
Yield	The recovery of the tracer added to the sample such as Pu-242 used to trace a Pu-239/40 method.

Sample Results Summary

Date: 07-Jun-06

STL Richland STLR

Ordered by Method, Batch No., Client Sample ID.

Report No. : 32311

SDG No: 31574

Batch	Client Id Work Order	Parameter	Result +- Uncertainty (2s)	Qual	Units	Yield	MDC or MDA	CRDL	RER2
6129148	RICHRC5005								
	20060427-32 DUP								
	H4W7P1AF RA-226		3.64E-02 +- 1.09E-01	U	pCi/L	90%	2.03E-01	1.00E+00	
	604142-1								
	H4GNV1AA RA-226		2.88E-02 +- 9.30E-02	U	pCi/L	100%	1.78E-01	1.00E+00	
6129149	RICHRC5005								
	20060427-32 DUP								
	H4W7P1AG RA-228		3.47E-01 +- 2.32E-01	U	pCi/L	79%	4.69E-01	1.00E+00	1.0
	604142-1								
	H4GNV1AC RA-228		7.32E-01 +- 2.61E-01	J	pCi/L	87%	4.16E-01	3.00E+00	
No. of Results: 4									

QC Results Summary
STL Richland STL
 Ordered by Method, Batch No, QC Type,.

Date: 07-Jun-06

Report No. : 32311

SDG No.: 31532

Batch Work Order	Parameter	Result +- Uncertainty (2s)	Qual	Units	Yield	Recovery	Bias	MDC MDA
RICHRC5005								
6129148 BLANK QC								
H40QV1AA	RA-226	-1.09E-01 +- 1.41E-01	U	pCi/L	110%			2.89E-01
6129148 LCS								
H40QV1AC	RA-226	1.34E+00 +- 3.66E-01		pCi/L	100%	97%	0.0	1.85E-01
RICHRC5005								
6129149 BLANK QC								
H40QW1AA	RA-228	6.14E-02 +- 1.58E-01	U	pCi/L	99%			3.76E-01
6129149 LCS								
H40QW1AC	RA-228	4.76E+00 +- 7.31E-01		pCi/L	88%	94%	-0.1	3.91E-01

No. of Results: 4

FORM I

Date: 07-Jun-06

SAMPLE RESULTS

Lab Name: STL Richland

Lot-Sample No.: J6E010221-1

Client Sample ID: 604142-1

SDG: 31532

Report No. : 32311

COC No. :

Collection Date: 4/27/2006

Received Date: 5/1/2006 10:30:00 AM

Matrix: WATER

Ordered by Client Sample ID, Batch No.

Parameter	Result	Qual	Count Error (2 s)	Total Uncert(2 s)	MDC MDA, Action Lev	Rpt Unit, Lc	Yield CRDL(RL)	Rst/MDC, Rst/TotUcert	Analysis, Prep Date	Total Sa Size	Aliquot Size	Primary Detector
Batch: 6129148	RICHRC5005				Work Order: H4GNV1AA				Report DB ID: 9H4GNV10			
RA-226	2.88E-02	U	9.3E-02	9.3E-02	1.78E-01	pCi/L	100%	0.16	6/4/06 01:45 p		0.9797	ASCKME
						7.33E-02	1.00E+00	0.62			L	
Batch: 6129149	RICHRC5005				Work Order: H4GNV1AC				Report DB ID: 9H4GNV10			
RA-228	7.32E-01	J	2.4E-01	2.6E-01	4.16E-01	pCi/L	87%	(1.8)	6/6/06 06:26 a		0.9797	GPC4B
						1.81E-01	3.00E+00	(5.6)			L	

No. of Results: 2 Comments:

FORM II

Date: 07-Jun-06

DUPLICATE RESULTS

Lab Name: STL Richland
Lot-Sample No.: J6E080115-4
Client Sample ID: 20060427-32 DUP

SDG: 31574
Report No. : 32311
COC No. :

Collection Date: 4/27/2006 12:42:00 PM
Received Date: 5/5/2006 11:00:00 AM
Matrix: WATER

Parameter	Result, Orig Rst	Qual	Count Error (2 s)	Total Uncert(2 s)	MDC MDA, Action Lev	Rpt Unit, CRDL	Yield	Rst/MDC, Rst/TotUcert	Analysis, Prep Date	Total Sa Size	Aliquot Size	Primary Detector
Batch: 6129148	RICHRC5005				Work Order: H4W7P1AF		Report DB ID: H4W7P1FR		Orig Sa DB ID: 9H4W7P10			
RA-226	3.64E-02	U	1.1E-01	1.1E-01	2.03E-01	pCi/L	90%	0.18	6/4/06 04:41 p		1.0007	ASC4UA
	2.06E-02	U		RER2 0.2		1.00E+00		0.67			L	
Batch: 6129149	RICHRC5005				Work Order: H4W7P1AG		Report DB ID: H4W7P1GR		Orig Sa DB ID: 9H4W7P10			
RA-228	3.47E-01	U	2.2E-01	2.3E-01	4.69E-01	pCi/L	79%	0.74	6/6/06 07:24 a		1.0007	GPC4A
	5.22E-01	J		RER2 1.0		1.00E+00		(3.)			L	

6

No. of Results: 2 Comments:

STL Richland
rptSTLRchDupV4.1
5.0 A97

RER2 - Replicate Error Ratio = $(S-D)/[\sqrt{(sq(TPUs)+sq(TPUd))}]$ as defined by ICPT BOA.
MDC|MDA,Lc - Detection, Decision Level based on instrument background or blank, adjusted by the sample Efficiency, Yield, and Volume.
J Qual - No U|< qualifier has been assigned and the result is below the Reporting Limit, RL (CRDL) or Report Value is Estimated.
U Qual - Analyzed for but not detected above limiting criteria. Limit criteria is less than the Mdc/Mda or Total Uncert or not identified by gamma scan software.

FORM II
BLANK RESULTS

Date: 07-Jun-06

Lab Name: STL Richland
Matrix: WATER

SDG: 31532
Report No. : 32311

Parameter	Result	Qual	Count Error (2 s)	Total Uncert(2 s)	MDC MDA ,	Rpt Unit, CRDL	Yield	Rst/MDC, Rst/TotUcert	Analysis, Prep Date	Total Sa Size	Aliquot Size	Primary Detector
atch: 6129148	RICHRC5005				Work Order: H40QV1AA	Report DB ID: H40QV1AB						
RA-226	-1.09E-01	U	1.4E-01	1.4E-01	2.89E-01	pCi/L	110%	-0.38	6/4/06 04:40 p		1.0001	ASC7RH
					1.32E-01	1.00E+00		-(1.5)			L	
atch: 6129149	RICHRC5005				Work Order: H40QW1AA	Report DB ID: H40QW1AB						
RA-228	6.14E-02	U	1.5E-01	1.6E-01	3.76E-01	pCi/L	99%	0.16	6/6/06 07:24 a		1.0001	GPC4B
					1.63E-01	3.00E+00		0.78			L	

No. of Results: 2 Comments:

10

FORM II
LCS RESULTS

Date: 07-Jun-06

Lab Name: STL Richland
Matrix: WATER

SDG: 31532
Report No. : 32311

Parameter	Result	Qual	Count Error (2 s)	Total Uncert(2 s)	MDC MDA	Report Unit	Yield	Expected	Expected Uncert	Recovery, Bias	Analysis, Prep Date	Aliquot Size	Primary Detector
atch: 6129148	RICHRC5005												
RA-226	1.34E+00		2.4E-01	3.7E-01	1.85E-01	pCi/L							
Work Order: H40QV1AC							Report DB ID: H40QV1CS						
							100%	1.38E+00	3.50E-01	97%	6/4/06 04:42 p	1.0003	ASCEHA
							Rec Limits:	70	130	0.0		L	
atch: 6129149	RICHRC5005												
RA-228	4.76E+00		4.9E-01	7.3E-01	3.91E-01	pCi/L							
Work Order: H40QW1AC							Report DB ID: H40QW1CS						
							88%	5.05E+00	2.15E-02	94%	6/6/06 07:24 a	1.0003	GPC4C
							Rec Limits:	70	130	-0.1		L	

No. of Results: 2 Comments:

11