

CERTIFICATION

SDG No: JC18972 Laboratory: Accutest, New Jersey
 Site: BMS, Building 5 Area, PR Matrix: Accutest, Florida
 Humacao, PR Soil/Groundwater

SUMMARY: Soil and groundwater samples (Table 1) were collected on the BMSMC facility – Building 5 Area. The BMSMC facility is located in Humacao, PR. Samples were taken April 20-21, 2016 and were analyzed in Accutest Laboratory of Dayton, New Jersey for the ABN TCL Special List and for TCL pesticides list that reported the data under SDG No.: JC18972. Accutest Laboratory of Orlando, Florida analyzed for low molecular weight alcohols (LMWA) that also reported the data under SDG No.: JC18972. Results were validated using the latest validation guidelines (July, 2015) of the EPA Hazardous Waste Support Section. The analyses performed are shown in Table 1. Individual data review worksheets are enclosed for each target analyte group. The data sample organic data samples summary form shows for analytes results that were qualified.

In summary the results are valid and can be used for decision taking purposes.

Table 1. Samples analyzed and analysis performed

SAMPLE ID	SAMPLE DESCRIPTION	MATRIX	ANALYSIS PERFORMED
JC18972-1	RA16 (17.5-18.5)	Soil	ABN TCL special list; pesticides TCL list
JC18972-1A	RA16 (17.5-18.5)	Soil	LMWA
JC18972-2	S-40D (14 – 15)	Soil	ABN TCL special list; pesticides TCL list
JC18972-2A	S-40D (14 – 15)	Soil	LMWA
JC18972-3	S-41S (8-9)	Soil	ABN TCL special list; pesticides TCL list
JC18972-4	RA16-GWS	Groundwater	ABN TCL special list; pesticides TCL list
JC18972-4A	RA16-GWS	Groundwater	LMWA

Reviewer Name: Rafael Infante
 Chemist License 1888

Signature:

Date:

Rafael Infante

May 17, 2016



SGS Accutest

Report of Analysis

Page 1 of 3

Client Sample ID:	RA16 (17.5-18.5)	Date Sampled:	04/20/16
Lab Sample ID:	JC18972-1	Date Received:	04/25/16
Matrix:	SO - Soil	Percent Solids:	80.9
Method:	SW846 8270D SW846 3546		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	Z110167.D	1	04/29/16	SB	04/28/16	OP93473	EZ5505
Run #2							

Run #	Initial Weight	Final Volume
Run #1	30.3 g	1.0 ml
Run #2		

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
95-57-8	2-Chlorophenol	ND	82	30	ug/kg	
59-50-7	4-Chloro-3-methyl phenol	ND	200	37	ug/kg	
120-83-2	2,4-Dichlorophenol	ND	200	33	ug/kg	
105-67-9	2,4-Dimethylphenol	ND	200	75	ug/kg	
51-28-5	2,4-Dinitrophenol	ND	200	180	ug/kg	
534-52-1	4,6-Dinitro-o-cresol	ND	200	78	ug/kg	
95-48-7	2-Methylphenol	ND	82	59	ug/kg	
	3&4-Methylphenol	ND	82	39	ug/kg	
88-75-5	2-Nitrophenol	ND	200	38	ug/kg	
100-02-7	4-Nitrophenol	ND	410	69	ug/kg	
87-86-5	Pentachlorophenol	ND	200	100	ug/kg	
108-95-2	Phenol	ND	82	31	ug/kg	
58-90-2	2,3,4,6-Tetrachlorophenol	ND	200	38	ug/kg	
95-95-4	2,4,5-Trichlorophenol	ND	200	37	ug/kg	
88-06-2	2,4,6-Trichlorophenol	ND	200	33	ug/kg	
83-32-9	Acenaphthene	ND	41	38	ug/kg	
208-96-8	Acenaphthylene	ND	41	4.3	ug/kg	
98-86-2	Acetophenone	ND	200	6.9	ug/kg	
120-12-7	Anthracene	ND	41	3.5	ug/kg	
1912-24-9	Atrazine	ND	82	17	ug/kg	
56-55-3	Benzo(a)anthracene	ND	41	7.9	ug/kg	
50-32-8	Benzo(a)pyrene	ND	41	8.7	ug/kg	
205-99-2	Benzo(b)fluoranthene	ND	41	8.4	ug/kg	
191-24-2	Benzo(g,h,i)perylene	ND	41	12	ug/kg	
207-08-9	Benzo(k)fluoranthene	ND	41	9.1	ug/kg	
101-55-3	4-Bromophenyl phenyl ether	ND	82	9.3	ug/kg	
85-68-7	Butyl benzyl phthalate	ND	82	22	ug/kg	
92-52-4	1,1'-Biphenyl	ND	82	7.5	ug/kg	
100-52-7	Benzaldehyde	ND	200	10	ug/kg	
91-58-7	2-Chloronaphthalene	ND	82	5.8	ug/kg	
106-47-8	4-Chloroaniline	ND	200	11	ug/kg	
86-74-8	Carbazole	ND	82	4.5	ug/kg	

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID: RA16 (17.5-18.5)
 Lab Sample ID: JC18972-1
 Matrix: SO - Soil
 Method: SW846 8270D SW846 3546
 Project: BSMC, Building 5 Area, PR

Date Sampled: 04/20/16
 Date Received: 04/25/16
 Percent Solids: 80.9

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	82	26	ug/kg	
218-01-9	Chrysene	ND	41	6.6	ug/kg	
111-91-1	bis(2-Chloroethoxy)methane	ND	82	9.3	ug/kg	
111-44-4	bis(2-Chloroethyl)ether	ND	82	17	ug/kg	
108-60-1	bis(2-Chloroisopropyl)ether	ND	82	9.3	ug/kg	
7005-72-3	4-Chlorophenyl phenyl ether	ND	82	7.7	ug/kg	
121-14-2	2,4-Dinitrotoluene	ND	41	7.7	ug/kg	
606-20-2	2,6-Dinitrotoluene	ND	41	11	ug/kg	
91-94-1	3,3'-Dichlorobenzidine	ND	82	27	ug/kg	
53-70-3	Dibenzo(a,h)anthracene	ND	41	15	ug/kg	
132-64-9	Dibenzofuran	ND	82	5.7	ug/kg	
84-74-2	Di-n-butyl phthalate	ND	82	4.8	ug/kg	
117-84-0	Di-n-octyl phthalate	ND	82	5.5	ug/kg	
84-66-2	Diethyl phthalate	ND	82	5.2	ug/kg	
131-11-3	Dimethyl phthalate	ND	82	5.8	ug/kg	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	82	14	ug/kg	
206-44-0	Fluoranthene	ND	41	5.0	ug/kg	
86-73-7	Fluorene	ND	41	4.9	ug/kg	
118-74-1	Hexachlorobenzene	ND	82	8.0	ug/kg	
87-68-3	Hexachlorobutadiene	ND	41	11	ug/kg	
77-47-4	Hexachlorocyclopentadiene	ND	410	65	ug/kg	
67-72-1	Hexachloroethane	ND	200	13	ug/kg	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	41	21	ug/kg	
78-59-1	Isophorone	ND	82	7.6	ug/kg	
90-12-0	1-Methylnaphthalene	ND	82	6.6	ug/kg	
91-57-6	2-Methylnaphthalene	ND	82	7.6	ug/kg	
88-74-4	2-Nitroaniline	ND	200	9.3	ug/kg	
99-09-2	3-Nitroaniline	ND	200	12	ug/kg	
100-01-6	4-Nitroaniline	ND	200	14	ug/kg	
98-95-3	Nitrobenzene	ND	82	13	ug/kg	
621-64-7	N-Nitroso-di-n-propylamine	ND	82	12	ug/kg	
86-30-6	N-Nitrosodiphenylamine	ND	200	21	ug/kg	
85-01-8	Phenanthrene	ND	41	4.5	ug/kg	
129-00-0	Pyrene	ND	41	5.1	ug/kg	
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	200	9.8	ug/kg	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
367-12-4	2-Fluorophenol	60%		30-106%
4165-62-2	Phenol-d5	60%		30-106%

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID:	RA16 (17.5-18.5)	Date Sampled:	04/20/16
Lab Sample ID:	JC18972-1	Date Received:	04/25/16
Matrix:	SO - Soil	Percent Solids:	80.9
Method:	SW846 8270D SW846 3546		
Project:	BMSMC, Building 5 Area, PR		

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
118-79-6	2,4,6-Tribromophenol	67%		24-140%
4165-60-0	Nitrobenzene-d5	71%		26-122%
321-60-8	2-Fluorobiphenyl	72%		36-112%
1718-51-0	Terphenyl-d14	72%		36-132%



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	RA16 (17.5-18.5)	Date Sampled:	04/20/16
Lab Sample ID:	JC18972-1	Date Received:	04/25/16
Matrix:	SO - Soil	Percent Solids:	80.9
Method:	SW846 8270D BY SIM SW846 3546		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	3M61041.D	1	05/03/16	LK	04/28/16	OP93473A	E3M2869
Run #2							

Run #	Initial Weight	Final Volume
Run #1	30.3 g	1.0 ml
Run #2		

CAS No.	Compound	Result	RL	MDL	Units	Q
123-91-1	1,4-Dioxane ^a	ND	4.1	0.82	ug/kg	
91-20-3	Naphthalene	ND	4.1	0.50	ug/kg	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-60-0	Nitrobenzene-d5	63%		15-138%
321-60-8	2-Fluorobiphenyl	73%		12-148%
1718-51-0	Terphenyl-d14	76%		10-157%

(a) Not accredited for this compound at the time of analysis, but all method requirements were followed.



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID: RA16 (17.5-18.5)
 Lab Sample ID: JC18972-1
 Matrix: SO - Soil
 Method: SW846 8081B SW846 3546
 Project: BMSMC, Building 5 Area, PR

Date Sampled: 04/20/16
 Date Received: 04/25/16
 Percent Solids: 80.9

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	1G122624.D	1	04/29/16	BP	04/28/16	OP93471	G1G3976
Run #2							

Run #	Initial Weight	Final Volume
Run #1	15.1 g	10.0 ml
Run #2		

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units	Q
309-00-2	Aldrin	ND	0.82	0.73	ug/kg	
319-84-6	alpha-BHC	ND	0.82	0.55	ug/kg	
319-85-7	beta-BHC	ND	0.82	0.51	ug/kg	
319-86-8	delta-BHC	ND	0.82	0.32	ug/kg	
58-89-9	gamma-BHC (Lindane)	ND	0.82	0.37	ug/kg	
5103-71-9	alpha-Chlordane	ND	0.82	0.44	ug/kg	
5103-74-2	gamma-Chlordane	ND	0.82	0.62	ug/kg	
60-57-1	Dieldrin	ND	0.82	0.64	ug/kg	
72-54-8	4,4'-DDD	ND	0.82	0.30	ug/kg	
72-55-9	4,4'-DDE	ND	0.82	0.27	ug/kg	
50-29-3	4,4'-DDT	ND	0.82	0.31	ug/kg	
72-20-8	Endrin	ND	0.82	0.29	ug/kg	
1031-07-8	Endosulfan sulfate	ND	0.82	0.47	ug/kg	
7421-93-4	Endrin aldehyde	ND	0.82	0.61	ug/kg	
959-98-8	Endosulfan-I	ND	0.82	0.27	ug/kg	
33213-65-9	Endosulfan-II	ND	0.82	0.77	ug/kg	
76-44-8	Heptachlor	ND	0.82	0.67	ug/kg	
1024-57-3	Heptachlor epoxide	ND	0.82	0.34	ug/kg	
72-43-5	Methoxychlor	ND	1.6	0.46	ug/kg	
53494-70-5	Endrin ketone	ND	0.82	0.43	ug/kg	
8001-35-2	Toxaphene	ND	20	14	ug/kg	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
877-09-8	Tetrachloro-m-xylene	65%		24-136%
877-09-8	Tetrachloro-m-xylene	67%		24-136%
2051-24-3	Decachlorobiphenyl	61%		10-153%
2051-24-3	Decachlorobiphenyl	67%		10-153%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	RA16 (17.5-18.5)	Date Sampled:	04/20/16
Lab Sample ID:	JC18972-1A	Date Received:	04/25/16
Matrix:	SO - Soil	Percent Solids:	80.9
Method:	SW846 8015C MOD		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1 ^a	XY064101.D	1	05/03/16	AFL	n/a	n/a	F:GXY2773
Run #2							

Run #	Initial Weight	Final Volume
Run #1	4.91 g	10.0 ml
Run #2		

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5	Ethanol	ND	13	2.5	mg/kg	
78-83-1	Isobutyl Alcohol	ND	13	2.5	mg/kg	
67-63-0	Isopropyl Alcohol	ND	13	2.5	mg/kg	
71-23-8	n-Propyl Alcohol	ND	13	2.5	mg/kg	
71-36-3	n-Butyl Alcohol	ND	13	2.5	mg/kg	
67-56-1	Methanol	3.9	13	2.5	mg/kg	J

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
111-27-3	Hexanol	112%		69-121%

(a) Sample was received in a bulk container but was not preserved within 48 hours of sampling. Analysis performed at Accutest Laboratories, Orlando FL.



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 3

Client Sample ID:	S-35D (14-15)	Date Sampled:	04/21/16
Lab Sample ID:	JC18972-2	Date Received:	04/25/16
Matrix:	SO - Soil	Percent Solids:	78.7
Method:	SW846 8270D SW846 3546		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	Z110166.D	1	04/29/16	SB	04/28/16	OP93473	EZ5505
Run #2							

Run #	Initial Weight	Final Volume
Run #1	31.3 g	1.0 ml
Run #2		

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
95-57-8	2-Chlorophenol	ND	81	30	ug/kg	
59-50-7	4-Chloro-3-methyl phenol	ND	200	37	ug/kg	
120-83-2	2,4-Dichlorophenol	ND	200	32	ug/kg	
105-67-9	2,4-Dimethylphenol	ND	200	74	ug/kg	
51-28-5	2,4-Dinitrophenol	ND	200	180	ug/kg	
534-52-1	4,6-Dinitro-o-cresol	ND	200	77	ug/kg	
95-48-7	2-Methylphenol	ND	81	59	ug/kg	
	3&4-Methylphenol	ND	81	39	ug/kg	
88-75-5	2-Nitrophenol	ND	200	37	ug/kg	
100-02-7	4-Nitrophenol	ND	410	69	ug/kg	
87-86-5	Pentachlorophenol	ND	200	99	ug/kg	
108-95-2	Phenol	ND	81	30	ug/kg	
58-90-2	2,3,4,6-Tetrachlorophenol	ND	200	38	ug/kg	
95-95-4	2,4,5-Trichlorophenol	ND	200	37	ug/kg	
88-06-2	2,4,6-Trichlorophenol	ND	200	33	ug/kg	
83-32-9	Acenaphthene	ND	41	38	ug/kg	
208-96-8	Acenaphthylene	ND	41	4.3	ug/kg	
98-86-2	Acetophenone	ND	200	6.9	ug/kg	
120-12-7	Anthracene	ND	41	3.5	ug/kg	
1912-24-9	Atrazine	ND	81	17	ug/kg	
56-55-3	Benzo(a)anthracene	ND	41	7.8	ug/kg	
50-32-8	Benzo(a)pyrene	ND	41	8.6	ug/kg	
205-99-2	Benzo(b)fluoranthene	ND	41	8.4	ug/kg	
191-24-2	Benzo(g,h,i)perylene	ND	41	12	ug/kg	
207-08-9	Benzo(k)fluoranthene	ND	41	9.1	ug/kg	
101-55-3	4-Bromophenyl phenyl ether	ND	81	9.3	ug/kg	
85-68-7	Butyl benzyl phthalate	ND	81	22	ug/kg	
92-52-4	1,1'-Biphenyl	ND	81	7.5	ug/kg	
100-52-7	Benzaldehyde	ND	200	10	ug/kg	
91-58-7	2-Chloronaphthalene	ND	81	5.8	ug/kg	
106-47-8	4-Chloroaniline	ND	200	11	ug/kg	
86-74-8	Carbazole	ND	81	4.5	ug/kg	



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

Report of Analysis

Client Sample ID: S-35D (14-15)
 Lab Sample ID: JC18972-2
 Matrix: SO - Soil
 Method: SW846 8270D SW846 3546
 Project: BMSMC, Building 5 Area, PR

Date Sampled: 04/21/16
 Date Received: 04/25/16
 Percent Solids: 78.7

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	81	26	ug/kg	
218-01-9	Chrysene	ND	41	6.5	ug/kg	
111-91-1	bis(2-Chloroethoxy)methane	ND	81	9.2	ug/kg	
111-44-4	bis(2-Chloroethyl)ether	ND	81	17	ug/kg	
108-60-1	bis(2-Chloroisopropyl)ether	ND	81	9.3	ug/kg	
7005-72-3	4-Chlorophenyl phenyl ether	ND	81	7.6	ug/kg	
121-14-2	2,4-Dinitrotoluene	ND	41	7.6	ug/kg	
606-20-2	2,6-Dinitrotoluene	ND	41	10	ug/kg	
91-94-1	3,3'-Dichlorobenzidine	ND	81	27	ug/kg	
53-70-3	Dibenzo(a,h)anthracene	ND	41	14	ug/kg	
132-64-9	Dibenzofuran	ND	81	5.6	ug/kg	
84-74-2	Di-n-butyl phthalate	ND	81	4.8	ug/kg	
117-84-0	Di-n-octyl phthalate	ND	81	5.5	ug/kg	
84-66-2	Diethyl phthalate	ND	81	5.2	ug/kg	
131-11-3	Dimethyl phthalate	ND	81	5.8	ug/kg	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	81	14	ug/kg	
206-44-0	Fluoranthene	ND	41	5.0	ug/kg	
86-73-7	Fluorene	ND	41	4.8	ug/kg	
118-74-1	Hexachlorobenzene	ND	81	8.0	ug/kg	
87-68-3	Hexachlorobutadiene	ND	41	11	ug/kg	
77-47-4	Hexachlorocyclopentadiene	ND	410	65	ug/kg	
67-72-1	Hexachloroethane	ND	200	13	ug/kg	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	41	21	ug/kg	
78-59-1	Isophorone	ND	81	7.6	ug/kg	
90-12-0	1-Methylnaphthalene	ND	81	6.6	ug/kg	
91-57-6	2-Methylnaphthalene	ND	81	7.6	ug/kg	
88-74-4	2-Nitroaniline	ND	200	9.2	ug/kg	
99-09-2	3-Nitroaniline	ND	200	12	ug/kg	
100-01-6	4-Nitroaniline	ND	200	14	ug/kg	
98-95-3	Nitrobenzene	ND	81	13	ug/kg	
621-64-7	N-Nitroso-di-n-propylamine	ND	81	12	ug/kg	
86-30-6	N-Nitrosodiphenylamine	ND	200	21	ug/kg	
85-01-8	Phenanthrene	ND	41	4.5	ug/kg	
129-00-0	Pyrene	ND	41	5.1	ug/kg	
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	200	9.7	ug/kg	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
367-12-4	2-Fluorophenol	61%		30-106%
4165-62-2	Phenol-d5	61%		30-106%

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID:	S-35D (14-15)	Date Sampled:	04/21/16
Lab Sample ID:	JC18972-2	Date Received:	04/25/16
Matrix:	SO - Soil	Percent Solids:	78.7
Method:	SW846 8270D SW846 3546		
Project:	BMSMC, Building 5 Area, PR		

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
118-79-6	2,4,6-Tribromophenol	67%		24-140%
4165-60-0	Nitrobenzene-d5	77%		26-122%
321-60-8	2-Fluorobiphenyl	68%		36-112%
1718-51-0	Terphenyl-d14	76%		36-132%



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	S-35D (14-15)	Date Sampled:	04/21/16
Lab Sample ID:	JC18972-2	Date Received:	04/25/16
Matrix:	SO - Soil	Percent Solids:	78.7
Method:	SW846 8270D BY SIM SW846 3546		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	3M61042.D	1	05/03/16	LK	04/28/16	OP93473A	E3M2869
Run #2							

Run #	Initial Weight	Final Volume
Run #1	31.3 g	1.0 ml
Run #2		

CAS No.	Compound	Result	RL	MDL	Units	Q
123-91-1	1,4-Dioxane ^a	ND	4.1	0.82	ug/kg	
91-20-3	Naphthalene	ND	4.1	0.50	ug/kg	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-60-0	Nitrobenzene-d5	68%		15-138%
321-60-8	2-Fluorobiphenyl	74%		12-148%
1718-51-0	Terphenyl-d14	82%		10-157%

(a) Not accredited for this compound at the time of analysis, but all method requirements were followed.



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	S-35D (14-15)	Date Sampled:	04/21/16
Lab Sample ID:	JC18972-2	Date Received:	04/25/16
Matrix:	SO - Soil	Percent Solids:	78.7
Method:	SW846 8081B SW846 3546		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	1G122625.D	1	04/29/16	BP	04/28/16	OP93471	G1G3976
Run #2							

Run #	Initial Weight	Final Volume
Run #1	16.3 g	10.0 ml
Run #2		

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units	Q
309-00-2	Aldrin	ND	0.78	0.70	ug/kg	
319-84-6	alpha-BHC	ND	0.78	0.52	ug/kg	
319-85-7	beta-BHC	ND	0.78	0.48	ug/kg	
319-86-8	delta-BHC	ND	0.78	0.31	ug/kg	
58-89-9	gamma-BHC (Lindane)	ND	0.78	0.35	ug/kg	
5103-71-9	alpha-Chlordane	ND	0.78	0.42	ug/kg	
5103-74-2	gamma-Chlordane	ND	0.78	0.59	ug/kg	
60-57-1	Dieldrin ^a	1.6	0.78	0.61	ug/kg	
72-54-8	4,4'-DDD	ND	0.78	0.29	ug/kg	
72-55-9	4,4'-DDE	ND	0.78	0.26	ug/kg	
50-29-3	4,4'-DDT ^a	2.9	0.78	0.30	ug/kg	
72-20-8	Endrin ^a	0.96	0.78	0.28	ug/kg	
1031-07-8	Endosulfan sulfate	ND	0.78	0.44	ug/kg	
7421-93-4	Endrin aldehyde	ND	0.78	0.58	ug/kg	
959-98-8	Endosulfan-I	ND	0.78	0.26	ug/kg	
33213-65-9	Endosulfan-II	ND	0.78	0.74	ug/kg	
76-44-8	Heptachlor	ND	0.78	0.64	ug/kg	
1024-57-3	Heptachlor epoxide	ND	0.78	0.32	ug/kg	
72-43-5	Methoxychlor	ND	1.6	0.43	ug/kg	
53494-70-5	Endrin ketone	ND	0.78	0.41	ug/kg	
8001-35-2	Toxaphene	ND	19	13	ug/kg	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
877-09-8	Tetrachloro-m-xylene	57%		24-136%
877-09-8	Tetrachloro-m-xylene	56%		24-136%
2051-24-3	Decachlorobiphenyl	48%		10-153%
2051-24-3	Decachlorobiphenyl	49%		10-153%



(a) More than 40 % RPD for detected concentrations between the two GC columns.

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	S-35D (14-15)	Date Sampled:	04/21/16
Lab Sample ID:	JC18972-2A	Date Received:	04/25/16
Matrix:	SO - Soil	Percent Solids:	78.7
Method:	SW846 8015C MOD		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1 ^a	XY064102.D	1	05/03/16	AFL	n/a	n/a	F:GXY2773
Run #2							

Run #	Initial Weight	Final Volume
Run #1	5.21 g	10.0 ml
Run #2		

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5	Ethanol	ND	12	2.4	mg/kg	
78-83-1	Isobutyl Alcohol	ND	12	2.4	mg/kg	
67-63-0	Isopropyl Alcohol	ND	12	2.4	mg/kg	
71-23-8	n-Propyl Alcohol	ND	12	2.4	mg/kg	
71-36-3	n-Butyl Alcohol	ND	12	2.4	mg/kg	
67-56-1	Methanol	ND	12	2.4	mg/kg	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
111-27-3	Hexanol	107%		69-121%

(a) Sample was received in a bulk container but was not preserved within 48 hours of sampling. Analysis performed at Accutest Laboratories, Orlando FL.



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 3

Client Sample ID:	S-41S (8-9)	Date Sampled:	04/21/16
Lab Sample ID:	JC18972-3	Date Received:	04/25/16
Matrix:	SO - Soil	Percent Solids:	81.6
Method:	SW846 8270D SW846 3546		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	Z110297.D	1	05/03/16	AC	04/28/16	OP93473	EZ5511
Run #2							

Run #	Initial Weight	Final Volume
Run #1	31.0 g	1.0 ml
Run #2		

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
95-57-8	2-Chlorophenol	ND	79	29	ug/kg	
59-50-7	4-Chloro-3-methyl phenol	ND	200	36	ug/kg	
120-83-2	2,4-Dichlorophenol	ND	200	32	ug/kg	
105-67-9	2,4-Dimethylphenol	ND	200	72	ug/kg	
51-28-5	2,4-Dinitrophenol	ND	200	170	ug/kg	
534-52-1	4,6-Dinitro-o-cresol	ND	200	75	ug/kg	
95-48-7	2-Methylphenol	ND	79	57	ug/kg	
	3&4-Methylphenol	ND	79	38	ug/kg	
88-75-5	2-Nitrophenol	ND	200	36	ug/kg	
100-02-7	4-Nitrophenol	ND	400	67	ug/kg	
87-86-5	Pentachlorophenol	ND	200	96	ug/kg	
108-95-2	Phenol	ND	79	30	ug/kg	
58-90-2	2,3,4,6-Tetrachlorophenol	ND	200	37	ug/kg	
95-95-4	2,4,5-Trichlorophenol	ND	200	36	ug/kg	
88-06-2	2,4,6-Trichlorophenol	ND	200	32	ug/kg	
83-32-9	Acenaphthene	ND	40	37	ug/kg	
208-96-8	Acenaphthylene	ND	40	4.2	ug/kg	
98-86-2	Acetophenone	ND	200	6.7	ug/kg	
120-12-7	Anthracene	ND	40	3.4	ug/kg	
1912-24-9	Atrazine	ND	79	16	ug/kg	
56-55-3	Benzo(a)anthracene	ND	40	7.6	ug/kg	
50-32-8	Benzo(a)pyrene	ND	40	8.4	ug/kg	
205-99-2	Benzo(b)fluoranthene	ND	40	8.1	ug/kg	
191-24-2	Benzo(g,h,i)perylene	ND	40	12	ug/kg	
207-08-9	Benzo(k)fluoranthene	ND	40	8.8	ug/kg	
101-55-3	4-Bromophenyl phenyl ether	ND	79	9.0	ug/kg	
85-68-7	Butyl benzyl phthalate	ND	79	21	ug/kg	
92-52-4	1,1'-Biphenyl	ND	79	7.3	ug/kg	
100-52-7	Benzaldehyde	ND	200	9.9	ug/kg	
91-58-7	2-Chloronaphthalene	ND	79	5.7	ug/kg	
106-47-8	4-Chloroaniline	ND	200	10	ug/kg	
86-74-8	Carbazole	ND	79	4.4	ug/kg	



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

Report of Analysis

Client Sample ID: S-41S (8-9)
 Lab Sample ID: JC18972-3
 Matrix: SO - Soil
 Method: SW846 8270D SW846 3546
 Project: BMSMC, Building 5 Area, PR

Date Sampled: 04/21/16
 Date Received: 04/25/16
 Percent Solids: 81.6

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	79	25	ug/kg	
218-01-9	Chrysene	ND	40	6.4	ug/kg	
111-91-1	bis(2-Chloroethoxy)methane	ND	79	9.0	ug/kg	
111-44-4	bis(2-Chloroethyl)ether	ND	79	16	ug/kg	
108-60-1	bis(2-Chloroisopropyl)ether	ND	79	9.1	ug/kg	
7005-72-3	4-Chlorophenyl phenyl ether	ND	79	7.4	ug/kg	
121-14-2	2,4-Dinitrotoluene	ND	40	7.4	ug/kg	
606-20-2	2,6-Dinitrotoluene	ND	40	10	ug/kg	
91-94-1	3,3'-Dichlorobenzidine	ND	79	26	ug/kg	
53-70-3	Dibenzo(a,h)anthracene	ND	40	14	ug/kg	
132-64-9	Dibenzofuran	ND	79	5.5	ug/kg	
84-74-2	Di-n-butyl phthalate	ND	79	4.7	ug/kg	
117-84-0	Di-n-octyl phthalate	ND	79	5.3	ug/kg	
84-66-2	Diethyl phthalate	ND	79	5.0	ug/kg	
131-11-3	Dimethyl phthalate	ND	79	5.7	ug/kg	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	79	14	ug/kg	
206-44-0	Fluoranthene	ND	40	4.8	ug/kg	
86-73-7	Fluorene	ND	40	4.7	ug/kg	
118-74-1	Hexachlorobenzene	ND	79	7.8	ug/kg	
87-68-3	Hexachlorobutadiene	ND	40	10	ug/kg	
77-47-4	Hexachlorocyclopentadiene	ND	400	63	ug/kg	
67-72-1	Hexachloroethane	ND	200	13	ug/kg	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	40	20	ug/kg	
78-59-1	Isophorone	ND	79	7.4	ug/kg	
91-57-6	2-Methylnaphthalene	ND	79	7.4	ug/kg	
88-74-4	2-Nitroaniline	ND	200	9.0	ug/kg	
99-09-2	3-Nitroaniline	ND	200	11	ug/kg	
100-01-6	4-Nitroaniline	ND	200	13	ug/kg	
91-20-3	Naphthalene	ND	40	6.3	ug/kg	
98-95-3	Nitrobenzene	ND	79	12	ug/kg	
621-64-7	N-Nitroso-di-n-propylamine	ND	79	12	ug/kg	
86-30-6	N-Nitrosodiphenylamine	ND	200	21	ug/kg	
85-01-8	Phenanthrene	ND	40	4.4	ug/kg	
129-00-0	Pyrene	ND	40	4.9	ug/kg	
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	200	9.5	ug/kg	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
367-12-4	2-Fluorophenol	52%		30-106%
4165-62-2	Phenol-d5	56%		30-106%

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID:	S-41S (8-9)	Date Sampled:	04/21/16
Lab Sample ID:	JC18972-3	Date Received:	04/25/16
Matrix:	SO - Soil	Percent Solids:	81.6
Method:	SW846 8270D SW846 3546		
Project:	BMSMC, Building 5 Area, PR		

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
118-79-6	2,4,6-Tribromophenol	62%		24-140%
4165-60-0	Nitrobenzene-d5	73%		26-122%
321-60-8	2-Fluorobiphenyl	70%		36-112%
1718-51-0	Terphenyl-d14	69%		36-132%



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	S-41S (8-9)	Date Sampled:	04/21/16
Lab Sample ID:	JC18972-3	Date Received:	04/25/16
Matrix:	SO - Soil	Percent Solids:	81.6
Method:	SW846 8270D BY SIM SW846 3546		
Project:	BMSMC, Building 5 Area, PR		

	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	3M61142.D	1	05/06/16	LK	04/28/16	OP93473A	E3M2874
Run #2							

	Initial Weight	Final Volume
Run #1	31.0 g	1.0 ml
Run #2		

CAS No.	Compound	Result	RL	MDL	Units	Q
123-91-1	1,4-Dioxane ^a	ND	4.0	0.79	ug/kg	
91-20-3	Naphthalene	ND	4.0	0.48	ug/kg	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-60-0	Nitrobenzene-d5	56%		15-138%
321-60-8	2-Fluorobiphenyl	64%		12-148%
1718-51-0	Terphenyl-d14	71%		10-157%

(a) Not accredited for this compound at the time of analysis, but all method requirements were followed.



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	S-41S (8-9)	Date Sampled:	04/21/16
Lab Sample ID:	JC18972-3	Date Received:	04/25/16
Matrix:	SO - Soil	Percent Solids:	81.6
Method:	SW846 8081B SW846 3546		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	1G122626.D	1	04/29/16	BP	04/28/16	OP93471	G1G3976
Run #2							

Run #	Initial Weight	Final Volume
Run #1	16.4 g	10.0 ml
Run #2		

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units	Q
309-00-2	Aldrin	ND	0.75	0.67	ug/kg	
319-84-6	alpha-BHC	ND	0.75	0.50	ug/kg	
319-85-7	beta-BHC	ND	0.75	0.46	ug/kg	
319-86-8	delta-BHC	ND	0.75	0.29	ug/kg	
58-89-9	gamma-BHC (Lindane)	ND	0.75	0.34	ug/kg	
5103-71-9	alpha-Chlordane	ND	0.75	0.40	ug/kg	
5103-74-2	gamma-Chlordane	ND	0.75	0.57	ug/kg	
60-57-1	Dieldrin	ND	0.75	0.59	ug/kg	
72-54-8	4,4'-DDD	ND	0.75	0.28	ug/kg	
72-55-9	4,4'-DDE	ND	0.75	0.25	ug/kg	
50-29-3	4,4'-DDT	ND	0.75	0.29	ug/kg	
72-20-8	Endrin	ND	0.75	0.26	ug/kg	
1031-07-8	Endosulfan sulfate	ND	0.75	0.43	ug/kg	
7421-93-4	Endrin aldehyde	ND	0.75	0.56	ug/kg	
959-98-8	Endosulfan-I	ND	0.75	0.25	ug/kg	
33213-65-9	Endosulfan-II	ND	0.75	0.71	ug/kg	
76-44-8	Heptachlor	ND	0.75	0.61	ug/kg	
1024-57-3	Heptachlor epoxide	ND	0.75	0.31	ug/kg	
72-43-5	Methoxychlor	ND	1.5	0.42	ug/kg	
53494-70-5	Endrin ketone	ND	0.75	0.39	ug/kg	
8001-35-2	Toxaphene	ND	19	13	ug/kg	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
877-09-8	Tetrachloro-m-xylene	49%		24-136%
877-09-8	Tetrachloro-m-xylene	48%		24-136%
2051-24-3	Decachlorobiphenyl	45%		10-153%
2051-24-3	Decachlorobiphenyl	47%		10-153%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 3

Client Sample ID:	RA16-GWS	Date Sampled:	04/21/16
Lab Sample ID:	JC18972-4	Date Received:	04/25/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	F156563.D	1	04/26/16	LK	04/25/16	OP93360	EF6592
Run #2							

Run #	Initial Volume	Final Volume
Run #1	900 ml	1.0 ml
Run #2		

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
95-57-8	2-Chlorophenol	ND	5.6	0.91	ug/l	
59-50-7	4-Chloro-3-methyl phenol	ND	5.6	0.99	ug/l	
120-83-2	2,4-Dichlorophenol	ND	2.2	1.4	ug/l	
105-67-9	2,4-Dimethylphenol	ND	5.6	2.7	ug/l	
51-28-5	2,4-Dinitrophenol	ND	11	1.7	ug/l	
534-52-1	4,6-Dinitro-o-cresol	ND	5.6	1.4	ug/l	
95-48-7	2-Methylphenol	ND	2.2	0.99	ug/l	
	3&4-Methylphenol	ND	2.2	0.98	ug/l	
88-75-5	2-Nitrophenol	ND	5.6	1.1	ug/l	
100-02-7	4-Nitrophenol	ND	11	1.3	ug/l	
87-86-5	Pentachlorophenol	ND	5.6	1.5	ug/l	
108-95-2	Phenol	ND	2.2	0.44	ug/l	
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.6	1.6	ug/l	
95-95-4	2,4,5-Trichlorophenol	ND	5.6	1.5	ug/l	
88-06-2	2,4,6-Trichlorophenol	ND	5.6	1.0	ug/l	
83-32-9	Acenaphthene	ND	1.1	0.21	ug/l	
208-96-8	Acenaphthylene	ND	1.1	0.15	ug/l	
98-86-2	Acetophenone	ND	2.2	0.23	ug/l	
120-12-7	Anthracene	ND	1.1	0.23	ug/l	
1912-24-9	Atrazine	ND	2.2	0.50	ug/l	
100-52-7	Benzaldehyde	ND	5.6	0.32	ug/l	
56-55-3	Benzo(a)anthracene	ND	1.1	0.23	ug/l	
50-32-8	Benzo(a)pyrene	ND	1.1	0.24	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	1.1	0.23	ug/l	
191-24-2	Benzo(g,h,i)perylene	ND	1.1	0.38	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	1.1	0.23	ug/l	
101-55-3	4-Bromophenyl phenyl ether	ND	2.2	0.45	ug/l	
85-68-7	Butyl benzyl phthalate	ND	2.2	0.51	ug/l	
92-52-4	1,1'-Biphenyl	ND	1.1	0.24	ug/l	
91-58-7	2-Chloronaphthalene	ND	2.2	0.26	ug/l	
106-47-8	4-Chloroaniline	ND	5.6	0.38	ug/l	
86-74-8	Carbazole	ND	1.1	0.25	ug/l	



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

Report of Analysis

Client Sample ID:	RA16-GWS	Date Sampled:	04/21/16
Lab Sample ID:	JC18972-4	Date Received:	04/25/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	2.2	0.72	ug/l	
218-01-9	Chrysene	ND	1.1	0.20	ug/l	
111-91-1	bis(2-Chloroethoxy)methane	ND	2.2	0.31	ug/l	
111-44-4	bis(2-Chloroethyl)ether	ND	2.2	0.28	ug/l	
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.2	0.45	ug/l	
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.2	0.41	ug/l	
121-14-2	2,4-Dinitrotoluene	ND	1.1	0.61	ug/l	
606-20-2	2,6-Dinitrotoluene	ND	1.1	0.53	ug/l	
91-94-1	3,3'-Dichlorobenzidine	ND	2.2	0.56	ug/l	
123-91-1	1,4-Dioxane	27.4	1.1	0.73	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	1.1	0.37	ug/l	
132-64-9	Dibenzofuran	ND	5.6	0.24	ug/l	
84-74-2	Di-n-butyl phthalate	ND	2.2	0.55	ug/l	
117-84-0	Di-n-octyl phthalate	ND	2.2	0.26	ug/l	
84-66-2	Diethyl phthalate	ND	2.2	0.29	ug/l	
131-11-3	Dimethyl phthalate	ND	2.2	0.24	ug/l	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.2	1.8	ug/l	
206-44-0	Fluoranthene	ND	1.1	0.19	ug/l	
86-73-7	Fluorene	ND	1.1	0.19	ug/l	
118-74-1	Hexachlorobenzene	ND	1.1	0.36	ug/l	
87-68-3	Hexachlorobutadiene	ND	1.1	0.55	ug/l	
77-47-4	Hexachlorocyclopentadiene	ND	11	3.1	ug/l	
67-72-1	Hexachloroethane	ND	2.2	0.43	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.1	0.37	ug/l	
78-59-1	Isophorone	ND	2.2	0.31	ug/l	
90-12-0	1-Methylnaphthalene	ND	1.1	0.29	ug/l	
91-57-6	2-Methylnaphthalene	ND	1.1	0.23	ug/l	
88-74-4	2-Nitroaniline	ND	5.6	0.31	ug/l	
99-09-2	3-Nitroaniline	ND	5.6	0.43	ug/l	
100-01-6	4-Nitroaniline	ND	5.6	0.49	ug/l	
98-95-3	Nitrobenzene	ND	2.2	0.71	ug/l	
621-64-7	N-Nitroso-di-n-propylamine ^a	ND	2.2	0.53	ug/l	
86-30-6	N-Nitrosodiphenylamine	ND	5.6	0.25	ug/l	
85-01-8	Phenanthrene	ND	1.1	0.19	ug/l	
129-00-0	Pyrene	ND	1.1	0.24	ug/l	
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.2	0.41	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
367-12-4	2-Fluorophenol	62%		14-88%

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID:	RA16-GWS	Date Sampled:	04/21/16
Lab Sample ID:	JC18972-4	Date Received:	04/25/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-62-2	Phenol-d5	42%		10-110%
118-79-6	2,4,6-Tribromophenol	113%		39-149%
4165-60-0	Nitrobenzene-d5	109%		32-128%
321-60-8	2-Fluorobiphenyl	95%		35-119%
1718-51-0	Terphenyl-d14	78%		10-126%

(a) This compound in BS is outside in house QC limits bias high.



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	RA16-GWS	Date Sampled:	04/21/16
Lab Sample ID:	JC18972-4	Date Received:	04/25/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D BY SIM SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	4M64987A.D	1	04/26/16	LK	04/25/16	OP93360A	E4M2896
Run #2							

Run #	Initial Volume	Final Volume
Run #1	900 ml	1.0 ml
Run #2		

CAS No.	Compound	Result	RL	MDL	Units	Q
91-20-3	Naphthalene	ND	0.11	0.033	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-60-0	Nitrobenzene-d5	101%		24-125%
321-60-8	2-Fluorobiphenyl	100%		19-127%
1718-51-0	Terphenyl-d14	86%		10-119%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	RA16-GWS	Date Sampled:	04/21/16
Lab Sample ID:	JC18972-4	Date Received:	04/25/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8081B SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	4G67636.D	1	04/25/16	BP	04/25/16	OP93361	G4G1772
Run #2							

Run #	Initial Volume	Final Volume
Run #1	285 ml	2.0 ml
Run #2		

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units	Q
309-00-2	Aldrin	ND	0.0070	0.0042	ug/l	
319-84-6	alpha-BHC	ND	0.0070	0.0042	ug/l	
319-85-7	beta-BHC	ND	0.0070	0.0040	ug/l	
319-86-8	delta-BHC	ND	0.0070	0.0032	ug/l	
58-89-9	gamma-BHC (Lindane)	ND	0.0070	0.0020	ug/l	
5103-71-9	alpha-Chlordane	ND	0.0070	0.0032	ug/l	
5103-74-2	gamma-Chlordane	ND	0.0070	0.0032	ug/l	
60-57-1	Dieldrin	ND	0.0070	0.0025	ug/l	
72-54-8	4,4'-DDD	ND	0.0070	0.0027	ug/l	
72-55-9	4,4'-DDE	ND	0.0070	0.0043	ug/l	
50-29-3	4,4'-DDT	ND	0.0070	0.0035	ug/l	
72-20-8	Endrin	ND	0.0070	0.0035	ug/l	
1031-07-8	Endosulfan sulfate	ND	0.0070	0.0037	ug/l	
7421-93-4	Endrin aldehyde	ND	0.0070	0.0036	ug/l	
53494-70-5	Endrin ketone	ND	0.0070	0.0036	ug/l	
959-98-8	Endosulfan-I	ND	0.0070	0.0035	ug/l	
33213-65-9	Endosulfan-II	ND	0.0070	0.0030	ug/l	
76-44-8	Heptachlor	ND	0.0070	0.0027	ug/l	
1024-57-3	Heptachlor epoxide	ND	0.0070	0.0046	ug/l	
72-43-5	Methoxychlor	ND	0.014	0.0040	ug/l	
8001-35-2	Toxaphene	ND	0.18	0.13	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
877-09-8	Tetrachloro-m-xylene	94%		26-132%
877-09-8	Tetrachloro-m-xylene	93%		26-132%
2051-24-3	Decachlorobiphenyl	68%		10-118%
2051-24-3	Decachlorobiphenyl	58%		10-118%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	RA16-GWS	Date Sampled:	04/21/16
Lab Sample ID:	JC18972-4A	Date Received:	04/25/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8015C		
Project:	BMSMC, Building 5 Area, PR		

Run #1 ^a	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #2	XY064067.D	1	04/29/16	AFL	n/a	n/a	F:GXY2771

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5	Ethanol	ND	5.0	1.0	mg/l	
78-83-1	Isobutyl Alcohol	ND	5.0	1.0	mg/l	
67-63-0	Isopropyl Alcohol	ND	5.0	1.0	mg/l	
71-23-8	n-Propyl Alcohol	ND	5.0	1.0	mg/l	
71-36-3	n-Butyl Alcohol	ND	5.0	1.0	mg/l	
67-56-1	Methanol	ND	5.0	1.0	mg/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
111-27-3	Hexanol	123%		73-123%

(a) Analysis performed at Accutest Laboratories, Orlando FL.



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

50
6W

SGS Accident - Dayton
2233 Route 130, Dayton, NJ 08810
TEL 732 329-0260 FAX 732 329-3499-3480
www.accident.com

801219536154

SDS Accepted July 8

LC 18977

[illegible]5.1
Ct

JC18972: Chain of Custody
Page 1 of 3

EXECUTIVE NARRATIVE

SDG No: **JC18972** Laboratory: **Accutest, Florida**
Analysis: **SW846-8015C** Number of Samples: **3**
Location: **BMSMC, Building 5 Area**
Humacao, PR

SUMMARY: Two (2) soil samples and one (1) groundwater sample were analyzed for the low molecular weight alcohols (LMWAs) list following method SW846-8015C. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: "Test Methods for Evaluating Solid Waste, Physical/Chemical Methods SW-846 (Final Update III, December 1996)," specifically for Methods 8000/8015C are utilized. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

Results are valid and can be used for decision making purposes.

Critical issues: **None**
Major: **None**
Minor: **None**

Critical findings: **None**
Major findings: **None**
Minor findings: **1.** All samples analyzed within the recommended method holding time. Samples were improperly preserved - not preserved within 48 hours of sampling. Results qualified as estimated (UJ) in the affected sample.
2. MS/MSD recoveries outside the laboratory control limits but within generally acceptable control limits. Affected samples were qualified accordingly.

COMMENTS: Results are valid and can be used for decision making purposes.

Reviewers Name: **Rafael Infante**
Chemist License 1888

Signature:



Date: **May 16, 2016**

SAMPLE ORGANIC DATA SAMPLE SUMMARY

Sample ID: JC18972-1A

Sample location: BMSMC Building 5 Area

Sampling date: 4/20/2016

Matrix: Soil

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	13	mg/kg	1.0	-	UJ	Yes
Isobutyl Alcohol	13	mg/kg	1.0	-	UJ	Yes
Isopropyl Alcohol	13	mg/kg	1.0	-	UJ	Yes
n-Propyl Alcohol	13	mg/kg	1.0	-	UJ	Yes
n-Butyl Alcohol	13	mg/kg	1.0	-	UJ	Yes
Methanol	3.9	mg/kg	1.0	J	UJ	Yes

Sample ID: JC18972-2A

Sample location: BMSMC Building 5 Area

Sampling date: 4/21/2016

Matrix: Soil

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	12	mg/kg	1.0	-	UJ	Yes
Isobutyl Alcohol	12	mg/kg	1.0	-	UJ	Yes
Isopropyl Alcohol	12	mg/kg	1.0	-	UJ	Yes
n-Propyl Alcohol	12	mg/kg	1.0	-	UJ	Yes
n-Butyl Alcohol	12	mg/kg	1.0	-	UJ	Yes
Methanol	12	mg/kg	1.0	-	UJ	Yes

Sample ID: JC18972-4A

Sample location: BMSMC Building 5 Area

Sampling date: 4/21/2016

Matrix: Groundwater

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	5.0	mg/l	1.0	-	UJ	Yes
Isobutyl Alcohol	5.0	mg/l	1.0	-	UJ	Yes
Isopropyl Alcohol	5.0	mg/l	1.0	-	UJ	Yes
n-Propyl Alcohol	5.0	mg/l	1.0	-	UJ	Yes
n-Butyl Alcohol	5.0	mg/l	1.0	-	UJ	Yes
Methanol	5.0	mg/l	1.0	-	UJ	Yes

DATA REVIEW WORKSHEETS

Project Number: JC18972
 Date: 04/20-21/2016
 Shipping Date: 04/21/2016
 EPA Region: 2

REVIEW OF VOLATILE ORGANIC PACKAGE

The following guidelines for evaluating volatile organics were created to delineate required validation actions. This document will assist the reviewer in using professional judgment to make more informed decision and in better serving the needs of the data users. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: "Test Methods for Evaluating Solid Waste, Physical/Chemical Methods SW-846 (Final Update III, December 1996)," specifically for Methods 8000/8015C are utilized. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

The hardcopied (laboratory name) Accutest data package received has been reviewed and the quality control and performance data summarized. The modified data review for VOCs included:

Lab. Project/SDG No.: JC18972 Sample matrix: Groundwater/Soil
 No. of Samples: 3

Trip blank No.: -
 Field blank No.: -
 Equipment blank No.: -
 Field duplicate No.: -

<input checked="" type="checkbox"/> Data Completeness	<input checked="" type="checkbox"/> Laboratory Control Spikes
<input checked="" type="checkbox"/> Holding Times	<input checked="" type="checkbox"/> Field Duplicates
<input type="checkbox"/> N/A GC/MS Tuning	<input checked="" type="checkbox"/> Calibrations
<input type="checkbox"/> N/A Internal Standard Performance	<input checked="" type="checkbox"/> Compound Identifications
<input checked="" type="checkbox"/> Blanks	<input checked="" type="checkbox"/> Compound Quantitation
<input checked="" type="checkbox"/> Surrogate Recoveries	<input checked="" type="checkbox"/> Quantitation Limits
<input checked="" type="checkbox"/> Matrix Spike/Matrix Spike Duplicate	

Overall Comments: Low molecular weight alcohols by SW-846_8015C

Definition of Qualifiers:

J- Estimated results
 U- Compound not detected
 R- Rejected data
 UJ- Estimated nondetect

Reviewer: Rafael Infante
 Date: May 17, 2016

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no handwriting or other markings on the paper.

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

HOLDING TIMES

The objective of this parameter is to ascertain the validity of the results based on the holding time of the sample from time of collection to the time of analysis.

Complete table for all samples and note the analysis and/or preservation not within criteria

SAMPLE ID	DATE SAMPLED	DATE ANALYZED	pH	ACTION
All samples analyzed within the recommended method holding time. All samples not properly preserved. Samples JC18972-1A; JC18972-2A; and JC18972-4A: were received in a bulk container but was not preserved within 48 hours of sampling. Analysis performed at Accutest Laboratories, Orlando FL. Results qualified as (UJ) in affected samples.				

Criteria

Aqueous samples – 14 days from sample collection for preserved samples (pH ≤ 2, 4°C), no air bubbles.

Aqueous samples – 7 days from sample collection for unpreserved samples, 4°C, no air bubbles.

Soil samples- 7 days from sample collection.

Cooler temperature (Criteria: 4 ± 2 °C): 16.2°C

Actions

If the VOCs vial(s) have air bubbles, estimate positive results (J) and reject nondetects (R).

If the % solids of soil samples is 10-50%, estimates positive results (J) and nondetects (UJ)

If the % solid of soil samples is < 10%, estimate positive results (J) and reject nondetects (R).

If holding times are exceeded but < 14 days beyond criteria, estimate positive results (J) and nondetects (UJ).

If holding times are exceeded but < 28 days beyond criteria, estimate positive results (J) and reject nondetects (R).

If holding times are grossly exceeded (> 28 days beyond criteria), reject all results (R).

If samples were not iced or if the ice were melted (> 10°C), estimate positive results (J) and nondetects (UJ).

DATA REVIEW WORKSHEETS

All criteria were met N/A
Criteria were not met see below

GC/MS TUNING

The assessment of the tuning results is to determine if the sample instrumentation is within the standard tuning QC limits

N/A The BFB performance results were reviewed and found to be within the specified criteria.

N/A BFB tuning was performed for every 12 hours of sample analysis.

If no, use professional judgment to determine whether the associated data should be accepted, qualified or rejected.

List the samples affected: _____

If mass calibration is in error, all associated data are rejected.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

CALIBRATION VERIFICATION

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data.

Date of initial calibration: 04/26/16
Dates of continuing calibration: 04/26/16 (initial); 04/29/16
Dates of final calibration verification: 04/29/16
Instrument ID number: VOA5
Matrix/Level: Aqueous/low

DATE	LAB FILE ID#	CRITERIA OUT RFs, %RSD, %D, r	COMPOUND	SAMPLES AFFECTED

Note: Initial and continuing verifications meets method specific criteria. % difference in the final calibration verification was outside the method performance criteria for all analytes. No action taken, professional judgment.

Criteria

All RFs must be > 0.05 regardless of method requirements for SPCC.

All %RSD must be $\leq 15\%$ regardless of method requirements for CCC.

All %Ds must be $\leq 20\%$ regardless of method requirements for CCC.

It should be noted that Region 2 SOP HW-24 does not specify criterion for the curve correlation coefficient (r).

A limit for r of ≥ 0.995 has therefore been utilized as professional judgment.

Actions

If any compound has an initial RF or a continuing RF of < 0.05 , estimate positive results (J) and reject nondetects (R), regardless of method requirements.

If any compound has a %RSD $> 15\%$, estimate positive results (J) and use professional judgment to qualify nondetects.

If any compound has a %RSD $> 90\%$, estimate positive results (J) and reject nondetects (R).

If any compound has a % D $> 20\%$, estimate positive results (J) and reject nondetects (R).

If any compound has a % D $> 20\%$, estimate positive results (J) and nondetects (UJ).

If any compound has a % D $> 90\%$, estimate positive results (J) and reject nondetects (R).

If any compound has $r < 0.995$, estimate positive results and nondetects.

A separate worksheet should be filled for each initial curve

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

V A. BLANK ANALYSIS RESULTS (Sections 1 & 2)

The assessment of the blank analysis results is to determine the existence and magnitude of contamination problems. The criteria for evaluation of blanks apply only to blanks associated with the samples, including trip, equipment, and laboratory blanks. If problems with any blanks exist, all data associated with the case must be carefully evaluated to determine whether or not there is an inherent variability in the data for the case, or if the problem is an isolated occurrence not affecting other data.

List the contamination in the blanks below. High and low levels blanks must be treated separately.

Laboratory blanks

DATE ANALYZED	LAB ID	LEVEL/MATRIX	COMPOUND	CONCENTRATION UNITS
_____	_____	_____	_____	_____
_____	_____	_____	_____	_____
All method blank meets method specific criteria				
_____	_____	_____	_____	_____
_____	_____	_____	_____	_____
_____	_____	_____	_____	_____
_____	_____	_____	_____	_____

Field/Equipment/Trip blank

DATE ANALYZED	LAB ID	LEVEL/MATRIX	COMPOUND	CONCENTRATION UNITS
_____	_____	_____	_____	_____
No field/trip/equipment blanks included in this data package.				
_____	_____	_____	_____	_____
_____	_____	_____	_____	_____
_____	_____	_____	_____	_____
_____	_____	_____	_____	_____
_____	_____	_____	_____	_____
_____	_____	_____	_____	_____
_____	_____	_____	_____	_____
_____	_____	_____	_____	_____
_____	_____	_____	_____	_____

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

V B. BLANK ANALYSIS RESULTS (Section 3)

Blank Actions

Action Levels (ALs) should be based upon the highest concentration of contaminant determined in any blank. Do not qualify any blank with another blank. The ALs for samples which have been diluted should be corrected for the sample dilution factor and/or % moisture, where applicable. No positive sample results should be reported unless the concentration of the compound in the samples exceeds the ALs:

ALs = 10x the amount of common contaminants (methylene chloride, acetone, 2-butanone, and toluene)
 ALs = 5x for any other compounds

Specific actions are as follows:

If the concentration is < sample quantitation limit (SQL) and \leq AL, report the compound as not detected (U) at the SQL.

If the concentration is \geq SQL but \leq AL, report the compound as not detected (U) at the reported concentration.

If the concentration is \geq SQL and $>$ AL, report the concentration unqualified.

Notes:

High and low level blanks must be treated separately

Compounds qualified "U" for blank contamination are still considered "hits" when qualifying for calibration criteria.

CONTAMINATION SOURCE/LEVEL	COMPOUND	CONC/UNITS	AL/UNITS	SQL	AFFECTED SAMPLES

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below _____

SURROGATE SPIKE RECOVERIES

Laboratory performance of individual samples is established by evaluation of surrogate spike recoveries. All samples are spiked with surrogate compounds prior to sample analysis. The accuracy of the analysis is measured by the surrogate percent recovery. Since the effects of the sample matrix are frequently outside the control of the laboratory and may present relatively unique problems, the validation of data is frequently subjective and demands analytical experience and professional judgment.

List the percent recoveries (%Rs) which do not meet the criteria for surrogate recovery.

Matrix: solid/aqueous

SAMPLE ID	SURROGATE COMPOUND			ACTION
Hexanol	DBEM	TOL-d8	BFB	

All surrogate recoveries within laboratory control limits except in the followings:

GXY2771-MB	128 %	No action, QC
JC18972-4AMSD	129 %	samples

QC Limits* (Aqueous)

LL to UL 73 to 123 to to to

QC Limits* (Solid-Low)

LL to UL 69 to 121 to to to

QC Limits* (Solid-Med)

LL to UL to to to to

1,2-DCA = 1,2-Dichloromethane-d4

TOL-d8 = Toluene-d8

DBFM = Dibromofluoromethane

BFB = Bromofluorobenzene

* QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.

* If QC limits are not available, use limits of 80 – 120 % for aqueous and 70 – 130 % for solid samples.

Actions:

QUALITY	%R < 10%	%R = 10% - LL	%R > UL
Positive results	J	J	J
Nondetects results	R	UJ	Accept

Surrogate action should be applied:

If one or more surrogate in the VOC fraction is out of specification, but has a recovery of > 10%.

If any one surrogate in a fraction shows $< 10\%$ recovery.

DATA REVIEW WORKSHEETS

All criteria were met _____
 Criteria were not met _____
 and/or see below X

VII. A MATRIX SPIKE/MATRIX SPIKE DUPLICATE (MS/MSD)

This data is generated to determine long term precision and accuracy in the analytical method for various matrices. This data alone cannot be used to evaluate the precision and accuracy of individual samples. If any % R in the MS or MSD falls outside the designated range, the reviewer should determine if there are matrix effects, i.e. LCS data are within the QC limits but MS/MSD data are outside QC limit.

1. MS/MSD Recoveries and Precision Criteria

The laboratory should use one MS and a duplicate analysis of an unspiked field sample if target analytes are expected in the sample. If target analytes are not expected, MS/MSD should be analyzed.

List the %Rs, RPD of the compounds which do not meet the criteria.

Sample ID: JC18972-4AMS/-4AMSD Matrix/Level: Aqueous
 Sample ID: JC18972-2AMS/-2AMSD Matrix/Level: Soil

MS OR MSD	COMPOUND	% R	RPD	QC LIMITS	ACTION
-----------	----------	-----	-----	-----------	--------

MS/MSD% recoveries_and_RPD_within_laboratory_control_limits_except_for_the_followings:_

The QC reported here applies to the following samples:
 JC18972-1, JC18972-2, JC18972-4

Method: SW846 8015C MOD

Compound	JC18972-2A mg/kg	Q	Spike mg/kg	MS mg/kg	MS %	Spike mg/kg	MSD mg/kg	MSD %	RPD	Limits Rec/RPD
Ethanol	ND		244	284	116	244	305	125*	7	80-117/13
Isobutyl Alcohol	ND		244	278	114	244	294	121*	6	72-117/14
Isopropyl Alcohol	ND		244	294	121*	244	314	129*	7	75-116/15
n-Propyl Alcohol	ND		244	289	118*	244	310	127*	7	78-116/13
n-Butyl Alcohol	ND		244	291	119*	244	310	127*	6	74-115/13
Methanol	ND		244	282	116	244	307	126*	8	77-116/13

Surrogate Recoveries	MS	MSD	JC18972-2A	Limits
Hexanol	115%	120%	107%	69-121%

(a) Sample was received in a bulk container but was not preserved within 48 hours of sampling.

DATA REVIEW WORKSHEETS

All criteria were met _____
 Criteria were not met _____
 and/or see below X

The QC reported here applies to the following samples:
 JC18972-4A

Method: SW846 8015C

Compound	JC18972-4A mg/l	Q	Spike mg/l	MS mg/l	MS %	Spike mg/l	MSD mg/l	MSD %	RPD	Limits Rec/RPD
Ethanol	ND		100	116	116	100	132	132*	13	73-120/16
Isobutyl Alcohol	ND		100	110	110	100	125	125*	13	67-116/17
Isopropyl Alcohol	ND		100	118	118	100	135	135*	13	69-118/17
n-Propyl Alcohol	ND		100	117	117	100	132	132*	12	71-119/17
n-Butyl Alcohol	ND		100	114	114	100	130	130*	13	69-119/17
Methanol	ND		100	116	116	100	133	133*	14	70-118/17

Surrogate Recoveries	MS	MSD	JC18972-4A	Limits
Hexanol	111%	129%*	123%	73-123%

* = Outside of Control Limits.

- * QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.
- * If QC limits are not available, use limits of 70 – 130 %.

Actions:

QUALITY	%R < LL	%R > UL
Positive results	J	J
Nondetects results	R	Accept

MS/MSD criteria apply only to the unspiked sample, its dilutions, and the associated MS/MSD samples:

If the % R for the affected compounds were < LL (or 70 %), qualify positive results (J) and nondetects (UJ).

If the % R for the affected compounds were > UL (or 130 %), only qualify positive results (J).

If 25 % or more of all MS/MSD %R were < LL (or 70 %) or if two or more MS/MSD %Rs were < 10%, qualify all positive results (J) and reject nondetects (R).

Note: Results qualified accordingly in affected samples.

A separate worksheet should be used for each MS/MSD pair.

VII. B MATRIX SPIKE/MATRIX SPIKE DUPLICATE

It should be noted that Region 2 SOP HW-24 does not specify a MS/MSD criteria for the unspiked compounds in the sample. A %RSD of < 50% has therefore been utilized as professional judgment.

List the %RSD of the compounds which do not meet the criteria.

[illegible]

* If the % RSD is not calculated (NC) due to nondetected value, use professional judgment to qualify the data.

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

VIII. LABORATORY CONTROL SAMPLE (LCS) ANALYSIS

This data is generated to determine accuracy of the analytical method for various matrices.

1. LCS Recoveries Criteria

Where LCS spiked with the same analyte at the same concentrations as the MS/MSD? **Yes** or **No**. If no make note in data review memo.

List the %R of compounds which do not meet the criteria

LCS ID	COMPOUND	% R	QC LIMIT
Recoveries within laboratory control limits.			

* QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.

* If QC limits are not available, use limits of 70 – 130 %.

Actions:

QUALITY	%R < LL	%R > UL
Positive results	J	J
Nondetects results	R	Accept

All analytes in the associated sample results are qualified for the following criteria.

If 25 % of the LCS recoveries were < LL (or 70 %), qualify all positive results (j) and reject nondetects (R).

If two or more LCS were below 10 %, qualify all positive results as (J) and reject nondetects (R).

2. Frequency Criteria:

Where LCS analyzed at the required frequency and for each matrix? Yes or No.

If no, the data may be affected. Use professional judgment to determine the severity of the effect and qualify data accordingly. Discuss any actions below and list the samples affected.

DATA REVIEW WORKSHEETS

All criteria were met N/A
 Criteria were not met
 and/or see below

IX. FIELD/LABORATORY DUPLICATE PRECISION

Sample IDs: -

Matrix: -

Field/laboratory duplicate samples may be taken and analyzed as an indication of overall precision. These analyses measure both field and lab precision; therefore, the results may have more variability than laboratory duplicates which only laboratory performance. It is also expected that soil duplicate results will have a greater variance than water matrices due to difficulties associated with collecting identical field duplicate samples.

The project QAPP should be reviewed for project-specific information.

Suggested criteria: RPD \pm 30% for aqueous samples, RPD \pm 50 % for solid samples. If both samples and duplicate are <5 SQL, the RPD criteria is doubled.

COMPOUND	SQL	SAMPLE CONC.	DUPLICATE CONC.	RPD	ACTION
No field/laboratory duplicate analyzed with this data package. MS/MSD % recoveries RPD used to assess precision. RPD within laboratory and generally acceptable control limits.					

Actions:

Qualify as estimated positive results (J) and nondetects (UJ) for the compound that exceeded the above criteria. For organics, only the sample and duplicate will be qualified.

If an RPD cannot be calculated because one or both of the sample results is not detected, the following actions apply:

If one sample result is not detected and the other is greater than 5x the SQL qualify (J/UJ).

If one sample value is not detected and the other is greater than 5x the SQL and the SQLs for the sample and duplicate are significantly different, use professional judgment to determine if qualification is appropriate.

If one sample value is not detected and the other is less than 5x, use professional judgment to determine if qualification is appropriate.

If both sample and duplicate results are not detected, no action is needed.

All criteria were met NA
Criteria were not met
and/or see below

The assessment of the internal standard (IS) parameter is used to assist the data reviewer in determining the condition of the analytical instrumentation.

* Area of +100% or -50% of the IS area in the associated calibration standard.
* Retention time (RT) within 30 seconds of the IS area in the associated calibration standard.

[illegible]

1. IS actions should be applied to the compound quantitated with the out-of-control ISs

2. If a IS retention time varies more than 30 seconds, the chromatographic profile for that sample must be examined to determine if any false positive or negative exists. For shifts of a large magnitude, the reviewer may consider partial or total rejection of the data for the sample fraction.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

XII. SAMPLE QUANTITATION

The sample quantitation evaluation is to verify laboratory quantitation results. In the space below, please show a minimum of one sample calculation:

JC18972-1

Methanol

RF = 2719

$$[] = (4237)/(2719)$$

$$= 1.56 \text{ ppm OK}$$

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below _____

XII. QUANTITATION LIMITS

A. Dilution performed

[illegible]

B. Percent Solids

List samples which have $\leq 50\%$ solids

[Blank handwriting practice area]

Actions:

If the % solids of a soil sample is 10-50%, estimate positive results (J) and nondetects (UJ)

If the % solids of a soil sample is $< 10\%$, estimate positive results (J) and reject nondetects (R)

EXECUTIVE NARRATIVE

SDG No: **JC18972** Laboratory: **Accutest, New Jersey**
Analysis: **SW846-8081B** Number of Samples: **4**

Location: **BMSMC, Building 5 Area**
Humacao, PR

SUMMARY: Three (3) soil samples and one (1) groundwater sample were analyzed for selected pesticides following method SW846-8081B. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence *Hazardous Waste Support Section SOP No. HW-36A, Revision 0, June, 2015. SOM02.2. Pesticide Data Validation*. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

Results are valid and can be used for decision making purposes.

Critical issues: **None**
Major: **None**
Minor: **None**

Critical findings: **None**
Major findings: **None**
Minor findings:

1. Samples not properly preserved, results qualified as estimated (J) for detected analytes and (UJ) for non-detects.
2. No MS/MSD analyzed with this data package for aqueous matrix. Blank spike/blank spike duplicate used to assess accuracy. % recoveries and RPD within laboratory control limits.
3. More than 40 % RPD for detected concentrations between the two GC columns for the following analytes: Dieldrin; 4,4'-DDT; and Endrin in sample JC18972-2. No action taken, professional judgment.

COMMENTS: Results are valid and can be used for decision making purposes.

Reviewers Name: **Rafael Infante**
Chemist License 1888

Signature:



Date: **May 17, 2016**

SAMPLE ORGANIC DATA SAMPLE SUMMARY

Sample ID: JC18972-1

Sample location: BSMC Building 5 Area

Sampling date: 20-Apr-16

Matrix: Soil

METHOD: 8081B

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.82	ug/kg	1	-	UJ	Yes
alpha-BHC	0.82	ug/kg	1	-	UJ	Yes
beta-BHC	0.82	ug/kg	1	-	UJ	Yes
delta-BHC	0.82	ug/kg	1	-	UJ	Yes
gamma-BHC (Lindane)	0.82	ug/kg	1	-	UJ	Yes
alpha-Chlordane	0.82	ug/kg	1	-	UJ	Yes
gamma-Chlordane	0.82	ug/kg	1	-	UJ	Yes
Dieldrin	0.82	ug/kg	1	-	UJ	Yes
4,4'-DDD	0.82	ug/kg	1	-	UJ	Yes
4,4'-DDE	0.82	ug/kg	1	-	UJ	Yes
4,4'-DDT	0.82	ug/kg	1	-	UJ	Yes
Endrin	0.82	ug/kg	1	-	UJ	Yes
Endosulfan sulfate	0.82	ug/kg	1	-	UJ	Yes
Endrin aldehyde	0.82	ug/kg	1	-	UJ	Yes
Endosulfan-I	0.82	ug/kg	1	-	UJ	Yes
Endosulfan-II	0.82	ug/kg	1	-	UJ	Yes
Heptachlor	0.82	ug/kg	1	-	UJ	Yes
Heptachlor epoxide	0.82	ug/kg	1	-	UJ	Yes
Methoxychlor	1.6	ug/kg	1	-	UJ	Yes
Endrin ketone	0.82	ug/kg	1	-	UJ	Yes
Toxaphene	20	ug/kg	1	-	UJ	Yes

Sample ID: JC18972-2
Sample location: BMSMC Building 5 Area
Sampling date: 21-Apr-16
Matrix: Soil

METHOD: 8081B

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.78	ug/kg	1	-	UJ	Yes
alpha-BHC	0.78	ug/kg	1	-	UJ	Yes
beta-BHC	0.78	ug/kg	1	-	UJ	Yes
delta-BHC	0.78	ug/kg	1	-	UJ	Yes
gamma-BHC (Lindane)	0.78	ug/kg	1	-	UJ	Yes
alpha-Chlordane	0.78	ug/kg	1	-	UJ	Yes
gamma-Chlordane	0.78	ug/kg	1	-	UJ	Yes
Dieldrin	1.6	ug/kg	1	-	J	Yes
4,4'-DDD	0.78	ug/kg	1	-	UJ	Yes
4,4'-DDE	0.78	ug/kg	1	-	UJ	Yes
4,4'-DDT	2.9	ug/kg	1	-	J	Yes
Endrin	0.96	ug/kg	1	-	J	Yes
Endosulfan sulfate	0.78	ug/kg	1	-	UJ	Yes
Endrin aldehyde	0.78	ug/kg	1	-	UJ	Yes
Endosulfan-I	0.78	ug/kg	1	-	UJ	Yes
Endosulfan-II	0.78	ug/kg	1	-	UJ	Yes
Heptachlor	0.78	ug/kg	1	-	UJ	Yes
Heptachlor epoxide	0.78	ug/kg	1	-	UJ	Yes
Methoxychlor	1.6	ug/kg	1	-	UJ	Yes
Endrin ketone	0.78	ug/kg	1	-	UJ	Yes
Toxaphene	19	ug/kg	1	-	UJ	Yes

Sample ID: JC18972-3
Sample location: BMSMC Building 5 Area
Sampling date: 21-Apr-16
Matrix: Soil

METHOD: 8081B

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.75	ug/kg	1	-	UJ	Yes
alpha-BHC	0.75	ug/kg	1	-	UJ	Yes
beta-BHC	0.75	ug/kg	1	-	UJ	Yes
delta-BHC	0.75	ug/kg	1	-	UJ	Yes
gamma-BHC (Lindane)	0.75	ug/kg	1	-	UJ	Yes
alpha-Chlordane	0.75	ug/kg	1	-	UJ	Yes
gamma-Chlordane	0.75	ug/kg	1	-	UJ	Yes
Dieldrin	0.75	ug/kg	1	-	UJ	Yes
4,4'-DDD	0.75	ug/kg	1	-	UJ	Yes
4,4'-DDE	0.75	ug/kg	1	-	UJ	Yes
4,4'-DDT	0.75	ug/kg	1	-	UJ	Yes
Endrin	0.75	ug/kg	1	-	UJ	Yes
Endosulfan sulfate	0.75	ug/kg	1	-	UJ	Yes
Endrin aldehyde	0.75	ug/kg	1	-	UJ	Yes
Endosulfan-I	0.75	ug/kg	1	-	UJ	Yes
Endosulfan-II	0.75	ug/kg	1	-	UJ	Yes
Heptachlor	0.75	ug/kg	1	-	UJ	Yes
Heptachlor epoxide	0.75	ug/kg	1	-	UJ	Yes
Methoxychlor	1.5	ug/kg	1	-	UJ	Yes
Endrin ketone	0.75	ug/kg	1	-	UJ	Yes
Toxaphene	19	ug/kg	1	-	UJ	Yes

Sample ID: JC18972-4
Sample location: BMSMC Building 5 Area
Sampling date: 21-Apr-16
Matrix: Groundwater

METHOD: 8081B

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.0070	ug/L	1	-	UJ	Yes
alpha-BHC	0.0070	ug/L	1	-	UJ	Yes
beta-BHC	0.0070	ug/L	1	-	UJ	Yes
delta-BHC	0.0070	ug/L	1	-	UJ	Yes
gamma-BHC (Lindane)	0.0070	ug/L	1	-	UJ	Yes
alpha-Chlordane	0.0070	ug/L	1	-	UJ	Yes
gamma-Chlordane	0.0070	ug/L	1	-	UJ	Yes
Dieldrin	0.0070	ug/L	1	-	UJ	Yes
4,4'-DDD	0.0070	ug/L	1	-	UJ	Yes
4,4'-DDE	0.0070	ug/L	1	-	UJ	Yes
4,4'-DDT	0.0070	ug/L	1	-	UJ	Yes
Endrin	0.0070	ug/L	1	-	UJ	Yes
Endosulfan sulfate	0.0070	ug/L	1	-	UJ	Yes
Endrin aldehyde	0.0070	ug/L	1	-	UJ	Yes
Endrin ketone	0.0070	ug/L	1	-	UJ	Yes
Endosulfan-I	0.0070	ug/L	1	-	UJ	Yes
Endosulfan-II	0.0070	ug/L	1	-	UJ	Yes
Heptachlor	0.0070	ug/L	1	-	UJ	Yes
Heptachlor epoxide	0.0070	ug/L	1	-	UJ	Yes
Methoxychlor	0.014	ug/L	1	-	UJ	Yes
Toxaphene	0.18	ug/L	1	-	UJ	Yes

DATA REVIEW WORKSHEETS

Project/Case Number: JC18972
 Sampling Date: April 20-21, 2016
 Shipping Date: April 21, 2016
 EPA Region No.: 2

REVIEW OF PESTICIDE ORGANIC PACKAGE

The following guidelines for evaluating volatile organics were created to delineate required validation actions. This document will assist the reviewer in using professional judgment to make more informed decision and in better serving the needs of the data users. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence *Hazardous Waste Support Section SOP No. HW-36A, Revision 0, June, 2015. SOM02.2. Pesticide Data Validation*. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

The hardcopied (laboratory name) Accutest data package received has been reviewed and the quality control and performance data summarized. The data review for VOCs included:

Lab. Project/SDG No.: JC18972 Sample matrix: Soil/Groundwater
 No. of Samples: 4

Trip blank No.: -
 Field blank No.: -
 Equipment blank No.: -
 Field duplicate No.: -
 Field spikes No.: -
 QC audit samples: -

<input checked="" type="checkbox"/> Data Completeness	<input checked="" type="checkbox"/> Laboratory Control Spikes
<input checked="" type="checkbox"/> Holding Times	<input checked="" type="checkbox"/> Field Duplicates
<input type="checkbox"/> N/A GC/MS Tuning	<input checked="" type="checkbox"/> Calibrations
<input checked="" type="checkbox"/> Internal Standard Performance	<input checked="" type="checkbox"/> Compound Identifications
<input checked="" type="checkbox"/> Blanks	<input checked="" type="checkbox"/> Compound Quantitation
<input checked="" type="checkbox"/> Surrogate Recoveries	<input checked="" type="checkbox"/> Quantitation Limits
<input checked="" type="checkbox"/> Matrix Spike/Matrix Spike Duplicate	

Overall Comments: TCL_pesticides_list_by_SW846-8081B

Definition of Qualifiers:

J- Estimated results
 U- Compound not detected
 R- Rejected data
 UJ- Estimated nondetect

Reviewer: Rafael Infante
 Date: May 17, 2016

DATA REVIEW WORKSHEETS

DATA COMPLETENESS

MISSING INFORMATION

DATE LAB. CONTACTED

DATE RECEIVED

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no handwriting or other markings on the paper.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

HOLDING TIMES

The objective of this parameter is to ascertain the validity of the results based on the holding time of the sample from time of collection to the time of analysis.

Complete table for all samples and note the analysis and/or preservation not within criteria

SAMPLE ID	DATE SAMPLED	DATE EXTRACTED/ANALYZED	ACTION
Samples not properly preserved, results qualified as estimated (J) for detected analytes and (UJ) for non detects..			

Preservatives: All samples extracted and analyzed within the required criteria.

Criteria

Aqueous samples - seven (7) days from sample collection for extraction; 40 days from sample collection for analysis.

Non-aqueous samples – fourteen (14) days from sample collection for extraction; 40 days from sample collection for analysis.

Cooler temperature (Criteria: $4 \pm 2^{\circ}\text{C}$): 16.2°C - OK

Actions

Qualify aqueous sample results using preservation and technical holding time information as follows:

- If there is no evidence that the samples were properly preserved ($T = 4^{\circ}\text{C} \pm 2^{\circ}\text{C}$), and the samples were extracted or analyzed within the technical holding times, qualify detects as estimated (J) and non-detects as estimated (UJ).
- If there is no evidence that the samples were properly preserved ($T = 4^{\circ}\text{C} \pm 2^{\circ}\text{C}$), and the samples were extracted or analyzed outside the technical holding times, qualify detects as estimated (J) and non-detects as estimated (UJ).
- If the samples were properly preserved, and were extracted and analyzed within the technical holding times, no qualification of the data is necessary.
- If the samples were properly preserved, and were extracted or analyzed outside the technical holding times, qualify detects as estimated (J) and non-detects as estimated (UJ). Note in the Data Review Narrative that holding times were exceeded and the effect of exceeding the holding time on the resulting data.

DATA REVIEW WORKSHEETS

- e. Use professional judgment to qualify samples whose temperature upon receipt at the laboratory is either below 2 degrees centigrade or above 6 degrees centigrade.
- f. If technical holding times are grossly exceeded, use professional judgment to qualify the data.

Qualify non-aqueous sample results using preservation and technical holding time information as follows:

- a. If there is no evidence that the samples were properly preserved ($T = 4^{\circ}\text{C} \pm 2^{\circ}\text{C}$), and the samples were extracted or analyzed within the technical holding time, qualify detects as estimated (J) and non-detects as estimated (UJ).
- b. If there is no evidence that the samples were properly preserved ($T = 4^{\circ}\text{C} \pm 2^{\circ}\text{C}$), and the samples were extracted or analyzed outside the technical holding time, qualify detects as estimated (J) and non-detects as estimated (UJ).
- c. If the samples were properly preserved, and were extracted and analyzed within the technical holding time, no qualification of the data is necessary.
- d. If the samples were properly preserved, and were extracted or analyzed outside the technical holding time, qualify detects as estimated (J) and non-detects as estimated (UJ). Note in the Data Review Narrative that holding times were exceeded and the effect of exceeding the holding time on the resulting data.
- e. Use professional judgment to qualify samples whose temperature upon receipt at the laboratory is either below 2 degrees centigrade or above 6 degrees centigrade.
- f. If technical holding times are grossly exceeded, use professional judgment to qualify the data.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met see below

GAS CHROMATOGRAPH WITH ELECTRON CAPTURE DETECTOR (GC/ECD) INSTRUMENT PERFORMANCE CHECK (SECTIONS 1 TO 5)

1. Resolution Check Mixture

Criteria

Is the resolution between two adjacent peaks in the Resolution Check Mixture C greater than or equal to 80.0% for all analytes for the primary column and greater than or equal to 50.0% for the confirmation column? Yes? or No?

Is the resolution between two adjacent peaks in the Resolution Check Mixture (A and B) greater than or equal to 60.0%? Yes? or No?

Note: If resolution criteria are not met, the quantitative results may not be accurate due to inadequate resolution. Qualitative identifications may also be questionable if coelution exists.

Action

- a. Qualify detects for target compounds that were not adequately resolved as tentatively identified (NJ).
- b. Qualify non-detected compounds as unusable (R).

2. Performance Evaluation Mixture (PEM) Resolution Criteria

Criteria

Is PEM analysis performed at the required frequency (at the end of each pesticide initial calibration sequence and every 12 hours)? Yes? or No?

Action

- a. If PEM is not performed at the required frequency, qualify all associated sample and blank results as unusable (R).

Criteria

Is PEM % Resolution < 90%? Yes? or No?

Action

- a. a. Qualify detects for target compounds that were not adequately resolved as tentatively identified (NJ).
- b. Qualify non-detected compounds as unusable (R).

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met see below

3. PEM 4,4'-DDT Breakdown

Criteria

Is the PEM 4,4'-DDT % Breakdown >20.0% and 4,4'-DDT is detected? Yes? or No?

Action

a. Qualify detects for 4,4'-DDT; detects for 4,4'-DDD; and detects for 4,4'-DDE as estimated (J)

Criteria

Is the PEM 4,4'-DDT % Breakdown >20.0% and 4,4'-DDT is not detected Yes? or No?

Action

- a. Qualify non-detects for 4,4'- DDT as unusable (R)
- b. Qualify detects for 4,4'-DDD as tentatively identified (NJ)
- c. Qualify detects for 4,4'-DDE as tentatively identified (NJ)

4. PEM Endrin Breakdown

Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is detected? Yes? or No?

Action

a. Qualify detects for Endrin; detects for Endrin aldehyde; and detects for Endrin ketone as estimated (J)

Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is not detected Yes? or No?

Action

- a. Qualify non-detects for Endrin as unusable (R)
- b. Qualify detects for Endrin aldehyde as tentatively identified (NJ)
- c. Qualify detects for Endrin ketone as tentatively identified (NJ)

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met see below

5. Mid-point Individual Standard Mixture Resolution -

Criteria

Is the resolution between two adjacent peaks in the Resolution Check Mixture C greater than or equal to 80.0% for all analytes for the primary column and greater than or equal to 50.0% for the confirmation column? Yes? or No?

Is the resolution between two adjacent peaks in the Resolution Check Mixture (A and B) greater than or equal to 90.0%? Yes? or No?

Note: If resolution criteria are not met, the quantitative results may not be accurate due to inadequate resolution. Qualitative identifications may also be questionable if coelution exists.

Action

- a. Qualify detects for target compounds that were not adequately resolved as tentatively identified (NJ).
- b. Qualify non-detected compounds as unusable (R).

Criteria

Is mid-point individual standard mixture analysis performed at the required frequency (every 12 hours)? Yes? or No?

Action

- a. If the mid-point individual standard mixture analysis is not performed at the required frequency, qualify all associated sample and blank results as unusable (R).

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below _____

CALIBRATION VERIFICATION

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data.

Date of initial calibration: 04/27/16 03/30/16
 Dates of initial calibration verification: 04/27/16 03/30/16
 Dates of continuing calibration: 04/27/16 04/25/16
 Dates of final calibration: 04/27/16 04/26/16
 Instrument ID numbers: GC1G GC4G
 Matrix/Level: Aqueous/low Aqueous/low

DATE	LAB FILE ID#	CRITERIA OUT RFs, %RSD, %D, r	COMPOUND	SAMPLES AFFECTED
Initial and initial calibration verification within the guidance document performance criteria. Continuing calibration % differences meet the performance in at least one of the column.				

Criteria

Are a five point calibration curve delivered with concentration levels as shown in Table 3 of SOP HW-36A, Revision 0, June, 2015? Yes? or No?

Actions

If the standard concentrations listed in Table 3 are not used, use professional judgment to evaluate the effect on the data

Criteria

Are RT Windows calculated correctly? Yes? or No?

Action

Recalculate the windows and use the corrected values for all evaluations.

Criteria

Are the Percent Relative Standard Deviation (%RSD) of the CFs for each of the single component target compounds less than or equal to 20.0%, except for alpha-BHC and delta-BHC? Yes? or No?

Are the %RSD of the CFs for alpha-BHC and delta-BHC less than or equal to 25.0%. Yes? or No?

DATA REVIEW WORKSHEETS

Is the %RSD of the CFs for each of the Toxaphene peaks must be < 30% when 5-point ICAL is performed? **Yes?** or **No?**

Is the %RSD of the CFs for the two surrogates (tetrachloro-m-xylene and decachlorobiphenyl) less than or equal to 30.0%. **Yes?** or **No?**

Action

- a. If the %RSD criteria are not met, qualify detects as estimated (J) and use professional judgment to qualify non-detected target compounds.
- b. If the %RSD criteria are within allowable limits, no qualification of the data is necessary

Continuing Calibration Checks

Criteria

Is the continuing calibration standard analyzed at the acceptable time intervals? **Yes?** or **No?**

Action

- a. If more than 14 hours has elapsed from the injection of the instrument blank that begins an analytical sequence (opening CCV) and the injection of either a PEM or mid-point concentration of the Individual Standard Mixtures (A and B) or (C), qualify all data as unusable (R).
- b. If more than 12 hours has elapsed from the injection of the instrument blank that begins an analytical sequence (opening CCV) and the injection of the last sample or blank that is part of the same analytical sequence, qualify all data as unusable (R).
- c. If more than 72 hours has elapsed from the injection of the sample with a Toxaphene detection and the Toxaphene Calibration Verification Standard (CS3), qualify all data as unusable (R).

Criteria

Is the Percent Difference (%D) within $\pm 25.0\%$ for the PEM sample? **Yes?** or **No?**

Action

- a. Qualify associated detects as estimated (J) and non-detects as estimated (UJ).

Criteria

For the Calibration Verification Standard (CS3); is the Percent Difference (%D) within $\pm 25.0\%$? **Yes?** or **No?**

Action

Qualify associated detects as estimated (J) and non-detects as estimated (UJ).

DATA REVIEW WORKSHEETS

All criteria were met N/A
Criteria were not met
and/or see below

Criteria

Is the PEM 4,4'-DDT % Breakdown >20.0% and 4,4'-DDT is detected? Yes? or No?

Action

- a. Qualify detects for 4,4'-DDT; detects for 4,4'-DDD; and detects for 4,4'-DDE as estimated (J)
- b. Non-detected associated compounds are not qualified

Criteria

Is the PEM 4,4'-DDT % Breakdown >20.0% and 4,4'-DDT is not detected Yes? or No?

Action

- a. Qualify non-detects for 4,4'- DDT as unusable (R)
- b. Qualify detects for 4,4'-DDD as tentatively identified (NJ)
- c. Qualify detects for 4,4'-DDE as tentatively identified (NJ)

Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is detected? Yes? or No?

Action

- a. Qualify detects for Endrin; detects for Endrin aldehyde; and detects for Endrin ketone as estimated (J)
- b. Non-detected associated compounds are not qualified

Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is not detected Yes? or No?

Action

- a. Qualify non-detects for Endrin as unusable (R)
- b. Qualify detects for Endrin aldehyde as tentatively identified (NJ)
- c. Qualify detects for Endrin ketone as tentatively identified (NJ)

A separate worksheet should be filled for each initial curve

DATA REVIEW WORKSHEETS

All criteria were met ☒
 Criteria were not met
 and/or see below _____

BLANK ANALYSIS RESULTS (Sections 1 & 2)

The assessment of the blank analysis results is to determine the existence and magnitude of contamination problems. The criteria for evaluation of blanks apply only to blanks associated with the samples, including trip, equipment, and laboratory blanks. If problems with any blanks exist, all data associated with the case must be carefully evaluated to determine whether or not there is an inherent variability in the data for the case, or if the problem is an isolated occurrence not affecting other data.

List the contamination in the blanks below. High and low levels blanks must be treated separately.

CRQL concentration _____ N/A _____

Laboratory blanks

DATE ANALYZED	LAB ID	LEVEL/ MATRIX	COMPOUND	CONCENTRATION UNITS
_No target analytes detected in method blanks at a reporting limit of 0.01 and 0.001 ug/L.				

Field/Equipment/Trip blank

DATE ANALYZED	LAB ID	LEVEL/ MATRIX	COMPOUND	CONCENTRATION UNITS
_No field/trip/equipment blanks analyzed with this data package.				

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

BLANK ANALYSIS RESULTS (Section 3)

Blank Actions

Action Levels (ALs) should be based upon the highest concentration of contaminant determined in any blank. Do not qualify any blank with another blank. The ALs for samples which have been diluted should be corrected for the sample dilution factor and/or % moisture, where applicable. No positive sample results should be reported unless the concentration of the compound in the samples exceeds the ALs:

The concentration of non-target compounds in all blanks must be less than or equal to 10 µg/L. The concentration of each target compound found in the method or field blanks must be less than its CRQL listed in the method.

Data concerning the field blanks are not evaluated as part of the CCS process. If field blanks are present, the data reviewer should evaluate this data in a similar fashion as the method blanks.

Specific actions are as follows:

Blank Actions for Pesticide Analyses

Blank Type	Blank Result	Sample Result	Action for Samples
Method, Sulfur Cleanup, Instrument, Field, TCLP/SPLP	Detects	Not detected	No qualification required
	< CRQL	< CRQL	Report CRQL value with a U
		≥ CRQL	No qualification required
	> CRQL	< CRQL	Report CRQL value with a U
		≥ CRQL and ≤ blank concentration	Report blank value for sample concentration with a U
		≥ CRQL and > blank concentration	No qualification required
	= CRQL	≤ CRQL	Report CRQL value with a U
		> CRQL	No qualification required
	Gross contamination	Detects	Report blank value for sample concentration with a U

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below _____

[illegible]

DATA REVIEW WORKSHEETS

All criteria were met ☒ X
 Criteria were not met
 and/or see below _____

SURROGATE SPIKE RECOVERIES

Laboratory performance of individual samples is established by evaluation of surrogate spike recoveries. All samples are spiked with surrogate compounds prior to sample analysis. The accuracy of the analysis is measured by the surrogate percent recovery. Since the effects of the sample matrix are frequently outside the control of the laboratory and may present relatively unique problems, the validation of data is frequently subjective and demands analytical experience and professional judgment.

List the percent recoveries (%Rs) which do not meet the criteria for surrogate recovery.

Matrix: Aqueous

Lab Sample ID	Lab File	S1 a	S1 b	S2 a	S2 b
JC18972-4	4G67636.D	94	93	68	58
OP93361-BS1	4G67633.D	86	88	90	86
OP93361-BSD	4G67634.D	86	85	94	86
OP93361-MB1	4G67632.D	105	107	106	98

Surrogate Compounds	Recovery Limits
S1 = Tetrachloro-m-xylene	26-132%
S2 = Decachlorobiphenyl	10-118%

(a) Recovery from GC signal #1

(b) Recovery from GC signal #2

Matrix: Soil

Lab Sample ID	Lab File	S1 a	S1 b	S2 a	S2 b
JC18972-1	1G122624.D	65	67	61	67
JC18972-2	1G122625.D	57	56	48	49
JC18972-3	1G122626.D	49	48	45	47
OP93471-BS1	1G122605.D	71	74	75	76
OP93471-MB1	1G122604.D	66	69	70	71
OP93471-MS	1G122619.D	60	62	52	57
OP93471-MSD	1G122620.D	80	82	68	76

Surrogate Compounds	Recovery Limits
S1 = Tetrachloro-m-xylene	24-136%
S2 = Decachlorobiphenyl	10-153%

(a) Recovery from GC signal #1

(b) Recovery from GC signal #2

DATA REVIEW WORKSHEETS

Note: Surrogate recoveries within laboratory control limits.

Actions:

- a. For any surrogate recovery greater than 150%, qualify detected target compounds as biased high (J+).
- b. Do not qualify non-detected target compounds for surrogate recovery > 150 %.
- c. If both surrogate recoveries are greater than or equal to 30% and less than or equal to 150%, no qualification of the data is necessary.
- d. For any surrogate recovery greater than or equal to 10% and less than 30%, qualify detected target compounds as biased low (J-).
- e. For any surrogate recovery greater than or equal to 10% and less than 30%, qualify non-detected target compounds as approximated (UJ).
- f. If low surrogate recoveries are from sample dilution, professional judgment should be used to determine if the resulting data should be qualified. If sample dilution is not a factor:
 - i. Qualify detected target compounds as biased low (J-).
 - ii. Qualify non-detected target compounds as unusable (R).
- g. If surrogate RTs in PEMs, Individual Standard Mixtures, samples, and blanks are outside of the RT Windows, the reviewer must use professional judgment to qualify data.
- h. If surrogate RTs are within RT windows, no qualification of the data is necessary.
- i. If the two surrogates were not added to all samples, MS/MSDs, standards, LCSs, and blanks, use professional judgment in qualifying data as missing surrogate analyte may not directly apply to target analytes.

Summary Surrogate Actions for Pesticide Analyses

Criteria	Action*	
	Detected Target Compounds	Non-detected Target Compounds
%R > 150%	J+	No qualification
30% < %R < 150%	No qualification	
10% < %R < 30%	J-	UJ
%R < 10% (sample dilution not a factor)	J-	R
%R < 10% (sample dilution is a factor)	Use professional judgment	
RT out of RT window	Use professional judgment	
RT within RT window	No qualification	

- * Use professional judgment in qualifying data, as surrogate recovery problems may not directly apply to target analytes.

DATA REVIEW WORKSHEETS

All criteria were met ☒ X
 Criteria were not met
 and/or see below _____

MATRIX SPIKE/MATRIX SPIKE DUPLICATE (MS/MSD)

This data is generated to determine long term precision and accuracy in the analytical method for various matrices. This data alone cannot be used to evaluate the precision and accuracy of individual samples. If any % R in the MS or MSD falls outside the designated range, the reviewer should determine if there are matrix effects, i.e. LCS data are within the QC limits but MS/MSD data are outside QC limit.

1. MS/MSD Recoveries and Precision Criteria

Data for MS and MSDs will not be present unless requested by the Region.

Notify the Contract Laboratory Program Project Officer (CLP PO) if a field blank was used for the MS and MSD, unless designated as such by the Region.

NOTE: For a Matrix Spike that does not meet criteria, apply the action to only the field sample used to prepare the Matrix Spike sample. If it is clearly stated in the data validation materials that the samples were taken through incremental sampling or some other method guaranteeing the homogeneity of the sample group, then the entire sample group may be qualified.

List the %Rs, RPD of the compounds which do not meet the criteria.

Sample ID: JC19164-5

Matrix/Level: Soil

MS OR MSD	COMPOUND	% R	RPD	QC LIMITS	ACTION
<u>_MS/MSD_%_recoveries_and_RPD_within_laboratory_control_limits._</u>					

Note: No MS/MSD analyzed with this data package for aqueous matrix. Blank spike/blank spike duplicate used to assess accuracy. % recoveries and RPD within laboratory control limits.

Action

No qualification of the data is necessary on MS and MSD data alone. However, using professional judgment, the validator may use the MS and MSD results in conjunction with other QC criteria and determine the need for some qualification of the data.

A separate worksheet should be used for each MS/MSD pair.

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

LABORATORY CONTROL SAMPLE (LCS) ANALYSIS

This data is generated to determine accuracy of the analytical method for various matrices.

1. LCS Recoveries Criteria

LCS Spike Compound	Recovery Limits (%)
gamma-BHC	50 – 120
Heptachlor epoxide	50 – 150
Dieldrin	30 – 130
4,4'-DDE	50 – 150
Endrin	50 – 120
Endosulfan sulfate	50 – 120
trans-Chlordane	30 – 130
Tetrachloro-m-xylene (surrogate)	30 – 150
Decachlorobiphenyl (surrogate)	30 – 150

LCS concentrations: 0.167 ug/L; 16.7 ug/Kg

List the %R of compounds which do not meet the criteria

LCS ID	COMPOUND	% R	QC LIMIT

Action

The following guidance is suggested for qualifying sample data for which the associated LCS does not meet the required criteria.

- If the LCS recovery exceeds the upper acceptance limit, qualify detected target compounds as estimated (J). Do not qualify non-detected target compounds.
- If the LCS recovery is less than the lower acceptance limit, qualify detected target compounds as estimated (J) and non-detects as unusable (R).
- Use professional judgment to qualify data for compounds other than those compounds that are included in the LCS.
- Use professional judgment to qualify non-LCS compounds. Take into account the compound class, compound recovery efficiency, analytical problems associated with each compound, and comparability in the performance of the LCS compound to the non-LCS compound.
- If the LCS recovery is within allowable limits, no qualification of the data is necessary.

DATA REVIEW WORKSHEETS

2. Frequency Criteria:

Where LCS analyzed at the required frequency and for each matrix? Yes or No.

If no, the data may be affected. Use professional judgment to determine the severity of the effect and qualify data accordingly. Discuss any actions below and list the samples affected.

Note: Blank spike/blank spike duplicate analyzed for solid and aqueous matrices. % recoveries and RPD within laboratory control limits.

DATA REVIEW WORKSHEETS

All criteria were met _____
Criteria were not met _____
and/or see below N/A

FLORISIL CARTRIDGE PERFORMANCE CHECK

NOTE: Florisil cartridge cleanup is mandatory for all extracts.

Criteria

Is the Florisil cartridge performance check conducted at least once on each lot of cartridges used for sample cleanup or every 6 months, whichever is most frequent? Yes? or No? **N/A**

Criteria

Are the results for the Florisil Cartridge Performance Check solution included with the data package? Yes? or No? **N/A**

Note: If % criteria are not met, examine the raw data for the presence of polar interferences and use professional judgment in qualifying the data as follows:

Action:

- a. If the Percent Recovery is greater than 120% for any of the pesticide target compounds in the Florisil Cartridge Performance Check, qualify detected compounds as estimated (J). Do not qualify non-detected target compounds.
- b. If the Percent Recovery is greater than or equal to 80% and less than or equal to 120% for all the pesticide target compounds, no qualification of the data is necessary.
- c. If the Percent Recovery is greater than or equal to 10% and less than 80% for any of the pesticide target compounds in the Florisil Cartridge Performance Check, qualify detected target compounds as estimated (J) and non-detected target compounds as approximated (UJ).
- d. If the Percent Recovery is less than 10% for any of the pesticide target compounds in the Florisil Cartridge Performance Check, qualify detected compounds as estimated (J) and qualify non-detected target compounds as unusable (R).
- e. If the Percent Recovery of 2,4,5-trichlorophenol in the Florisil Cartridge Performance Check is greater than or equal to 5%, use professional judgment to qualify detected and non-detected target compounds, considering interference on the sample chromatogram.

Note: State in the Data Review Narrative potential effects on the sample data resulting from the Florisil Cartridge Performance Check analysis not yielding acceptable results.

Note: No information for florisil cartridge performance check included in data package. Florisil cartridge used for sample extraction/clean-up. No qualification of the data performed, professional judgment.

All criteria were met N/A
Criteria were not met
and/or see below _____

GEL PERMEATION CHROMATOGRAPHY (GPC) PERFORMANCE CHECK

NOTE: GPC cleanup is mandatory for all soil samples.

If GPC criteria are not met, examine the raw data for the presence of high molecular weight contaminants; examine subsequent sample data for unusual peaks; and use professional judgment in qualifying the data. Notify the Contract Laboratory Program Project Officer (CLP PO) if the laboratory chooses to analyze samples under unacceptable GPC criteria.

Action:

- a. If the Percent Recovery is less than 10% for the pesticide compounds and surrogates during the GPC calibration check, the non-detected target compounds may be suspect, qualify detected compounds as estimated (J).
- b. If the Percent Recovery is less than 10% for the pesticide compounds and surrogates during the GPC calibration check, qualify all non-detected target compounds as unusable (R).
- c. If the Percent Recovery is greater than or equal to 10% and is less than 80% for any of the pesticide target compounds in the GPC calibration, qualify detected target compounds as estimated (J) and non-detected target compounds as approximated (UJ).
- d. If the Percent Recovery is greater than or equal to 80% and less than or equal to 120% for all the pesticide target compounds, no qualification of the data is necessary.
- e. If high recoveries (i.e., greater than 120%) were obtained for the pesticides and surrogates during the GPC calibration check, qualify detected compounds as estimated (J). Do not qualify non-detected target compounds.

Note: State in the Data Review Narrative potential effects on the sample data resulting from the GPC cleanup analyses not yielding acceptable results.

Note: No information for performance of GPC cleanup included in data package. No qualification of the data performed, professional judgment.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

TARGET COMPOUND IDENTIFICATION

Criteria:

1. Is Retention Times (RTs) of both of the surrogates and reported target compounds in each sample within the calculated RT Windows on both columns? Yes? or No?
2. Is the Tetrachloro-m-xylene (TCX) RT ± 0.05 minutes of the Mean RT (RT) determined from the initial calibration and Decachlorobiphenyl (DCB) within ± 0.10 minutes of the RT determined from the initial calibration? Yes? or No?
3. Is the Percent Difference (%D) for the detected mean concentrations of a pesticide target compound between the two Gas Chromatograph (GC) columns within the inclusive range of ± 25.0 %? Yes? or No?
4. When no analytes are identified in a sample; are the chromatograms from the analyses of the sample extract and the low-point standard of the initial calibration associated with those analyses on the same scaling factor? Yes? or No?
5. Does the chromatograms display the Single Component Pesticides (SCPs) detected in the sample and the largest peak of any multi-component analyte detected in the sample at less than full scale. Yes? or No?
6. If an extract is diluted; does the chromatogram display SCPs peaks between 10-100% of full scale, and multi-component analytes between 25-100% of full scale? Yes? or No? N/A
7. For any sample; does the baseline of the chromatogram return to below 50% of full scale before the elution time of alpha-BHC, and also return to below 25% of full scale after the elution time of alpha-BHC and before the elution time of DCB? Yes? or No?
8. If a chromatogram is replotted electronically to meet these requirements; is the scaling factor used displayed on the chromatogram, and both the initial chromatogram and the replotted chromatogram submitted in the data package. Yes? or No?

Action:

- a. If the qualitative criteria for both columns were not met, all target compounds that are reported as detected should be considered non-detected.
- b. Use professional judgment to assign an appropriate quantitation limit using the following guidance:
 - i. If the detected target compound peak was sufficiently outside the pesticide RT Window, the reported values may be a false positive and should be replaced with the sample Contract Required Quantitation Limits (CRQL) value.

DATA REVIEW WORKSHEETS

- ii. If the detected target compound peak poses an interference with potential detection of another target peak, the reported value should be considered and qualified as unusable (R).
- c. If the data reviewer identifies a peak in both GC column analyses that falls within the appropriate RT Windows, but was reported as a non-detect, the compound may be a false negative. Use professional judgment to decide if the compound should be included.

Note: State in the Data Review Narrative all conclusions made regarding target compound identification.

- d. If the Toxaphene peak RT windows determined from the calibration overlap with SCPs or chromatographic interferences, use professional judgment to qualify the data.
- e. If target compounds were detected on both GC columns, and the Percent Difference between the two results is greater than 25.0%, consider the potential for coelution and use professional judgment to decide whether a much larger concentration obtained on one column versus the other indicates the presence of an interfering compound. If an interfering compound is indicated, use professional judgment to determine how best to report, and if necessary, qualify the data according to these guidelines.
- f. If Toxaphene exhibits a marginal pattern-matching quality, use professional judgment to establish whether the differences are due to environmental "weathering" (i.e., degradation of the earlier eluting peaks relative to the later eluting peaks). If the presence of Toxaphene is strongly suggested, report results as presumptively present (N).

GAS CHROMATOGRAPH/MASS SPECTROMETER (GC/MS) CONFIRMATION

NOTE: This confirmation is not usually provided by the laboratory. In cases where it is provided, use professional judgment to determine if data qualified with "C" can be salvaged if it was previously qualified as unusable (R).

Action:

- a. If the quantitative criteria for both columns were met (≥ 5.0 ng/ μ L for SCPs and ≥ 125 ng/ μ L for Toxaphene), determine whether GC/MS confirmation was performed. If it was performed, qualify the data using the following guidance:
 - i. If GC/MS confirmation was not required because the quantitative criteria for both columns was not met, but it was still performed, use professional judgment when evaluating the data to decide whether the detect should be qualified with "C".
 - ii. If GC/MS confirmation was performed, but unsuccessful for a target compound detected by GC/ECD analysis, qualify those detects as "X".

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

COMPOUND QUANTITATION AND REPORTED CONTRACT REQUIRED QUANTITATION LIMITS (CRQLS)

The sample quantitation evaluation is to verify laboratory quantitation results. In the space below, please show a minimum of one sample calculation:

JC18972-2 Dieldrin RF = 1.311

$$\begin{aligned} [] &= (11520168)(50)/(61521624)(1.311) \\ &= 7.14 \text{ ppb} \quad \text{Ok} \end{aligned}$$

Note: More than 40 % RPD for detected concentrations between the two GC columns for the following analytes: Dieldrin; 4,4'-DDT; and Endrin in sample JC18972-2. No action taken, professional judgment.

Action:

- If sample quantitation is different from the reported value, qualify result as unusable (R).
- When a sample is analyzed at more than one dilution, the lowest CRQLs are used unless a QC exceedance dictates the use of the higher CRQLs from the diluted sample.
- Replace concentrations that exceed the calibration range in the original analysis by crossing out the "E" and its corresponding value on the original reporting form and substituting the data from the diluted sample.
- Results between the MDL and CRQL should be qualified as estimated (J).
- Results less than the MDL should be reported at the CRQL and qualified (U). MDLs themselves are not reported.
- For non-aqueous samples, if the percent moisture is less than 70.0%, no qualification of the data is necessary. If the percent moisture is greater than or equal to 70.0% and less than 90.0%, qualify detects as estimated (J) and non-detects as approximated (UJ). If the percent moisture is greater than or equal to 90.0%, qualify detects as estimated (J) and non-detects as unusable (R) (see Table).

Percent Moisture Actions for Pesticide Analysis for Non-Aqueous Samples

Criteria	Action	
	Detected Associated Compounds	Non-detected Associated Compounds
% Moisture < 70.0	No qualification	
70.0 < % Moisture < 90.0	J	UJ
% Moisture > 90.0	J	R

1

List samples which have $\leq 50\%$ solids

[illegible]

Note: If any discrepancies are found, the Region's designated representative may contact the laboratory to obtain additional information that could resolve any differences. If a discrepancy remains unresolved, the reviewer must use professional judgment to decide which value is the most accurate. Under these circumstances, the reviewer may determine that qualification of data is warranted. Note in the Data Review Narrative a description of the reasons for data qualification and the qualification that is applied to the data.

Dilution performed

[illegible]

DATA REVIEW WORKSHEETS

All criteria were met NA
 Criteria were not met
 and/or see below _____

FIELD DUPLICATE PRECISION

NOTE: In the absence of QAPP guidance for validating data from field duplicates, the following action will be taken.

Field duplicate samples may be taken and analyzed as an indication of overall precision. These analyses measure both field and lab precision; therefore, the results may have more variability than laboratory duplicates which only laboratory performance. It is also expected that soil duplicate results will have a greater variance than water matrices due to difficulties associated with collecting identical field duplicate samples. Identify which samples within the data package are field duplicates. Estimate the relative percent difference (RPD) between the values for each compound. If large RPDs (> 50%) is observed, confirm identification of samples and note difference in the executive summary.

Sample IDs: _____ - _____

Matrix: _____ - _____

COMPOUND	SQL ug/L	SAMPLE CONC.	DUPLICATE CONC.	RPD	ACTION
No field/laboratory duplicate analyzed with this data package. MS/MSD or LCS/LCSD % recoveries RPD used to assess precision. RPD within the required criteria of < 50 %.					

Actions:

a. Qualify as estimated positive results (J) and nondetects (UJ) for the compound that exceeded the above criteria. For organics, only the sample and duplicate will be qualified.

b. If an RPD cannot be calculated because one or both of the sample results is not detected, the following actions apply:

- i. If one sample result is not detected and the other is greater than 5x the SQL qualify (J/UJ).
- ii. If one sample value is not detected and the other is greater than 5x the SQL and the SQLs for the sample and duplicate are significantly different, use professional judgment to determine if qualification is appropriate.
- iii. If one sample value is not detected and the other is less than 5x, use professional judgment to determine if qualification is appropriate.

DATA REVIEW WORKSHEETS

- iv. If both sample and duplicate results are not detected, no action is needed.

OVERALL ASSESSMENT OF DATA

Action:

1. Use professional judgment to determine if there is any need to qualify data which were not qualified based on the Quality Control (QC) criteria previously discussed.
2. Write a brief narrative to give the user an indication of the analytical limitations of the data.

Note: The Contract Laboratory Program Project Officer (CLP PO) must be informed if any inconsistency of the data with the Sample Delivery Group (SDG) Narrative. If sufficient information on the intended use and required quality of the data is available, the reviewer should include their assessment of the usability of the data within the given context. This may be used as part of a formal Data Quality Assessment (DQA).

Overall assessment of the data:	Results are valid; the data can be used for decision making purposes.
--	---

EXECUTIVE NARRATIVE

SDG No: **JC18972** Laboratory: **Accutest, New Jersey**
Analysis: **SW846-8270D** Number of Samples: **4**
Location: **BMSMC, Building 5 Area**
Humacao, PR

SUMMARY: Four (4) samples were analyzed for the ABN TCL list following method SW846-8270D; Naphthalene and 1,4-Dioxane were also analyzed by SW846-8270D using the selective ion monitoring (SIM) technique. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: EPA Hazardous Waste Support Section, SOP HW-35A, July 2015 –Revision 0. *Semivolatile Data Validation*. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

Results are valid and can be used for decision making purposes.

Critical issues: **None**
Major: **None**
Minor: **None**


Critical findings: **None**
Major findings: **None**
Minor findings:

1. Sample preservation outside the recommended criteria, no action taken professional judgment.
2. Initial and continuing calibration verifications meet the required criteria. Analytes not meeting the method % difference criteria meet the guidance document performance criteria for continuing calibration verification of ± 25 or 40 %, no action taken. No closing calibration verification included in data package. No action taken, professional judgment.
2. Analytes not meeting the continuing calibration verification criteria of the guidance document were qualified UJ in sample JC19023-1; JC19023-2; JC19023-3; and JC19023-4.
3. MS/MSD samples not analyzed for aqueous matrix, blank spike/blank spike duplicate used to assess accuracy. Two of the analytes were found outside laboratory limits but within generally acceptable control limits. Analytes not detected in the sample, no action taken.

COMMENTS: Results are valid and can be used for decision making purposes.

Reviewers Name: **Rafael Infante**
Chemist License 1888

Signature:

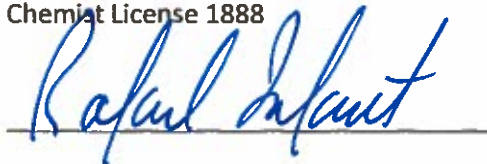

Date: **May 17, 2016**

SAMPLE ORGANIC DATA SAMPLE SUMMARY

Sample ID: JC18972-1
Sample location: BMSMC Building 5 Area
Sampling date: 4/20/2016
Matrix: Soil

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	82	ug/kg	1	-	U	Yes
4-Chloro-3-methyl phenol	200	ug/kg	1	-	U	Yes
2,4-Dichlorophenol	200	ug/kg	1	-	U	Yes
2,4-Dimethylphenol	200	ug/kg	1	-	U	Yes
2,4-Dinitrophenol	200	ug/kg	1	-	U	Yes
4,6-Dinitro-o-cresol	200	ug/kg	1	-	U	Yes
2-Methylphenol	82	ug/kg	1	-	U	Yes
3&4-Methylphenol	82	ug/kg	1	-	U	Yes
2-Nitrophenol	200	ug/kg	1	-	U	Yes
4-Nitrophenol	410	ug/kg	1	-	U	Yes
Pentachlorophenol	200	ug/kg	1	-	U	Yes
Phenol	82	ug/kg	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	200	ug/kg	1	-	U	Yes
2,4,5,6-Trichlorophenol	200	ug/kg	1	-	U	Yes
2,4,6-Trichlorophenol	200	ug/kg	1	-	U	Yes
Acenaphthene	41	ug/kg	1	-	U	Yes
Acenaphthylene	41	ug/kg	1	-	U	Yes
Acetophenone	200	ug/kg	1	-	U	Yes
Anthracene	41	ug/kg	1	-	U	Yes
Atrazine	82	ug/kg	1	-	U	Yes
Benzo(a)anthracene	41	ug/kg	1	-	U	Yes
Benzo(a)pyrene	41	ug/kg	1	-	U	Yes
Benzo(b)fluoranthene	41	ug/kg	1	-	U	Yes
Benzo(g,h,i)perylene	41	ug/kg	1	-	U	Yes
Benzo(k)fluoranthene	41	ug/kg	1	-	U	Yes
4-Bromophenyl phenyl ether	82	ug/kg	1	-	U	Yes
Butyl benzyl phthalate	82	ug/kg	1	-	U	Yes
1,1'-Biphenyl	82	ug/kg	1	-	U	Yes
Benzaldehyde	200	ug/kg	1	-	U	Yes
2-Chloronaphthalene	82	ug/kg	1	-	U	Yes
4-Chloroaniline	200	ug/kg	1	-	U	Yes
Carbazole	82	ug/kg	1	-	U	Yes
Caprolactam	82	ug/kg	1	-	U	Yes
Chrysene	41	ug/kg	1	-	U	Yes
bis(2-Chloroethoxy)methane	82	ug/kg	1	-	U	Yes
bis(2-Chloroethyl)ether	82	ug/kg	1	-	U	Yes

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
bis(2-Chloroisopropyl)ether	82	ug/kg	1	-	U	Yes
4-Chlorophenyl phenyl ether	82	ug/kg	1	-	U	Yes
2,4-Dinitrotoluene	41	ug/kg	1	-	U	Yes
2,6-Dinitrotoluene	41	ug/kg	1	-	U	Yes
3,3'-Dichlorobenzidine	82	ug/kg	1	-	U	Yes
Dibenzo(a,h)anthracene	41	ug/kg	1	-	U	Yes
Dibenzofuran	82	ug/kg	1	-	U	Yes
Di-n-butyl phthalate	82	ug/kg	1	-	U	Yes
Di-n-octyl phthalate	82	ug/kg	1	-	U	Yes
Diethyl phthalate	82	ug/kg	1	-	U	Yes
Dimethyl phthalate	82	ug/kg	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	82	ug/kg	1	-	U	Yes
Fluoranthene	41	ug/kg	1	-	U	Yes
Fluorene	41	ug/kg	1	-	U	Yes
Hexachlorobenzene	82	ug/kg	1	-	U	Yes
Hexachlorobutadiene	41	ug/kg	1	-	UJ	Yes
Hexachlorocyclopentadiene	410	ug/kg	1	-	U	Yes
Hexachloroethane	200	ug/kg	1	-	UJ	Yes
Indeno(1,2,3-cd)pyrene	41	ug/kg	1	-	U	Yes
Isophorone	82	ug/kg	1	-	U	Yes
1-Methylnaphthalene	82	ug/kg	1	-	U	Yes
2-Methylnaphthalene	82	ug/kg	1	-	U	Yes
2-Nitroaniline	200	ug/kg	1	-	U	Yes
3-Nitroaniline	200	ug/kg	1	-	UJ	Yes
4-Nitroaniline	200	ug/kg	1	-	U	Yes
Nitrobenzene	82	ug/kg	1	-	U	Yes
N-Nitroso-di-n-propylamine	82	ug/kg	1	-	U	Yes
Nitrosodiphenylamine	200	ug/kg	1	-	U	Yes
Phenanthrene	41	ug/kg	1	-	U	Yes
Pyrene	41	ug/kg	1	-	U	Yes
1,2,4,5,6-Tetrachlorobenzene	200	ug/kg	1	-	U	Yes

METHOD: 8270D (SIM)

Naphthalene	4.1	ug/kg	1	-	U	Yes
1,4-Dioxane	4.1	ug/kg	1	-	U	Yes

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
--------------	--------	-------	-----------------	----------	------------	------------

Sample ID: JC18972-2

Sample location: BMSMC Building 5 Area

Sampling date: 4/21/2016

Matrix: Soil

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	82	ug/Kg	1	-	U	Yes
4-Chloro-3-methyl phenol	200	ug/Kg	1	-	U	Yes
2,4-Dichlorophenol	200	ug/Kg	1	-	U	Yes
2,4-Dimethylphenol	200	ug/Kg	1	-	U	Yes
2,4-Dinitrophenol	200	ug/Kg	1	-	U	Yes
4,6-Dinitro-o-cresol	200	ug/Kg	1	-	U	Yes
2-Methylphenol	82	ug/Kg	1	-	U	Yes
3&4-Methylphenol	82	ug/Kg	1	-	U	Yes
2-Nitrophenol	200	ug/Kg	1	-	U	Yes
4-Nitrophenol	410	ug/Kg	1	-	U	Yes
Pentachlorophenol	200	ug/Kg	1	-	U	Yes
Phenol	82	ug/Kg	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	200	ug/Kg	1	-	U	Yes
2,4,5,6-Trichlorophenol	200	ug/Kg	1	-	U	Yes
2,4,6-Trichlorophenol	200	ug/Kg	1	-	U	Yes
Acenaphthene	41	ug/Kg	1	-	U	Yes
Acenaphthylene	41	ug/Kg	1	-	U	Yes
Acetophenone	200	ug/Kg	1	-	U	Yes
Anthracene	41	ug/Kg	1	-	U	Yes
Atrazine	82	ug/Kg	1	-	U	Yes
Benzo(a)anthracene	41	ug/Kg	1	-	U	Yes
Benzo(a)pyrene	41	ug/Kg	1	-	U	Yes
Benzo(b)fluoranthene	41	ug/Kg	1	-	U	Yes
Benzo(g,h,i)perylene	41	ug/Kg	1	-	U	Yes
Benzo(k)fluoranthene	41	ug/Kg	1	-	U	Yes
4-Bromophenyl phenyl ether	82	ug/Kg	1	-	U	Yes
Butyl benzyl phthalate	82	ug/Kg	1	-	U	Yes
1,1'-Biphenyl	82	ug/Kg	1	-	U	Yes
Benzaldehyde	200	ug/Kg	1	-	U	Yes
2-Chloronaphthalene	82	ug/Kg	1	-	U	Yes
4-Chloroaniline	200	ug/Kg	1	-	U	Yes
Carbazole	82	ug/Kg	1	-	U	Yes
Caprolactam	82	ug/Kg	1	-	U	Yes
Chrysene	41	ug/Kg	1	-	U	Yes
bis(2-Chloroethoxy)methane	82	ug/Kg	1	-	U	Yes
bis(2-Chloroethyl)ether	82	ug/Kg	1	-	U	Yes

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
bis(2-Chloroisopropyl)ether	82	ug/Kg	1	-	U	Yes
4-Chlorophenyl phenyl ether	82	ug/Kg	1	-	U	Yes
2,4-Dinitrotoluene	41	ug/Kg	1	-	U	Yes
2,6-Dinitrotoluene	41	ug/Kg	1	-	U	Yes
3,3'-Dichlorobenzidine	82	ug/Kg	1	-	U	Yes
Dibenzo(a,h)anthracene	41	ug/Kg	1	-	U	Yes
Dibenzofuran	82	ug/Kg	1	-	U	Yes
Di-n-butyl phthalate	82	ug/Kg	1	-	U	Yes
Di-n-octyl phthalate	82	ug/Kg	1	-	U	Yes
Diethyl phthalate	82	ug/Kg	1	-	U	Yes
Dimethyl phthalate	82	ug/Kg	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	82	ug/Kg	1	-	U	Yes
Fluoranthene	41	ug/Kg	1	-	U	Yes
Fluorene	41	ug/Kg	1	-	U	Yes
Hexachlorobenzene	82	ug/Kg	1	-	U	Yes
Hexachlorobutadiene	41	ug/Kg	1	-	UJ	Yes
Hexachlorocyclopentadiene	410	ug/Kg	1	-	U	Yes
Hexachloroethane	200	ug/Kg	1	-	UJ	Yes
Indeno(1,2,3-cd)pyrene	41	ug/Kg	1	-	U	Yes
Isophorone	82	ug/Kg	1	-	U	Yes
1-Methylnaphthalene	82	ug/Kg	1	-	U	Yes
2-Methylnaphthalene	82	ug/Kg	1	-	U	Yes
2-Nitroaniline	200	ug/Kg	1	-	U	Yes
3-Nitroaniline	200	ug/Kg	1	-	UJ	Yes
4-Nitroaniline	200	ug/Kg	1	-	U	Yes
Nitrobenzene	82	ug/Kg	1	-	U	Yes
N-Nitroso-di-n-propylamine	82	ug/Kg	1	-	U	Yes
Nitrosodiphenylamine	200	ug/Kg	1	-	U	Yes
Phenanthrene	41	ug/Kg	1	-	U	Yes
Pyrene	41	ug/Kg	1	-	U	Yes
1,2,4,5,6-Tetrachlorobenzene	200	ug/Kg	1	-	U	Yes

METHOD: 8270D (SIM)

Naphthalene	4.1	ug/Kg	1	-	U	Yes
1,4-Dioxane	4.1	ug/Kg	1	-	U	Yes

METHOD: 8270D

Analyte Name Result Units Dilution Factor Lab Flag Validation Reportable

Sample ID: JC18972-3

Sample location: BMSMC Building 5 Area

Sampling date: 4/21/2016

Matrix: Soil

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	79	ug/kg	1	-	U	Yes
4-Chloro-3-methyl phenol	200	ug/kg	1	-	U	Yes
2,4-Dichlorophenol	200	ug/kg	1	-	U	Yes
2,4-Dimethylphenol	200	ug/kg	1	-	U	Yes
2,4-Dinitrophenol	200	ug/kg	1	-	U	Yes
4,6-Dinitro-o-cresol	200	ug/kg	1	-	U	Yes
2-Methylphenol	79	ug/kg	1	-	U	Yes
3&4-Methylphenol	79	ug/kg	1	-	U	Yes
2-Nitrophenol	200	ug/kg	1	-	U	Yes
4-Nitrophenol	400	ug/kg	1	-	U	Yes
Pentachlorophenol	200	ug/kg	1	-	U	Yes
Phenol	79	ug/kg	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	200	ug/kg	1	-	U	Yes
2,4,5,6-Trichlorophenol	200	ug/kg	1	-	U	Yes
2,4,6-Trichlorophenol	200	ug/kg	1	-	U	Yes
Acenaphthene	40	ug/kg	1	-	U	Yes
Acenaphthylene	40	ug/kg	1	-	U	Yes
Acetophenone	200	ug/kg	1	-	U	Yes
Anthracene	40	ug/kg	1	-	U	Yes
Atrazine	79	ug/kg	1	-	U	Yes
Benzo(a)anthracene	40	ug/kg	1	-	U	Yes
Benzo(a)pyrene	40	ug/kg	1	-	U	Yes
Benzo(b)fluoranthene	40	ug/kg	1	-	U	Yes
Benzo(g,h,i)perylene	40	ug/kg	1	-	U	Yes
Benzo(k)fluoranthene	79	ug/kg	1	-	U	Yes
4-Bromophenyl phenyl ether	79	ug/kg	1	-	U	Yes
Butyl benzyl phthalate	79	ug/kg	1	-	U	Yes
1,1'-Biphenyl	79	ug/kg	1	-	U	Yes
Benzaldehyde	200	ug/kg	1	-	U	Yes
2-Chloronaphthalene	79	ug/kg	1	-	U	Yes
4-Chloroaniline	200	ug/kg	1	-	U	Yes
Carbazole	79	ug/kg	1	-	U	Yes
Caprolactam	79	ug/kg	1	-	U	Yes
Chrysene	40	ug/kg	1	-	U	Yes
bis(2-Chloroethoxy)methane	79	ug/kg	1	-	U	Yes
bis(2-Chloroethyl)ether	79	ug/kg	1	-	U	Yes

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
bis(2-Chloroisopropyl)ether	79	ug/kg	1	-	U	Yes
4-Chlorophenyl phenyl ether	79	ug/kg	1	-	U	Yes
2,4-Dinitrotoluene	40	ug/kg	1	-	U	Yes
2,6-Dinitrotoluene	40	ug/kg	1	-	U	Yes
3,3'-Dichlorobenzidine	79	ug/kg	1	-	U	Yes
Dibenzo(a,h)anthracene	40	ug/kg	1	-	U	Yes
Dibenzofuran	79	ug/kg	1	-	U	Yes
Di-n-butyl phthalate	79	ug/kg	1	-	U	Yes
Di-n-octyl phthalate	79	ug/kg	1	-	U	Yes
Diethyl phthalate	79	ug/kg	1	-	U	Yes
Dimethyl phthalate	79	ug/kg	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	79	ug/kg	1	-	U	Yes
Fluoranthene	40	ug/kg	1	-	U	Yes
Fluorene	40	ug/kg	1	-	U	Yes
Hexachlorobenzene	79	ug/kg	1	-	U	Yes
Hexachlorobutadiene	40	ug/kg	1	-	UJ	Yes
Hexachlorocyclopentadiene	400	ug/kg	1	-	U	Yes
Hexachloroethane	200	ug/kg	1	-	UJ	Yes
Indeno(1,2,3-cd)pyrene	79	ug/kg	1	-	U	Yes
Isophorone	79	ug/kg	1	-	U	Yes
2-Methylnaphthalene	79	ug/kg	1	-	U	Yes
2-Nitroaniline	200	ug/kg	1	-	U	Yes
3-Nitroaniline	200	ug/kg	1	-	UJ	Yes
4-Nitroaniline	200	ug/kg	1	-	U	Yes
Nitrobenzene	79	ug/kg	1	-	U	Yes
N-Nitroso-di-n-propylamine	79	ug/kg	1	-	U	Yes
Nitrosodiphenylamine	200	ug/kg	1	-	U	Yes
Phenanthrene	40	ug/kg	1	-	U	Yes
Pyrene	40	ug/kg	1	-	U	Yes
1,2,4,5,6-Tetrachlorobenzene	200	ug/kg	1	-	U	Yes

METHOD: 8270D (SIM)

Naphthalene	4.0	ug/L	1	-	U	Yes
1,4-Dioxane	4.0	ug/kg	1	-	U	Yes

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
--------------	--------	-------	-----------------	----------	------------	------------

Sample ID: JC18972-4

Sample location: BMSMC Building 5 Area

Sampling date: 4/21/2016

Matrix: Groundwater

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	5.6	ug/l	1	-	U	Yes
4-Chloro-3-methyl phenol	5.6	ug/l	1	-	U	Yes
2,4-Dichlorophenol	2.2	ug/l	1	-	U	Yes
2,4-Dimethylphenol	5.6	ug/l	1	-	U	Yes
2,4-Dinitrophenol	10	ug/l	1	-	U	Yes
4,6-Dinitro-o-cresol	5.6	ug/l	1	-	U	Yes
2-Methylphenol	2.2	ug/l	1	-	U	Yes
3&4-Methylphenol	2.2	ug/l	1	-	U	Yes
2-Nitrophenol	5.6	ug/l	1	-	U	Yes
4-Nitrophenol	11	ug/l	1	-	UJ	Yes
Pentachlorophenol	5.6	ug/l	1	-	U	Yes
Phenol	2.2	ug/l	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	5.6	ug/l	1	-	U	Yes
2,4,5,6-Trichlorophenol	5.6	ug/l	1	-	U	Yes
2,4,6-Trichlorophenol	5.6	ug/l	1	-	U	Yes
Acenaphthene	1.1	ug/l	1	-	U	Yes
Acenaphthylene	1.1	ug/l	1	-	U	Yes
Acetophenone	2.2	ug/l	1	-	U	Yes
Anthracene	1.1	ug/l	1	-	U	Yes
Atrazine	2.2	ug/l	1	-	U	Yes
Benzaldehyde	5.6	ug/l	1	-	U	Yes
Benzo(a)anthracene	1.1	ug/l	1	-	U	Yes
Benzo(a)pyrene	1.1	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	1.1	ug/l	1	-	U	Yes
Benzo(g,h,i)perylene	1.1	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	1.1	ug/l	1	-	U	Yes
4-Bromophenyl phenyl ether	5.6	ug/l	1	-	U	Yes
Butyl benzyl phthalate	5.6	ug/l	1	-	U	Yes
1,1'-Biphenyl	5.6	ug/l	1	-	U	Yes
2-Chloronaphthalene	5.6	ug/l	1	-	U	Yes
4-Chloroaniline	5.6	ug/l	1	-	U	Yes
Carbazole	1.1	ug/l	1	-	U	Yes
Caprolactam	2.2	ug/l	1	-	U	Yes
Chrysene	1.1	ug/l	1	-	U	Yes
bis(2-Chloroethoxy)methane	2.2	ug/l	1	-	U	Yes
bis(2-Chloroethyl)ether	2.2	ug/l	1	-	U	Yes

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
bis(2-Chloroisopropyl)ether	82	ug/Kg	1	-	U	Yes
4-Chlorophenyl phenyl ether	82	ug/Kg	1	-	U	Yes
2,4-Dinitrotoluene	41	ug/Kg	1	-	U	Yes
2,6-Dinitrotoluene	41	ug/Kg	1	-	U	Yes
3,3'-Dichlorobenzidine	82	ug/Kg	1	-	U	Yes
Dibenzo(a,h)anthracene	41	ug/Kg	1	-	U	Yes
Dibenzofuran	82	ug/Kg	1	-	U	Yes
Di-n-butyl phthalate	82	ug/Kg	1	-	U	Yes
Di-n-octyl phthalate	82	ug/Kg	1	-	U	Yes
Diethyl phthalate	82	ug/Kg	1	-	U	Yes
Dimethyl phthalate	82	ug/Kg	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	82	ug/Kg	1	-	U	Yes
Fluoranthene	41	ug/Kg	1	-	U	Yes
Fluorene	41	ug/Kg	1	-	U	Yes
Hexachlorobenzene	82	ug/Kg	1	-	U	Yes
Hexachlorobutadiene	41	ug/Kg	1	-	UJ	Yes
Hexachlorocyclopentadiene	410	ug/Kg	1	-	U	Yes
Hexachloroethane	200	ug/Kg	1	-	UJ	Yes
Indeno(1,2,3-cd)pyrene	41	ug/Kg	1	-	U	Yes
Isophorone	82	ug/Kg	1	-	U	Yes
1-Methylnaphthalene	82	ug/Kg	1	-	U	Yes
2-Methylnaphthalene	82	ug/Kg	1	-	U	Yes
2-Nitroaniline	200	ug/Kg	1	-	U	Yes
3-Nitroaniline	200	ug/Kg	1	-	UJ	Yes
4-Nitroaniline	200	ug/Kg	1	-	U	Yes
Nitrobenzene	82	ug/Kg	1	-	U	Yes
N-Nitroso-di-n-propylamine	82	ug/Kg	1	-	U	Yes
Nitrosodiphenylamine	200	ug/Kg	1	-	U	Yes
Phenanthrene	41	ug/Kg	1	-	U	Yes
Pyrene	41	ug/Kg	1	-	U	Yes
1,2,4,5,6-Tetrachlorobenzene	200	ug/Kg	1	-	U	Yes

METHOD: 8270D (SIM)

Naphthalene	4.1	ug/Kg	1	-	U	Yes
1,4-Dioxane	4.1	ug/Kg	1	-	U	Yes

DATA REVIEW WORKSHEETS

Project Number: JC18972

Date: April 20-21, 2016

Shipping Date: April 21, 2016

EPA Region: 2

REVIEW OF SEMIVOLATILE ORGANIC PACKAGE

The following guidelines for evaluating volatile organics were created to delineate required validation actions. This document will assist the reviewer in using professional judgment to make more informed decision and in better serving the needs of the data users. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: EPA Hazardous Waste Support Section, SOP HW-35A, July 2015 –Revision 0. *Semivolatiles Data Validation*. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

The hardcopied (laboratory name) Accutest data package received has been reviewed and the quality control and performance data summarized. The data review for SVOCs included:

Lab. Project/SDG No.: JC18972 Sample matrix: Groundwater/Soil

No. of Samples: 4_Full_scan/4_SIM

Trip blank No.: -

Field blank No.: -

Equipment blank No.: -

Field duplicate No.: -

<input checked="" type="checkbox"/> Data Completeness	<input checked="" type="checkbox"/> Laboratory Control Spikes
<input checked="" type="checkbox"/> Holding Times	<input checked="" type="checkbox"/> Field Duplicates
<input checked="" type="checkbox"/> GC/MS Tuning	<input checked="" type="checkbox"/> Calibrations
<input checked="" type="checkbox"/> Internal Standard Performance	<input checked="" type="checkbox"/> Compound Identifications
<input checked="" type="checkbox"/> Blanks	<input checked="" type="checkbox"/> Compound Quantitation
<input checked="" type="checkbox"/> Surrogate Recoveries	<input checked="" type="checkbox"/> Quantitation Limits
<input checked="" type="checkbox"/> Matrix Spike/Matrix Spike Duplicate	

Overall Comments: ABN_TCL_list_by_method_SW846-8270D;_Naphthalene_and_1,4-Dioxane_analyzed_by_method_SW846-8270D_(SIM)

Definition of Qualifiers:

J- Estimated results
 U- Compound not detected
 R- Rejected data
 UJ- Estimated nondetect

Reviewer: Rafael Infante

Date: May 17, 2016

DATA REVIEW WORKSHEETS

DATA COMPLETENESS

MISSING INFORMATION

DATE LAB. CONTACTEDDATE RECEIVEDThis image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There is no handwriting or other markings on the paper.

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met _____
 and/or see below _____

HOLDING TIMES

The objective of this parameter is to ascertain the validity of the results based on the holding time of the sample from time of collection to the time of analysis.

Complete table for all samples and note the analysis and/or preservation not within criteria

SAMPLE ID	DATE SAMPLED	DATE EXTRACTED/ANALYZED	pH	ACTION
All samples extracted and analyzed within method recommended holding time. Sample preservation outside the recommended criteria, no action taken professional judgment.				

Cooler temperature (Criteria: 4 ± 2 °C): 16.2°C

Actions

Results will be qualified based on the criteria of the following Table:

Table 1. Holding Time Actions for Semivolatile Analyses

Matrix	Preserved	Criteria	Action	
			Detected Associated Compounds	Non-Detected Associated Compounds
Aqueous	No	≤ 7 days (for extraction) ≤ 40 days (for analysis)	Use professional judgment	
	No	> 7 days (for extraction) > 40 days (for analysis)	J	Use professional judgment
	Yes	≤ 7 days (for extraction) ≤ 40 days (for analysis)	No qualification	
	Yes	> 7 days (for extraction) > 40 days (for analysis)	J	UJ
	Yes/No	Grossly Exceeded	J	UJ or R
Non-Aqueous	No	≤ 14 days (for extraction) ≤ 40 days (for analysis)	Use professional judgment	
	No	> 14 days (for extraction) > 40 days (for analysis)	J	Use professional judgment
	Yes	≤ 14 days (for extraction) ≤ 40 days (for analysis)	No qualification	
	Yes	> 14 days (for extraction) > 40 days (for analysis)	J	UJ
	Yes/No	Grossly Exceeded	J	UJ or R

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met see below

GC/MS TUNING

The assessment of the tuning results is to determine if the sample instrumentation is within the standard tuning QC limits

 X The DFTPP performance results were reviewed and found to be within the specified criteria.

 X DFTPP tuning was performed for every 12 hours of sample analysis.

If no, use professional judgment to determine whether the associated data should be accepted, qualified or rejected.

Notes: These requirements do not apply when samples are analyzed by the Selected Ion Monitoring (SIM) technique.

All mass spectrometer conditions must be identical to those used during the sample analysis. Background subtraction actions resulting in spectral distortion are unacceptable

Notes: No data should be qualified based of DFTPP failure.

The requirement to analyze the instrument performance check solution is optional when analysis of PAHs/pentachlorophenol is to be performed by the SIM technique.

List	the	samples	affected:
_____			_____
_____			_____
_____			_____
_____			_____

Actions:

1. If sample are analyzed without a preceding valid instrument performance check or are analyzed 12 hours after the Instrument Performance Check, qualify all data in those samples as unusable (R).
2. If ion abundance criteria are not met, use professional judgment to determine to what extent the data may be utilized.
3. State in the Data Review Narrative, decisions to use analytical data associated with DFTPP instrument performance checks not meeting the contract requirements.
4. Use professional judgment to determine if associated data should be qualified based on the spectrum of the mass calibration compounds.

DATA REVIEW WORKSHEETS

All criteria were met ☒ X
 Criteria were not met
 and/or see below _____

INITIAL CALIBRATION VERIFICATION

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data.

Date of initial calibration: _____ 04/21/2016 (SIM) _____ 04/14/2016 (SIM) _____
 Instrument ID numbers: _____ GCMS3M _____ GCMS4M _____
 Matrix/Level: _____ Aqueous/low _____ Aqueous/low _____
 Date of initial calibration: _____ 04/04/16; 04/04-05/16 Scan _____ 04/13-14/16 (Scan) _____
 Instrument ID numbers: _____ GCMSF _____ GCMSZ _____
 Matrix/Level: _____ Aqueous/low _____ Aqueous/low _____

DATE	LAB FILE ID#	CRITERIA OUT RFs, %RSD, %D, r	COMPOUND	SAMPLES AFFECTED

Actions:

Qualify the initial calibration analytes listed in Table 2 using the following criteria:

Table 3. Initial Calibration Actions for Semivolatile Analysis

Criteria	Action	
	Detect	Non-detect
Initial Calibration not performed at specified frequency and sequence	Use professional judgment R	Use professional judgment R
Initial Calibration not performed at the specified concentrations	J	UJ
RRF < Minimum RRF in Table 2 for target analyte	Use professional judgment J+ or R	R
RRF ≥ Minimum RRF in Table 2 for target analyte	No qualification	No qualification
%RSD > Maximum %RSD in Table 2 for target analyte	J	Use professional judgment
%RSD ≤ Maximum %RSD in Table 2 for target analyte	No qualification	No qualification

DATA REVIEW WORKSHEETS

Initial Calibration

Table 2. RRF, %RSD, and %D Acceptance Criteria in Initial Calibration and CCV for Semivolatile Analysis

Analyte	Minimum RRF	Maximum %RSD	Opening Maximum %D ¹	Opening Maximum %D ¹
1,4-Dioxane	0.010	40.0	± 40.0	± 50.0
Benzaldehyde	0.100	40.0	± 40.0	± 50.0
Phenol	0.080	20.0	± 20.0	± 25.0
Bis(2-chloroethyl)ether	0.100	20.0	± 20.0	± 25.0
2-Chlorophenol	0.200	20.0	± 20.0	± 25.0
2-Methylphenol	0.010	20.0	± 20.0	± 25.0
3-Methylphenol	0.010	20.0	± 20.0	± 25.0
2,2'-Oxybis-(1-chloropropane)	0.010	20.0	± 25.0	± 50.0
Acetophenone	0.060	20.0	± 20.0	± 25.0
4-Methylphenol	0.010	20.0	± 20.0	± 25.0
N-Nitroso-di-n-propylamine	0.080	20.0	± 25.0	± 25.0
Hexachloroethane	0.100	20.0	± 20.0	± 25.0
Nitrobenzene	0.090	20.0	± 20.0	± 25.0
Isophorone	0.100	20.0	± 20.0	± 25.0
2-Nitrophenol	0.060	20.0	± 20.0	± 25.0
2,4-Dimethylphenol	0.050	20.0	± 25.0	± 50.0
Bis(2-chloroethoxy)methane	0.080	20.0	± 20.0	± 25.0
2,4-Dichlorophenol	0.060	20.0	± 20.0	± 25.0
Naphthalene	0.200	20.0	± 20.0	± 25.0
4-Chloroaniline	0.010	40.0	± 40.0	± 50.0
Hexachlorobutadiene	0.040	20.0	± 20.0	± 25.0
Caprolactam	0.010	40.0	± 30.0	± 50.0
4-Chloro-3-methylphenol	0.040	20.0	± 20.0	± 25.0
2-Methylnaphthalene	0.100	20.0	± 20.0	± 25.0
Hexachlorocyclopentadiene	0.010	40.0	± 40.0	± 50.0
2,4,6-Trichlorophenol	0.090	20.0	± 20.0	± 25.0
2,4,5-Trichlorophenol	0.100	20.0	± 20.0	± 25.0
1,1'-Biphenyl	0.200	20.0	± 20.0	± 25.0

DATA REVIEW WORKSHEETS

Analyte	Minimum RRF	Maximum %RSD	Opening Maximum %D ¹	Opening Maximum %D ¹
2-Chloronaphthalene	0.300	20.0	± 20.0	± 25.0
2-Nitroaniline	0.060	20.0	± 25.0	± 25.0
Dimethylphthalate	0.300	20.0	± 25.0	± 25.0
2,6-Dinitrotoluene	0.080	20.0	± 20.0	± 25.0
Acenaphthylene	0.400	20.0	± 20.0	± 25.0
3-Nitroaniline	0.010	20.0	± 25.0	± 50.0
Acenaphthene	0.200	20.0	± 20.0	± 25.0
2,4-Dinitrophenol	0.010	40.0	± 50.0	± 50.0
4-Nitrophenol	0.010	40.0	± 40.0	± 50.0
Dibenzofuran	0.300	20.0	± 20.0	± 25.0
2,4-Dinitrotoluene	0.070	20.0	± 20.0	± 25.0
Diethylphthalate	0.300	20.0	± 20.0	± 25.0
1,2,4,5-Tetrachlorobenzene	0.100	20.0	± 20.0	± 25.0
4-Chlorophenyl-phenylether	0.100	20.0	± 20.0	± 25.0
Fluorene	0.200	20.0	± 20.0	± 25.0
4-Nitroaniline	0.010	40.0	± 40.0	± 50.0
4,6-Dinitro-2-methylphenol	0.010	40.0	± 30.0	± 50.0
4-Bromophenyl-phenyl ether	0.070	20.0	± 20.0	± 25.0
N-Nitrosodiphenylamine	0.100	20.0	± 20.0	± 25.0
Hexachlorobenzene	0.050	20.0	± 20.0	± 25.0
Atrazine	0.010	40.0	± 25.0	± 50.0
Pentachlorophenol	0.010	40.0	± 40.0	± 50.0
Phenanthrene	0.200	20.0	± 20.0	± 25.0
Anthracene	0.200	20.0	± 20.0	± 25.0
Carbazole	0.050	20.0	± 20.0	± 25.0
Di-n-butylphthalate	0.500	20.0	± 20.0	± 25.0
Fluoranthene	0.100	20.0	± 20.0	± 25.0
Pyrene	0.400	20.0	± 25.0	± 50.0
Butylbenzylphthalate	0.100	20.0	± 25.0	± 50.0

DATA REVIEW WORKSHEETS

Analyte	Minimum RRF	Maximum %RSD	Opening Maximum %D ¹	Opening Maximum %D ¹
3,3'-Dichlorobenzidine	0.010	40.0	+ 40.0	± 50.0
Benzo(a)anthracene	0.300	20.0	± 20.0	± 25.0
Chrysene	0.200	20.0	± 20.0	± 50.0
Bis(2-ethylhexyl) phthalate	0.200	20.0	± 25.0	± 50.0
Di-n-octylphthalate	0.010	40.0	± 40.0	± 50.0
Benzo(b)fluoranthene	0.010	20.0	± 25.0	± 50.0
Benzo(k)fluoranthene	0.010	20.0	± 25.0	± 50.0
Benzo(a)pyrene	0.010	20.0	+ 20.0	+ 50.0
Indeno(1,2,3-cd)pyrene	0.010	20.0	± 25.0	± 50.0
Dibenzo(a,h)anthracene	0.010	20.0	± 25.0	± 50.0
Benzo(g,h,i)perylene	0.010	20.0	± 30.0	± 50.0
2,3,4,6-Tetrachlorophenol	0.040	20.0	± 20.0	± 50.0
Naphthalene	0.600	20.0	± 25.0	± 25.0
2-Methylnaphthalene	0.300	20.0	± 20.0	± 25.0
Acenaphthylene	0.900	20.0	± 20.0	± 25.0
Acenaphthene	0.500	20.0	+ 20.0	± 25.0
Fluorene	0.700	20.0	± 25.0	± 50.0
Phenanthrene	0.300	20.0	± 25.0	± 50.0
Anthracene	0.400	20.0	± 25.0	± 50.0
Fluoranthene	0.400	20.0	± 25.0	± 50.0
Pyrene	0.500	20.0	± 30.0	± 50.0
Benzo(a)anthracene	0.400	20.0	± 25.0	± 50.0
Chrysene	0.400	20.0	± 25.0	± 50.0
Benzo(b)fluoranthene	0.100	20.0	± 30.0	± 50.0
Benzo(k)fluoranthene	0.100	20.0	± 30.0	± 50.0
Benzo(a)pyrene	0.100	20.0	± 25.0	± 50.0
Indeno(1,2,3-cd)pyrene	0.100	20.0	± 40.0	± 50.0
Dibenzo(a,h)anthracene	0.010	25.0	± 40.0	± 50.0
Benzo(g,h,i)perylene	0.020	25.0	± 40.0	± 50.0

DATA REVIEW WORKSHEETS

Pentachlorophenol	0.010	40.0	± 50.0	± 50.0
Deuterated Monitoring Compounds				
Analyte	Minimum RRF	Maximum %RSD	Opening Maximum %D ¹	Closing Maximum %D
1,4-Dioxane-d ₈	0.010	20.0	± 25.0	± 50.0
Phenol-d ₅	0.010	20.0	± 25.0	± 25.0
Bis-(2-chloroethyl)ether-d ₈	0.100	20.0	± 20.0	± 25.0
2-Chlorophenol-d ₄	0.200	20.0	± 20.0	± 25.0
4-Methylphenol-d ₈	0.010	20.0	± 20.0	± 25.0
4-Chloroaniline-d ₄	0.010	40.0	± 40.0	± 50.0
Nitrobenzene-d ₅	0.050	20.0	± 20.0	± 25.0
2-Nitrophenol-d ₄	0.050	20.0	± 20.0	± 25.0
2,4-Dichlorophenol-d ₃	0.060	20.0	± 20.0	± 25.0
Dimethylphthalate-d ₈	0.300	20.0	± 20.0	± 25.0
Acenaphthylene-d ₈	0.400	20.0	± 20.0	± 25.0
4-Nitrophenol-d ₄	0.010	40.0	± 40.0	± 50.0
Fluorene-d ₁₀	0.100	20.0	± 20.0	± 25.0
4,6-Dinitro-2-methylphenol-d ₂	0.010	40.0	± 30.0	± 50.0
Anthracene-d ₁₀	0.300	20.0	± 20.0	± 25.0
Pyrene-d ₁₀	0.300	20.0	± 25.0	± 50.0
Benzo(a)pyrene-d ₁₂	0.010	20.0	± 20.0	± 50.0
Fluoranthene-d ₁₀ (SIM)	0.400	20.0	± 25.0	± 50.0
2-Methylnaphthalene-d ₁₀ (SIM)	0.300	20.0	± 20.0	± 25.0

¹ If a closing CCV is acting as an opening CCV, all target analytes must meet the requirements for an opening CCV.

Note: If analysis by SIM technique is requested for PAH/pentachlorophenols, calibration standards analyzed at 0.10, 0.20, 0.40, 0.80, and 1.0 ng/uL for each target compound of interest and the associated DMCs. Pentachlorophenol will require only a four point initial calibration at 0.20, 0.40, 0.80, and 1.0 ng/uL.

DATA REVIEW WORKSHEETS

All criteria were met _____
 Criteria were not met _____
 and/or see below X

CONTINUING CALIBRATION VERIFICATION

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data.

Date of initial calibration: 04/04/16; 04/05-06/16 (Scan) 04/13-14/16 (Scan)
 Date of initial calibration verification (CCV): 04/05/16; 04/05-06/16 04/14/16
 Date of continuing calibration verification (CCV): 04/29/16 04/03/16; 05/03/16
 Date of closing CCV: _____
 Instrument ID numbers: GCMSF GCMSZ
 Matrix/Level: Aqueous/low Aqueous/low

Date of initial calibration: 04/21/16 (SIM) 04/14/16
 Date of initial calibration verification (CCV): 04/21/16 04/14/16
 Date of continuing calibration verification (CCV): 05/03/16; 05/04/16 04/26/16
05/06/16; 05/09/16
 Date of closing CCV: _____
 Instrument ID numbers: GCMS3M GCMS4M
 Matrix/Level: Aqueous/low Aqueous/low

DATE	LAB FILE ID#	CRITERIA OUT RFs, %RSD, %D, r	COMPOUND	SAMPLES AFFECTED
See enclosed list				

Note: Initial and continuing calibration verifications meet the required criteria except the cases describe in the list enclosed. Analytes not detected in affected samples, results qualified (UJ).

No closing calibration verification included in data package. No action taken, professional judgment.

* Analytes with % difference in the continue calibration verification outside the method performance criteria but within the validation guidelines criteria, + 40 %. No action taken

Actions:

Notes: Verify that the CCV is run at the required frequency (an opening and closing CCV must be run within 12-hour period).

All DMCs must meet the RRF values given in Table 2. No qualification of the data is necessary on DMCs RRF and %RSD/%D alone. Use professional judgment to

DATA REVIEW WORKSHEETS

evaluate DMCs and %RSD/%D data in conjunction with DMCs recoveries to determine the need for qualification of the data.

Qualify the initial calibration analytes listed in Table 2 using the following criteria in the CCVs:

Table 4. CCV Actions for Semivolatile Analysis

Criteria for Opening CCV	Criteria for Closing CCV	Action	
		Detect	Non-detect
CCV not performed at required frequency and sequence	CCV not performed at required frequency	Use professional judgment R	Use professional judgment R
CCV not performed at specified concentration	CCV not performed at specified concentration	Use professional judgment	Use professional judgment
RRF < Minimum RRF in Table 2 for target analyte	RRF < Minimum RRF in Table 2 for target analyte	Use professional judgment J or R	R
RRF ≥ Minimum RRF in Table 2 for target analyte	RRF ≥ Minimum RRF in Table 2 for target analyte	No qualification	No qualification
%D outside the Opening Maximum %D limits in Table 2 for target analyte	%D outside the Closing Maximum %D limits in Table 2 for target analyte	J	UJ
%D within the inclusive Opening Maximum %D limits in Table 2 for target analyte	%D within the inclusive Closing Maximum %D limits in Table 2 for target analyte	No qualification	No qualification

DATA REVIEW WORKSHEET

CONTINUING CALIBRATION VERIFICATION

INSTRUMENT: GCMSF

DATE: 04/26/16

FILE ID: cc6363-25

Compound	%Dev
n-Nitroso-di-n-propylamine	-29.9#
Nitrobenzene-d5	-21.4#
Nitrobenzene	-25.3#
4-Nitrophenol	-40.9#
2-Nitroaniline	-22.9#

CONTINUING CALIBRATION VERIFICATION

INSTRUMENT: GCMSZ

DATE: 04/28/16

FILE ID: cc1382-25

Compound	%Dev
Hexachloroethane	-24.8#
Hexachlorobutadiene	-37.7#
N-Nitroso-di-n-propylamine	-22.5#
4-Nitroaniline*	21.7#

CONTINUING CALIBRATION VERIFICATION

INSTRUMENT: GCMSZ

DATE: 05/03/16

FILE ID: cc1382-25

Compound	%Dev
Hexachloroethane	-22.6#
Hexachlorobutadiene	-46.9#
3-Nitroaniline	24.6#
4-Nitroaniline*	22.3#

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

BLANK ANALYSIS RESULTS (Sections 1 & 2)

The assessment of the blank analysis results is to determine the existence and magnitude of contamination problems. The criteria for evaluation of blanks apply only to blanks associated with the samples, including trip, equipment, and laboratory blanks. If problems with any blanks exist, all data associated with the case must be carefully evaluated to determine whether or not there is an inherent variability in the data for the case, or if the problem is an isolated occurrence not affecting other data.

List the contamination in the blanks below. High and low levels blanks must be treated separately.

Notes: The concentration of non-target compounds in all blanks must be less than or equal to 10 ug/L.

The concentration of target compounds in all blanks must be less than its CRQL listed in the method.

Samples taken from a drinking water tap do not have an associated field blank.

Laboratory blanks

DATE ANALYZED	LAB ID	LEVEL/ MATRIX	COMPOUND	CONCENTRATION UNITS
_No_target_analytes_detected_in_method_blanks._				

Field/Equipment/Trip blank

DATE ANALYZED	LAB ID	LEVEL/ MATRIX	COMPOUND	CONCENTRATION UNITS
_No_field/trip/equipment_blanks_analyzed_with_this_data_package._				

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

BLANK ANALYSIS RESULTS (Section 3)

Blank Actions

Qualify samples based on the criteria summarized in Table 5:

Table 5. Blank and TCLP/SPLP LEB Actions for Semivolatile Analysis

Blank Type	Blank Result	Sample Result	Action
Method, TCLP/SPLP LEB, Field	Detect	Non-detect	No qualification
	< CRQL	< CRQL	Report at CRQL and qualify as non-detect (U)
		≥ CRQL	Use professional judgment
	≥ CRQL	< CRQL	Report at CRQL and qualify as non-detect (U)
		≥ CRQL but < Blank Result	Report at sample results and qualify as non-detect (U) or as unusable (R)
		≥ CRQL and ≥ Blank Result	Use professional judgment
	Grossly high	Detect	Report at sample results and qualify as unusable (R)
	TIC > 5.0 ug/L (water) or 0.0050 mg/L (TCLP leachate) or TIC > 170 ug/Kg (soil)	Detect	Use professional judgment

List samples qualified

CONTAMINATION SOURCE/LEVEL	COMPOUND	CONC/UNITS	AL/UNITS	SQL	AFFECTED SAMPLES

All criteria were met X
 Criteria were not met
 and/or see below

SURROGATE SPIKE RECOVERIES – DEUTERATED MONITORING COMPOUNDS (DMCs)

Laboratory performance of individual samples is established by evaluation of surrogate spike recoveries – deuterated monitoring compounds. All samples are spiked with surrogate compounds prior to sample analysis. The accuracy of the analysis is measured by the surrogate percent recovery. Since the effects of the sample matrix are frequently outside the control of the laboratory and may present relatively unique problems, the validation of data is frequently subjective and demands analytical experience and professional judgment.

Notes: Recoveries for DMCs in samples and blanks must be within the limits specified in Table 6.

The recovery limits for any of the compounds listed in Table 6 may be expanded at any time during the period of performance if USEPA determines that the limits are too restrictive.

If a DMC is not added in the samples and blanks or the concentrations of DMCs in the samples and blank not the specified, use professional judgment in qualifying the data.

Table 7. DMC Actions for Semivolatile Analysis

Criteria	Action	
	Detect	Non-detect
%R < 10% (excluding DMCs with 10% as a lower acceptance limit)	J-	R
10% ≤ %R (excluding DMCs with 10% as a lower acceptance limit) < Lower Acceptance Limit	J-	UJ
Lower Acceptance limit ≤ %R ≤ Upper Acceptance Limit	No qualification	No qualification
%R > Upper Acceptance Limit	J+	No qualification

List the percent recoveries (%Rs) which do not meet the criteria for DMCs (surrogate) recovery.

Matrix: Groundwater

SAMPLE ID	SURROGATE COMPOUND	ACTION
<u>DMCs meet the required criteria. Non-deuterated surrogates added to the samples</u>		
<u>within laboratory recovery limits.</u>		

Table 8. Semivolatile DMCs and the Associated Target Analytes

1,4-Dioxane-d ₈ (DMC-1)	Phenol-d ₅ (DMC-2)	Bis(2-Chloroethyl) ether-d ₈ (DMC-3)
1,4-Dioxane	Benzaldehyde Phenol	Bis(2-chloroethyl) ether 2,2'-Oxybis(1-chloropropane) Bis(2-chloroethoxy)methane
2-Chlorophenol-d ₄ (DMC-4)	4-Methylphenol-d ₄ (DMC-5)	4-Chloroaniline-d ₄ (DMC-6)
2-Chlorophenol	2-Methylphenol 3-Methylphenol 4-Methylphenol 2,4-Dimethylphenol	4-Chloroaniline Hexachlorocyclopentadiene Dichlorobenzidine
Nitrobenzene-d ₅ (DMC-7)	2-Nitrophenol-d ₄ (DMC-8)	2,4-Dichlorophenol-d ₃ (DMC-9)
Acetophenone N-Nitroso-di-n-propylamine Hexachloroethane Nitrobenzene 2,6-Dinitrotoluene 2,4-Dinitrotoluene N-Nitrosodiphenylamine	Isophorone 2-Nitrophenol	2,4-Dichlorophenol Hexachlorobutadiene Hexachlorocyclopentadiene 4-Chloro-3-methylphenol 2,4,6-Trichlorophenol 2,4,5-Trichlorophenol 1,2,4,5-Tetrachlorobenzene *Pentachlorophenol 2,3,4,6-Tetrachlorophenol
Dimethylphthalate-d ₆ (DMC-10)	Acenaphthylene-d ₈ (DMC-11)	4-Nitrophenol-d ₄ (DMC-12)
Caprolactam 1,1'-Biphenyl Dimethylphthalate Diethylphthalate Di-n-butylphthalate Butylbenzylphthalate Bis(2-ethylhexyl) phthalate Di-n-octylphthalate	*Naphthalene *2-Methylnaphthalene 2-Chloronaphthalene *Acenaphthylene *Acenaphthene	2-Nitroaniline 3-Nitroaniline 2,4-Dinitrophenol 4-Nitrophenol 4-Nitroaniline

DATA REVIEW WORKSHEETS

Fluorene-d₁₀ (DMC-13)	4,6-Dinitro-2-methylphenol-d₁ (DMC-14)	Anthracene-d₁₀ (DMC-15)
Dibenzofuran *Fluorene 4-Chlorophenyl-phenylether 4-Bromophenyl-phenylether Carbazole	4,6-Dinitro-2-methylphenol	Hexachlorobenzene Atrazine *Phenanthrene *Anthracene
Pyrene-d₁₀ (DMC-16)	Benzo(a)pyrene-d₁₂ (DMC-17)	
*Fluoranthene *Pyrene *Benzo(a)anthracene *Chrysene	3,3'-Dichlorobenzidine *Benzo(b)fluoranthene *Benzo(k)fluoranthene *Benzo(a)pyrene *Indeno(1,2,3-cd)pyrene *Dibenzo(a,h)anthracene *Benzo(g,h,i)perylene	

*Included in optional Target Analyte List (TAL) of PAHs and PCP only.

Table 9. Semivolatile SIM DMCs and the Associated Target Analytes

Fluoranthene-d₁₀ (DMC-1)	2-Methylnaphthalene-d₁₀ (DMC-2)
Fluoranthene	Naphthalene
Pyrene	2-Methylnaphthalene
Benzo(a)anthracene	Acenaphthylene
Chrysene	Acenaphthene
Benzo(b)fluoranthene	Fluorene
Benzo(k)fluoranthene	Pentachlorophenol
Benzo(a)pyrene	Phenanthrene
Indeno(1,2,3-cd)pyrene	Anthracene
Dibenzo(a,h)anthracene	
Benzo(g,h,i)perylene	

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

VII. A MATRIX SPIKE/MATRIX SPIKE DUPLICATE (MS/MSD)

This data is generated to determine long term precision and accuracy in the analytical method for various matrices. This data alone cannot be used to evaluate the precision and accuracy of individual samples. If any % R in the MS or MSD falls outside the designated range, the reviewer should determine if there are matrix effects, i.e. LCS data are within the QC limits but MS/MSD data are outside QC limit.

1. MS/MSD Recoveries and Precision Criteria

The laboratory should use one MS and a duplicate analysis of an unspiked field sample if target analytes are expected in the sample. If target analytes are not expected, MS/MSD should be analyzed.

NOTES: Data for MS and MSDs will not be present unless requested by the Region.
 Notify the Contract Laboratory COR if a field or trip blank was used for the MS and MSD.

For a Matrix Spike that does not meet criteria, apply the action to only the field sample used to prepare the Matrix Spike sample. If it is clearly stated in the data validation materials that the samples were taken through incremental sampling or some other method guaranteeing the homogeneity of the sample group, then the entire sample group may be qualified.

List the %Rs, RPD of the compounds which do not meet the criteria.

Sample ID: JC18601-1R Matrix/Level: Soil
 Sample ID: JC18972-1_(SIM) Matrix/Level: Soil

MS OR MSD	COMPOUND	% R	RPD	QC LIMITS	ACTION

Note: No MS/MSD analyzed for the aqueous sample matrix. Blank spike/blank spike duplicate used to assess accuracy. Analytes outside the laboratory control limits are shown on the enclosed list. No action taken

- * QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.
- * If QC limits are not available, use limits of 70 – 130 %.

Actions:

QUALITY	%R < LL	%R > UL
Positive results	J	J
Nondetects results	R	Accept

DATA REVIEW WORKSHEETS

MS/MSD criteria apply only to the unspiked sample, its dilutions, and the associated MS/MSD samples:

If the % R for the affected compounds were < LL (or 70 %), qualify positive results (J) and nondetects (UJ).

If the % R for the affected compounds were > UL (or 130 %), only qualify positive results (J).

If 25 % or more of all MS/MSD %R were < LL (or 70 %) or if two or more MS/MSD %Rs were < 10%, qualify all positive results (J) and reject nondetects (R).

A separate worksheet should be used for each MS/MSD pair.

DATA REVIEW WORKSHEET

BLANK SPIKE/BLANK SPIKE DUPLICATE

SDG: JC18972

Matrix: Aqueous

The QC reported here applies to the following samples: Method: SW846 8270D
JC18972-4

Compound	Spike ug/l	BS ug/l	BS %	BSD ug/l	BSD %	RPD	Limits Rec/RPD
Acenaphthylene	50	50.2	100* a	39.6	79	24	49-99/30
Acetophenone	50	59.6	119* a	48.4	97	21	52-111/30
2-Nitroaniline	50	64.0	128* b	50.7	101	23	51-127/30
N-Nitroso-di-n-propylamine	50	62.1	124* b	48.6	97	24	49-117/30

(a) Outside of control limits, but within reasonable method recovery limits.

(b) High percent recoveries and no associated positive found in the QC batch.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

INTERNAL STANDARD PERFORMANCE

The assessment of the internal standard (IS) parameter is used to assist the data reviewer in determining the condition of the analytical instrumentation.

List the internal standard area of samples which do not meet the criteria.

DATE	SAMPLE ID	IS OUT	IS AREA	ACCEPTABLE RANGE	ACTION
------	-----------	--------	---------	------------------	--------

Internal standard area counts meet the required criteria.

Action:

1. If an internal standard area count for a sample or blank is greater than 200.0% of the area for the associated standard (opening CCV or mid-point standard from initial calibration) (see Table 10 below):
 - a. Qualify detects for compounds quantitated using that internal standard as estimated low (J-).
 - b. Do not qualify non-detected associated compounds.
2. If an internal standard area count for a sample or blank is less than 20.0% of the area for the associated standard (opening CCV or mid-point standard from initial calibration):
 - a. Qualify detects for compounds quantitated using that internal standard as estimated high (J+).
 - b. Qualify non-detected associated compounds as unusable (R).
3. If an internal standard area count for a sample or blank is greater than or equal to 50.0%, and less than or equal to 200% of the area for the associated standard opening CCV or mid-point standard from initial calibration, no qualification of the data is necessary.
4. If an internal standard RT varies by more than 10.0 seconds: Examine the chromatographic profile for that sample to determine if any false positives or negatives exist. For shifts of a large magnitude, the reviewer may consider partial or total rejection of the data for that sample fraction. Detects should not need to be qualified as unusable (R) if the mass spectral criteria are met.
5. If an internal standard RT varies by less than or equal to 10.0 seconds, no qualification of the data is necessary.

Note: Inform the Contract Laboratory Program Project Officer (CLP PO) if the internal standard performance criteria are grossly exceeded. Note in the Data Review Narrative potential effects on the data resulting from unacceptable internal standard performance.

DATA REVIEW WORKSHEETS

State in the Data Review Narrative if the required internal standard compounds are not added to a sample or blank or if the required internal standard compound is not analyzed at the specified concentration.

Actions:

Table 10. Internal Standard Actions for Semivolatile Analysis

Criteria	Action	
	Detect	Non-detect
Area response < 20% of the opening CCV or mid-point standard CS3 from ICAL	J+	R
20% ≤ Area response < 50% of the opening CCV or mid-point standard CS3 from ICAL	J+	UJ
50% ≤ Area response ≤ 200% of the opening CCV or mid-point standard CS3 from ICAL	No qualification	No qualification
Area response > 200% of the opening CCV or mid-point standard CS3 from ICAL	J-	No qualification
RT shift between sample/blank and opening CCV or mid-point standard CS3 from ICAL > 10.0 seconds	R	R
RT shift between sample/blank and opening CCV or mid-point standard CS3 from ICAL < 10.0 seconds	No qualification	No qualification

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

TARGET COMPOUND IDENTIFICATION

Criteria:

Is the Relative Retention Times (RRTs) of reported compounds within ± 0.06 RRT units of the standard RRT [opening Continuing Calibration Verification (CCV) or mid-point standard from the initial calibration]. **Yes? or No?**

List compounds not meeting the criteria described above:

Sample ID	Compounds	Actions
=====	=====	=====
_____	_____	_____
_____	_____	_____
_____	_____	_____

Mass spectra of the sample compound and a current laboratory-generated standard [i.e., the mass spectrum from the associated calibration standard (opening CCV or mid-point standard from initial calibration)] must match according to the following criteria:

- All ions present in the standard mass spectrum at a relative intensity greater than 10% must be present in the sample spectrum.
- The relative intensities of these ions must agree within $\pm 20\%$ between the standard and sample spectra (e.g., for an ion with an abundance of 50% in the standard spectrum, the corresponding sample ion abundance must be between 30-70%).
- Ions present at greater than 10% in the sample mass spectrum, but not present in the standard spectrum, must be evaluated by a reviewer experienced in mass spectral interpretation.

List compounds not meeting the criteria described above:

Sample ID	Compounds	Actions
=====	=====	=====
_____	_____	_____
<u>_Identified_compounds_meet_the_required_criteria_</u>	_____	_____
_____	_____	_____

DATA REVIEW WORKSHEETS

Action:

1. The application of qualitative criteria for GC/MS analysis of target compounds requires professional judgment. It is up to the reviewer's discretion to obtain additional information from the laboratory. If it is determined that incorrect identifications were made, qualify all such data as unusable (R).
2. Use professional judgment to qualify the data if it is determined that cross-contamination has occurred.
3. Note in the Data Review Narrative any changes made to the reported compounds or concerns regarding target compound identifications. Note, for Contract Laboratory COR action, the necessity for numerous or significant changes.

TENTATIVELY IDENTIFIED COMPOUNDS (TICS)

NOTE: Tentatively identified compounds should only be evaluated when requested by a party from outside of the Hazardous Waste Support Section (HWSS).

List TICs

Sample ID	Compound	Sample ID	Compound
=====		=====	
_____		_____	
_____		_____	
_____		_____	
_____		_____	

Action:

1. Qualify all TIC results for which there is presumptive evidence of a match (e.g. greater than or equal to 85% match) as tentatively identified (NJ), with approximated concentrations. TICs labeled "unknown" are qualified as estimated (J).
2. General actions related to the review of TIC results are as follows:
 - a. If it is determined that a tentative identification of a non-target compound is unacceptable, change the tentative identification to "unknown" or another appropriate identification, and qualify the result as estimated (J).
 - b. If all contractually-required peaks were not library searched and quantitated, the Region's designated representative may request these data from the laboratory.
3. In deciding whether a library search result for a TIC represents a reasonable identification, use professional judgment. If there is more than one possible match, report the result as "either compound X or compound Y". If there is a lack of isomer specificity, change the TIC result to a nonspecific isomer result (e.g., 1,3,5-trimethyl benzene to trimethyl benzene isomer) or to a compound class (e.g., 2-methyl, 3-ethyl benzene to a substituted aromatic compound).
4. The reviewer may elect to report all similar compounds as a total (e.g., all alkanes may be summarized and reported as total hydrocarbons).

DATA REVIEW WORKSHEETS

5. Target compounds from other fractions and suspected laboratory contaminants should be marked as "non-reportable".
6. Other Case factors may influence TIC judgments. If a sample TIC match is poor, but other samples have a TIC with a valid library match, similar RRT, and the same ions, infer identification information from the other sample TIC results.
7. Note in the Data Review Narrative any changes made to the reported data or any concerns regarding TIC identifications.
8. Note, for Contract Laboratory COR action, failure to properly evaluate and report TICs

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

SAMPLE QUANTITATION AND REPORTED CONTRACT REQUIRED QUANTITATION LIMITS (CRQLS)

Action:

1. When a sample is analyzed at more than one dilution, the lower CRQL are used unless a QC exceedance dictates the use of higher CRQLs from the diluted sample. Samples reported with an "E" qualifier should be reported from the diluted sample.
2. If any discrepancies are found, the Region's designated representative may contact the laboratory to obtain additional information that could resolve any differences. If a discrepancy remains unresolved, the reviewer must use professional judgment to decide which value is the most accurate. Under these circumstances, the reviewer may determine that qualification of data is warranted. Note in the Data Review Narrative a description of the reasons for data qualification and the qualification that is applied to the data.
3. For non-aqueous samples, if the solids is less than 10.0%, use professional judgment for both detects and non-detects. If the percent solid for a soil sample is greater than or equal to 10.0% and less than 30.0%, use professional judgment to qualify detects and non-detects. If the percent solid for a soil sample is greater than or equal to 30.0%, detects and non-detects should not be qualified (see Table 11).
4. Note, for Contract Laboratory COR action, numerous or significant failures to accurately quantify the target compounds or to properly evaluate and adjust CRQLs.
5. Results between MDL and CRQL should be qualified as estimated "J".
6. Results < MDL should be reported at the CRQL and qualified "U". MDLs themselves should not be reported.

Table 11. Percent Solids Actions for Semivolatile Analysis for Non-Aqueous Samples

Criteria	Action	
	Detects	Non-detects
%Solids < 10.0%	Use professional judgment	Use professional judgment
10.0% ≤ %Solids ≤ 30.0%	Use professional judgment	Use professional judgment
%Solids > 30.0%	No qualification	No qualification

SAMPLE QUANTITATION

The sample quantitation evaluation is to verify laboratory quantitation results. In the space below, please show a minimum of one sample calculation:

Sample ID: Blank_spike Analyte: 2-Chlorophenol RF: 1.485

$$\begin{aligned}
 [] &= (636877)(40)/(457978)(1.485) \\
 &= 37.46 \text{ ppm} \quad \text{Ok}
 \end{aligned}$$

DATA REVIEW WORKSHEETS

QUANTITATION LIMITS

A. Dilution performed

[illegible]

DATA REVIEW WORKSHEETS

All criteria were met N/A
 Criteria were not met
 and/or see below

FIELD DUPLICATE PRECISION

Sample IDs: -

Matrix: -

Field duplicate samples may be taken and analyzed as an indication of overall precision. These analyses measure both field and lab precision; therefore, the results may have more variability than laboratory duplicates which only laboratory performance. It is also expected that soil duplicate results will have a greater variance than water matrices due to difficulties associated with collecting identical field duplicate samples.

The project QAPP should be reviewed for project-specific information.

Suggested criteria: if large RPD (> 50 %) is observed, confirm identification of the samples and note differences. If both samples and duplicate are <5 SQL, the RPD criteria is doubled.

COMPOUND	SQL ug/L	SAMPLE CONC.	DUPLICATE CONC.	RPD	ACTION
No field/laboratory duplicate analyzed as part of this data package. MS/MSD % and blank spike/blank spike duplicate recoveries RPD used to assess precision; RPD within the required criteria < 50 % for detected target analytes.					

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

OTHER ISSUES

A. System Performance

List samples qualified based on the degradation of system performance during sample analysis:

Sample ID	Comments	Actions
=====	=====	=====
_____	_____	_____
_____	_____	_____
_____	_____	_____
_____	_____	_____

Action:

Use professional judgment to qualify the data if it is determined that system performance has degraded during sample analyses. Inform the Contract Laboratory Program COR any action as a result of degradation of system performance which significantly affected the data.

B. Overall Assessment of Data

List samples qualified based on other issues:

Sample ID	Comments	Actions
=====	=====	=====
_____	_____	_____
_____	_____	_____
_____	_____	_____

Action:

1. Use professional judgment to determine if there is any need to qualify data which were not qualified based on the Quality Control (QC) criteria previously discussed.
2. Write a brief narrative to give the user an indication of the analytical limitations of the data. Inform the Contract Laboratory COR the action, any inconsistency of the data with the Sample Delivery Group (SDG) Narrative. If sufficient information on the intended use and required quality of the data is available, the reviewer should include their assessment of the usability of the data within the given context. This may be used as part of a formal Data Quality Assessment (DQA).
3. Sometimes, due to dilutions, re-analysis or SIM/Scan runs are being performed, there will be multiple results for a single analyte from a single sample. The following criteria and professional judgment are used to determine which result should be reported:
 - The analysis with the lower CRQL
 - The analysis with the better QC results
 - The analysis with the higher results