

# CERTIFICATION

SDG No: JC20935 Laboratory: Accutest, New Jersey  
 Site: BMS, Building 5 Area, PR Matrix: Soil/Groundwater  
 Humacao, PR

**SUMMARY:** Groundwater and soil samples (Table 1) were collected on the BMSMC facility – Building 5 Area. The BMSMC facility is located in Humacao, PR. Samples were taken May 20-23, 2016 and were analyzed in Accutest Laboratory of Dayton, New Jersey for the ABN TCL Special List (1,4-Dioxane and Naphthalene were analyzed following the SIM technique); TCL pesticides list; and for low molecular weight alcohols (LMWA) the results were reported under SDG No.: JC20935. Results were validated using the latest validation guidelines (July, 2015) of the EPA Hazardous Waste Support Section. The analyses performed are shown in Table 1. Individual data review worksheets are enclosed for each target analyte group. The data sample organic data samples summary form shows for analytes results that were qualified.

In summary the results are valid and can be used for decision taking purposes.

Table 1. Samples analyzed and analysis performed

| SAMPLE ID | SAMPLE DESCRIPTION | MATRIX               | ANALYSIS PERFORMED                                                                  |
|-----------|--------------------|----------------------|-------------------------------------------------------------------------------------|
| JC20935-1 | SB104-GWD          | Groundwater          | ABN TCL special list; 1,-4-dioxane and Naphthalene (SIM); LMWA                      |
| JC20935-2 | RA4-GWD            | Groundwater          | ABN TCL special list; 1,-4-dioxane and Naphthalene (SIM); Pesticides TCL list; LMWA |
| JC20935-3 | SB104-GWS          | Groundwater          | ABN TCL special list; 1,-4-dioxane and Naphthalene (SIM); LMWA                      |
| JC20935-4 | MW19 (1-2)         | Soil                 | ABN TCL special list; 1,-4-dioxane and Naphthalene (SIM); LMWA                      |
| JC20935-5 | MW19 (5-6)         | Soil                 | ABN TCL special list; 1,-4-dioxane and Naphthalene (SIM); LMWA                      |
| JC20935-6 | BPEB-25            | AQ – Equipment Blank | ABN TCL special list; 1,-4-dioxane and Naphthalene (SIM); Pesticides TCL list; LMWA |

Reviewer Name: Rafael Infante  
 Chemist License 1888

Signature:  
 Date:

*Rafael Infante*  
 June 18, 2016



SGS Accutest

## Report of Analysis

Page 1 of 3

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | SB104-GWD                  | Date Sampled:   | 05/20/16 |
| Lab Sample ID:    | JC20935-1                  | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Ground Water          | Percent Solids: | n/a      |
| Method:           | SW846 8270D SW846 3510C    |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

| Run #  | File ID   | DF | Analyzed | By | Prep Date | Prep Batch | Analytical Batch |
|--------|-----------|----|----------|----|-----------|------------|------------------|
| Run #1 | 6P26389.D | 1  | 05/26/16 | JJ | 05/25/16  | OP94258    | E6P1228          |
| Run #2 |           |    |          |    |           |            |                  |

| Run #  | Initial Volume | Final Volume |
|--------|----------------|--------------|
| Run #1 | 910 ml         | 1.0 ml       |
| Run #2 |                |              |

## AEN TCL Special List

| CAS No.   | Compound                   | Result | RL  | MDL  | Units | Q |
|-----------|----------------------------|--------|-----|------|-------|---|
| 95-57-8   | 2-Chlorophenol             | ND     | 5.5 | 0.90 | ug/l  |   |
| 59-50-7   | 4-Chloro-3-methyl phenol   | ND     | 5.5 | 0.98 | ug/l  |   |
| 120-83-2  | 2,4-Dichlorophenol         | ND     | 2.2 | 1.4  | ug/l  |   |
| 105-67-9  | 2,4-Dimethylphenol         | ND     | 5.5 | 2.7  | ug/l  |   |
| 51-28-5   | 2,4-Dinitrophenol          | ND     | 11  | 1.7  | ug/l  |   |
| 534-52-1  | 4,6-Dinitro-o-cresol       | ND     | 5.5 | 1.4  | ug/l  |   |
| 95-48-7   | 2-Methylphenol             | ND     | 2.2 | 0.98 | ug/l  |   |
|           | 3&4-Methylphenol           | ND     | 2.2 | 0.97 | ug/l  |   |
| 88-75-5   | 2-Nitrophenol              | ND     | 5.5 | 1.1  | ug/l  |   |
| 100-02-7  | 4-Nitrophenol              | ND     | 11  | 1.3  | ug/l  |   |
| 87-86-5   | Pentachlorophenol          | ND     | 5.5 | 1.5  | ug/l  |   |
| 108-95-2  | Phenol                     | ND     | 2.2 | 0.43 | ug/l  |   |
| 58-90-2   | 2,3,4,6-Tetrachlorophenol  | ND     | 5.5 | 1.6  | ug/l  |   |
| 95-95-4   | 2,4,5-Trichlorophenol      | ND     | 5.5 | 1.5  | ug/l  |   |
| 88-06-2   | 2,4,6-Trichlorophenol      | ND     | 5.5 | 1.0  | ug/l  |   |
| 83-32-9   | Acenaphthene               | ND     | 1.1 | 0.21 | ug/l  |   |
| 208-96-8  | Acenaphthylene             | ND     | 1.1 | 0.15 | ug/l  |   |
| 98-86-2   | Acetophenone               | ND     | 2.2 | 0.23 | ug/l  |   |
| 120-12-7  | Anthracene                 | ND     | 1.1 | 0.23 | ug/l  |   |
| 1912-24-9 | Atrazine                   | ND     | 2.2 | 0.49 | ug/l  |   |
| 100-52-7  | Benzaldehyde               | ND     | 5.5 | 0.32 | ug/l  |   |
| 56-55-3   | Benzo(a)anthracene         | ND     | 1.1 | 0.22 | ug/l  |   |
| 50-32-8   | Benzo(a)pyrene             | ND     | 1.1 | 0.23 | ug/l  |   |
| 205-99-2  | Benzo(b)fluoranthene       | ND     | 1.1 | 0.23 | ug/l  |   |
| 191-24-2  | Benzo(g,h,i)perylene       | ND     | 1.1 | 0.37 | ug/l  |   |
| 207-08-9  | Benzo(k)fluoranthene       | ND     | 1.1 | 0.23 | ug/l  |   |
| 101-55-3  | 4-Bromophenyl phenyl ether | ND     | 2.2 | 0.44 | ug/l  |   |
| 85-68-7   | Butyl benzyl phthalate     | ND     | 2.2 | 0.50 | ug/l  |   |
| 92-52-4   | 1,1'-Biphenyl              | ND     | 1.1 | 0.23 | ug/l  |   |
| 91-58-7   | 2-Chloronaphthalene        | ND     | 2.2 | 0.26 | ug/l  |   |
| 106-47-8  | 4-Chloroaniline            | ND     | 5.5 | 0.37 | ug/l  |   |
| 86-74-8   | Carbazole                  | ND     | 1.1 | 0.25 | ug/l  |   |



ND = Not detected      MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound

## Report of Analysis

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | SB104-GWD                  | Date Sampled:   | 05/20/16 |
| Lab Sample ID:    | JC20935-1                  | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Ground Water          | Percent Solids: | n/a      |
| Method:           | SW846 8270D SW846 3510C    |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

## ABN TCL Special List

| CAS No.   | Compound                    | Result | RL  | MDL  | Units | Q |
|-----------|-----------------------------|--------|-----|------|-------|---|
| 105-60-2  | Caprolactam                 | ND     | 2.2 | 0.71 | ug/l  |   |
| 218-01-9  | Chrysene                    | ND     | 1.1 | 0.19 | ug/l  |   |
| 111-91-1  | bis(2-Chloroethoxy)methane  | ND     | 2.2 | 0.31 | ug/l  |   |
| 111-44-4  | bis(2-Chloroethyl)ether     | ND     | 2.2 | 0.27 | ug/l  |   |
| 108-60-1  | bis(2-Chloroisopropyl)ether | ND     | 2.2 | 0.44 | ug/l  |   |
| 7005-72-3 | 4-Chlorophenyl phenyl ether | ND     | 2.2 | 0.40 | ug/l  |   |
| 121-14-2  | 2,4-Dinitrotoluene          | ND     | 1.1 | 0.61 | ug/l  |   |
| 606-20-2  | 2,6-Dinitrotoluene          | ND     | 1.1 | 0.52 | ug/l  |   |
| 91-94-1   | 3,3'-Dichlorobenzidine      | ND     | 2.2 | 0.56 | ug/l  |   |
| 53-70-3   | Dibenzo(a,h)anthracene      | ND     | 1.1 | 0.36 | ug/l  |   |
| 132-64-9  | Dibenzofuran                | ND     | 5.5 | 0.24 | ug/l  |   |
| 84-74-2   | Di-n-butyl phthalate        | ND     | 2.2 | 0.55 | ug/l  |   |
| 117-84-0  | Di-n-octyl phthalate        | ND     | 2.2 | 0.26 | ug/l  |   |
| 84-66-2   | Diethyl phthalate           | ND     | 2.2 | 0.29 | ug/l  |   |
| 131-11-3  | Dimethyl phthalate          | ND     | 2.2 | 0.24 | ug/l  |   |
| 117-81-7  | bis(2-Ethylhexyl)phthalate  | ND     | 2.2 | 1.8  | ug/l  |   |
| 206-44-0  | Fluoranthene                | 0.64   | 1.1 | 0.19 | ug/l  | J |
| 86-73-7   | Fluorene                    | ND     | 1.1 | 0.19 | ug/l  |   |
| 118-74-1  | Hexachlorobenzene           | ND     | 1.1 | 0.36 | ug/l  |   |
| 87-68-3   | Hexachlorobutadiene         | ND     | 1.1 | 0.54 | ug/l  |   |
| 77-47-4   | Hexachlorocyclopentadiene   | ND     | 11  | 3.1  | ug/l  |   |
| 67-72-1   | Hexachloroethane            | ND     | 2.2 | 0.43 | ug/l  |   |
| 193-39-5  | Indeno(1,2,3-cd)pyrene      | ND     | 1.1 | 0.36 | ug/l  |   |
| 78-59-1   | Isophorone                  | ND     | 2.2 | 0.30 | ug/l  |   |
| 90-12-0   | 1-Methylnaphthalene         | ND     | 1.1 | 0.29 | ug/l  |   |
| 91-57-6   | 2-Methylnaphthalene         | ND     | 1.1 | 0.23 | ug/l  |   |
| 88-74-4   | 2-Nitroaniline              | ND     | 5.5 | 0.30 | ug/l  |   |
| 99-09-2   | 3-Nitroaniline              | ND     | 5.5 | 0.43 | ug/l  |   |
| 100-01-6  | 4-Nitroaniline              | ND     | 5.5 | 0.48 | ug/l  |   |
| 98-95-3   | Nitrobenzene                | ND     | 2.2 | 0.71 | ug/l  |   |
| 621-64-7  | N-Nitroso-di-n-propylamine  | ND     | 2.2 | 0.53 | ug/l  |   |
| 86-30-6   | N-Nitrosodiphenylamine      | ND     | 5.5 | 0.24 | ug/l  |   |
| 85-01-8   | Phenanthrene                | ND     | 1.1 | 0.19 | ug/l  |   |
| 129-00-0  | Pyrene                      | ND     | 1.1 | 0.24 | ug/l  |   |
| 95-94-3   | 1,2,4,5-Tetrachlorobenzene  | ND     | 2.2 | 0.41 | ug/l  |   |

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 367-12-4  | 2-Fluorophenol       | 40%    |        | 14-88%  |
| 4165-62-2 | Phenol-d5            | 28%    |        | 10-110% |

ND = Not detected MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound



## Report of Analysis

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | SB104-GWD                  | Date Sampled:   | 05/20/16 |
| Lab Sample ID:    | JC20935-1                  | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Ground Water          | Percent Solids: | n/a      |
| Method:           | SW846 8270D SW846 3510C    |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

## ABN TCL Special List

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 118-79-6  | 2,4,6-Tribromophenol | 68%    |        | 39-149% |
| 4165-60-0 | Nitrobenzene-d5      | 67%    |        | 32-128% |
| 321-60-8  | 2-Fluorobiphenyl     | 70%    |        | 35-119% |
| 1718-51-0 | Terphenyl-d14        | 75%    |        | 10-126% |



ND = Not detected MDL = Method Detection Limit  
RL = Reporting Limit  
E = Indicates value exceeds calibration range

J = Indicates an estimated value  
B = Indicates analyte found in associated method blank  
N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 1

|                          |                                |                        |          |
|--------------------------|--------------------------------|------------------------|----------|
| <b>Client Sample ID:</b> | SB104-GWD                      | <b>Date Sampled:</b>   | 05/20/16 |
| <b>Lab Sample ID:</b>    | JC20935-1                      | <b>Date Received:</b>  | 05/25/16 |
| <b>Matrix:</b>           | AQ - Ground Water              | <b>Percent Solids:</b> | n/a      |
| <b>Method:</b>           | SW846 8270D BY SIM SW846 3510C |                        |          |
| <b>Project:</b>          | BMSMC, Building 5 Area, PR     |                        |          |

|        | File ID   | DF | Analyzed | By | Prep Date | Prep Batch | Analytical Batch |
|--------|-----------|----|----------|----|-----------|------------|------------------|
| Run #1 | 4P16437.D | 1  | 05/26/16 | LK | 05/25/16  | OP94258A   | E4P872           |
| Run #2 |           |    |          |    |           |            |                  |

|        | Initial Volume | Final Volume |
|--------|----------------|--------------|
| Run #1 | 910 ml         | 1.0 ml       |
| Run #2 |                |              |

| CAS No.  | Compound    | Result | RL   | MDL   | Units | Q |
|----------|-------------|--------|------|-------|-------|---|
| 91-20-3  | Naphthalene | ND     | 0.11 | 0.032 | ug/l  |   |
| 123-91-1 | 1,4-Dioxane | 0.518  | 0.11 | 0.054 | ug/l  |   |

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 4165-60-0 | Nitrobenzene-d5      | 82%    |        | 24-125% |
| 321-60-8  | 2-Fluorobiphenyl     | 77%    |        | 19-127% |
| 1718-51-0 | Terphenyl-d14        | 94%    |        | 10-119% |



ND = Not detected      MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 1

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | SB104-GWD                  | Date Sampled:   | 05/20/16 |
| Lab Sample ID:    | JC20935-1                  | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Ground Water          | Percent Solids: | n/a      |
| Method:           | SW846-8015C (DAI)          |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

| Run #  | File ID    | DF | Analyzed | By  | Prep Date | Prep Batch | Analytical Batch |
|--------|------------|----|----------|-----|-----------|------------|------------------|
| Run #1 | GH105233.D | 1  | 05/26/16 | XPL | n/a       | n/a        | GGH5301          |
| Run #2 |            |    |          |     |           |            |                  |

## Low Molecular Alcohol List

| CAS No. | Compound          | Result | RL  | MDL | Units | Q |
|---------|-------------------|--------|-----|-----|-------|---|
| 64-17-5 | Ethanol           | ND     | 100 | 55  | ug/l  |   |
| 78-83-1 | Isobutyl Alcohol  | ND     | 100 | 36  | ug/l  |   |
| 67-63-0 | Isopropyl Alcohol | ND     | 100 | 68  | ug/l  |   |
| 71-23-8 | n-Propyl Alcohol  | ND     | 100 | 43  | ug/l  |   |
| 71-36-3 | n-Butyl Alcohol   | ND     | 100 | 87  | ug/l  |   |
| 78-92-2 | sec-Butyl Alcohol | ND     | 100 | 66  | ug/l  |   |
| 67-56-1 | Methanol          | ND     | 200 | 71  | ug/l  |   |

| CAS No.  | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|----------|----------------------|--------|--------|---------|
| 111-27-3 | Hexanol              | 84%    |        | 56-145% |
| 111-27-3 | Hexanol              | 86%    |        | 56-145% |



ND = Not detected      MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 3

|                          |                            |                        |          |
|--------------------------|----------------------------|------------------------|----------|
| <b>Client Sample ID:</b> | RA4-GWD                    | <b>Date Sampled:</b>   | 05/23/16 |
| <b>Lab Sample ID:</b>    | JC20935-2                  | <b>Date Received:</b>  | 05/25/16 |
| <b>Matrix:</b>           | AQ - Ground Water          | <b>Percent Solids:</b> | n/a      |
| <b>Method:</b>           | SW846 8270D SW846 3510C    |                        |          |
| <b>Project:</b>          | BMSMC, Building 5 Area, PR |                        |          |

| Run #  | File ID   | DF | Analyzed | By | Prep Date | Prep Batch | Analytical Batch |
|--------|-----------|----|----------|----|-----------|------------|------------------|
| Run #1 | 6P26390.D | 1  | 05/26/16 | JJ | 05/25/16  | OP94258    | E6P1228          |
| Run #2 |           |    |          |    |           |            |                  |

| Run #  | Initial Volume | Final Volume |
|--------|----------------|--------------|
| Run #1 | 900 ml         | 1.0 ml       |
| Run #2 |                |              |

## ABN TCL Special List

| CAS No.   | Compound                   | Result | RL  | MDL  | Units | Q |
|-----------|----------------------------|--------|-----|------|-------|---|
| 95-57-8   | 2-Chlorophenol             | ND     | 5.6 | 0.91 | ug/l  |   |
| 59-50-7   | 4-Chloro-3-methyl phenol   | ND     | 5.6 | 0.99 | ug/l  |   |
| 120-83-2  | 2,4-Dichlorophenol         | ND     | 2.2 | 1.4  | ug/l  |   |
| 105-67-9  | 2,4-Dimethylphenol         | ND     | 5.6 | 2.7  | ug/l  |   |
| 51-28-5   | 2,4-Dinitrophenol          | ND     | 11  | 1.7  | ug/l  |   |
| 534-52-1  | 4,6-Dinitro-o-cresol       | ND     | 5.6 | 1.4  | ug/l  |   |
| 95-48-7   | 2-Methylphenol             | ND     | 2.2 | 0.99 | ug/l  |   |
|           | 3&4-Methylphenol           | ND     | 2.2 | 0.98 | ug/l  |   |
| 88-75-5   | 2-Nitrophenol              | ND     | 5.6 | 1.1  | ug/l  |   |
| 100-02-7  | 4-Nitrophenol              | ND     | 11  | 1.3  | ug/l  |   |
| 87-86-5   | Pentachlorophenol          | ND     | 5.6 | 1.5  | ug/l  |   |
| 108-95-2  | Phenol                     | ND     | 2.2 | 0.44 | ug/l  |   |
| 58-90-2   | 2,3,4,6-Tetrachlorophenol  | ND     | 5.6 | 1.6  | ug/l  |   |
| 95-95-4   | 2,4,5-Trichlorophenol      | ND     | 5.6 | 1.5  | ug/l  |   |
| 88-06-2   | 2,4,6-Trichlorophenol      | ND     | 5.6 | 1.0  | ug/l  |   |
| 83-32-9   | Acenaphthene               | ND     | 1.1 | 0.21 | ug/l  |   |
| 208-96-8  | Acenaphthylene             | ND     | 1.1 | 0.15 | ug/l  |   |
| 98-86-2   | Acetophenone               | ND     | 2.2 | 0.23 | ug/l  |   |
| 120-12-7  | Anthracene                 | ND     | 1.1 | 0.23 | ug/l  |   |
| 1912-24-9 | Atrazine                   | ND     | 2.2 | 0.50 | ug/l  |   |
| 100-52-7  | Benzaldehyde               | ND     | 5.6 | 0.32 | ug/l  |   |
| 56-55-3   | Benzo(a)anthracene         | ND     | 1.1 | 0.23 | ug/l  |   |
| 50-32-8   | Benzo(a)pyrene             | ND     | 1.1 | 0.24 | ug/l  |   |
| 205-99-2  | Benzo(b)fluoranthene       | ND     | 1.1 | 0.23 | ug/l  |   |
| 191-24-2  | Benzo(g,h,i)perylene       | ND     | 1.1 | 0.38 | ug/l  |   |
| 207-08-9  | Benzo(k)fluoranthene       | ND     | 1.1 | 0.23 | ug/l  |   |
| 101-55-3  | 4-Bromophenyl phenyl ether | ND     | 2.2 | 0.45 | ug/l  |   |
| 85-68-7   | Butyl benzyl phthalate     | ND     | 2.2 | 0.51 | ug/l  |   |
| 92-52-4   | 1,1'-Biphenyl              | ND     | 1.1 | 0.24 | ug/l  |   |
| 91-58-7   | 2-Chloronaphthalene        | ND     | 2.2 | 0.26 | ug/l  |   |
| 106-47-8  | 4-Chloroaniline            | ND     | 5.6 | 0.38 | ug/l  |   |
| 86-74-8   | Carbazole                  | ND     | 1.1 | 0.25 | ug/l  |   |

ND = Not detected MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound



## Report of Analysis

Client Sample ID: RA4-GWD  
 Lab Sample ID: JC20935-2  
 Matrix: AQ - Ground Water  
 Method: SW846 8270D SW846 3510C  
 Project: BMSMC, Building 5 Area, PR

Date Sampled: 05/23/16  
 Date Received: 05/25/16  
 Percent Solids: n/a

## ABN TCL Special List

| CAS No.   | Compound                    | Result | RL  | MDL  | Units | Q |
|-----------|-----------------------------|--------|-----|------|-------|---|
| 105-60-2  | Caprolactam                 | ND     | 2.2 | 0.72 | ug/l  |   |
| 218-01-9  | Chrysene                    | ND     | 1.1 | 0.20 | ug/l  |   |
| 111-91-1  | bis(2-Chloroethoxy)methane  | ND     | 2.2 | 0.31 | ug/l  |   |
| 111-44-4  | bis(2-Chloroethyl)ether     | ND     | 2.2 | 0.28 | ug/l  |   |
| 108-60-1  | bis(2-Chloroisopropyl)ether | ND     | 2.2 | 0.45 | ug/l  |   |
| 7005-72-3 | 4-Chlorophenyl phenyl ether | ND     | 2.2 | 0.41 | ug/l  |   |
| 121-14-2  | 2,4-Dinitrotoluene          | ND     | 1.1 | 0.61 | ug/l  |   |
| 606-20-2  | 2,6-Dinitrotoluene          | ND     | 1.1 | 0.53 | ug/l  |   |
| 91-94-1   | 3,3'-Dichlorobenzidine      | ND     | 2.2 | 0.56 | ug/l  |   |
| 53-70-3   | Dibenzo(a,h)anthracene      | ND     | 1.1 | 0.37 | ug/l  |   |
| 132-64-9  | Dibenzofuran                | ND     | 5.6 | 0.24 | ug/l  |   |
| 84-74-2   | Di-n-butyl phthalate        | ND     | 2.2 | 0.55 | ug/l  |   |
| 117-84-0  | Di-n-octyl phthalate        | ND     | 2.2 | 0.26 | ug/l  |   |
| 84-66-2   | Diethyl phthalate           | ND     | 2.2 | 0.29 | ug/l  |   |
| 131-11-3  | Dimethyl phthalate          | ND     | 2.2 | 0.24 | ug/l  |   |
| 117-81-7  | bis(2-Ethylhexyl)phthalate  | ND     | 2.2 | 1.8  | ug/l  |   |
| 206-44-0  | Fluoranthene                | ND     | 1.1 | 0.19 | ug/l  |   |
| 86-73-7   | Fluorene                    | ND     | 1.1 | 0.19 | ug/l  |   |
| 118-74-1  | Hexachlorobenzene           | ND     | 1.1 | 0.36 | ug/l  |   |
| 87-68-3   | Hexachlorobutadiene         | ND     | 1.1 | 0.55 | ug/l  |   |
| 77-47-4   | Hexachlorocyclopentadiene   | ND     | 11  | 3.1  | ug/l  |   |
| 67-72-1   | Hexachloroethane            | ND     | 2.2 | 0.43 | ug/l  |   |
| 193-39-5  | Indeno(1,2,3-cd)pyrene      | ND     | 1.1 | 0.37 | ug/l  |   |
| 78-59-1   | Isophorone                  | ND     | 2.2 | 0.31 | ug/l  |   |
| 90-12-0   | 1-Methylnaphthalene         | ND     | 1.1 | 0.29 | ug/l  |   |
| 91-57-6   | 2-Methylnaphthalene         | ND     | 1.1 | 0.23 | ug/l  |   |
| 88-74-4   | 2-Nitroaniline              | ND     | 5.6 | 0.31 | ug/l  |   |
| 99-09-2   | 3-Nitroaniline              | ND     | 5.6 | 0.43 | ug/l  |   |
| 100-01-6  | 4-Nitroaniline              | ND     | 5.6 | 0.49 | ug/l  |   |
| 98-95-3   | Nitrobenzene                | ND     | 2.2 | 0.71 | ug/l  |   |
| 621-64-7  | N-Nitroso-di-n-propylamine  | ND     | 2.2 | 0.53 | ug/l  |   |
| 86-30-6   | N-Nitrosodiphenylamine      | ND     | 5.6 | 0.25 | ug/l  |   |
| 85-01-8   | Phenanthrene                | ND     | 1.1 | 0.19 | ug/l  |   |
| 129-00-0  | Pyrene                      | ND     | 1.1 | 0.24 | ug/l  |   |
| 95-94-3   | 1,2,4,5-Tetrachlorobenzene  | ND     | 2.2 | 0.41 | ug/l  |   |

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 367-12-4  | 2-Fluorophenol       | 30%    |        | 14-88%  |
| 4165-62-2 | Phenol-d5            | 22%    |        | 10-110% |

ND = Not detected MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound





## Report of Analysis

Client Sample ID: RA4-GWD  
Lab Sample ID: JC20935-2  
Matrix: AQ - Ground Water  
Method: SW846 8270D SW846 3510C  
Project: BSMC, Building 5 Area, PR

Date Sampled: 05/23/16  
Date Received: 05/25/16  
Percent Solids: n/a

## ABN TCL Special List

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 118-79-6  | 2,4,6-Tribromophenol | 56%    |        | 39-149% |
| 4165-60-0 | Nitrobenzene-d5      | 52%    |        | 32-128% |
| 321-60-8  | 2-Fluorobiphenyl     | 53%    |        | 35-119% |
| 1718-51-0 | Terphenyl-d14        | 63%    |        | 10-126% |



ND = Not detected MDL = Method Detection Limit  
RL = Reporting Limit  
E = Indicates value exceeds calibration range

J = Indicates an estimated value  
B = Indicates analyte found in associated method blank  
N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 1

|                   |                                |                 |          |
|-------------------|--------------------------------|-----------------|----------|
| Client Sample ID: | RA4-GWD                        | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-2                      | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Ground Water              | Percent Solids: | n/a      |
| Method:           | SW846 8270D BY SIM SW846 3510C |                 |          |
| Project:          | BMSMC, Building 5 Area, PR     |                 |          |

| Run #  | File ID   | DF | Analyzed | By | Prep Date | Prep Batch | Analytical Batch |
|--------|-----------|----|----------|----|-----------|------------|------------------|
| Run #1 | 4P16438.D | 1  | 05/26/16 | LK | 05/25/16  | OP94258A   | E4P872           |
| Run #2 |           |    |          |    |           |            |                  |

| Run #  | Initial Volume | Final Volume |
|--------|----------------|--------------|
| Run #1 | 900 ml         | 1.0 ml       |
| Run #2 |                |              |

| CAS No.  | Compound    | Result | RL   | MDL   | Units | Q |
|----------|-------------|--------|------|-------|-------|---|
| 91-20-3  | Naphthalene | ND     | 0.11 | 0.033 | ug/l  |   |
| 123-91-1 | 1,4-Dioxane | 3.26   | 0.11 | 0.054 | ug/l  |   |

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 4165-60-0 | Nitrobenzene-d5      | 70%    |        | 24-125% |
| 321-60-8  | 2-Fluorobiphenyl     | 61%    |        | 19-127% |
| 1718-51-0 | Terphenyl-d14        | 79%    |        | 10-119% |



ND = Not detected      MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 1

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | RA4-GWD                    | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-2                  | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Ground Water          | Percent Solids: | n/a      |
| Method:           | SW846-8015C (DAI)          |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

| Run #  | File ID    | DF | Analyzed | By  | Prep Date | Prep Batch | Analytical Batch |
|--------|------------|----|----------|-----|-----------|------------|------------------|
| Run #1 | GH105230.D | 1  | 05/26/16 | XPL | n/a       | n/a        | GGH5301          |
| Run #2 |            |    |          |     |           |            |                  |

## Low Molecular Alcohol List

| CAS No. | Compound          | Result | RL  | MDL | Units | Q |
|---------|-------------------|--------|-----|-----|-------|---|
| 64-17-5 | Ethanol           | ND     | 100 | 55  | ug/l  |   |
| 78-83-1 | Isobutyl Alcohol  | ND     | 100 | 36  | ug/l  |   |
| 67-63-0 | Isopropyl Alcohol | ND     | 100 | 68  | ug/l  |   |
| 71-23-8 | n-Propyl Alcohol  | ND     | 100 | 43  | ug/l  |   |
| 71-36-3 | n-Butyl Alcohol   | ND     | 100 | 87  | ug/l  |   |
| 78-92-2 | sec-Butyl Alcohol | ND     | 100 | 66  | ug/l  |   |
| 67-56-1 | Methanol          | ND     | 200 | 71  | ug/l  |   |

| CAS No.  | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|----------|----------------------|--------|--------|---------|
| 111-27-3 | Hexanol              | 92%    |        | 56-145% |
| 111-27-3 | Hexanol              | 98%    |        | 56-145% |



ND = Not detected      MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 1

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | RA4-GWD                    | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-2                  | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Ground Water          | Percent Solids: | n/a      |
| Method:           | SW846 8081B SW846 3510C    |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

| Run #  | File ID    | DF | Analyzed | By | Prep Date | Prep Batch | Analytical Batch |
|--------|------------|----|----------|----|-----------|------------|------------------|
| Run #1 | 1G123572.D | 1  | 05/26/16 | DS | 05/25/16  | OP94259    | G1G3998          |
| Run #2 |            |    |          |    |           |            |                  |

| Run #  | Initial Volume | Final Volume |
|--------|----------------|--------------|
| Run #1 | 900 ml         | 10.0 ml      |
| Run #2 |                |              |

## Pesticide TCL List

| CAS No.    | Compound            | Result | RL    | MDL    | Units | Q |
|------------|---------------------|--------|-------|--------|-------|---|
| 309-00-2   | Aldrin              | ND     | 0.011 | 0.0067 | ug/l  |   |
| 319-84-6   | alpha-BHC           | ND     | 0.011 | 0.0067 | ug/l  |   |
| 319-85-7   | beta-BHC            | ND     | 0.011 | 0.0063 | ug/l  |   |
| 319-86-8   | delta-BHC           | ND     | 0.011 | 0.0051 | ug/l  |   |
| 58-89-9    | gamma-BHC (Lindane) | ND     | 0.011 | 0.0031 | ug/l  |   |
| 5103-71-9  | alpha-Chlordane     | ND     | 0.011 | 0.0051 | ug/l  |   |
| 5103-74-2  | gamma-Chlordane     | ND     | 0.011 | 0.0051 | ug/l  |   |
| 60-57-1    | Dieldrin            | ND     | 0.011 | 0.0040 | ug/l  |   |
| 72-54-8    | 4,4'-DDD            | ND     | 0.011 | 0.0042 | ug/l  |   |
| 72-55-9    | 4,4'-DDE            | ND     | 0.011 | 0.0068 | ug/l  |   |
| 50-29-3    | 4,4'-DDT            | ND     | 0.011 | 0.0055 | ug/l  |   |
| 72-20-8    | Endrin              | ND     | 0.011 | 0.0056 | ug/l  |   |
| 1031-07-8  | Endosulfan sulfate  | ND     | 0.011 | 0.0058 | ug/l  |   |
| 7421-93-4  | Endrin aldehyde     | ND     | 0.011 | 0.0057 | ug/l  |   |
| 53494-70-5 | Endrin ketone       | ND     | 0.011 | 0.0056 | ug/l  |   |
| 959-98-8   | Endosulfan-I        | ND     | 0.011 | 0.0055 | ug/l  |   |
| 33213-65-9 | Endosulfan-II       | ND     | 0.011 | 0.0048 | ug/l  |   |
| 76-44-8    | Heptachlor          | ND     | 0.011 | 0.0042 | ug/l  |   |
| 1024-57-3  | Heptachlor epoxide  | ND     | 0.011 | 0.0073 | ug/l  |   |
| 72-43-5    | Methoxychlor        | ND     | 0.022 | 0.0063 | ug/l  |   |
| 8001-35-2  | Toxaphene           | ND     | 0.28  | 0.20   | ug/l  |   |

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 877-09-8  | Tetrachloro-m-xylene | 78%    |        | 26-132% |
| 877-09-8  | Tetrachloro-m-xylene | 79%    |        | 26-132% |
| 2051-24-3 | Decachlorobiphenyl   | 39%    |        | 10-118% |
| 2051-24-3 | Decachlorobiphenyl   | 43%    |        | 10-118% |



ND = Not detected      MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 3

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | SB104-GWS                  | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-3                  | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Ground Water          | Percent Solids: | n/a      |
| Method:           | SW846 8270D SW846 3510C    |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

| Run #  | File ID   | DF | Analyzed | By | Prep Date | Prep Batch | Analytical Batch |
|--------|-----------|----|----------|----|-----------|------------|------------------|
| Run #1 | 6P26391.D | 1  | 05/26/16 | JJ | 05/25/16  | OP94258    | E6P1228          |
| Run #2 |           |    |          |    |           |            |                  |

| Run #  | Initial Volume | Final Volume |
|--------|----------------|--------------|
| Run #1 | 900 ml         | 1.0 ml       |
| Run #2 |                |              |

## ABN TCL Special List

| CAS No.   | Compound                   | Result | RL  | MDL  | Units | Q |
|-----------|----------------------------|--------|-----|------|-------|---|
| 95-57-8   | 2-Chlorophenol             | ND     | 5.6 | 0.91 | ug/l  |   |
| 59-50-7   | 4-Chloro-3-methyl phenol   | ND     | 5.6 | 0.99 | ug/l  |   |
| 120-83-2  | 2,4-Dichlorophenol         | ND     | 2.2 | 1.4  | ug/l  |   |
| 105-67-9  | 2,4-Dimethylphenol         | ND     | 5.6 | 2.7  | ug/l  |   |
| 51-28-5   | 2,4-Dinitrophenol          | ND     | 11  | 1.7  | ug/l  |   |
| 534-52-1  | 4,6-Dinitro-o-cresol       | ND     | 5.6 | 1.4  | ug/l  |   |
| 95-48-7   | 2-Methylphenol             | ND     | 2.2 | 0.99 | ug/l  |   |
|           | 3&4-Methylphenol           | ND     | 2.2 | 0.98 | ug/l  |   |
| 88-75-5   | 2-Nitrophenol              | ND     | 5.6 | 1.1  | ug/l  |   |
| 100-02-7  | 4-Nitrophenol              | ND     | 11  | 1.3  | ug/l  |   |
| 87-86-5   | Pentachlorophenol          | ND     | 5.6 | 1.5  | ug/l  |   |
| 108-95-2  | Phenol                     | ND     | 2.2 | 0.44 | ug/l  |   |
| 58-90-2   | 2,3,4,6-Tetrachlorophenol  | ND     | 5.6 | 1.6  | ug/l  |   |
| 95-95-4   | 2,4,5-Trichlorophenol      | ND     | 5.6 | 1.5  | ug/l  |   |
| 88-06-2   | 2,4,6-Trichlorophenol      | ND     | 5.6 | 1.0  | ug/l  |   |
| 83-32-9   | Acenaphthene               | ND     | 1.1 | 0.21 | ug/l  |   |
| 208-96-8  | Acenaphthylene             | ND     | 1.1 | 0.15 | ug/l  |   |
| 98-86-2   | Acetophenone               | ND     | 2.2 | 0.23 | ug/l  |   |
| 120-12-7  | Anthracene                 | ND     | 1.1 | 0.23 | ug/l  |   |
| 1912-24-9 | Atrazine                   | ND     | 2.2 | 0.50 | ug/l  |   |
| 100-52-7  | Benzaldehyde               | ND     | 5.6 | 0.32 | ug/l  |   |
| 56-55-3   | Benzo(a)anthracene         | 0.58   | 1.1 | 0.23 | ug/l  | J |
| 50-32-8   | Benzo(a)pyrene             | ND     | 1.1 | 0.24 | ug/l  |   |
| 205-99-2  | Benzo(b)fluoranthene       | ND     | 1.1 | 0.23 | ug/l  |   |
| 191-24-2  | Benzo(g,h,i)perylene       | ND     | 1.1 | 0.38 | ug/l  |   |
| 207-08-9  | Benzo(k)fluoranthene       | ND     | 1.1 | 0.23 | ug/l  |   |
| 101-55-3  | 4-Bromophenyl phenyl ether | ND     | 2.2 | 0.45 | ug/l  |   |
| 85-68-7   | Butyl benzyl phthalate     | ND     | 2.2 | 0.51 | ug/l  |   |
| 92-52-4   | 1,1'-Biphenyl              | ND     | 1.1 | 0.24 | ug/l  |   |
| 91-58-7   | 2-Chloronaphthalene        | ND     | 2.2 | 0.26 | ug/l  |   |
| 106-47-8  | 4-Chloroaniline            | ND     | 5.6 | 0.38 | ug/l  |   |
| 86-74-8   | Carbazole                  | ND     | 1.1 | 0.25 | ug/l  |   |

ND = Not detected      MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound



## Report of Analysis

Client Sample ID: SB104-GWS  
 Lab Sample ID: JC20935-3  
 Matrix: AQ - Ground Water  
 Method: SW846 8270D SW846 3510C  
 Project: BSMC, Building 5 Area, PR

Date Sampled: 05/23/16  
 Date Received: 05/25/16  
 Percent Solids: n/a

4.3  
4

## ABN TCL Special List

| CAS No.   | Compound                    | Result | RL  | MDL  | Units | Q |
|-----------|-----------------------------|--------|-----|------|-------|---|
| 105-60-2  | Caprolactam                 | ND     | 2.2 | 0.72 | ug/l  |   |
| 218-01-9  | Chrysene                    | ND     | 1.1 | 0.20 | ug/l  |   |
| 111-91-1  | bis(2-Chloroethoxy)methane  | ND     | 2.2 | 0.31 | ug/l  |   |
| 111-44-4  | bis(2-Chloroethyl)ether     | ND     | 2.2 | 0.28 | ug/l  |   |
| 108-60-1  | bis(2-Chloroisopropyl)ether | ND     | 2.2 | 0.45 | ug/l  |   |
| 7005-72-3 | 4-Chlorophenyl phenyl ether | ND     | 2.2 | 0.41 | ug/l  |   |
| 121-14-2  | 2,4-Dinitrotoluene          | ND     | 1.1 | 0.61 | ug/l  |   |
| 606-20-2  | 2,6-Dinitrotoluene          | ND     | 1.1 | 0.53 | ug/l  |   |
| 91-94-1   | 3,3'-Dichlorobenzidine      | ND     | 2.2 | 0.56 | ug/l  |   |
| 53-70-3   | Dibenzo(a,h)anthracene      | ND     | 1.1 | 0.37 | ug/l  |   |
| 132-64-9  | Dibenzofuran                | ND     | 5.6 | 0.24 | ug/l  |   |
| 84-74-2   | Di-n-butyl phthalate        | ND     | 2.2 | 0.55 | ug/l  |   |
| 117-84-0  | Di-n-octyl phthalate        | ND     | 2.2 | 0.26 | ug/l  |   |
| 84-66-2   | Diethyl phthalate           | ND     | 2.2 | 0.29 | ug/l  |   |
| 131-11-3  | Dimethyl phthalate          | ND     | 2.2 | 0.24 | ug/l  |   |
| 117-81-7  | bis(2-Ethylhexyl)phthalate  | ND     | 2.2 | 1.8  | ug/l  |   |
| 206-44-0  | Fluoranthene                | 5.7    | 1.1 | 0.19 | ug/l  |   |
| 86-73-7   | Fluorene                    | ND     | 1.1 | 0.19 | ug/l  |   |
| 118-74-1  | Hexachlorobenzene           | ND     | 1.1 | 0.36 | ug/l  |   |
| 87-68-3   | Hexachlorobutadiene         | ND     | 1.1 | 0.55 | ug/l  |   |
| 77-47-4   | Hexachlorocyclopentadiene   | ND     | 11  | 3.1  | ug/l  |   |
| 67-72-1   | Hexachloroethane            | ND     | 2.2 | 0.43 | ug/l  |   |
| 193-39-5  | Indeno(1,2,3-cd)pyrene      | ND     | 1.1 | 0.37 | ug/l  |   |
| 78-59-1   | Isophorone                  | ND     | 2.2 | 0.31 | ug/l  |   |
| 90-12-0   | 1-Methylnaphthalene         | ND     | 1.1 | 0.29 | ug/l  |   |
| 91-57-6   | 2-Methylnaphthalene         | ND     | 1.1 | 0.23 | ug/l  |   |
| 88-74-4   | 2-Nitroaniline              | ND     | 5.6 | 0.31 | ug/l  |   |
| 99-09-2   | 3-Nitroaniline              | ND     | 5.6 | 0.43 | ug/l  |   |
| 100-01-6  | 4-Nitroaniline              | ND     | 5.6 | 0.49 | ug/l  |   |
| 98-95-3   | Nitrobenzene                | ND     | 2.2 | 0.71 | ug/l  |   |
| 621-64-7  | N-Nitroso-di-n-propylamine  | ND     | 2.2 | 0.53 | ug/l  |   |
| 86-30-6   | N-Nitrosodiphenylamine      | ND     | 5.6 | 0.25 | ug/l  |   |
| 85-01-8   | Phenanthrene                | ND     | 1.1 | 0.19 | ug/l  |   |
| 129-00-0  | Pyrene                      | 3.0    | 1.1 | 0.24 | ug/l  |   |
| 95-94-3   | 1,2,4,5-Tetrachlorobenzene  | ND     | 2.2 | 0.41 | ug/l  |   |

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 367-12-4  | 2-Fluorophenol       | 45%    |        | 14-88%  |
| 4165-62-2 | Phenol-d5            | 32%    |        | 10-110% |



ND = Not detected MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound

## Report of Analysis

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | SB104-GWS                  | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-3                  | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Ground Water          | Percent Solids: | n/a      |
| Method:           | SW846 8270D SW846 3510C    |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

## ABN TCL Special List

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 118-79-6  | 2,4,6-Tribromophenol | 78%    |        | 39-149% |
| 4165-60-0 | Nitrobenzene-d5      | 72%    |        | 32-128% |
| 321-60-8  | 2-Fluorobiphenyl     | 82%    |        | 35-119% |
| 1718-51-0 | Terphenyl-d14        | 88%    |        | 10-126% |



ND = Not detected MDL = Method Detection Limit  
RL = Reporting Limit  
E = Indicates value exceeds calibration range

J = Indicates an estimated value  
B = Indicates analyte found in associated method blank  
N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 1

|                   |                                |                 |          |
|-------------------|--------------------------------|-----------------|----------|
| Client Sample ID: | SB104-GWS                      | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-3                      | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Ground Water              | Percent Solids: | n/a      |
| Method:           | SW846 8270D BY SIM SW846 3510C |                 |          |
| Project:          | BMSMC, Building 5 Area, PR     |                 |          |

| Run #  | File ID   | DF | Analyzed | By | Prep Date | Prep Batch | Analytical Batch |
|--------|-----------|----|----------|----|-----------|------------|------------------|
| Run #1 | 4P16439.D | 1  | 05/26/16 | LK | 05/25/16  | OP94258A   | E4P872           |
| Run #2 |           |    |          |    |           |            |                  |

| Run #  | Initial Volume | Final Volume |
|--------|----------------|--------------|
| Run #1 | 900 ml         | 1.0 ml       |
| Run #2 |                |              |

| CAS No.  | Compound    | Result | RL   | MDL   | Units | Q |
|----------|-------------|--------|------|-------|-------|---|
| 91-20-3  | Naphthalene | ND     | 0.11 | 0.033 | ug/l  |   |
| 123-91-1 | 1,4-Dioxane | 0.243  | 0.11 | 0.054 | ug/l  |   |

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 4165-60-0 | Nitrobenzene-d5      | 88%    |        | 24-125% |
| 321-60-8  | 2-Fluorobiphenyl     | 77%    |        | 19-127% |
| 1718-51-0 | Terphenyl-d14        | 103%   |        | 10-119% |



ND = Not detected    MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound



SGS Accutest

## Report of Analysis

Page 1 of 1

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | SB104-GWS                  | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-3                  | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Ground Water          | Percent Solids: | n/a      |
| Method:           | SW846-8015C (DAI)          |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

| Run #  | File ID    | DF | Analyzed | By  | Prep Date | Prep Batch | Analytical Batch |
|--------|------------|----|----------|-----|-----------|------------|------------------|
| Run #1 | GH105226.D | 1  | 05/26/16 | XPL | n/a       | n/a        | GGH5301          |
| Run #2 |            |    |          |     |           |            |                  |

## Low Molecular Alcohol List

| CAS No. | Compound          | Result | RL  | MDL | Units | Q |
|---------|-------------------|--------|-----|-----|-------|---|
| 64-17-5 | Ethanol           | ND     | 100 | 55  | ug/l  |   |
| 78-83-1 | Isobutyl Alcohol  | ND     | 100 | 36  | ug/l  |   |
| 67-63-0 | Isopropyl Alcohol | ND     | 100 | 68  | ug/l  |   |
| 71-23-8 | n-Propyl Alcohol  | ND     | 100 | 43  | ug/l  |   |
| 71-36-3 | n-Butyl Alcohol   | ND     | 100 | 87  | ug/l  |   |
| 78-92-2 | sec-Butyl Alcohol | ND     | 100 | 66  | ug/l  |   |
| 67-56-1 | Methanol          | ND     | 200 | 71  | ug/l  |   |

| CAS No.  | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|----------|----------------------|--------|--------|---------|
| 111-27-3 | Hexanol              | 87%    |        | 56-145% |
| 111-27-3 | Hexanol              | 102%   |        | 56-145% |



ND = Not detected    MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 3

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | MW19 (1-2)                 | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-4                  | Date Received:  | 05/25/16 |
| Matrix:           | SO - Soil                  | Percent Solids: | 86.4     |
| Method:           | SW846 8270D SW846 3546     |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

| Run #  | File ID   | DF | Analyzed | By | Prep Date | Prep Batch | Analytical Batch |
|--------|-----------|----|----------|----|-----------|------------|------------------|
| Run #1 | 6P26617.D | 1  | 06/02/16 | AC | 05/26/16  | OP94277    | E6P1235          |
| Run #2 |           |    |          |    |           |            |                  |

| Run #  | Initial Weight | Final Volume |
|--------|----------------|--------------|
| Run #1 | 32.4 g         | 1.0 ml       |
| Run #2 |                |              |

## AEN TCL Special List

| CAS No.   | Compound                   | Result | RL  | MDL | Units | Q |
|-----------|----------------------------|--------|-----|-----|-------|---|
| 95-57-8   | 2-Chlorophenol             | ND     | 71  | 18  | ug/kg |   |
| 59-50-7   | 4-Chloro-3-methyl phenol   | ND     | 180 | 22  | ug/kg |   |
| 120-83-2  | 2,4-Dichlorophenol         | ND     | 180 | 30  | ug/kg |   |
| 105-67-9  | 2,4-Dimethylphenol         | ND     | 180 | 64  | ug/kg |   |
| 51-28-5   | 2,4-Dinitrophenol          | ND     | 180 | 130 | ug/kg |   |
| 534-52-1  | 4,6-Dinitro-o-cresol       | ND     | 180 | 38  | ug/kg |   |
| 95-48-7   | 2-Methylphenol             | ND     | 71  | 23  | ug/kg |   |
|           | 3&4-Methylphenol           | ND     | 71  | 29  | ug/kg |   |
| 88-75-5   | 2-Nitrophenol              | ND     | 180 | 24  | ug/kg |   |
| 100-02-7  | 4-Nitrophenol              | ND     | 360 | 95  | ug/kg |   |
| 87-86-5   | Pentachlorophenol          | ND     | 180 | 34  | ug/kg |   |
| 108-95-2  | Phenol                     | ND     | 71  | 19  | ug/kg |   |
| 58-90-2   | 2,3,4,6-Tetrachlorophenol  | ND     | 180 | 24  | ug/kg |   |
| 95-95-4   | 2,4,5-Trichlorophenol      | ND     | 180 | 27  | ug/kg |   |
| 88-06-2   | 2,4,6-Trichlorophenol      | ND     | 180 | 21  | ug/kg |   |
| 83-32-9   | Acenaphthene               | ND     | 36  | 12  | ug/kg |   |
| 208-96-8  | Acenaphthylene             | ND     | 36  | 18  | ug/kg |   |
| 98-86-2   | Acetophenone               | ND     | 180 | 7.7 | ug/kg |   |
| 120-12-7  | Anthracene                 | ND     | 36  | 22  | ug/kg |   |
| 1912-24-9 | Atrazine                   | ND     | 71  | 15  | ug/kg |   |
| 56-55-3   | Benzo(a)anthracene         | 59.0   | 36  | 10  | ug/kg |   |
| 50-32-8   | Benzo(a)pyrene             | 35.7   | 36  | 16  | ug/kg | J |
| 205-99-2  | Benzo(b)fluoranthene       | 56.6   | 36  | 16  | ug/kg |   |
| 191-24-2  | Benzo(g,h,i)perylene       | ND     | 36  | 18  | ug/kg |   |
| 207-08-9  | Benzo(k)fluoranthene       | 20.4   | 36  | 17  | ug/kg | J |
| 101-55-3  | 4-Bromophenyl phenyl ether | ND     | 71  | 14  | ug/kg |   |
| 85-68-7   | Butyl benzyl phthalate     | ND     | 71  | 8.7 | ug/kg |   |
| 92-52-4   | 1,1'-Biphenyl              | ND     | 71  | 4.9 | ug/kg |   |
| 100-52-7  | Benzaldehyde               | ND     | 180 | 8.9 | ug/kg |   |
| 91-58-7   | 2-Chloronaphthalene        | ND     | 71  | 8.5 | ug/kg |   |
| 106-47-8  | 4-Chloroaniline            | ND     | 180 | 13  | ug/kg |   |
| 86-74-8   | Carbazole                  | ND     | 71  | 5.2 | ug/kg |   |

ND = Not detected    MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound



## Report of Analysis

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | MW19 (1-2)                 | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-4                  | Date Received:  | 05/25/16 |
| Matrix:           | SO - Soil                  | Percent Solids: | 86.4     |
| Method:           | SW846 8270D SW846 3546     |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

## ABN TCL Special List

| CAS No.   | Compound                    | Result | RL  | MDL | Units | Q |
|-----------|-----------------------------|--------|-----|-----|-------|---|
| 105-60-2  | Caprolactam                 | ND     | 71  | 14  | ug/kg |   |
| 218-01-9  | Chrysene                    | 41.7   | 36  | 11  | ug/kg |   |
| 111-91-1  | bis(2-Chloroethoxy)methane  | ND     | 71  | 7.6 | ug/kg |   |
| 111-44-4  | bis(2-Chloroethyl)ether     | ND     | 71  | 15  | ug/kg |   |
| 108-60-1  | bis(2-Chloroisopropyl)ether | ND     | 71  | 13  | ug/kg |   |
| 7005-72-3 | 4-Chlorophenyl phenyl ether | ND     | 71  | 12  | ug/kg |   |
| 121-14-2  | 2,4-Dinitrotoluene          | ND     | 36  | 11  | ug/kg |   |
| 606-20-2  | 2,6-Dinitrotoluene          | ND     | 36  | 18  | ug/kg |   |
| 91-94-1   | 3,3'-Dichlorobenzidine      | ND     | 71  | 30  | ug/kg |   |
| 53-70-3   | Dibenzo(a,h)anthracene      | ND     | 36  | 16  | ug/kg |   |
| 132-64-9  | Dibenzofuran                | ND     | 71  | 15  | ug/kg |   |
| 84-74-2   | Di-n-butyl phthalate        | ND     | 71  | 5.8 | ug/kg |   |
| 117-84-0  | Di-n-octyl phthalate        | ND     | 71  | 8.9 | ug/kg |   |
| 84-66-2   | Diethyl phthalate           | ND     | 71  | 7.6 | ug/kg |   |
| 131-11-3  | Dimethyl phthalate          | ND     | 71  | 6.4 | ug/kg |   |
| 117-81-7  | bis(2-Ethylhexyl)phthalate  | ND     | 71  | 8.4 | ug/kg |   |
| 206-44-0  | Fluoranthene                | 125    | 36  | 16  | ug/kg |   |
| 86-73-7   | Fluorene                    | ND     | 36  | 16  | ug/kg |   |
| 118-74-1  | Hexachlorobenzene           | ND     | 71  | 9.0 | ug/kg |   |
| 87-68-3   | Hexachlorobutadiene         | ND     | 36  | 14  | ug/kg |   |
| 77-47-4   | Hexachlorocyclopentadiene   | ND     | 360 | 14  | ug/kg |   |
| 67-72-1   | Hexachloroethane            | ND     | 180 | 18  | ug/kg |   |
| 193-39-5  | Indeno(1,2,3-cd)pyrene      | ND     | 36  | 17  | ug/kg |   |
| 78-59-1   | Isophorone                  | ND     | 71  | 7.6 | ug/kg |   |
| 90-12-0   | 1-Methylnaphthalene         | ND     | 71  | 7.0 | ug/kg |   |
| 91-57-6   | 2-Methylnaphthalene         | ND     | 71  | 8.1 | ug/kg |   |
| 88-74-4   | 2-Nitroaniline              | ND     | 180 | 8.4 | ug/kg |   |
| 99-09-2   | 3-Nitroaniline              | ND     | 180 | 8.9 | ug/kg |   |
| 100-01-6  | 4-Nitroaniline              | ND     | 180 | 9.3 | ug/kg |   |
| 98-95-3   | Nitrobenzene                | ND     | 71  | 14  | ug/kg |   |
| 621-64-7  | N-Nitroso-di-n-propylamine  | ND     | 71  | 10  | ug/kg |   |
| 86-30-6   | N-Nitrosodiphenylamine      | ND     | 180 | 13  | ug/kg |   |
| 85-01-8   | Phenanthrene                | ND     | 36  | 12  | ug/kg |   |
| 129-00-0  | Pyrene                      | 111    | 36  | 11  | ug/kg |   |
| 95-94-3   | 1,2,4,5-Tetrachlorobenzene  | ND     | 180 | 9.1 | ug/kg |   |

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 367-12-4  | 2-Fluorophenol       | 66%    |        | 30-106% |
| 4165-62-2 | Phenol-d5            | 66%    |        | 30-106% |

ND = Not detected MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound



## Report of Analysis

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | MW19 (1-2)                 | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-4                  | Date Received:  | 05/25/16 |
| Matrix:           | SO - Soil                  | Percent Solids: | 86.4     |
| Method:           | SW846 8270D SW846 3546     |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

## ABN TCL Special List

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 118-79-6  | 2,4,6-Tribromophenol | 65%    |        | 24-140% |
| 4165-60-0 | Nitrobenzene-d5      | 76%    |        | 26-122% |
| 321-60-8  | 2-Fluorobiphenyl     | 76%    |        | 36-112% |
| 1718-51-0 | Terphenyl-d14        | 79%    |        | 36-132% |



ND = Not detected MDL = Method Detection Limit  
RL = Reporting Limit  
E = Indicates value exceeds calibration range

J = Indicates an estimated value  
B = Indicates analyte found in associated method blank  
N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 1

|                   |                               |                 |          |
|-------------------|-------------------------------|-----------------|----------|
| Client Sample ID: | MW19 (1-2)                    | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-4                     | Date Received:  | 05/25/16 |
| Matrix:           | SO - Soil                     | Percent Solids: | 86.4     |
| Method:           | SW846 8270D BY SIM SW846 3546 |                 |          |
| Project:          | BMSMC, Building 5 Area, PR    |                 |          |

| Run #  | File ID   | DF | Analyzed | By | Prep Date | Prep Batch | Analytical Batch |
|--------|-----------|----|----------|----|-----------|------------|------------------|
| Run #1 | 4P16649.D | 1  | 06/04/16 | JJ | 05/26/16  | OP94277A   | E4P886           |
| Run #2 |           |    |          |    |           |            |                  |

| Run #  | Initial Weight | Final Volume |
|--------|----------------|--------------|
| Run #1 | 32.4 g         | 1.0 ml       |
| Run #2 |                |              |

| CAS No.  | Compound                 | Result | RL  | MDL  | Units | Q |
|----------|--------------------------|--------|-----|------|-------|---|
| 123-91-1 | 1,4-Dioxane <sup>a</sup> | ND     | 3.6 | 0.72 | ug/kg |   |
| 91-20-3  | Naphthalene              | ND     | 3.6 | 0.44 | ug/kg |   |

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 4165-60-0 | Nitrobenzene-d5      | 69%    |        | 15-138% |
| 321-60-8  | 2-Fluorobiphenyl     | 50%    |        | 12-148% |
| 1718-51-0 | Terphenyl-d14        | 72%    |        | 10-157% |

(a) Not accredited for this compound at the time of analysis, but all method requirements were followed.



ND = Not detected      MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 1

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | MW19 (1-2)                 | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-4                  | Date Received:  | 05/25/16 |
| Matrix:           | SO - Soil                  | Percent Solids: | 86.4     |
| Method:           | SW846-8015C (DAI)          |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

| Run #  | File ID    | DF | Analyzed | By  | Prep Date | Prep Batch | Analytical Batch |
|--------|------------|----|----------|-----|-----------|------------|------------------|
| Run #1 | GH105211.D | 1  | 05/25/16 | XPL | n/a       | n/a        | GGH5300          |
| Run #2 |            |    |          |     |           |            |                  |

|        | Initial Weight |
|--------|----------------|
| Run #1 | 5.0 g          |
| Run #2 |                |

## Low Molecular Alcohol List

| CAS No. | Compound          | Result | RL  | MDL | Units | Q |
|---------|-------------------|--------|-----|-----|-------|---|
| 64-17-5 | Ethanol           | ND     | 120 | 80  | ug/kg |   |
| 78-83-1 | Isobutyl Alcohol  | ND     | 120 | 68  | ug/kg |   |
| 67-63-0 | Isopropyl Alcohol | ND     | 120 | 66  | ug/kg |   |
| 71-23-8 | n-Propyl Alcohol  | ND     | 120 | 47  | ug/kg |   |
| 71-36-3 | n-Butyl Alcohol   | ND     | 120 | 63  | ug/kg |   |
| 78-92-2 | sec-Butyl Alcohol | ND     | 120 | 62  | ug/kg |   |
| 67-56-1 | Methanol          | ND     | 230 | 55  | ug/kg |   |

| CAS No.  | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|----------|----------------------|--------|--------|---------|
| 111-27-3 | Hexanol              | 91%    |        | 52-141% |
| 111-27-3 | Hexanol              | 97%    |        | 52-141% |



ND = Not detected    MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 3

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | MW19 (5-6)                 | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-5                  | Date Received:  | 05/25/16 |
| Matrix:           | SO - Soil                  | Percent Solids: | 88.1     |
| Method:           | SW846 8270D SW846 3546     |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

| Run #  | File ID   | DF | Analyzed | By | Prep Date | Prep Batch | Analytical Batch |
|--------|-----------|----|----------|----|-----------|------------|------------------|
| Run #1 | 6P26651.D | 1  | 06/03/16 | SB | 05/26/16  | OP94277    | E6P1236          |
| Run #2 |           |    |          |    |           |            |                  |

| Run #  | Initial Weight | Final Volume |
|--------|----------------|--------------|
| Run #1 | 31.9 g         | 1.0 ml       |
| Run #2 |                |              |

## ABN TCL Special List

| CAS No.   | Compound                   | Result | RL  | MDL | Units | Q |
|-----------|----------------------------|--------|-----|-----|-------|---|
| 95-57-8   | 2-Chlorophenol             | ND     | 71  | 18  | ug/kg |   |
| 59-50-7   | 4-Chloro-3-methyl phenol   | ND     | 180 | 22  | ug/kg |   |
| 120-83-2  | 2,4-Dichlorophenol         | ND     | 180 | 30  | ug/kg |   |
| 105-67-9  | 2,4-Dimethylphenol         | 999    | 180 | 63  | ug/kg |   |
| 51-28-5   | 2,4-Dinitrophenol          | ND     | 180 | 130 | ug/kg |   |
| 534-52-1  | 4,6-Dinitro-o-cresol       | ND     | 180 | 38  | ug/kg |   |
| 95-48-7   | 2-Methylphenol             | ND     | 71  | 23  | ug/kg |   |
|           | 3&4-Methylphenol           | ND     | 71  | 29  | ug/kg |   |
| 88-75-5   | 2-Nitrophenol              | ND     | 180 | 24  | ug/kg |   |
| 100-02-7  | 4-Nitrophenol              | ND     | 360 | 95  | ug/kg |   |
| 87-86-5   | Pentachlorophenol          | ND     | 180 | 33  | ug/kg |   |
| 108-95-2  | Phenol                     | ND     | 71  | 19  | ug/kg |   |
| 58-90-2   | 2,3,4,6-Tetrachlorophenol  | ND     | 180 | 24  | ug/kg |   |
| 95-95-4   | 2,4,5-Trichlorophenol      | ND     | 180 | 27  | ug/kg |   |
| 88-06-2   | 2,4,6-Trichlorophenol      | ND     | 180 | 21  | ug/kg |   |
| 83-32-9   | Acenaphthene               | 36.4   | 36  | 12  | ug/kg |   |
| 208-96-8  | Acenaphthylene             | ND     | 36  | 18  | ug/kg |   |
| 98-86-2   | Acetophenone               | ND     | 180 | 7.7 | ug/kg |   |
| 120-12-7  | Anthracene                 | 179    | 36  | 22  | ug/kg |   |
| 1912-24-9 | Atrazine                   | ND     | 71  | 15  | ug/kg |   |
| 56-55-3   | Benzo(a)anthracene         | 232    | 36  | 10  | ug/kg |   |
| 50-32-8   | Benzo(a)pyrene             | 125    | 36  | 16  | ug/kg |   |
| 205-99-2  | Benzo(b)fluoranthene       | 173    | 36  | 16  | ug/kg |   |
| 191-24-2  | Benzo(g,h,i)perylene       | 47.9   | 36  | 18  | ug/kg |   |
| 207-08-9  | Benzo(k)fluoranthene       | 67.3   | 36  | 17  | ug/kg |   |
| 101-55-3  | 4-Bromophenyl phenyl ether | ND     | 71  | 14  | ug/kg |   |
| 85-68-7   | Butyl benzyl phthalate     | ND     | 71  | 8.7 | ug/kg |   |
| 92-52-4   | 1,1'-Biphenyl              | ND     | 71  | 4.9 | ug/kg |   |
| 100-52-7  | Benzaldehyde               | ND     | 180 | 8.8 | ug/kg |   |
| 91-58-7   | 2-Chloronaphthalene        | ND     | 71  | 8.5 | ug/kg |   |
| 106-47-8  | 4-Chloroaniline            | ND     | 180 | 13  | ug/kg |   |
| 86-74-8   | Carbazole                  | 16.7   | 71  | 5.2 | ug/kg | J |

ND = Not detected MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound



## Report of Analysis

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | MW19 (5-6)                 | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-5                  | Date Received:  | 05/25/16 |
| Matrix:           | SO - Soil                  | Percent Solids: | 88.1     |
| Method:           | SW846 8270D SW846 3546     |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

## ABN TCL Special List

| CAS No.   | Compound                    | Result | RL  | MDL | Units | Q |
|-----------|-----------------------------|--------|-----|-----|-------|---|
| 105-60-2  | Caprolactam                 | ND     | 71  | 14  | ug/kg |   |
| 218-01-9  | Chrysene                    | 205    | 36  | 11  | ug/kg |   |
| 111-91-1  | bis(2-Chloroethoxy)methane  | ND     | 71  | 7.6 | ug/kg |   |
| 111-44-4  | bis(2-Chloroethyl)ether     | ND     | 71  | 15  | ug/kg |   |
| 108-60-1  | bis(2-Chloroisopropyl)ether | ND     | 71  | 13  | ug/kg |   |
| 7005-72-3 | 4-Chlorophenyl phenyl ether | ND     | 71  | 12  | ug/kg |   |
| 121-14-2  | 2,4-Dinitrotoluene          | ND     | 36  | 11  | ug/kg |   |
| 606-20-2  | 2,6-Dinitrotoluene          | ND     | 36  | 18  | ug/kg |   |
| 91-94-1   | 3,3'-Dichlorobenzidine      | ND     | 71  | 30  | ug/kg |   |
| 53-70-3   | Dibenzo(a,h)anthracene      | ND     | 36  | 16  | ug/kg |   |
| 132-64-9  | Dibenzofuran                | 51.1   | 71  | 14  | ug/kg | J |
| 84-74-2   | Di-n-butyl phthalate        | ND     | 71  | 5.8 | ug/kg |   |
| 117-84-0  | Di-n-octyl phthalate        | ND     | 71  | 8.9 | ug/kg |   |
| 84-66-2   | Diethyl phthalate           | ND     | 71  | 7.6 | ug/kg |   |
| 131-11-3  | Dimethyl phthalate          | ND     | 71  | 6.3 | ug/kg |   |
| 117-81-7  | bis(2-Ethylhexyl)phthalate  | 52.6   | 71  | 8.3 | ug/kg | J |
| 206-44-0  | Fluoranthene                | 1040   | 36  | 16  | ug/kg |   |
| 86-73-7   | Fluorene                    | 106    | 36  | 16  | ug/kg |   |
| 118-74-1  | Hexachlorobenzene           | ND     | 71  | 9.0 | ug/kg |   |
| 87-68-3   | Hexachlorobutadiene         | ND     | 36  | 14  | ug/kg |   |
| 77-47-4   | Hexachlorocyclopentadiene   | ND     | 360 | 14  | ug/kg |   |
| 67-72-1   | Hexachloroethane            | ND     | 180 | 18  | ug/kg |   |
| 193-39-5  | Indeno(1,2,3-cd)pyrene      | 60.0   | 36  | 17  | ug/kg |   |
| 78-59-1   | Isophorone                  | ND     | 71  | 7.6 | ug/kg |   |
| 90-12-0   | 1-Methylnaphthalene         | 1380   | 71  | 7.0 | ug/kg |   |
| 91-57-6   | 2-Methylnaphthalene         | 1760   | 71  | 8.0 | ug/kg |   |
| 88-74-4   | 2-Nitroaniline              | ND     | 180 | 8.4 | ug/kg |   |
| 99-09-2   | 3-Nitroaniline              | ND     | 180 | 8.9 | ug/kg |   |
| 100-01-6  | 4-Nitroaniline              | ND     | 180 | 9.2 | ug/kg |   |
| 91-20-3   | Naphthalene                 | 427    | 36  | 10  | ug/kg |   |
| 98-95-3   | Nitrobenzene                | ND     | 71  | 14  | ug/kg |   |
| 621-64-7  | N-Nitroso-di-n-propylamine  | ND     | 71  | 10  | ug/kg |   |
| 86-30-6   | N-Nitrosodiphenylamine      | ND     | 180 | 13  | ug/kg |   |
| 85-01-8   | Phenanthrene                | 825    | 36  | 12  | ug/kg |   |
| 129-00-0  | Pyrene                      | 900    | 36  | 11  | ug/kg |   |
| 95-94-3   | 1,2,4,5-Tetrachlorobenzene  | ND     | 180 | 9.0 | ug/kg |   |

| CAS No.  | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|----------|----------------------|--------|--------|---------|
| 367-12-4 | 2-Fluorophenol       | 44%    |        | 30-106% |

ND = Not detected MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

N = Indicates presumptive evidence of a compound





## Report of Analysis

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | MW19 (5-6)                 | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-5                  | Date Received:  | 05/25/16 |
| Matrix:           | SO - Soil                  | Percent Solids: | 88.1     |
| Method:           | SW846 8270D SW846 3546     |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

## ABN TCL Special List

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 4165-62-2 | Phenol-d5            | 65%    |        | 30-106% |
| 118-79-6  | 2,4,6-Tribromophenol | 69%    |        | 24-140% |
| 4165-60-0 | Nitrobenzene-d5      | 96%    |        | 26-122% |
| 321-60-8  | 2-Fluorobiphenyl     | 80%    |        | 36-112% |
| 1718-51-0 | Terphenyl-d14        | 86%    |        | 36-132% |



ND = Not detected MDL = Method Detection Limit  
RL = Reporting Limit  
E = Indicates value exceeds calibration range

J = Indicates an estimated value  
B = Indicates analyte found in associated method blank  
N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 1

|                   |                               |                 |          |
|-------------------|-------------------------------|-----------------|----------|
| Client Sample ID: | MW19 (5-6)                    | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-5                     | Date Received:  | 05/25/16 |
| Matrix:           | SO - Soil                     | Percent Solids: | 88.1     |
| Method:           | SW846 8270D BY SIM SW846 3546 |                 |          |
| Project:          | BMSMC, Building 5 Area, PR    |                 |          |

|        | File ID   | DF | Analyzed | By | Prep Date | Prep Batch | Analytical Batch |
|--------|-----------|----|----------|----|-----------|------------|------------------|
| Run #1 | 4P16650.D | 1  | 06/04/16 | JJ | 05/26/16  | OP94277A   | E4P886           |
| Run #2 |           |    |          |    |           |            |                  |

|        | Initial Weight | Final Volume |
|--------|----------------|--------------|
| Run #1 | 31.9 g         | 1.0 ml       |
| Run #2 |                |              |

| CAS No.  | Compound                 | Result | RL  | MDL  | Units | Q |
|----------|--------------------------|--------|-----|------|-------|---|
| 123-91-1 | 1,4-Dioxane <sup>a</sup> | ND     | 3.6 | 0.72 | ug/kg |   |

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 4165-60-0 | Nitrobenzene-d5      | 69%    |        | 15-138% |
| 321-60-8  | 2-Fluorobiphenyl     | 60%    |        | 12-148% |
| 1718-51-0 | Terphenyl-d14        | 77%    |        | 10-157% |

(a) Not accredited for this compound at the time of analysis, but all method requirements were followed.



ND = Not detected      MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 1

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | MW19 (5-6)                 | Date Sampled:   | 05/23/16 |
| Lab Sample ID:    | JC20935-5                  | Date Received:  | 05/25/16 |
| Matrix:           | SO - Soil                  | Percent Solids: | 88.1     |
| Method:           | SW846-8015C (DAI)          |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

| Run #  | File ID    | DF | Analyzed | By  | Prep Date | Prep Batch | Analytical Batch |
|--------|------------|----|----------|-----|-----------|------------|------------------|
| Run #1 | GH105212.D | 1  | 05/25/16 | XPL | n/a       | n/a        | GGH5300          |
| Run #2 |            |    |          |     |           |            |                  |

| Run #  | Initial Weight |
|--------|----------------|
| Run #1 | 5.0 g          |
| Run #2 |                |

## Low Molecular Alcohol List

| CAS No. | Compound          | Result | RL  | MDL | Units | Q |
|---------|-------------------|--------|-----|-----|-------|---|
| 64-17-5 | Ethanol           | ND     | 110 | 78  | ug/kg |   |
| 78-83-1 | Isobutyl Alcohol  | ND     | 110 | 67  | ug/kg |   |
| 67-63-0 | Isopropyl Alcohol | ND     | 110 | 65  | ug/kg |   |
| 71-23-8 | n-Propyl Alcohol  | ND     | 110 | 46  | ug/kg |   |
| 71-36-3 | n-Butyl Alcohol   | ND     | 110 | 62  | ug/kg |   |
| 78-92-2 | sec-Butyl Alcohol | ND     | 110 | 60  | ug/kg |   |
| 67-56-1 | Methanol          | ND     | 230 | 54  | ug/kg |   |

| CAS No.  | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|----------|----------------------|--------|--------|---------|
| 111-27-3 | Hexanol              | 97%    |        | 52-141% |
| 111-27-3 | Hexanol              | 109%   |        | 52-141% |



ND = Not detected MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 3

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | BPEB-25                    | Date Sampled:   | 05/20/16 |
| Lab Sample ID:    | JC20935-6                  | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Equipment Blank       | Percent Solids: | n/a      |
| Method:           | SW846 8270D SW846 3510C    |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

| Run #  | File ID   | DF | Analyzed | By | Prep Date | Prep Batch | Analytical Batch |
|--------|-----------|----|----------|----|-----------|------------|------------------|
| Run #1 | 6P26392.D | 1  | 05/26/16 | JJ | 05/25/16  | OP94258    | E6P1228          |
| Run #2 |           |    |          |    |           |            |                  |

| Run #  | Initial Volume | Final Volume |
|--------|----------------|--------------|
| Run #1 | 890 ml         | 1.0 ml       |
| Run #2 |                |              |

## AEN TCL Special List

| CAS No.   | Compound                   | Result | RL  | MDL  | Units | Q |
|-----------|----------------------------|--------|-----|------|-------|---|
| 95-57-8   | 2-Chlorophenol             | ND     | 5.6 | 0.92 | ug/l  |   |
| 59-50-7   | 4-Chloro-3-methyl phenol   | ND     | 5.6 | 1.0  | ug/l  |   |
| 120-83-2  | 2,4-Dichlorophenol         | ND     | 2.2 | 1.4  | ug/l  |   |
| 105-67-9  | 2,4-Dimethylphenol         | ND     | 5.6 | 2.7  | ug/l  |   |
| 51-28-5   | 2,4-Dinitrophenol          | ND     | 11  | 1.7  | ug/l  |   |
| 534-52-1  | 4,6-Dinitro-o-cresol       | ND     | 5.6 | 1.5  | ug/l  |   |
| 95-48-7   | 2-Methylphenol             | ND     | 2.2 | 1.0  | ug/l  |   |
|           | 3&4-Methylphenol           | ND     | 2.2 | 0.99 | ug/l  |   |
| 88-75-5   | 2-Nitrophenol              | ND     | 5.6 | 1.1  | ug/l  |   |
| 100-02-7  | 4-Nitrophenol              | ND     | 11  | 1.3  | ug/l  |   |
| 87-86-5   | Pentachlorophenol          | ND     | 5.6 | 1.6  | ug/l  |   |
| 108-95-2  | Phenol                     | ND     | 2.2 | 0.44 | ug/l  |   |
| 58-90-2   | 2,3,4,6-Tetrachlorophenol  | ND     | 5.6 | 1.6  | ug/l  |   |
| 95-95-4   | 2,4,5-Trichlorophenol      | ND     | 5.6 | 1.5  | ug/l  |   |
| 88-06-2   | 2,4,6-Trichlorophenol      | ND     | 5.6 | 1.0  | ug/l  |   |
| 83-32-9   | Acenaphthene               | ND     | 1.1 | 0.21 | ug/l  |   |
| 208-96-8  | Acenaphthylene             | ND     | 1.1 | 0.15 | ug/l  |   |
| 98-86-2   | Acetophenone               | ND     | 2.2 | 0.23 | ug/l  |   |
| 120-12-7  | Anthracene                 | ND     | 1.1 | 0.24 | ug/l  |   |
| 1912-24-9 | Atrazine                   | ND     | 2.2 | 0.50 | ug/l  |   |
| 100-52-7  | Benzaldehyde               | ND     | 5.6 | 0.32 | ug/l  |   |
| 56-55-3   | Benzo(a)anthracene         | ND     | 1.1 | 0.23 | ug/l  |   |
| 50-32-8   | Benzo(a)pyrene             | ND     | 1.1 | 0.24 | ug/l  |   |
| 205-99-2  | Benzo(b)fluoranthene       | ND     | 1.1 | 0.23 | ug/l  |   |
| 191-24-2  | Benzo(g,h,i)perylene       | ND     | 1.1 | 0.38 | ug/l  |   |
| 207-08-9  | Benzo(k)fluoranthene       | ND     | 1.1 | 0.23 | ug/l  |   |
| 101-55-3  | 4-Bromophenyl phenyl ether | ND     | 2.2 | 0.45 | ug/l  |   |
| 85-68-7   | Butyl benzyl phthalate     | ND     | 2.2 | 0.51 | ug/l  |   |
| 92-52-4   | 1,1'-Biphenyl              | ND     | 1.1 | 0.24 | ug/l  |   |
| 91-58-7   | 2-Chloronaphthalene        | ND     | 2.2 | 0.27 | ug/l  |   |
| 106-47-8  | 4-Chloroaniline            | ND     | 5.6 | 0.38 | ug/l  |   |
| 86-74-8   | Carbazole                  | ND     | 1.1 | 0.26 | ug/l  |   |



ND = Not detected MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound

## Report of Analysis

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | BPEB-25                    | Date Sampled:   | 05/20/16 |
| Lab Sample ID:    | JC20935-6                  | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Equipment Blank       | Percent Solids: | n/a      |
| Method:           | SW846 8270D SW846 3510C    |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

## ABN TCL Special List

| CAS No.   | Compound                    | Result | RL  | MDL  | Units | Q |
|-----------|-----------------------------|--------|-----|------|-------|---|
| 105-60-2  | Caprolactam                 | ND     | 2.2 | 0.73 | ug/l  |   |
| 218-01-9  | Chrysene                    | ND     | 1.1 | 0.20 | ug/l  |   |
| 111-91-1  | bis(2-Chloroethoxy)methane  | ND     | 2.2 | 0.31 | ug/l  |   |
| 111-44-4  | bis(2-Chloroethyl)ether     | ND     | 2.2 | 0.28 | ug/l  |   |
| 108-60-1  | bis(2-Chloroisopropyl)ether | ND     | 2.2 | 0.45 | ug/l  |   |
| 7005-72-3 | 4-Chlorophenyl phenyl ether | ND     | 2.2 | 0.41 | ug/l  |   |
| 121-14-2  | 2,4-Dinitrotoluene          | ND     | 1.1 | 0.62 | ug/l  |   |
| 606-20-2  | 2,6-Dinitrotoluene          | ND     | 1.1 | 0.53 | ug/l  |   |
| 91-94-1   | 3,3'-Dichlorobenzidine      | ND     | 2.2 | 0.57 | ug/l  |   |
| 53-70-3   | Dibenzo(a,h)anthracene      | ND     | 1.1 | 0.37 | ug/l  |   |
| 132-64-9  | Dibenzofuran                | ND     | 5.6 | 0.25 | ug/l  |   |
| 84-74-2   | Di-n-butyl phthalate        | ND     | 2.2 | 0.56 | ug/l  |   |
| 117-84-0  | Di-n-octyl phthalate        | ND     | 2.2 | 0.26 | ug/l  |   |
| 84-66-2   | Diethyl phthalate           | ND     | 2.2 | 0.29 | ug/l  |   |
| 131-11-3  | Dimethyl phthalate          | ND     | 2.2 | 0.24 | ug/l  |   |
| 117-81-7  | bis(2-Ethylhexyl)phthalate  | 4.1    | 2.2 | 1.9  | ug/l  |   |
| 206-44-0  | Fluoranthene                | ND     | 1.1 | 0.19 | ug/l  |   |
| 86-73-7   | Fluorene                    | ND     | 1.1 | 0.19 | ug/l  |   |
| 118-74-1  | Hexachlorobenzene           | ND     | 1.1 | 0.37 | ug/l  |   |
| 87-68-3   | Hexachlorobutadiene         | ND     | 1.1 | 0.55 | ug/l  |   |
| 77-47-4   | Hexachlorocyclopentadiene   | ND     | 11  | 3.1  | ug/l  |   |
| 67-72-1   | Hexachloroethane            | ND     | 2.2 | 0.44 | ug/l  |   |
| 193-39-5  | Indeno(1,2,3-cd)pyrene      | ND     | 1.1 | 0.37 | ug/l  |   |
| 78-59-1   | Isophorone                  | ND     | 2.2 | 0.31 | ug/l  |   |
| 90-12-0   | 1-Methylnaphthalene         | ND     | 1.1 | 0.30 | ug/l  |   |
| 91-57-6   | 2-Methylnaphthalene         | ND     | 1.1 | 0.24 | ug/l  |   |
| 88-74-4   | 2-Nitroaniline              | ND     | 5.6 | 0.31 | ug/l  |   |
| 99-09-2   | 3-Nitroaniline              | ND     | 5.6 | 0.43 | ug/l  |   |
| 100-01-6  | 4-Nitroaniline              | ND     | 5.6 | 0.49 | ug/l  |   |
| 98-95-3   | Nitrobenzene                | ND     | 2.2 | 0.72 | ug/l  |   |
| 621-64-7  | N-Nitroso-di-n-propylamine  | ND     | 2.2 | 0.54 | ug/l  |   |
| 86-30-6   | N-Nitrosodiphenylamine      | ND     | 5.6 | 0.25 | ug/l  |   |
| 85-01-8   | Phenanthrene                | ND     | 1.1 | 0.20 | ug/l  |   |
| 129-00-0  | Pyrene                      | ND     | 1.1 | 0.25 | ug/l  |   |
| 95-94-3   | 1,2,4,5-Tetrachlorobenzene  | ND     | 2.2 | 0.42 | ug/l  |   |

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 367-12-4  | 2-Fluorophenol       | 47%    |        | 14-88%  |
| 4165-62-2 | Phenol-d5            | 31%    |        | 10-110% |

ND = Not detected MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound



## Report of Analysis

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | BPEB-25                    | Date Sampled:   | 05/20/16 |
| Lab Sample ID:    | JC20935-6                  | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Equipment Blank       | Percent Solids: | n/a      |
| Method:           | SW846 8270D SW846 3510C    |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

## ABN TCL Special List

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 118-79-6  | 2,4,6-Tribromophenol | 69%    |        | 39-149% |
| 4165-60-0 | Nitrobenzene-d5      | 71%    |        | 32-128% |
| 321-60-8  | 2-Fluorobiphenyl     | 74%    |        | 35-119% |
| 1718-51-0 | Terphenyl-d14        | 87%    |        | 10-126% |



ND = Not detected MDL = Method Detection Limit  
RL = Reporting Limit  
E = Indicates value exceeds calibration range

J = Indicates an estimated value  
B = Indicates analyte found in associated method blank  
N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 1

|                   |                                |                 |          |
|-------------------|--------------------------------|-----------------|----------|
| Client Sample ID: | BPEB-25                        | Date Sampled:   | 05/20/16 |
| Lab Sample ID:    | JC20935-6                      | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Equipment Blank           | Percent Solids: | n/a      |
| Method:           | SW846 8270D BY SIM SW846 3510C |                 |          |
| Project:          | BMSMC, Building 5 Area, PR     |                 |          |

| Run #               | File ID   | DF | Analyzed | By | Prep Date | Prep Batch | Analytical Batch |
|---------------------|-----------|----|----------|----|-----------|------------|------------------|
| Run #1              | 4P16440.D | 1  | 05/26/16 | LK | 05/25/16  | OP94258A   | E4P872           |
| Run #2 <sup>a</sup> | 4P16456.D | 1  | 05/26/16 | LK | 05/25/16  | OP94258A   | E4P872           |

| Run #  | Initial Volume | Final Volume |
|--------|----------------|--------------|
| Run #1 | 890 ml         | 1.0 ml       |
| Run #2 | 890 ml         | 1.0 ml       |

| CAS No.  | Compound    | Result | RL   | MDL   | Units | Q |
|----------|-------------|--------|------|-------|-------|---|
| 91-20-3  | Naphthalene | ND     | 0.11 | 0.033 | ug/l  |   |
| 123-91-1 | 1,4-Dioxane | ND     | 0.11 | 0.055 | ug/l  |   |

| CAS No.   | Surrogate Recoveries | Run# 1            | Run# 2            | Limits  |
|-----------|----------------------|-------------------|-------------------|---------|
| 4165-60-0 | Nitrobenzene-d5      | 90%               | 87%               | 24-125% |
| 321-60-8  | 2-Fluorobiphenyl     | 83%               | 86%               | 19-127% |
| 1718-51-0 | Terphenyl-d14        | 120% <sup>b</sup> | 123% <sup>b</sup> | 10-119% |

(a) Confirmation run for internal standard areas.

(b) High percent recoveries and no positive found in the sample.



ND = Not detected MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound

SGS Accutest

## Report of Analysis

Page 1 of 1

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | BPEB-25                    | Date Sampled:   | 05/20/16 |
| Lab Sample ID:    | JC20935-6                  | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Equipment Blank       | Percent Solids: | n/a      |
| Method:           | SW846-8015C (DAI)          |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

| Run #  | File ID    | DF | Analyzed | By  | Prep Date | Prep Batch | Analytical Batch |
|--------|------------|----|----------|-----|-----------|------------|------------------|
| Run #1 | GH105220.D | 1  | 05/26/16 | XPL | n/a       | n/a        | GGH5301          |
| Run #2 |            |    |          |     |           |            |                  |

## Low Molecular Alcohol List

| CAS No. | Compound          | Result | RL  | MDL | Units | Q |
|---------|-------------------|--------|-----|-----|-------|---|
| 64-17-5 | Ethanol           | ND     | 100 | 55  | ug/l  |   |
| 78-83-1 | Isobutyl Alcohol  | ND     | 100 | 36  | ug/l  |   |
| 67-63-0 | Isopropyl Alcohol | ND     | 100 | 68  | ug/l  |   |
| 71-23-8 | n-Propyl Alcohol  | ND     | 100 | 43  | ug/l  |   |
| 71-36-3 | n-Butyl Alcohol   | ND     | 100 | 87  | ug/l  |   |
| 78-92-2 | sec-Butyl Alcohol | ND     | 100 | 66  | ug/l  |   |
| 67-56-1 | Methanol          | ND     | 200 | 71  | ug/l  |   |

| CAS No.  | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|----------|----------------------|--------|--------|---------|
| 111-27-3 | Hexanol              | 98%    |        | 56-145% |
| 111-27-3 | Hexanol              | 98%    |        | 56-145% |



ND = Not detected MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound



SGS Accutest

## Report of Analysis

Page 1 of 1

|                   |                            |                 |          |
|-------------------|----------------------------|-----------------|----------|
| Client Sample ID: | BPEB-25                    | Date Sampled:   | 05/20/16 |
| Lab Sample ID:    | JC20935-6                  | Date Received:  | 05/25/16 |
| Matrix:           | AQ - Equipment Blank       | Percent Solids: | n/a      |
| Method:           | SW846 8081B SW846 3510C    |                 |          |
| Project:          | BMSMC, Building 5 Area, PR |                 |          |

| Run #  | File ID    | DF | Analyzed | By | Prep Date | Prep Batch | Analytical Batch |
|--------|------------|----|----------|----|-----------|------------|------------------|
| Run #1 | 1G123579.D | 1  | 05/26/16 | DS | 05/25/16  | OP94259    | G1G3998          |
| Run #2 |            |    |          |    |           |            |                  |

| Run #  | Initial Volume | Final Volume |
|--------|----------------|--------------|
| Run #1 | 900 ml         | 10.0 ml      |
| Run #2 |                |              |

## Pesticide TCL List

| CAS No.    | Compound            | Result | RL    | MDL    | Units | Q |
|------------|---------------------|--------|-------|--------|-------|---|
| 309-00-2   | Aldrin              | ND     | 0.011 | 0.0067 | ug/l  |   |
| 319-84-6   | alpha-BHC           | ND     | 0.011 | 0.0067 | ug/l  |   |
| 319-85-7   | beta-BHC            | ND     | 0.011 | 0.0063 | ug/l  |   |
| 319-86-8   | delta-BHC           | ND     | 0.011 | 0.0051 | ug/l  |   |
| 58-89-9    | gamma-BHC (Lindane) | ND     | 0.011 | 0.0031 | ug/l  |   |
| 5103-71-9  | alpha-Chlordane     | ND     | 0.011 | 0.0051 | ug/l  |   |
| 5103-74-2  | gamma-Chlordane     | ND     | 0.011 | 0.0051 | ug/l  |   |
| 60-57-1    | Dieldrin            | ND     | 0.011 | 0.0040 | ug/l  |   |
| 72-54-8    | 4,4'-DDD            | ND     | 0.011 | 0.0042 | ug/l  |   |
| 72-55-9    | 4,4'-DDE            | ND     | 0.011 | 0.0068 | ug/l  |   |
| 50-29-3    | 4,4'-DDT            | ND     | 0.011 | 0.0055 | ug/l  |   |
| 72-20-8    | Endrin              | ND     | 0.011 | 0.0056 | ug/l  |   |
| 1031-07-8  | Endosulfan sulfate  | ND     | 0.011 | 0.0058 | ug/l  |   |
| 7421-93-4  | Endrin aldehyde     | ND     | 0.011 | 0.0057 | ug/l  |   |
| 53494-70-5 | Endrin ketone       | ND     | 0.011 | 0.0056 | ug/l  |   |
| 959-98-8   | Endosulfan-I        | ND     | 0.011 | 0.0055 | ug/l  |   |
| 33213-65-9 | Endosulfan-II       | ND     | 0.011 | 0.0048 | ug/l  |   |
| 76-44-8    | Heptachlor          | ND     | 0.011 | 0.0042 | ug/l  |   |
| 1024-57-3  | Heptachlor epoxide  | ND     | 0.011 | 0.0073 | ug/l  |   |
| 72-43-5    | Methoxychlor        | ND     | 0.022 | 0.0063 | ug/l  |   |
| 8001-35-2  | Toxaphene           | ND     | 0.28  | 0.20   | ug/l  |   |

| CAS No.   | Surrogate Recoveries | Run# 1 | Run# 2 | Limits  |
|-----------|----------------------|--------|--------|---------|
| 877-09-8  | Tetrachloro-m-xylene | 84%    |        | 26-132% |
| 877-09-8  | Tetrachloro-m-xylene | 79%    |        | 26-132% |
| 2051-24-3 | Decachlorobiphenyl   | 53%    |        | 10-118% |
| 2051-24-3 | Decachlorobiphenyl   | 59%    |        | 10-118% |



ND = Not detected    MDL = Method Detection Limit  
 RL = Reporting Limit  
 E = Indicates value exceeds calibration range

J = Indicates an estimated value  
 B = Indicates analyte found in associated method blank  
 N = Indicates presumptive evidence of a compound

610 501 EB

**ACCUTEST - NS**

## CHAIN OF CUSTODY

SCS Account - Dayton  
2235 Route 130, Dayton, NJ 08810  
TEL. 732-329-0200 FAX. 732-329-3499/1480  
www.acctnet.com

JE 20935  
801219535868

PAGE 1 OF 1

**SGS**  
COW SITE

**SGS**  
2235 Route 130, Dayton, NJ 08810  
TEL: 732-329-6200 FAX: 732-329-3499/1480  
www.sgs.com

**801219535868**  
SGS Account #

**Customer Name**  
Muhlenberg Assoc. Inc.  
2700 Westchester  
Purchase NY  
Contact: Terry Taylor  
Phone: 914-251-0400  
Sample(s) Name(s): T. Taylor, R. Stuart, D. Lindstrand

**Project Name**  
BMS Release Assessment

**Street**  
Humacao PR

**City**  
Humacao PR

**State**  
PR

**Zip**  
00925

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

**SGS Account Order #**  
801219535868

51

**JC20935: Chain of Custody**

Page 1 of 3

SGS

44 of 1057

**ACCUTEST**  
JC20935

## EXECUTIVE NARRATIVE

SDG No: JC20935 Laboratory: Accutest, New Jersey  
Analysis: SW846-8270D Number of Samples: 6  
Location: BMSMC, Building 5 Area  
Humacao, PR

**SUMMARY:** Six (6) samples were analyzed for the ABN TCL list following method SW846-8270D; Naphthalene and 1,4-Dioxane were also analyzed by SW846-8270D using the selective ion monitoring (SIM) technique. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: EPA Hazardous Waste Support Section, SOP HW-35A, July 2015 –Revision 0. Semivolatile Data Validation. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

Results are valid and can be used for decision making purposes.

**Critical issues:** None  
**Major:** None  
**Minor:** None

**Critical findings:** None  
**Major findings:** None

**Minor findings:**

1. Initial and continuing calibration verifications meet the required criteria. Analytes not meeting the method % difference criteria meet the guidance document performance criteria for continuing calibration verification of  $\pm 25$  or 40 %, no action taken.  
Butylbenzyl phthalate and 2-nitroaniline did not meet the % difference continuing calibration criteria. Results for this analyte qualified (UJ) in samples JC20935-4.  
2,4-dinitrotoluene and 2-nitroaniline did not meet the % difference continuing calibration criteria. Results for this analyte qualified (UJ) in samples JC20935-5.  
No closing calibration verification included in data package. No action taken, professional judgment.
2. bis-(2-ethylhexyl)phthalate detected in the equipment blank. No action taken, analyte not detected in the samples.
3. MS/MSD RPD results outside the upper control limits for several analytes but within guidance document acceptable criteria (< 50 % RPD). No action taken, professional judgment.  
MS/MSD % recoveries RPD outside the upper control limits for 1,4-dioxane in sample JC20934-2MS/MSD. No action taken, MS/MSD results apply to unspiked sample.
4. Internal standard area did not meet the performance criteria in sample JC20935-6. No action taken, internal standard not meeting the performance criteria not used for quantitation.

**COMMENTS:** Results are valid and can be used for decision making purposes.

**Reviewers Name:** Rafael Infante  
Chemist License 1688

**Signature:**

**Date:**

June 18, 2016

# SAMPLE ORGANIC DATA SAMPLE SUMMARY

Sample ID: JC20935-1  
Sample location: BMSMC Building 5 Area  
Sampling date: 5/20/2016  
Matrix: Groundwater

## METHOD: 8270D

| Analyte Name               | Result | Units | Dilution Factor | Lab Flag | Validation | Reportable |
|----------------------------|--------|-------|-----------------|----------|------------|------------|
| 2-Chlorophenol             | 5.5    | ug/l  | 1               | -        | U          | Yes        |
| 4-Chloro-3-methyl phenol   | 5.5    | ug/l  | 1               | -        | U          | Yes        |
| 2,4-Dichlorophenol         | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 2,4-Dimethylphenol         | 5.5    | ug/l  | 1               | -        | U          | Yes        |
| 2,4-Dinitrophenol          | 11     | ug/l  | 1               | -        | U          | Yes        |
| 4,6-Dinitro-o-cresol       | 5.5    | ug/l  | 1               | -        | U          | Yes        |
| 2-Methylphenol             | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 3&4-Methylphenol           | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 2-Nitrophenol              | 5.5    | ug/l  | 1               | -        | U          | Yes        |
| 4-Nitrophenol              | 11     | ug/l  | 1               | -        | U          | Yes        |
| Pentachlorophenol          | 5.5    | ug/l  | 1               | -        | U          | Yes        |
| Phenol                     | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 2,3,4,6-Tetrachlorophenol  | 5.5    | ug/l  | 1               | -        | U          | Yes        |
| 2,4,5-Trichlorophenol      | 5.5    | ug/l  | 1               | -        | U          | Yes        |
| 2,4,6-Trichlorophenol      | 5.5    | ug/l  | 1               | -        | U          | Yes        |
| Acenaphthene               | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Acenaphthylene             | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Acetophenone               | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| Anthracene                 | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Atrazine                   | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| Benzaldehyde               | 5.5    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(a)anthracene         | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(a)pyrene             | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(b)fluoranthene       | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(g,h,i)perylene       | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(k)fluoranthene       | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| 4-Bromophenyl phenyl ether | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Butyl benzyl phthalate     | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 1,1'-Biphenyl              | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| 2-Chloronaphthalene        | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 4-Chloroaniline            | 5.5    | ug/l  | 1               | -        | U          | Yes        |
| Carbazole                  | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Caprolactam                | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| Chrysene                   | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| bis(2-Chloroethoxy)methane | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| bis(2-Chloroethyl)ether    | 2.2    | ug/l  | 1               | -        | U          | Yes        |

|                             |      |      |   |   |    |     |
|-----------------------------|------|------|---|---|----|-----|
| bis(2-Chloroisopropyl)ether | 2.2  | ug/l | 1 | - | U  | Yes |
| 4-Chlorophenyl phenyl ether | 2.2  | ug/l | 1 | - | U  | Yes |
| 2,4-Dinitrotoluene          | 1.1  | ug/l | 1 | - | U  | Yes |
| 2,6-Dinitrotoluene          | 1.1  | ug/l | 1 | - | U  | Yes |
| 3,3'-Dichlorobenzidine      | 2.2  | ug/l | 1 | - | U  | Yes |
| Dibenzo(a,h)anthracene      | 1.1  | ug/l | 1 | - | U  | Yes |
| Dibenzofuran                | 5.5  | ug/l | 1 | - | U  | Yes |
| Di-n-butyl phthalate        | 2.2  | ug/l | 1 | - | U  | Yes |
| Di-n-octyl phthalate        | 2.2  | ug/l | 1 | - | U  | Yes |
| Diethyl phthalate           | 2.2  | ug/l | 1 | - | U  | Yes |
| Dimethyl phthalate          | 2.2  | ug/l | 1 | - | U  | Yes |
| bis(2-Ethylhexyl)phthalate  | 2.2  | ug/l | 1 | - | U  | Yes |
| Fluoranthene                | 1.1  | ug/l | 1 | - | U  | Yes |
| Fluorene                    | 0.64 | ug/l | 1 | J | UJ | Yes |
| Hexachlorobenzene           | 1.1  | ug/l | 1 | - | U  | Yes |
| Hexachlorobutadiene         | 1.1  | ug/l | 1 | - | U  | Yes |
| Hexachlorocyclopentadiene   | 11   | ug/l | 1 | - | U  | Yes |
| Hexachloroethane            | 2.2  | ug/l | 1 | - | U  | Yes |
| Indeno(1,2,3-cd)pyrene      | 1.1  | ug/l | 1 | - | U  | Yes |
| Isophorone                  | 2.2  | ug/l | 1 | - | U  | Yes |
| 1-Methylnaphthalene         | 1.1  | ug/l | 1 | - | U  | Yes |
| 2-Methylnaphthalene         | 1.1  | ug/l | 1 | - | U  | Yes |
| 2-Nitroaniline              | 5.5  | ug/l | 1 | - | U  | Yes |
| 3-Nitroaniline              | 5.5  | ug/l | 1 | - | U  | Yes |
| 4-Nitroaniline              | 5.5  | ug/l | 1 | - | U  | Yes |
| Nitrobenzene                | 2.2  | ug/l | 1 | - | U  | Yes |
| N-Nitroso-di-n-propylamine  | 2.2  | ug/l | 1 | - | U  | Yes |
| Nitrosodiphenylamine        | 5.5  | ug/l | 1 | - | U  | Yes |
| Phenanthrene                | 1.1  | ug/l | 1 | - | U  | Yes |
| Pyrene                      | 1.1  | ug/l | 1 | - | U  | Yes |
| 1,2,4,5-Tetrachlorobenzene  | 2.2  | ug/l | 1 | - | U  | Yes |

METHOD: 8270D (SIM)

|             |       |      |   |   |   |     |
|-------------|-------|------|---|---|---|-----|
| Naphthalene | 0.11  | ug/l | 1 | - | U | Yes |
| 1,4-Dioxane | 0.518 | ug/l | 1 | - | - | Yes |

Sample ID: JC20935-2  
Sample location: BMSMC Building 5 Area  
Sampling date: 5/23/2016  
Matrix: Groundwater

METHOD: 8270D

| Analyte Name                | Result | Units | Dilution Factor | Lab Flag | Validation | Reportable |
|-----------------------------|--------|-------|-----------------|----------|------------|------------|
| 2-Chlorophenol              | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 4-Chloro-3-methyl phenol    | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 2,4-Dichlorophenol          | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 2,4-Dimethylphenol          | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 2,4-Dinitrophenol           | 11     | ug/l  | 1               | -        | U          | Yes        |
| 4,6-Dinitro-o-cresol        | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 2-Methylphenol              | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 3&4-Methylphenol            | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 2-Nitrophenol               | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 4-Nitrophenol               | 11     | ug/l  | 1               | -        | U          | Yes        |
| Pentachlorophenol           | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| Phenol                      | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 2,3,4,6-Tetrachlorophenol   | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 2,4,5-Trichlorophenol       | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 2,4,6-Trichlorophenol       | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| Acenaphthene                | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Acenaphthylene              | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Acetophenone                | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| Anthracene                  | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Atrazine                    | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| Benzaldehyde                | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(a)anthracene          | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(a)pyrene              | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(b)fluoranthene        | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(g,h,i)perylene        | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(k)fluoranthene        | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| 4-Bromophenyl phenyl ether  | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Butyl benzyl phthalate      | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| 1,1'-Biphenyl               | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 2-Chloronaphthalene         | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 4-Chloroaniline             | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| Carbazole                   | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Caprolactam                 | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| Chrysene                    | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| bis(2-Chloroethoxy)methane  | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| bis(2-Chloroethyl)ether     | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| bis(2-Chloroisopropyl)ether | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 4-Chlorophenyl phenyl ether | 2.2    | ug/l  | 1               | -        | U          | Yes        |

|                            |     |      |   |   |    |     |
|----------------------------|-----|------|---|---|----|-----|
| 2,4-Dinitrotoluene         | 1.1 | ug/l | 1 | - | U  | Yes |
| 2,6-Dinitrotoluene         | 1.1 | ug/l | 1 | - | U  | Yes |
| 3,3'-Dichlorobenzidine     | 2.2 | ug/l | 1 | - | U  | Yes |
| Dibenzo(a,h)anthracene     | 1.1 | ug/l | 1 | - | U  | Yes |
| Dibenzofuran               | 5.6 | ug/l | 1 | - | U  | Yes |
| Di-n-butyl phthalate       | 2.2 | ug/l | 1 | - | U  | Yes |
| Di-n-octyl phthalate       | 2.2 | ug/l | 1 | - | U  | Yes |
| Diethyl phthalate          | 2.2 | ug/l | 1 | - | U  | Yes |
| Dimethyl phthalate         | 2.2 | ug/l | 1 | - | U  | Yes |
| bis(2-Ethylhexyl)phthalate | 2.2 | ug/l | 1 | - | U  | Yes |
| Fluoranthene               | 1.1 | ug/l | 1 | - | U  | Yes |
| Fluorene                   | 1.1 | ug/l | 1 | - | U  | Yes |
| Hexachlorobenzene          | 1.1 | ug/l | 1 | - | U  | Yes |
| Hexachlorobutadiene        | 1.1 | ug/l | 1 | - | U  | Yes |
| Hexachlorocyclopentadiene  | 11  | ug/l | 1 | - | U  | Yes |
| Hexachloroethane           | 2.2 | ug/l | 1 | - | U  | Yes |
| Indeno(1,2,3-cd)pyrene     | 1.1 | ug/l | 1 | - | U  | Yes |
| Isophorone                 | 2.2 | ug/l | 1 | - | U  | Yes |
| 1-Methylnaphthalene        | 1.1 | ug/l | 1 | - | U  | Yes |
| 2-Methylnaphthalene        | 1.1 | ug/l | 1 | - | U  | Yes |
| 2-Nitroaniline             | 5.6 | ug/l | 1 | - | UJ | Yes |
| 3-Nitroaniline             | 5.6 | ug/l | 1 | - | U  | Yes |
| 4-Nitroaniline             | 5.6 | ug/l | 1 | - | U  | Yes |
| Nitrobenzene               | 2.2 | ug/l | 1 | - | U  | Yes |
| N-Nitroso-di-n-propylamine | 2.2 | ug/l | 1 | - | U  | Yes |
| Nitrosodiphenylamine       | 5.6 | ug/l | 1 | - | U  | Yes |
| Phenanthrene               | 1.1 | ug/l | 1 | - | U  | Yes |
| Pyrene                     | 1.1 | ug/l | 1 | - | U  | Yes |
| 1,2,4,5-Tetrachlorobenzene | 2.2 | ug/l | 1 | - | U  | Yes |

METHOD: 8270D (SIM)

|             |      |      |   |   |   |     |
|-------------|------|------|---|---|---|-----|
| Naphthalene | 0.11 | ug/l | 1 | - | U | Yes |
| 1,4-Dioxane | 3.26 | ug/l | 1 | - | U | Yes |

Sample ID: JC20935-3  
Sample location: BMSMC Building 5 Area  
Sampling date: 5/23/2016  
Matrix: Groundwater

METHOD: 8270D

| Analyte Name                | Result | Units | Dilution Factor | Lab Flag | Validation | Reportable |
|-----------------------------|--------|-------|-----------------|----------|------------|------------|
| 2-Chlorophenol              | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 4-Chloro-3-methyl phenol    | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 2,4-Dichlorophenol          | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 2,4-Dimethylphenol          | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 2,4-Dinitrophenol           | 11     | ug/l  | 1               | -        | U          | Yes        |
| 4,6-Dinitro-o-cresol        | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 2-Methylphenol              | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 3&4-Methylphenol            | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 2-Nitrophenol               | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 4-Nitrophenol               | 11     | ug/l  | 1               | -        | U          | Yes        |
| Pentachlorophenol           | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| Phenol                      | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 2,3,4,6-Tetrachlorophenol   | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 2,4,5-Trichlorophenol       | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 2,4,6-Trichlorophenol       | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| Acenaphthene                | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Acenaphthylene              | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Acetophenone                | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| Anthracene                  | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Atrazine                    | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| Benzaldehyde                | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(a)anthracene          | 0.58   | ug/l  | 1               | J        | UJ         | Yes        |
| Benzo(a)pyrene              | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(b)fluoranthene        | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(g,h,i)perylene        | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(k)fluoranthene        | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| 4-Bromophenyl phenyl ether  | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Butyl benzyl phthalate      | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| 1,1'-Biphenyl               | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| 2-Chloronaphthalene         | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 4-Chloroaniline             | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| Carbazole                   | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Caprolactam                 | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| Chrysene                    | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| bis(2-Chloroethoxy)methane  | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| bis(2-Chloroethyl)ether     | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| bis(2-Chloroisopropyl)ether | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 4-Chlorophenyl phenyl ether | 2.2    | ug/l  | 1               | -        | U          | Yes        |



|                            |     |      |   |   |   |     |
|----------------------------|-----|------|---|---|---|-----|
| 2,4-Dinitrotoluene         | 1.1 | ug/l | 1 | - | U | Yes |
| 2,6-Dinitrotoluene         | 1.1 | ug/l | 1 | - | U | Yes |
| 3,3'-Dichlorobenzidine     | 2.2 | ug/l | 1 | - | U | Yes |
| Dibenzo(a,h)anthracene     | 1.1 | ug/l | 1 | - | U | Yes |
| Dibenzofuran               | 5.6 | ug/l | 1 | - | U | Yes |
| Di-n-butyl phthalate       | 2.2 | ug/l | 1 | - | U | Yes |
| Di-n-octyl phthalate       | 2.2 | ug/l | 1 | - | U | Yes |
| Diethyl phthalate          | 2.2 | ug/l | 1 | - | U | Yes |
| Dimethyl phthalate         | 2.2 | ug/l | 1 | - | U | Yes |
| bis(2-Ethylhexyl)phthalate | 2.2 | ug/l | 1 | - | U | Yes |
| Fluoranthene               | 5.7 | ug/l | 1 | - | - | Yes |
| Fluorene                   | 1.1 | ug/l | 1 | - | U | Yes |
| Hexachlorobenzene          | 1.1 | ug/l | 1 | - | U | Yes |
| Hexachlorobutadiene        | 1.1 | ug/l | 1 | - | U | Yes |
| Hexachlorocyclopentadiene  | 11  | ug/l | 1 | - | U | Yes |
| Hexachloroethane           | 2.2 | ug/l | 1 | - | U | Yes |
| Indeno(1,2,3-cd)pyrene     | 1.1 | ug/l | 1 | - | U | Yes |
| Isophorone                 | 2.2 | ug/l | 1 | - | U | Yes |
| 1-Methylnaphthalene        | 1.1 | ug/l | 1 | - | U | Yes |
| 2-Methylnaphthalene        | 1.1 | ug/l | 1 | - | U | Yes |
| 2-Nitroaniline             | 5.6 | ug/l | 1 | - | U | Yes |
| 3-Nitroaniline             | 5.6 | ug/l | 1 | - | U | Yes |
| 4-Nitroaniline             | 5.6 | ug/l | 1 | - | U | Yes |
| Nitrobenzene               | 2.2 | ug/l | 1 | - | U | Yes |
| N-Nitroso-di-n-propylamine | 2.2 | ug/l | 1 | - | U | Yes |
| Nitrosodiphenylamine       | 5.6 | ug/l | 1 | - | U | Yes |
| Phenanthrene               | 1.1 | ug/l | 1 | - | U | Yes |
| Pyrene                     | 3.0 | ug/l | 1 | - | - | Yes |
| 1,2,4,5-Tetrachlorobenzene | 2.2 | ug/l | 1 | - | U | Yes |

METHOD: 8270D (SIM)

|             |       |      |   |   |   |     |
|-------------|-------|------|---|---|---|-----|
| Naphthalene | 0.11  | ug/l | 1 | - | U | Yes |
| 1,4-Dioxane | 0.243 | ug/l | 1 | - | - | Yes |

Sample ID: JC20935-4  
Sample location: BSMC Building 5 Area  
Sampling date: 5/23/2016  
Matrix: Soil

METHOD: 8270D

| Analyte Name                | Result | Units | Dilution Factor | Lab Flag | Validation | Reportable |
|-----------------------------|--------|-------|-----------------|----------|------------|------------|
| 2-Chlorophenol              | 71     | ug/kg | 1               | -        | U          | Yes        |
| 4-Chloro-3-methyl phenol    | 180    | ug/kg | 1               | -        | U          | Yes        |
| 2,4-Dichlorophenol          | 180    | ug/kg | 1               | -        | U          | Yes        |
| 2,4-Dimethylphenol          | 180    | ug/kg | 1               | -        | U          | Yes        |
| 2,4-Dinitrophenol           | 180    | ug/kg | 1               | -        | U          | Yes        |
| 4,6-Dinitro-o-cresol        | 180    | ug/kg | 1               | -        | U          | Yes        |
| 2-Methylphenol              | 71     | ug/kg | 1               | -        | U          | Yes        |
| 3&4-Methylphenol            | 71     | ug/kg | 1               | -        | U          | Yes        |
| 2-Nitrophenol               | 180    | ug/kg | 1               | -        | U          | Yes        |
| 4-Nitrophenol               | 360    | ug/kg | 1               | -        | U          | Yes        |
| Pentachlorophenol           | 180    | ug/kg | 1               | -        | U          | Yes        |
| Phenol                      | 71     | ug/kg | 1               | -        | U          | Yes        |
| 2,3,4,6-Tetrachlorophenol   | 180    | ug/kg | 1               | -        | U          | Yes        |
| 2,4,5-Trichlorophenol       | 180    | ug/kg | 1               | -        | U          | Yes        |
| 2,4,6-Trichlorophenol       | 180    | ug/kg | 1               | -        | U          | Yes        |
| Acenaphthene                | 36     | ug/kg | 1               | -        | U          | Yes        |
| Acenaphthylene              | 36     | ug/kg | 1               | -        | U          | Yes        |
| Acetophenone                | 180    | ug/kg | 1               | -        | U          | Yes        |
| Anthracene                  | 36     | ug/kg | 1               | -        | U          | Yes        |
| Atrazine                    | 71     | ug/kg | 1               | -        | U          | Yes        |
| Benzo(a)anthracene          | 59.0   | ug/kg | 1               | -        | -          | Yes        |
| Benzo(a)pyrene              | 35.7   | ug/kg | 1               | J        | UJ         | Yes        |
| Benzo(b)fluoranthene        | 56.6   | ug/kg | 1               | -        | -          | Yes        |
| Benzo(g,h,i)perylene        | 36     | ug/kg | 1               | -        | U          | Yes        |
| Benzo(k)fluoranthene        | 20.4   | ug/kg | 1               | J        | UJ         | Yes        |
| 4-Bromophenyl phenyl ether  | 71     | ug/kg | 1               | -        | U          | Yes        |
| Butyl benzyl phthalate      | 71     | ug/kg | 1               | -        | UJ         | Yes        |
| 1,1'-Biphenyl               | 71     | ug/kg | 1               | -        | U          | Yes        |
| Benzaldehyde                | 180    | ug/kg | 1               | -        | U          | Yes        |
| 2-Chloronaphthalene         | 71     | ug/kg | 1               | -        | U          | Yes        |
| 4-Chloroaniline             | 180    | ug/kg | 1               | -        | U          | Yes        |
| Carbazole                   | 71     | ug/kg | 1               | -        | U          | Yes        |
| Caprolactam                 | 71     | ug/kg | 1               | -        | U          | Yes        |
| Chrysene                    | 41.7   | ug/kg | 1               | -        | -          | Yes        |
| bis(2-Chloroethoxy)methane  | 71     | ug/kg | 1               | -        | U          | Yes        |
| bis(2-Chloroethyl)ether     | 71     | ug/kg | 1               | -        | U          | Yes        |
| bis(2-Chloroisopropyl)ether | 71     | ug/kg | 1               | -        | U          | Yes        |
| 4-Chlorophenyl phenyl ether | 71     | ug/kg | 1               | -        | U          | Yes        |

|                            |     |       |   |   |    |     |
|----------------------------|-----|-------|---|---|----|-----|
| 2,4-Dinitrotoluene         | 36  | ug/kg | 1 | - | U  | Yes |
| 2,6-Dinitrotoluene         | 36  | ug/kg | 1 | - | U  | Yes |
| 3,3'-Dichlorobenzidine     | 71  | ug/kg | 1 | - | U  | Yes |
| Dibenzo(a,h)anthracene     | 36  | ug/kg | 1 | - | U  | Yes |
| Dibenzofuran               | 71  | ug/kg | 1 | - | U  | Yes |
| Di-n-butyl phthalate       | 71  | ug/kg | 1 | - | U  | Yes |
| Di-n-octyl phthalate       | 71  | ug/kg | 1 | - | U  | Yes |
| Diethyl phthalate          | 71  | ug/kg | 1 | - | U  | Yes |
| Dimethyl phthalate         | 71  | ug/kg | 1 | - | U  | Yes |
| bis(2-Ethylhexyl)phthalate | 71  | ug/kg | 1 | - | U  | Yes |
| Fluoranthene               | 125 | ug/kg | 1 | - | -  | Yes |
| Fluorene                   | 36  | ug/kg | 1 | - | U  | Yes |
| Hexachlorobenzene          | 71  | ug/kg | 1 | - | U  | Yes |
| Hexachlorobutadiene        | 36  | ug/kg | 1 | - | U  | Yes |
| Hexachlorocyclopentadiene  | 360 | ug/kg | 1 | - | U  | Yes |
| Hexachloroethane           | 180 | ug/kg | 1 | - | U  | Yes |
| Indeno(1,2,3-cd)pyrene     | 36  | ug/kg | 1 | - | U  | Yes |
| Isophorone                 | 71  | ug/kg | 1 | - | U  | Yes |
| 1-Methylnaphthalene        | 71  | ug/kg | 1 | - | U  | Yes |
| 2-Methylnaphthalene        | 71  | ug/kg | 1 | - | U  | Yes |
| 2-Nitroaniline             | 180 | ug/kg | 1 | - | UJ | Yes |
| 3-Nitroaniline             | 180 | ug/kg | 1 | - | U  | Yes |
| 4-Nitroaniline             | 180 | ug/kg | 1 | - | U  | Yes |
| Nitrobenzene               | 71  | ug/kg | 1 | - | U  | Yes |
| N-Nitroso-di-n-propylamine | 71  | ug/kg | 1 | - | U  | Yes |
| Nitrosodiphenylamine       | 180 | ug/kg | 1 | - | U  | Yes |
| Phenanthrene               | 36  | ug/kg | 1 | - | U  | Yes |
| Pyrene                     | 111 | ug/kg | 1 | - | -  | Yes |
| 1,2,4,5-Tetrachlorobenzene | 180 | ug/kg | 1 | - | U  | Yes |

METHOD: 8270D (SIM)

|             |     |       |   |   |   |     |
|-------------|-----|-------|---|---|---|-----|
| Naphthalene | 3.6 | ug/kg | 1 | - | U | Yes |
| 1,4-Dioxane | 3.6 | ug/kg | 1 | - | U | Yes |

Sample ID: JC20935-5  
Sample location: BMSMC Building 5 Area  
Sampling date: 5/24/2016  
Matrix: Groundwater

METHOD: 8270D

| Analyte Name                | Result | Units | Dilution | Factor | Lab Flag | Validation | Reportable |
|-----------------------------|--------|-------|----------|--------|----------|------------|------------|
| 2-Chlorophenol              | 71     | ug/kg | 1        |        | -        | U          | Yes        |
| 4-Chloro-3-methyl phenol    | 180    | ug/kg | 1        |        | -        | U          | Yes        |
| 2,4-Dichlorophenol          | 180    | ug/kg | 1        |        | -        | U          | Yes        |
| 2,4-Dimethylphenol          | 180    | ug/kg | 1        |        | -        | U          | Yes        |
| 2,4-Dinitrophenol           | 180    | ug/kg | 1        |        | -        | U          | Yes        |
| 4,6-Dinitro-o-cresol        | 180    | ug/kg | 1        |        | -        | U          | Yes        |
| 2-Methylphenol              | 71     | ug/kg | 1        |        | -        | U          | Yes        |
| 3&4-Methylphenol            | 71     | ug/kg | 1        |        | -        | U          | Yes        |
| 2-Nitrophenol               | 180    | ug/kg | 1        |        | -        | U          | Yes        |
| 4-Nitrophenol               | 360    | ug/kg | 1        |        | -        | U          | Yes        |
| Pentachlorophenol           | 180    | ug/kg | 1        |        | -        | U          | Yes        |
| Phenol                      | 71     | ug/kg | 1        |        | -        | U          | Yes        |
| 2,3,4,6-Tetrachlorophenol   | 180    | ug/kg | 1        |        | -        | U          | Yes        |
| 2,4,5-Trichlorophenol       | 180    | ug/kg | 1        |        | -        | U          | Yes        |
| 2,4,6-Trichlorophenol       | 180    | ug/kg | 1        |        | -        | U          | Yes        |
| Acenaphthene                | 36.4   | ug/kg | 1        |        | -        | -          | Yes        |
| Acenaphthylene              | 36     | ug/kg | 1        |        | -        | U          | Yes        |
| Acetophenone                | 180    | ug/kg | 1        |        | -        | U          | Yes        |
| Anthracene                  | 179    | ug/kg | 1        |        | -        | -          | Yes        |
| Atrazine                    | 71     | ug/kg | 1        |        | -        | U          | Yes        |
| Benzo(a)anthracene          | 232    | ug/kg | 1        |        | -        | U          | Yes        |
| Benzo(a)pyrene              | 125    | ug/kg | 1        |        | -        | U          | Yes        |
| Benzo(b)fluoranthene        | 173    | ug/kg | 1        |        | -        | U          | Yes        |
| Benzo(g,h,i)perylene        | 49.9   | ug/kg | 1        |        | -        | U          | Yes        |
| Benzo(k)fluoranthene        | 67.3   | ug/kg | 1        |        | -        | U          | Yes        |
| 4-Bromophenyl phenyl ether  | 71     | ug/kg | 1        |        | -        | U          | Yes        |
| Butyl benzyl phthalate      | 71     | ug/kg | 1        |        | -        | U          | Yes        |
| 1,1'-Biphenyl               | 71     | ug/kg | 1        |        | -        | U          | Yes        |
| Benzaldehyde                | 180    | ug/kg | 1        |        | -        | U          | Yes        |
| 2-Chloronaphthalene         | 71     | ug/kg | 1        |        | -        | U          | Yes        |
| 4-Chloroaniline             | 180    | ug/kg | 1        |        | -        | U          | Yes        |
| Carbazole                   | 16.7   | ug/kg | 1        |        | J        | UJ         | Yes        |
| Caprolactam                 | 71     | ug/kg | 1        |        | -        | U          | Yes        |
| Chrysene                    | 205    | ug/kg | 1        |        | -        | -          | Yes        |
| bis(2-Chloroethoxy)methane  | 71     | ug/kg | 1        |        | -        | U          | Yes        |
| bis(2-Chloroethyl)ether     | 71     | ug/kg | 1        |        | -        | U          | Yes        |
| bis(2-Chloroisopropyl)ether | 71     | ug/kg | 1        |        | -        | U          | Yes        |
| 4-Chlorophenyl phenyl ether | 71     | ug/kg | 1        |        | -        | U          | Yes        |

|                            |      |       |   |   |    |     |
|----------------------------|------|-------|---|---|----|-----|
| 2,4-Dinitrotoluene         | 36   | ug/kg | 1 | - | UJ | Yes |
| 2,6-Dinitrotoluene         | 36   | ug/kg | 1 | - | U  | Yes |
| 3,3'-Dichlorobenzidine     | 71   | ug/kg | 1 | - | U  | Yes |
| Dibenzo(a,h)anthracene     | 36   | ug/kg | 1 | - | U  | Yes |
| Dibenzofuran               | 51.1 | ug/kg | 1 | J | UJ | Yes |
| Di-n-butyl phthalate       | 71   | ug/kg | 1 | - | U  | Yes |
| Di-n-octyl phthalate       | 71   | ug/kg | 1 | - | U  | Yes |
| Diethyl phthalate          | 71   | ug/kg | 1 | - | U  | Yes |
| Dimethyl phthalate         | 71   | ug/kg | 1 | - | U  | Yes |
| bis(2-Ethylhexyl)phthalate | 52.6 | ug/kg | 1 | J | UJ | Yes |
| Fluoranthene               | 1040 | ug/kg | 1 | - | -  | Yes |
| Fluorene                   | 106  | ug/kg | 1 | - | -  | Yes |
| Hexachlorobenzene          | 71   | ug/kg | 1 | - | U  | Yes |
| Hexachlorobutadiene        | 36   | ug/kg | 1 | - | U  | Yes |
| Hexachlorocyclopentadiene  | 360  | ug/kg | 1 | - | U  | Yes |
| Hexachloroethane           | 180  | ug/kg | 1 | - | U  | Yes |
| Indeno(1,2,3-cd)pyrene     | 60   | ug/kg | 1 | - | -  | Yes |
| Isophorone                 | 71   | ug/kg | 1 | - | U  | Yes |
| 1-Methylnaphthalene        | 1380 | ug/kg | 1 | - | -  | Yes |
| 2-Methylnaphthalene        | 1760 | ug/kg | 1 | - | -  | Yes |
| 2-Nitroaniline             | 180  | ug/kg | 1 | - | UJ | Yes |
| 3-Nitroaniline             | 180  | ug/kg | 1 | - | U  | Yes |
| 4-Nitroaniline             | 180  | ug/kg | 1 | - | U  | Yes |
| Naphthalene                | 427  | ug/kg | 1 | - | -  | Yes |
| Nitrobenzene               | 71   | ug/kg | 1 | - | U  | Yes |
| N-Nitroso-di-n-propylamine | 71   | ug/kg | 1 | - | U  | Yes |
| Nitrosodiphenylamine       | 180  | ug/kg | 1 | - | U  | Yes |
| Phenanthrene               | 825  | ug/kg | 1 | - | -  | Yes |
| Pyrene                     | 900  | ug/kg | 1 | - | -  | Yes |
| 1,2,4,5-Tetrachlorobenzene | 180  | ug/kg | 1 | - | U  | Yes |

METHOD: 8270D (SIM)

|             |     |       |   |   |   |     |
|-------------|-----|-------|---|---|---|-----|
| 1,4-Dioxane | 3.6 | ug/kg | 1 | - | - | Yes |
|-------------|-----|-------|---|---|---|-----|

Sample ID: JC20935-6  
Sample location: BMSMC Building 5 Area  
Sampling date: 5/20/2016  
Matrix: AQ - Equipment Blank

METHOD: 8270D

| Analyte Name                | Result | Units | Dilution Factor | Lab Flag | Validation | Reportable |
|-----------------------------|--------|-------|-----------------|----------|------------|------------|
| 2-Chlorophenol              | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 4-Chloro-3-methyl phenol    | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 2,4-Dichlorophenol          | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 2,4-Dimethylphenol          | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 2,4-Dinitrophenol           | 11     | ug/l  | 1               | -        | U          | Yes        |
| 4,6-Dinitro-o-cresol        | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 2-Methylphenol              | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 3&4-Methylphenol            | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 2-Nitrophenol               | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 4-Nitrophenol               | 11     | ug/l  | 1               | -        | U          | Yes        |
| Pentachlorophenol           | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| Phenol                      | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 2,3,4,6-Tetrachlorophenol   | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 2,4,5-Trichlorophenol       | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| 2,4,6-Trichlorophenol       | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| Acenaphthene                | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Acenaphthylene              | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Acetophenone                | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| Anthracene                  | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Atrazine                    | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| Benzaldehyde                | 5.6    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(a)anthracene          | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(a)pyrene              | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(b)fluoranthene        | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(g,h,i)perylene        | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Benzo(k)fluoranthene        | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| 4-Bromophenyl phenyl ether  | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Butyl benzyl phthalate      | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 1,1'-Biphenyl               | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| 2-Chloronaphthalene         | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| 4-Chloroaniline             | 4.8    | ug/l  | 1               | -        | U          | Yes        |
| Carbazole                   | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| Caprolactam                 | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| Chrysene                    | 1.1    | ug/l  | 1               | -        | U          | Yes        |
| bis(2-Chloroethoxy)methane  | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| bis(2-Chloroethyl)ether     | 2.2    | ug/l  | 1               | -        | U          | Yes        |
| bis(2-Chloroisopropyl)ether | 2.2    | ug/l  | 1               | -        | U          | Yes        |

|                             |     |      |   |   |   |     |
|-----------------------------|-----|------|---|---|---|-----|
| 4-Chlorophenyl phenyl ether | 2.2 | ug/l | 1 | - | U | Yes |
| 2,4-Dinitrotoluene          | 1.1 | ug/l | 1 | - | U | Yes |
| 2,6-Dinitrotoluene          | 1.1 | ug/l | 1 | - | U | Yes |
| 3,3'-Dichlorobenzidine      | 2.2 | ug/l | 1 | - | U | Yes |
| Dibenzo(a,h)anthracene      | 1.1 | ug/l | 1 | - | U | Yes |
| Dibenzofuran                | 5.6 | ug/l | 1 | - | U | Yes |
| Di-n-butyl phthalate        | 2.2 | ug/l | 1 | - | U | Yes |
| Di-n-octyl phthalate        | 2.2 | ug/l | 1 | - | U | Yes |
| Diethyl phthalate           | 2.2 | ug/l | 1 | - | U | Yes |
| Dimethyl phthalate          | 2.2 | ug/l | 1 | - | U | Yes |
| bis(2-Ethylhexyl)phthalate  | 4.1 | ug/l | 1 | - | - | Yes |
| Fluoranthene                | 1.1 | ug/l | 1 | - | U | Yes |
| Fluorene                    | 1.1 | ug/l | 1 | - | U | Yes |
| Hexachlorobenzene           | 1.1 | ug/l | 1 | - | U | Yes |
| Hexachlorobutadiene         | 1.1 | ug/l | 1 | - | U | Yes |
| Hexachlorocyclopentadiene   | 11  | ug/l | 1 | - | U | Yes |
| Hexachloroethane            | 2.2 | ug/l | 1 | - | U | Yes |
| Indeno(1,2,3-cd)pyrene      | 1.1 | ug/l | 1 | - | U | Yes |
| Isophorone                  | 2.2 | ug/l | 1 | - | U | Yes |
| 1-Methylnaphthalene         | 1.1 | ug/l | 1 | - | U | Yes |
| 2-Methylnaphthalene         | 1.1 | ug/l | 1 | - | U | Yes |
| 2-Nitroaniline              | 5.6 | ug/l | 1 | - | U | Yes |
| 3-Nitroaniline              | 5.6 | ug/l | 1 | - | U | Yes |
| 4-Nitroaniline              | 5.6 | ug/l | 1 | - | U | Yes |
| Nitrobenzene                | 2.2 | ug/l | 1 | - | U | Yes |
| N-Nitroso-di-n-propylamine  | 2.2 | ug/l | 1 | - | U | Yes |
| Nitrosodiphenylamine        | 5.6 | ug/l | 1 | - | U | Yes |
| Phenanthrene                | 1.1 | ug/l | 1 | - | U | Yes |
| Pyrene                      | 1.1 | ug/l | 1 | - | U | Yes |
| 1,2,4,5-Tetrachlorobenzene  | 2.2 | ug/l | 1 | - | U | Yes |

METHOD: 8270D (SIM)

|             |      |      |   |   |   |     |
|-------------|------|------|---|---|---|-----|
| Naphthalene | 0.11 | ug/l | 1 | - | U | Yes |
| 1,4-Dioxane | 0.11 | ug/l | 1 | - | U | Yes |

# DATA REVIEW WORKSHEETS

Project Number: JC20935

Date: May 20-23, 2016

Shipping Date: May 23, 2016

EPA Region: 2

## REVIEW OF SEMIVOLATILE ORGANIC PACKAGE

The following guidelines for evaluating volatile organics were created to delineate required validation actions. This document will assist the reviewer in using professional judgment to make more informed decision and in better serving the needs of the data users. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: EPA Hazardous Waste Support Section, SOP HW-35A, July 2015 –Revision 0. *Semivolatile Data Validation*. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

The hardcopied (laboratory name) Accutest data package received has been reviewed and the quality control and performance data summarized. The data review for SVOCs included:

Lab. Project/SDG No.: JC20935

Sample matrix: Soil/Groundwater

No. of Samples: 6 Full scan/6 SIM

Trip blank No.: -

Field blank No.: -

Equipment blank No.: JC20935-6

Field duplicate No.: -

|                                                                         |                                                               |
|-------------------------------------------------------------------------|---------------------------------------------------------------|
| <input checked="" type="checkbox"/> Data Completeness                   | <input checked="" type="checkbox"/> Laboratory Control Spikes |
| <input checked="" type="checkbox"/> Holding Times                       | <input checked="" type="checkbox"/> Field Duplicates          |
| <input checked="" type="checkbox"/> GC/MS Tuning                        | <input checked="" type="checkbox"/> Calibrations              |
| <input checked="" type="checkbox"/> Internal Standard Performance       | <input checked="" type="checkbox"/> Compound Identifications  |
| <input checked="" type="checkbox"/> Blanks                              | <input checked="" type="checkbox"/> Compound Quantitation     |
| <input checked="" type="checkbox"/> Surrogate Recoveries                | <input checked="" type="checkbox"/> Quantitation Limits       |
| <input checked="" type="checkbox"/> Matrix Spike/Matrix Spike Duplicate |                                                               |

Overall Comments: ABN\_TCL\_list\_by\_method\_SW846-8270D; Naphthalene\_and\_1,4-Dioxane\_analyzed\_by\_method\_SW846-8270D\_(SIM)

### Definition of Qualifiers:

J- Estimated results  
 U- Compound not detected  
 R- Rejected data  
 UJ- Estimated non-detect

Reviewer: Rafael Lafont

Date: June 18, 2016





## DATA REVIEW WORKSHEETS

All criteria were met X  
 Criteria were not met  
 and/or see below \_\_\_\_\_

### HOLDING TIMES

The objective of this parameter is to ascertain the validity of the results based on the holding time of the sample from time of collection to the time of analysis.

Complete table for all samples and note the analysis and/or preservation not within criteria

| SAMPLE ID                                                                                                      | DATE SAMPLED | DATE EXTRACTED/ANALYZED | pH | ACTION |
|----------------------------------------------------------------------------------------------------------------|--------------|-------------------------|----|--------|
|                                                                                                                |              |                         |    |        |
| All samples extracted and analyzed within method recommended holding time. Sample preservation was acceptable. |              |                         |    |        |
|                                                                                                                |              |                         |    |        |
|                                                                                                                |              |                         |    |        |

Cooler temperature (Criteria:  $4 \pm 2$  °C): 5.1°C

### Actions

Results will be qualified based on the criteria of the following Table:

**Table 1. Holding Time Actions for Semivolatile Analyses**

| Matrix      | Preserved | Criteria                                                         | Action                        |                                   |
|-------------|-----------|------------------------------------------------------------------|-------------------------------|-----------------------------------|
|             |           |                                                                  | Detected Associated Compounds | Non-Detected Associated Compounds |
| Aqueous     | No        | $\leq 7$ days (for extraction)<br>$\leq 40$ days (for analysis)  | Use professional judgment     |                                   |
|             | No        | $> 7$ days (for extraction)<br>$> 40$ days (for analysis)        | J                             | Use professional judgment         |
|             | Yes       | $\leq 7$ days (for extraction)<br>$\leq 40$ days (for analysis)  | No qualification              |                                   |
|             | Yes       | $> 7$ days (for extraction)<br>$> 40$ days (for analysis)        | J                             | UJ                                |
|             | Yes/No    | Grossly Exceeded                                                 | J                             | UJ or R                           |
| Non-Aqueous | No        | $\leq 14$ days (for extraction)<br>$\leq 40$ days (for analysis) | Use professional judgment     |                                   |
|             | No        | $> 14$ days (for extraction)<br>$> 40$ days (for analysis)       | J                             | Use professional judgment         |
|             | Yes       | $\leq 14$ days (for extraction)<br>$\leq 40$ days (for analysis) | No qualification              |                                   |
|             | Yes       | $> 14$ days (for extraction)<br>$> 40$ days (for analysis)       | J                             | UJ                                |
|             | Yes/No    | Grossly Exceeded                                                 | J                             | UJ or R                           |

## DATA REVIEW WORKSHEETS

All criteria were met ☒  
Criteria were not met see below ☐

### GC/MS TUNING

The assessment of the tuning results is to determine if the sample instrumentation is within the standard tuning QC limits

☒ The DFTPP performance results were reviewed and found to be within the specified criteria.

☒ DFTPP tuning was performed for every 12 hours of sample analysis.

If no, use professional judgment to determine whether the associated data should be accepted, qualified or rejected.

Notes: These requirements do not apply when samples are analyzed by the Selected Ion Monitoring (SIM) technique.

All mass spectrometer conditions must be identical to those used during the sample analysis. Background subtraction actions resulting in spectral distortion are unacceptable

Notes: No data should be qualified based of DFTPP failure.

The requirement to analyze the instrument performance check solution is optional when analysis of PAHs/pentachlorophenol is to be performed by the SIM technique.

List the samples affected:

---

---

---

---

#### Actions:

1. If sample are analyzed without a preceding valid instrument performance check or are analyzed 12 hours after the Instrument Performance Check, qualify all data in those samples as unusable (R).
2. If ion abundance criteria are not met, use professional judgment to determine to what extent the data may be utilized.
3. State in the Data Review Narrative, decisions to use analytical data associated with DFTPP instrument performance checks not meeting the contract requirements.
4. Use professional judgment to determine if associated data should be qualified based on the spectrum of the mass calibration compounds.

## DATA REVIEW WORKSHEETS

All criteria were met ☒   
 Criteria were not met   
 and/or see below

### INITIAL CALIBRATION VERIFICATION

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data.

Date of initial calibration: 05/25/16; 05/31/16; 06/06/16 (SIM)   
 Instrument ID numbers: GCMS4P   
 Matrix/Level: Aqueous/low

Date of initial calibration: 05/13/2016 (Scan)   
 Instrument ID numbers: GCMS6P   
 Matrix/Level: Aqueous/low

| DATE                                                                                                                 | LAB FILE ID# | CRITERIA OUT RFs, %RSD, %D, r | COMPOUND | SAMPLES AFFECTED |
|----------------------------------------------------------------------------------------------------------------------|--------------|-------------------------------|----------|------------------|
|                                                                                                                      |              |                               |          |                  |
| Initial and initial calibration verification meets the method and guidance validation document performance criteria. |              |                               |          |                  |
|                                                                                                                      |              |                               |          |                  |

Actions:

Qualify the initial calibration analytes listed in Table 2 using the following criteria:

**Table 3. Initial Calibration Actions for Semivolatile Analysis**

| Criteria                                                              | Action                               |                                |
|-----------------------------------------------------------------------|--------------------------------------|--------------------------------|
|                                                                       | Detect                               | Non-detect                     |
| Initial Calibration not performed at specified frequency and sequence | Use professional judgment<br>R       | Use professional judgment<br>R |
| Initial Calibration not performed at the specified concentrations     | J                                    | UJ                             |
| RRF < Minimum RRF in Table 2 for target analyte                       | Use professional judgment<br>J+ or R | R                              |
| RRF ≥ Minimum RRF in Table 2 for target analyte                       | No qualification                     | No qualification               |
| %RSD > Maximum %RSD in Table 2 for target analyte                     | J                                    | Use professional judgment      |
| %RSD ≤ Maximum %RSD in Table 2 for target analyte                     | No qualification                     | No qualification               |

# DATA REVIEW WORKSHEETS

## Initial Calibration

**Table 2. RRF, %RSD, and %D Acceptance Criteria in Initial Calibration and CCV for Semivolatil Analysis**

| Analyte                       | Minimum RRF | Maximum %RSD | Opening Maximum %D' | Opening Maximum %D' |
|-------------------------------|-------------|--------------|---------------------|---------------------|
| 1,4-Dioxane                   | 0.010       | 40.0         | ± 40.0              | ± 50.0              |
| Benzaldehyde                  | 0.100       | 40.0         | ± 40.0              | ± 50.0              |
| Phenol                        | 0.080       | 20.0         | ± 20.0              | ± 25.0              |
| Bis(2-chloroethyl)ether       | 0.100       | 20.0         | ± 20.0              | ± 25.0              |
| 2-Chlorophenol                | 0.200       | 20.0         | ± 20.0              | ± 25.0              |
| 2-Methylphenol                | 0.010       | 20.0         | ± 20.0              | ± 25.0              |
| 3-Methylphenol                | 0.010       | 20.0         | ± 20.0              | ± 25.0              |
| 2,2'-Oxybis-(1-chloropropane) | 0.010       | 20.0         | ± 25.0              | ± 50.0              |
| Acetophenone                  | 0.060       | 20.0         | ± 20.0              | ± 25.0              |
| 4-Methylphenol                | 0.010       | 20.0         | ± 20.0              | ± 25.0              |
| N-Nitroso-di-n-propylamine    | 0.080       | 20.0         | ± 25.0              | ± 25.0              |
| Hexachloroethane              | 0.100       | 20.0         | ± 20.0              | ± 25.0              |
| Nitrobenzene                  | 0.090       | 20.0         | ± 20.0              | ± 25.0              |
| Isophorone                    | 0.100       | 20.0         | ± 20.0              | ± 25.0              |
| 2-Nitrophenol                 | 0.060       | 20.0         | ± 20.0              | ± 25.0              |
| 2,4-Dimethylphenol            | 0.050       | 20.0         | ± 25.0              | ± 50.0              |
| Bis(2-chloroethoxy)methane    | 0.080       | 20.0         | ± 20.0              | ± 25.0              |
| 2,4-Dichlorophenol            | 0.060       | 20.0         | ± 20.0              | ± 25.0              |
| Naphthalene                   | 0.200       | 20.0         | ± 20.0              | ± 25.0              |
| 4-Chloroaniline               | 0.010       | 40.0         | ± 40.0              | ± 50.0              |
| Hexachlorobutadiene           | 0.040       | 20.0         | ± 20.0              | ± 25.0              |
| Caprolactam                   | 0.010       | 40.0         | ± 30.0              | ± 50.0              |
| 4-Chloro-3-methylphenol       | 0.040       | 20.0         | ± 20.0              | ± 25.0              |
| 2-Methylnaphthalene           | 0.100       | 20.0         | ± 20.0              | ± 25.0              |
| Hexachlorocyclopentadiene     | 0.010       | 40.0         | ± 40.0              | ± 50.0              |
| 2,4,6-Trichlorophenol         | 0.090       | 20.0         | ± 20.0              | ± 25.0              |
| 2,4,5-Trichlorophenol         | 0.100       | 20.0         | ± 20.0              | ± 25.0              |
| 1,1'-Biphenyl                 | 0.200       | 20.0         | ± 20.0              | ± 25.0              |

DATA REVIEW WORKSHEETS

| Analyte                    | Minimum<br>RRF | Maximum<br>%RSD | Opening<br>Maximum<br>%D <sup>1</sup> | Opening<br>Maximum<br>%D <sup>1</sup> |
|----------------------------|----------------|-----------------|---------------------------------------|---------------------------------------|
| 2-Chloronaphthalene        | 0.300          | 20.0            | ± 20.0                                | ± 25.0                                |
| 2-Nitroaniline             | 0.060          | 20.0            | ± 25.0                                | ± 25.0                                |
| Dimethylphthalate          | 0.300          | 20.0            | ± 25.0                                | ± 25.0                                |
| 2,6-Dinitrotoluene         | 0.080          | 20.0            | ± 20.0                                | ± 25.0                                |
| Acenaphthylene             | 0.400          | 20.0            | ± 20.0                                | ± 25.0                                |
| 3-Nitroaniline             | 0.010          | 20.0            | ± 25.0                                | ± 50.0                                |
| Acenaphthene               | 0.200          | 20.0            | ± 20.0                                | ± 25.0                                |
| 2,4-Dinitrophenol          | 0.010          | 40.0            | ± 50.0                                | ± 50.0                                |
| 4-Nitrophenol              | 0.010          | 40.0            | ± 40.0                                | ± 50.0                                |
| Dibenzofuran               | 0.300          | 20.0            | ± 20.0                                | ± 25.0                                |
| 2,4-Dinitrotoluene         | 0.070          | 20.0            | ± 20.0                                | ± 25.0                                |
| Diethylphthalate           | 0.300          | 20.0            | ± 20.0                                | ± 25.0                                |
| 1,2,4,5-Tetrachlorobenzene | 0.100          | 20.0            | ± 20.0                                | ± 25.0                                |
| 4-Chlorophenyl-phenylether | 0.100          | 20.0            | ± 20.0                                | ± 25.0                                |
| Fluorene                   | 0.200          | 20.0            | ± 20.0                                | ± 25.0                                |
| 4-Nitroaniline             | 0.010          | 40.0            | ± 40.0                                | ± 50.0                                |
| 4,6-Dinitro-2-methylphenol | 0.010          | 40.0            | ± 30.0                                | ± 50.0                                |
| 4-Bromophenyl-phenyl ether | 0.070          | 20.0            | ± 20.0                                | ± 25.0                                |
| N-Nitrosodiphenylamine     | 0.100          | 20.0            | ± 20.0                                | ± 25.0                                |
| Hexachlorobenzene          | 0.050          | 20.0            | ± 20.0                                | ± 25.0                                |
| Atrazine                   | 0.010          | 40.0            | ± 25.0                                | ± 50.0                                |
| Pentachlorophenol          | 0.010          | 40.0            | ± 40.0                                | ± 50.0                                |
| Phenanthrene               | 0.200          | 20.0            | ± 20.0                                | ± 25.0                                |
| Anthracene                 | 0.200          | 20.0            | ± 20.0                                | ± 25.0                                |
| Carbazole                  | 0.050          | 20.0            | ± 20.0                                | ± 25.0                                |
| Di-n-butylphthalate        | 0.500          | 20.0            | ± 20.0                                | ± 25.0                                |
| Fluoranthene               | 0.100          | 20.0            | ± 20.0                                | ± 25.0                                |
| Pyrene                     | 0.400          | 20.0            | ± 25.0                                | ± 50.0                                |
| Butylbenzylphthalate       | 0.100          | 20.0            | ± 25.0                                | ± 50.0                                |

DATA REVIEW WORKSHEETS

| Analyte                     | Minimum<br>RRF | Maximum<br>%RSD | Opening<br>Maximum<br>%D <sup>1</sup> | Opening<br>Maximum<br>%D <sup>1</sup> |
|-----------------------------|----------------|-----------------|---------------------------------------|---------------------------------------|
| 3,3'-Dichlorobenzidine      | 0.010          | 40.0            | ± 40.0                                | ± 50.0                                |
| Benzo(a)anthracene          | 0.300          | 20.0            | ± 20.0                                | ± 25.0                                |
| Chrysene                    | 0.200          | 20.0            | ± 20.0                                | ± 50.0                                |
| Bis(2-ethylhexyl) phthalate | 0.200          | 20.0            | ± 25.0                                | ± 50.0                                |
| Di-n-octylphthalate         | 0.010          | 40.0            | ± 40.0                                | ± 50.0                                |
| Benzo(b)fluoranthene        | 0.010          | 20.0            | ± 25.0                                | ± 50.0                                |
| Benzo(k)fluoranthene        | 0.010          | 20.0            | ± 25.0                                | ± 50.0                                |
| Benzo(a)pyrene              | 0.010          | 20.0            | ± 20.0                                | ± 50.0                                |
| Indeno(1,2,3-cd)pyrene      | 0.010          | 20.0            | ± 25.0                                | ± 50.0                                |
| Dibenzo(a,h)anthracene      | 0.010          | 20.0            | ± 25.0                                | ± 50.0                                |
| Benzo(g,h,i)perylene        | 0.010          | 20.0            | ± 30.0                                | ± 50.0                                |
| 2,3,4,6-Tetrachlorophenol   | 0.040          | 20.0            | ± 20.0                                | ± 50.0                                |
| Naphthalene                 | 0.600          | 20.0            | ± 25.0                                | ± 25.0                                |
| 2-Methylnaphthalene         | 0.300          | 20.0            | ± 20.0                                | ± 25.0                                |
| Acenaphthylene              | 0.900          | 20.0            | ± 20.0                                | ± 25.0                                |
| Acenaphthene                | 0.500          | 20.0            | ± 20.0                                | ± 25.0                                |
| Fluorene                    | 0.700          | 20.0            | ± 25.0                                | ± 50.0                                |
| Phenanthrene                | 0.300          | 20.0            | ± 25.0                                | ± 50.0                                |
| Anthracene                  | 0.400          | 20.0            | ± 25.0                                | ± 50.0                                |
| Fluoranthene                | 0.400          | 20.0            | ± 25.0                                | ± 50.0                                |
| Pyrene                      | 0.500          | 20.0            | ± 30.0                                | ± 50.0                                |
| Benzo(a)anthracene          | 0.400          | 20.0            | ± 25.0                                | ± 50.0                                |
| Chrysene                    | 0.400          | 20.0            | ± 25.0                                | ± 50.0                                |
| Benzo(b)fluoranthene        | 0.100          | 20.0            | ± 30.0                                | ± 50.0                                |
| Benzo(k)fluoranthene        | 0.100          | 20.0            | ± 30.0                                | ± 50.0                                |
| Benzo(a)pyrene              | 0.100          | 20.0            | ± 25.0                                | ± 50.0                                |
| Indeno(1,2,3-cd)pyrene      | 0.100          | 20.0            | ± 40.0                                | ± 50.0                                |
| Dibenzo(a,h)anthracene      | 0.010          | 25.0            | ± 40.0                                | ± 50.0                                |
| Benzo(g,h,i)perylene        | 0.020          | 25.0            | ± 40.0                                | ± 50.0                                |

# DATA REVIEW WORKSHEETS

| Pentachlorophenol                         | 0.010       | 40.0         | ± 50.0                          | ± 50.0             |
|-------------------------------------------|-------------|--------------|---------------------------------|--------------------|
| <b>Deuterated Monitoring Compounds</b>    |             |              |                                 |                    |
| Analyte                                   | Minimum RRF | Maximum %RSD | Opening Maximum %D <sup>1</sup> | Closing Maximum %D |
| 1,4-Dioxane-d <sub>8</sub>                | 0.010       | 20.0         | ± 25.0                          | ± 50.0             |
| Phenol-d <sub>5</sub>                     | 0.010       | 20.0         | ± 25.0                          | ± 25.0             |
| Bis-(2-chloroethyl)ether-d <sub>8</sub>   | 0.100       | 20.0         | ± 20.0                          | ± 25.0             |
| 2-Chlorophenol-d <sub>4</sub>             | 0.200       | 20.0         | ± 20.0                          | ± 25.0             |
| 4-Methylphenol-d <sub>8</sub>             | 0.010       | 20.0         | ± 20.0                          | ± 25.0             |
| 4-Chloroaniline-d <sub>4</sub>            | 0.010       | 40.0         | ± 40.0                          | ± 50.0             |
| Nitrobenzene-d <sub>5</sub>               | 0.050       | 20.0         | ± 20.0                          | ± 25.0             |
| 2-Nitrophenol-d <sub>4</sub>              | 0.050       | 20.0         | ± 20.0                          | ± 25.0             |
| 2,4-Dichlorophenol-d <sub>3</sub>         | 0.060       | 20.0         | ± 20.0                          | ± 25.0             |
| Dimethylphthalate-d <sub>6</sub>          | 0.300       | 20.0         | ± 20.0                          | ± 25.0             |
| Acenaphthylene-d <sub>8</sub>             | 0.400       | 20.0         | ± 20.0                          | ± 25.0             |
| 4-Nitrophenol-d <sub>4</sub>              | 0.010       | 40.0         | ± 40.0                          | ± 50.0             |
| Fluorene-d <sub>10</sub>                  | 0.100       | 20.0         | ± 20.0                          | ± 25.0             |
| 4,6-Dinitro-2-methylphenol-d <sub>2</sub> | 0.010       | 40.0         | ± 30.0                          | ± 50.0             |
| Anthracene-d <sub>10</sub>                | 0.300       | 20.0         | ± 20.0                          | ± 25.0             |
| Pyrene-d <sub>10</sub>                    | 0.300       | 20.0         | ± 25.0                          | ± 50.0             |
| Benzo(a)pyrene-d <sub>12</sub>            | 0.010       | 20.0         | ± 20.0                          | ± 50.0             |
| Fluoranthene-d <sub>10</sub> (SIM)        | 0.400       | 20.0         | ± 25.0                          | ± 50.0             |
| 2-Methylnaphthalene-d <sub>10</sub> (SIM) | 0.300       | 20.0         | ± 20.0                          | ± 25.0             |

<sup>1</sup> If a closing CCV is acting as an opening CCV, all target analytes must meet the requirements for an opening CCV.

**Note:** If analysis by SIM technique is requested for PAH/pentachlorophenols, calibration standards analyzed at 0.10, 0.20, 0.40, 0.80, and 1.0 ng/uL for each target compound of interest and the associated DMCs. Pentachlorophenol will require only a four point initial calibration at 0.20, 0.40, 0.80, and 1.0 ng/uL.



# DATA REVIEW WORKSHEETS

All criteria were met \_\_\_\_\_  
 Criteria were not met \_\_\_\_\_  
 and/or see below   X  

## CONTINUING CALIBRATION VERIFICATION

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data.

Date of initial calibration: 05/25/16; 05/31/16; 06/06/16 (SIM) \_\_\_\_\_  
 Date of initial calibration verification (ICV): 05/25/16; 06/01/16; 06/06/16 \_\_\_\_\_  
 Date of continuing calibration verification (CCV): 05/26/16; 06/03/16; 06/07/16 \_\_\_\_\_  
 Date of closing CCV: \_\_\_\_\_  
 Instrument ID numbers: \_\_\_\_\_ GCMS4P \_\_\_\_\_  
 Matrix/Level: \_\_\_\_\_ Aqueous/low \_\_\_\_\_

Date of initial calibration: 05/13/16 (Scan) \_\_\_\_\_  
 Date of initial calibration verification (ICV): 05/13/16; 05/16/16 \_\_\_\_\_  
 Date of continuing calibration verification (CCV): 05/25/16; 06/02/16; 06/02/16 \_\_\_\_\_  
 Date of closing CCV: \_\_\_\_\_  
 Instrument ID numbers: \_\_\_\_\_ GCMS6P \_\_\_\_\_  
 Matrix/Level: \_\_\_\_\_ Aqueous/low \_\_\_\_\_

| DATE     | LAB FILE ID# | CRITERIA OUT<br>RFs, %RSD, %D, r | COMPOUND                   | SAMPLES<br>AFFECTED   |
|----------|--------------|----------------------------------|----------------------------|-----------------------|
| GCMS4P   |              |                                  |                            |                       |
| 06/01/16 | icc879-1.0   | -32.8                            | 1,4-dioxane*               | JC20935-4; -5         |
| 06/03/16 | cc879-1.0    | -23.1                            | 1,4-dioxane*               | JC20935-4; -5         |
| 05/25/16 | cc1209-50    | -24.4                            | di-n-octylphthalate*       | JC20935-1; -2; -3; -6 |
| 06/02/16 | cc1209-25    | 24.4                             | 1,4-dioxane*               | JC20935-4             |
|          |              | 40.0                             | Hexachlorocyclopentadiene* |                       |
|          |              | -25.7                            | 2-nitroaniline             |                       |
|          |              | 22.6                             | 2,4-dinitrophenol*         |                       |
|          |              | 25.2                             | Pentachlorophenol*         |                       |
|          |              | -26.8                            | Butylbenzylphthalate       |                       |
|          |              | -30.7                            | di-n-octylphthalate*       |                       |
| 06/02/16 | cc1209-50    | 23.7                             | 1,4-dioxane*               | JC20935-5             |
|          |              | -35.3                            | 2-nitroaniline             |                       |
|          |              | -22.3                            | 2,4-dinitrotoluene         |                       |
|          |              | -38.1                            | di-n-octylphthalate*       |                       |

**Note:** Initial and continuing calibration verifications meet the method and guidance document required performance criteria except the cases describe in this document. Analyte results are qualified as (J) or (UJ) in affected samples.

## DATA REVIEW WORKSHEETS

No closing calibration verification included in data package. No action taken, professional judgment.

\* Analytes with % difference in the continue calibration verification outside the method performance criteria but within the validation guidelines criteria, + 40 %. No action taken.

GCMS instrument GCMSZ used in the scan mode for QC samples. Several analytes missed % difference criteria in the continuing calibration verification. QC samples are not validated.

### Actions:

Notes: Verify that the CCV is run at the required frequency (an opening and closing CCV must be run within 12-hour period).

All DMCs must meet the RRF values given in Table 2. No qualification of the data is necessary on DMCs RRF and %RSD/%D alone. Use professional judgment to evaluate DMCs and %RSD/%D data in conjunction with DMCs recoveries to determine the need for qualification of the data.

Qualify the initial calibration analytes listed in Table 2 using the following criteria in the CCVs:

**Table 4. CCV Actions for Semivolatile Analysis**

| Criteria for Opening CCV                                                        | Criteria for Closing CCV                                                        | Action                              |                                |
|---------------------------------------------------------------------------------|---------------------------------------------------------------------------------|-------------------------------------|--------------------------------|
|                                                                                 |                                                                                 | Detect                              | Non-detect                     |
| CCV not performed at required frequency and sequence                            | CCV not performed at required frequency                                         | Use professional judgment<br>R      | Use professional judgment<br>R |
| CCV not performed at specified concentration                                    | CCV not performed at specified concentration                                    | Use professional judgment           | Use professional judgment      |
| RRF < Minimum RRF in Table 2 for target analyte                                 | RRF < Minimum RRF in Table 2 for target analyte                                 | Use professional judgment<br>J or R | R                              |
| RRF ≥ Minimum RRF in Table 2 for target analyte                                 | RRF ≥ Minimum RRF in Table 2 for target analyte                                 | No qualification                    | No qualification               |
| %D outside the Opening Maximum %D limits in Table 2 for target analyte          | %D outside the Closing Maximum %D limits in Table 2 for target analyte          | J                                   | UJ                             |
| %D within the inclusive Opening Maximum %D limits in Table 2 for target analyte | %D within the inclusive Closing Maximum %D limits in Table 2 for target analyte | No qualification                    | No qualification               |

# DATA REVIEW WORKSHEETS

All criteria were met \_\_\_\_\_  
 Criteria were not met \_\_\_\_\_  
 and/or see below X

## BLANK ANALYSIS RESULTS (Sections 1 & 2)

The assessment of the blank analysis results is to determine the existence and magnitude of contamination problems. The criteria for evaluation of blanks apply only to blanks associated with the samples, including trip, equipment, and laboratory blanks. If problems with any blanks exist, all data associated with the case must be carefully evaluated to determine whether or not there is an inherent variability in the data for the case, or if the problem is an isolated occurrence not affecting other data.

List the contamination in the blanks below. High and low levels blanks must be treated separately.

Notes: The concentration of non-target compounds in all blanks must be less than or equal to 10 ug/L.

The concentration of target compounds in all blanks must be less than its CRQL listed in the method.

Samples taken from a drinking water tap do not have an associated field blank.

### Laboratory blanks

| DATE ANALYZED                                 | LAB ID | LEVEL/ MATRIX | COMPOUND | CONCENTRATION UNITS |
|-----------------------------------------------|--------|---------------|----------|---------------------|
| No target analytes detected in method blanks. |        |               |          |                     |
|                                               |        |               |          |                     |
|                                               |        |               |          |                     |
|                                               |        |               |          |                     |

### Field/Equipment/Trip blank

| DATE ANALYZED                                                                                                                                           | LAB ID    | LEVEL/ MATRIX | COMPOUND                   | CONCENTRATION UNITS |
|---------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|---------------|----------------------------|---------------------|
| No field/trip blanks analyzed with this data package. No target analyte detected in the equipment blank except in the cases described in this document. |           |               |                            |                     |
| 05/26/16                                                                                                                                                | JC20935-6 | Aqueous/low   | bis(2-ethylhexyl)phthalate | 4.1 ug/L            |
|                                                                                                                                                         |           |               |                            |                     |
|                                                                                                                                                         |           |               |                            |                     |
|                                                                                                                                                         |           |               |                            |                     |

**Note:** No action taken, professional judgment. bis(2-ethylhexyl)phthalate is a common laboratory contaminant and was not detected in the samples

## DATA REVIEW WORKSHEETS

All criteria were met   X    
 Criteria were not met  
 and/or see below           

### BLANK ANALYSIS RESULTS (Section 3)

#### Blank Actions

Qualify samples based on the criteria summarized in Table 5:

**Table 5. Blank and TCLP/SPLP LEB Actions for Semivolatile Analysis**

| Blank Type                         | Blank Result                                                                          | Sample Result             | Action                                                                    |
|------------------------------------|---------------------------------------------------------------------------------------|---------------------------|---------------------------------------------------------------------------|
| Method,<br>TCLP/SPLP<br>LEB, Field | Detect                                                                                | Non-detect                | No qualification                                                          |
|                                    | < CRQL                                                                                | < CRQL                    | Report at CRQL and qualify as non-detect (U)                              |
|                                    |                                                                                       | ≥ CRQL                    | Use professional judgment                                                 |
|                                    | ≥ CRQL                                                                                | < CRQL                    | Report at CRQL and qualify as non-detect (U)                              |
|                                    |                                                                                       | ≥ CRQL but < Blank Result | Report at sample results and qualify as non-detect (U) or as unusable (R) |
|                                    |                                                                                       | ≥ CRQL and ≥ Blank Result | Use professional judgment                                                 |
|                                    | Grossly high                                                                          | Detect                    | Report at sample results and qualify as unusable (R)                      |
|                                    | TIC > 5.0 ug/L (water) or 0.0050 mg/L (TCLP leachate)<br>or<br>TIC > 170 ug/Kg (soil) | Detect                    | Use professional judgment                                                 |

List samples qualified

| CONTAMINATION SOURCE/LEVEL | COMPOUND | CONC/UNITS | AL/UNITS | SQL | AFFECTED SAMPLES |
|----------------------------|----------|------------|----------|-----|------------------|
|                            |          |            |          |     |                  |
|                            |          |            |          |     |                  |
|                            |          |            |          |     |                  |
|                            |          |            |          |     |                  |
|                            |          |            |          |     |                  |
|                            |          |            |          |     |                  |
|                            |          |            |          |     |                  |
|                            |          |            |          |     |                  |

# DATA REVIEW WORKSHEETS

All criteria were met   X    
 Criteria were not met  
 and/or see below           

## SURROGATE SPIKE RECOVERIES – DEUTERATED MONITORING COMPOUNDS (DMCs)

Laboratory performance of individual samples is established by evaluation of surrogate spike recoveries – deuterated monitoring compounds. All samples are spiked with surrogate compounds prior to sample analysis. The accuracy of the analysis is measured by the surrogate percent recovery. Since the effects of the sample matrix are frequently outside the control of the laboratory and may present relatively unique problems, the validation of data is frequently subjective and demands analytical experience and professional judgment.

Notes: Recoveries for DMCs in samples and blanks must be within the limits specified in Table 6.

The recovery limits for any of the compounds listed in Table 6 may be expanded at any time during the period of performance if USEPA determines that the limits are too restrictive.

If a DMC is not added in the samples and blanks or the concentrations of DMCs in the samples and blank not the specified, use professional judgment in qualifying the data.

**Table 7. DMC Actions for Semivolatile Analysis**

| Criteria                                                                                | Action           |                  |
|-----------------------------------------------------------------------------------------|------------------|------------------|
|                                                                                         | Detect           | Non-detect       |
| %R < 10% (excluding DMCs with 10% as a lower acceptance limit)                          | J-               | R                |
| 10% ≤ %R (excluding DMCs with 10% as a lower acceptance limit) < Lower Acceptance Limit | J-               | UJ               |
| Lower Acceptance limit ≤ %R ≤ Upper Acceptance Limit                                    | No qualification | No qualification |
| %R > Upper Acceptance Limit                                                             | J+               | No qualification |

List the percent recoveries (%Rs) which do not meet the criteria for DMCs (surrogate) recovery.

Matrix: Groundwater/Soil

### SAMPLE ID

### SURROGATE COMPOUND

### ACTION

DMCs meet the required criteria. Non-deuterated surrogates added to the samples were  
within laboratory recovery limits except in the cases described in this document.

JC20935-6 (SIM) Terphenyl-d14 No action  
JC20935-6 (SIM) Terphenyl-d14 No action

**Note:** Terphenyl-d14 over the upper laboratory control limit but within generally acceptable control limits. No target analytes detected in the sample. No action taken, professional judgment.

# DATA REVIEW WORKSHEETS

**Table 8. Semivolatile DMCs and the Associated Target Analytes**

| <b>1,4-Dioxane-d<sub>8</sub> (DMC-1)</b>                                                                                                                                   | <b>Phenol-d<sub>5</sub> (DMC-2)</b>                                                             | <b>Bis(2-Chloroethyl) ether-d<sub>8</sub> (DMC-3)</b>                                                                                                                                                                                |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1,4-Dioxane                                                                                                                                                                | Benzaldehyde<br>Phenol                                                                          | Bis(2-chloroethyl) ether<br>2,2'-Oxybis(1-chloropropane)<br>Bis(2-chloroethoxy)methane                                                                                                                                               |
| <b>2-Chlorophenol-d<sub>4</sub> (DMC-4)</b>                                                                                                                                | <b>4-Methylphenol-d<sub>3</sub> (DMC-5)</b>                                                     | <b>4-Chloroaniline-d<sub>4</sub> (DMC-6)</b>                                                                                                                                                                                         |
| 2-Chlorophenol                                                                                                                                                             | 2-Methylphenol<br>3-Methylphenol<br>4-Methylphenol<br>2,4-Dimethylphenol                        | 4-Chloroaniline<br>Hexachlorocyclopentadiene<br>Dichlorobenzidine                                                                                                                                                                    |
| <b>Nitrobenzene-d<sub>5</sub> (DMC-7)</b>                                                                                                                                  | <b>2-Nitrophenol-d<sub>4</sub> (DMC-8)</b>                                                      | <b>2,4-Dichlorophenol-d<sub>3</sub> (DMC-9)</b>                                                                                                                                                                                      |
| Acetophenone<br>N-Nitroso-di-n-propylamine<br>Hexachloroethane<br>Nitrobenzene<br>2,6-Dinitrotoluene<br>2,4-Dinitrotoluene<br>N-Nitrosodiphenylamine                       | Isophorone<br>2-Nitrophenol                                                                     | 2,4-Dichlorophenol<br>Hexachlorobutadiene<br>Hexachlorocyclopentadiene<br>4-Chloro-3-methylphenol<br>2,4,6-Trichlorophenol<br>2,4,5-Trichlorophenol<br>1,2,4,5-Tetrachlorobenzene<br>*Pentachlorophenol<br>2,3,4,6-Tetrachlorophenol |
| <b>Dimethylphthalate-d<sub>6</sub> (DMC-10)</b>                                                                                                                            | <b>Acenaphthylene-d<sub>8</sub> (DMC-11)</b>                                                    | <b>4-Nitrophenol-d<sub>4</sub> (DMC-12)</b>                                                                                                                                                                                          |
| Caprolactam<br>1,1'-Biphenyl<br>Dimethylphthalate<br>Diethylphthalate<br>Di-n-butylphthalate<br>Butylbenzylphthalate<br>Bis(2-ethylhexyl) phthalate<br>Di-n-octylphthalate | *Naphthalene<br>*2-Methylnaphthalene<br>2-Chloronaphthalene<br>*Acenaphthylene<br>*Acenaphthene | 2-Nitroaniline<br>3-Nitroaniline<br>2,4-Dinitrophenol<br>4-Nitrophenol<br>4-Nitroaniline                                                                                                                                             |

# DATA REVIEW WORKSHEETS

|                                                                                                   |                                                                                                                                                                            |                                                               |
|---------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------|
| <b>Fluorene-d<sub>10</sub> (DMC-13)</b>                                                           | <b>4,6-Dinitro-2-methylphenol-d<sub>2</sub> (DMC-14)</b>                                                                                                                   | <b>Anthracene-d<sub>10</sub> (DMC-15)</b>                     |
| Dibenzofuran<br>*Fluorene<br>4-Chlorophenyl-phenylether<br>4-Bromophenyl-phenylether<br>Carbazole | 4,6-Dinitro-2-methylphenol                                                                                                                                                 | Hexachlorobenzene<br>Atrazine<br>*Phenanthrene<br>*Anthracene |
| <b>Pyrene-d<sub>10</sub> (DMC-16)</b>                                                             | <b>Benzo(a)pyrene-d<sub>12</sub> (DMC-17)</b>                                                                                                                              |                                                               |
| *Fluoranthene<br>*Pyrene<br>*Benzo(a)anthracene<br>*Chrysene                                      | 3,3'-Dichlorobenzidine<br>*Benzo(b)fluoranthene<br>*Benzo(k)fluoranthene<br>*Benzo(a)pyrene<br>*Indeno(1,2,3-cd)pyrene<br>*Dibenzo(a,h)anthracene<br>*Benzo(g,h,i)perylene |                                                               |

\*Included in optional Target Analyte List (TAL) of PAHs and PCP only.

**Table 9. Semivolatile SIM DMCs and the Associated Target Analytes**

| <b>Fluoranthene-d<sub>10</sub> (DMC-1)</b> | <b>2-Methylnaphthalene-d<sub>10</sub> (DMC-2)</b> |
|--------------------------------------------|---------------------------------------------------|
| Fluoranthene                               | Naphthalene                                       |
| Pyrene                                     | 2-Methylnaphthalene                               |
| Benzo(a)anthracene                         | Acenaphthylene                                    |
| Chrysene                                   | Acenaphthene                                      |
| Benzo(b)fluoranthene                       | Fluorene                                          |
| Benzo(k)fluoranthene                       | Pentachlorophenol                                 |
| Benzo(a)pyrene                             | Phenanthrene                                      |
| Indeno(1,2,3-cd)pyrene                     | Anthracene                                        |
| Dibenzo(a,h)anthracene                     |                                                   |
| Benzo(g,h,i)perylene                       |                                                   |

# DATA REVIEW WORKSHEETS

All criteria were met \_\_\_\_\_  
 Criteria were not met \_\_\_\_\_  
 and/or see below \_\_\_\_\_X\_\_\_\_\_

## VII. A MATRIX SPIKE/MATRIX SPIKE DUPLICATE (MS/MSD)

This data is generated to determine long term precision and accuracy in the analytical method for various matrices. This data alone cannot be used to evaluate the precision and accuracy of individual samples. If any % R in the MS or MSD falls outside the designated range, the reviewer should determine if there are matrix effects, i.e. LCS data are within the QC limits but MS/MSD data are outside QC limit.

### 1. MS/MSD Recoveries and Precision Criteria

The laboratory should use one MS and a duplicate analysis of an unspiked field sample if target analytes are expected in the sample. If target analytes are not expected, MS/MSD should be analyzed.

**NOTES:** Data for MS and MSDs will not be present unless requested by the Region.  
 Notify the Contract Laboratory COR if a field or trip blank was used for the MS and MSD.

For a Matrix Spike that does not meet criteria, apply the action to only the field sample used to prepare the Matrix Spike sample. If it is clearly stated in the data validation materials that the samples were taken through incremental sampling or some other method guaranteeing the homogeneity of the sample group, then the entire sample group may be qualified.

List the %Rs, RPD of the compounds which do not meet the criteria.

|                            |                       |
|----------------------------|-----------------------|
| Sample ID: JC20935-5       | Matrix/Level: Aqueous |
| Sample ID: JC20877-3       | Matrix/Level: Soil    |
| Sample ID: JC20935-1 (SIM) | Matrix/Level: Aqueous |
| Sample ID: JC20934-2 (SIM) | Matrix/Level: Soil    |

The QC reported here applies to the following samples:  
 JC20935-1, JC20935-2, JC20935-3; JC20935-6

Method: SW846 8270D

| Compound                      | JC20935-5<br>ug/l | Q | Spike<br>ug/l | MS<br>ug/l | MS<br>% | Spike<br>ug/l | MSD<br>ug/l | MSD<br>% | RPD   | Limits<br>Rec/RPD |
|-------------------------------|-------------------|---|---------------|------------|---------|---------------|-------------|----------|-------|-------------------|
| 4-Chloro-3-methyl<br>phenol   | ND                |   | 110           | 99.4       | 90      | 110           | 70.2        | 64       | 34* a | 44-121/18         |
| 2,4-Dichlorophenol            | ND                |   | 110           | 87.4       | 80      | 110           | 65.5        | 60       | 29* a | 42-120/19         |
| 2,4-Dimethylphenol            | ND                |   | 110           | 92.2       | 84      | 110           | 70.7        | 64       | 26* a | 33-132/23         |
| 2-Nitrophenol                 | ND                |   | 110           | 82.1       | 75      | 110           | 64.6        | 59       | 24* a | 45-118/20         |
| Pentachlorophenol             | ND                |   | 110           | 86.3       | 79      | 110           | 60.4        | 55       | 35* a | 25-151/25         |
| 2,3,4,6-<br>Tetrachlorophenol | ND                |   | 110           | 107        | 97      | 110           | 78.7        | 72       | 30* a | 44-122/21         |
| 2,4,5-Trichlorophenol         | ND                |   | 110           | 94.1       | 86      | 110           | 71.5        | 65       | 27* a | 51-124/20         |
| 2,4,6-Trichlorophenol         | ND                |   | 110           | 102        | 93      | 110           | 79.2        | 72       | 25* a | 53-120/21         |
| Acenaphthylene                | ND                |   | 110           | 90.0       | 82      | 110           | 71.7        | 65       | 23* a | 50-101/22         |
| Anthracene                    | ND                |   | 110           | 102        | 93      | 110           | 75.7        | 69       | 30* a | 54-117/22         |



DATA REVIEW WORKSHEETS

The QC reported here applies to the following samples:  
JC20935-1, JC20935-5, JC20935-6

Method: SW846 8270D

| Compound                       | JC20935-5<br>ug/l | Q | Spike<br>ug/l | MS<br>ug/l | MS<br>% | Spike<br>ug/l | MSD<br>ug/l | MSD<br>% | RPD   | Limits<br>Rec/RPD |
|--------------------------------|-------------------|---|---------------|------------|---------|---------------|-------------|----------|-------|-------------------|
| Atrazine                       | ND                |   | 110           | 124        | 113     | 110           | 88.8        | 81       | 33* a | 42-152/23         |
| Benzo(a)anthracene             | ND                |   | 110           | 104        | 95      | 110           | 75.3        | 69       | 32* a | 40-123/24         |
| Benzo(a)pyrene                 | ND                |   | 110           | 108        | 98      | 110           | 77.4        | 70       | 33* a | 41-127/25         |
| Benzo(b)fluoranthene           | ND                |   | 110           | 108        | 98      | 110           | 78.5        | 71       | 32* a | 39-127/27         |
| Benzo(g,h,i)perylene           | ND                |   | 110           | 87.6       | 80      | 110           | 60.0        | 55       | 37* a | 34-128/28         |
| Benzo(k)fluoranthene           | ND                |   | 110           | 107        | 97      | 110           | 75.0        | 68       | 35* a | 39-122/26         |
| 4-Bromophenyl phenyl<br>ether  | ND                |   | 110           | 100        | 91      | 110           | 73.2        | 67       | 31* a | 51-124/23         |
| Butyl benzyl phthalate         | ND                |   | 110           | 115        | 105     | 110           | 83.5        | 76       | 32* a | 21-146/28         |
| Carbazole                      | ND                |   | 110           | 108        | 98      | 110           | 78.0        | 71       | 32* a | 52-116/22         |
| Chrysene                       | ND                |   | 110           | 98.6       | 90      | 110           | 73.0        | 66       | 30* a | 41-128/24         |
| bis(2-Chloroethoxy)<br>methane | ND                |   | 110           | 74.1       | 67      | 110           | 56.8        | 52       | 26* a | 46-120/24         |
| 4-Chlorophenyl phenyl<br>ether | ND                |   | 110           | 95.2       | 87      | 110           | 72.4        | 66       | 27* a | 48-121/21         |
| 2,4-Dinitrotoluene             | ND                |   | 110           | 115        | 105     | 110           | 84.7        | 77       | 30* a | 54-123/27         |
| 2,6-Dinitrotoluene             | ND                |   | 110           | 112        | 102     | 110           | 82.4        | 75       | 30* a | 55-125/26         |
| Dibenzo(a,h)anthracene         | ND                |   | 110           | 89.5       | 81      | 110           | 62.1        | 57       | 36* a | 35-130/27         |
| Dibenzofuran                   | ND                |   | 110           | 97.2       | 88      | 110           | 76.8        | 70       | 23* a | 53-112/22         |
| Di-n-butyl phthalate           | ND                |   | 110           | 107        | 97      | 110           | 76.3        | 69       | 33* a | 38-129/23         |
| Di-n-octyl phthalate           | ND                |   | 110           | 128        | 116     | 110           | 90.7        | 83       | 34* a | 35-145/26         |
| bis(2-Ethylhexyl)<br>phthalate | ND                |   | 110           | 111        | 101     | 110           | 78.3        | 71       | 35* a | 34-141/28         |
| Fluoranthene                   | ND                |   | 110           | 102        | 93      | 110           | 74.8        | 68       | 31* a | 47-123/24         |
| Fluorene                       | ND                |   | 110           | 99.3       | 90      | 110           | 76.2        | 69       | 26* a | 56-117/22         |
| Hexachlorobenzene              | ND                |   | 110           | 88.4       | 80      | 110           | 65.7        | 60       | 29* a | 46-125/24         |
| Hexachlorobutadiene            | ND                |   | 110           | 77.8       | 71      | 110           | 58.5        | 53       | 28* a | 26-121/24         |
| Indeno(1,2,3-cd)pyrene         | ND                |   | 110           | 98.4       | 90      | 110           | 66.3        | 60       | 39* a | 32-130/30         |
| Isophorone                     | ND                |   | 110           | 81.7       | 74      | 110           | 63.3        | 58       | 25* a | 47-126/23         |
| 1-Methylnaphthalene            | ND                |   | 110           | 84.0       | 76      | 110           | 64.8        | 59       | 26* a | 34-124/25         |
| 2-Methylnaphthalene            | ND                |   | 110           | 82.1       | 75      | 110           | 63.7        | 58       | 25* a | 34-123/24         |
| 2-Nitroaniline                 | ND                |   | 110           | 113        | 103     | 110           | 86.0        | 78       | 27* a | 46-137/23         |
| 4-Nitroaniline                 | ND                |   | 110           | 98.9       | 90      | 110           | 74.2        | 68       | 29* a | 38-118/25         |
| Nitrobenzene                   | ND                |   | 110           | 75.5       | 69      | 110           | 58.1        | 53       | 26* a | 35-130/25         |
| N-Nitrosodiphenylamine         | ND                |   | 110           | 108        | 98      | 110           | 78.7        | 72       | 31* a | 46-123/24         |
| Phenanthrene                   | ND                |   | 110           | 102        | 93      | 110           | 75.1        | 68       | 30* a | 48-121/23         |
| Pyrene                         | ND                |   | 110           | 107        | 97      | 110           | 79.2        | 72       | 30* a | 43-124/26         |

**Note:** No qualifications made JC20935-5 based on RPD results. Professional judgment.

## DATA REVIEW WORKSHEETS

The QC reported here applies to the following samples:  
JC20935-2, JC20935-3; JC20935-4

Method: SW846 8270D BY SIM

| Compound    | JC20934-2<br>ug/kg Q | Spike<br>ug/kg | MS<br>ug/kg | MS<br>% | Spike<br>ug/kg | MSD<br>ug/kg | MSD<br>% | RPD   | Limits<br>Rec/RPD |
|-------------|----------------------|----------------|-------------|---------|----------------|--------------|----------|-------|-------------------|
| 1,4-Dioxane | ND                   | 39.9           | 20.7        | 52      | 39.3           | 12.2         | 31* a    | 52* a | 50-150/30         |

(a) Outside in house control limits.

\* Outside control limit.

**Note:** No action taken. MS/MSD results apply only to unspiked sample. Unspiked sample from another project.

- \* QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.
- \* If QC limits are not available, use limits of 70 – 130 %.

Actions:

| QUALITY            | %R < LL | %R > UL |
|--------------------|---------|---------|
| Positive results   | J       | J       |
| Nondetects results | R       | Accept  |

MS/MSD criteria apply only to the unspiked sample, its dilutions, and the associated MS/MSD samples:

If the % R for the affected compounds were < LL (or 70 %), qualify positive results (J) and nondetects (UJ).

If the % R for the affected compounds were > UL (or 130 %), only qualify positive results (J).

If 25 % or more of all MS/MSD %R were < LL (or 70 %) or if two or more MS/MSD %Rs were < 10%, qualify all positive results (J) and reject nondetects (R).

A separate worksheet should be used for each MS/MSD pair.

## DATA REVIEW WORKSHEETS

All criteria were met ☒ X  
 Criteria were not met  
 and/or see below \_\_\_\_\_

### INTERNAL STANDARD PERFORMANCE

The assessment of the internal standard (IS) parameter is used to assist the data reviewer in determining the condition of the analytical instrumentation.

List the internal standard area of samples which do not meet the criteria.

| DATE                                                                                                                                          | SAMPLE ID   | IS OUT             | IS AREA | ACCEPTABLE RANGE | ACTION    |
|-----------------------------------------------------------------------------------------------------------------------------------------------|-------------|--------------------|---------|------------------|-----------|
| Internal area meets the required criteria of batch samples corresponding to this data package except in the cases described in this document. |             |                    |         |                  |           |
| 05/26/16                                                                                                                                      | JC20935-6   | Benzo(a)pyrene-d12 | 181515* | 183105 - 732420  | No action |
| 05/26/16                                                                                                                                      | JC20935-6 c | Fluoranthene-d10   | 291559* | 300734 - 1202934 |           |
|                                                                                                                                               |             | Benzo(a)pyrene-d12 | 159607* | 183105 - 732420  |           |

(c) Confirmation run for internal standard areas.

**Note:** No action taken, internal standards not used to quantitate target analytes.

#### Action:

- If an internal standard area count for a sample or blank is greater than 200.0% of the area for the associated standard (opening CCV or mid-point standard from initial calibration) (see Table 10 below):
  - Qualify detects for compounds quantitated using that internal standard as estimated low (J-).
  - Do not qualify non-detected associated compounds.
- If an internal standard area count for a sample or blank is less than 20.0% of the area for the associated standard (opening CCV or mid-point standard from initial calibration):
  - Qualify detects for compounds quantitated using that internal standard as estimated high (J+).
  - Qualify non-detected associated compounds as unusable (R).
- If an internal standard area count for a sample or blank is greater than or equal to 50.0%, and less than or equal to 200% of the area for the associated standard opening CCV or mid-point standard from initial calibration, no qualification of the data is necessary.
- If an internal standard RT varies by more than 10.0 seconds: Examine the chromatographic profile for that sample to determine if any false positives or negatives exist. For shifts of a large magnitude, the reviewer may consider partial or total rejection of the data for that sample fraction. Detects should not need to be qualified as unusable (R) if the mass spectral criteria are met.
- If an internal standard RT varies by less than or equal to 10.0 seconds, no qualification of the data is necessary.

## DATA REVIEW WORKSHEETS

**Note:** Inform the Contract Laboratory Program Project Officer (CLP PO) if the internal standard performance criteria are grossly exceeded. Note in the Data Review Narrative potential effects on the data resulting from unacceptable internal standard performance.

State in the Data Review Narrative if the required internal standard compounds are not added to a sample or blank or if the required internal standard compound is not analyzed at the specified concentration.

### Actions:

**Table 10. Internal Standard Actions for Semivolatile Analysis**

| Criteria                                                                                         | Action           |                  |
|--------------------------------------------------------------------------------------------------|------------------|------------------|
|                                                                                                  | Detect           | Non-detect       |
| Area response < 20% of the opening CCV or mid-point standard CS3 from ICAL                       | J+               | R                |
| 20% ≤ Area response < 50% of the opening CCV or mid-point standard CS3 from ICAL                 | J+               | UJ               |
| 50% ≤ Area response ≤ 200% of the opening CCV or mid-point standard CS3 from ICAL                | No qualification | No qualification |
| Area response > 200% of the opening CCV or mid-point standard CS3 from ICAL                      | J-               | No qualification |
| RT shift between sample/blank and opening CCV or mid-point standard CS3 from ICAL > 10.0 seconds | R                | R                |
| RT shift between sample/blank and opening CCV or mid-point standard CS3 from ICAL < 10.0 seconds | No qualification | No qualification |

## DATA REVIEW WORKSHEETS

All criteria were met   X    
 Criteria were not met  
 and/or see below           

### TARGET COMPOUND IDENTIFICATION

#### Criteria:

Is the Relative Retention Times (RRTs) of reported compounds within  $\pm 0.06$  RRT units of the standard RRT [opening Continuing Calibration Verification (CCV) or mid-point standard from the initial calibration].  
**Yes? or No?**

List compounds not meeting the criteria described above:

| Sample ID | Compounds | Actions |
|-----------|-----------|---------|
| =====     | =====     | =====   |
| _____     | _____     | _____   |
| _____     | _____     | _____   |
| _____     | _____     | _____   |

Mass spectra of the sample compound and a current laboratory-generated standard [i.e., the mass spectrum from the associated calibration standard (opening CCV or mid-point standard from initial calibration)] must match according to the following criteria:

- All ions present in the standard mass spectrum at a relative intensity greater than 10% must be present in the sample spectrum.
- The relative intensities of these ions must agree within  $\pm 20\%$  between the standard and sample spectra (e.g., for an ion with an abundance of 50% in the standard spectrum, the corresponding sample ion abundance must be between 30-70%).
- Ions present at greater than 10% in the sample mass spectrum, but not present in the standard spectrum, must be evaluated by a reviewer experienced in mass spectral interpretation.

List compounds not meeting the criteria described above:

| Sample ID | Compounds | Actions |
|-----------|-----------|---------|
| =====     | =====     | =====   |
| _____     | _____     | _____   |
| _____     | _____     | _____   |
| _____     | _____     | _____   |

Identified compounds meet the required criteria

## DATA REVIEW WORKSHEETS

### Action:

1. The application of qualitative criteria for GC/MS analysis of target compounds requires professional judgment. It is up to the reviewer's discretion to obtain additional information from the laboratory. If it is determined that incorrect identifications were made, qualify all such data as unusable (R).
2. Use professional judgment to qualify the data if it is determined that cross-contamination has occurred.
3. Note in the Data Review Narrative any changes made to the reported compounds or concerns regarding target compound identifications. Note, for Contract Laboratory COR action, the necessity for numerous or significant changes.

### TENTATIVELY IDENTIFIED COMPOUNDS (TICS)

NOTE: Tentatively identified compounds should only be evaluated when requested by a party from outside of the Hazardous Waste Support Section (HWSS).

#### List TICs

| Sample ID | Compound | Sample ID | Compound |
|-----------|----------|-----------|----------|
| =====     |          |           |          |
| _____     |          | _____     |          |
| _____     |          | _____     |          |
| _____     |          | _____     |          |
| _____     |          | _____     |          |

### Action:

1. Qualify all TIC results for which there is presumptive evidence of a match (e.g. greater than or equal to 85% match) as tentatively identified (NJ), with approximated concentrations. TICs labeled "unknown" are qualified as estimated (J).
2. General actions related to the review of TIC results are as follows:
  - a. If it is determined that a tentative identification of a non-target compound is unacceptable, change the tentative identification to "unknown" or another appropriate identification, and qualify the result as estimated (J).
  - b. If all contractually-required peaks were not library searched and quantitated, the Region's designated representative may request these data from the laboratory.
3. In deciding whether a library search result for a TIC represents a reasonable identification, use professional judgment. If there is more than one possible match, report the result as "either compound X or compound Y". If there is a lack of isomer specificity, change the TIC result to a nonspecific isomer result (e.g., 1,3,5-trimethyl benzene to trimethyl benzene isomer) or to a compound class (e.g., 2-methyl, 3-ethyl benzene to a substituted aromatic compound).
4. The reviewer may elect to report all similar compounds as a total (e.g., all alkanes may be summarized and reported as total hydrocarbons).

## DATA REVIEW WORKSHEETS

5. Target compounds from other fractions and suspected laboratory contaminants should be marked as "non-reportable".
6. Other Case factors may influence TIC judgments. If a sample TIC match is poor, but other samples have a TIC with a valid library match, similar RRT, and the same ions, infer identification information from the other sample TIC results.
7. Note in the Data Review Narrative any changes made to the reported data or any concerns regarding TIC identifications.
8. Note, for Contract Laboratory COR action, failure to properly evaluate and report TICs

## DATA REVIEW WORKSHEETS

All criteria were met X  
 Criteria were not met  
 and/or see below \_\_\_\_\_

### SAMPLE QUANTITATION AND REPORTED CONTRACT REQUIRED QUANTITATION LIMITS (CRQLS)

#### Action:

1. When a sample is analyzed at more than one dilution, the lower CRQL are used unless a QC exceedance dictates the use of higher CRQLs from the diluted sample. Samples reported with an "E" qualifier should be reported from the diluted sample.
2. If any discrepancies are found, the Region's designated representative may contact the laboratory to obtain additional information that could resolve any differences. If a discrepancy remains unresolved, the reviewer must use professional judgment to decide which value is the most accurate. Under these circumstances, the reviewer may determine that qualification of data is warranted. Note in the Data Review Narrative a description of the reasons for data qualification and the qualification that is applied to the data.
3. For non-aqueous samples, if the solids is less than 10.0%, use professional judgment for both detects and non-detects. If the percent solid for a soil sample is greater than or equal to 10.0% and less than 30.0%, use professional judgment to qualify detects and non-detects. If the percent solid for a soil sample is greater than or equal to 30.0%, detects and non-detects should not be qualified (see Table 11).
4. Note, for Contract Laboratory COR action, numerous or significant failures to accurately quantify the target compounds or to properly evaluate and adjust CRQLs.
5. Results between MDL and CRQL should be qualified as estimated "J".
6. Results < MDL should be reported at the CRQL and qualified "U". MDLs themselves should not be reported.

**Table 11. Percent Solids Actions for Semivolatile Analysis for Non-Aqueous Samples**

| Criteria                | Action                    |                           |
|-------------------------|---------------------------|---------------------------|
|                         | Detects                   | Non-detects               |
| %Solids < 10.0%         | Use professional judgment | Use professional judgment |
| 10.0% ≤ %Solids ≤ 30.0% | Use professional judgment | Use professional judgment |
| %Solids > 30.0%         | No qualification          | No qualification          |

### SAMPLE QUANTITATION

The sample quantitation evaluation is to verify laboratory quantitation results. In the space below, please show a minimum of one sample calculation:

Sample ID: JC20935-3\_Scan Analyte: Fluoranthene RF: 1.232

$$\begin{aligned}
 [ ] &= (279957)(40)/(1784014)(1.232) \\
 &= 5.09 \text{ ppm} \quad \text{Ok}
 \end{aligned}$$





## DATA REVIEW WORKSHEETS

All criteria were met   N/A    
 Criteria were not met  
 and/or see below           

### FIELD DUPLICATE PRECISION

Sample IDs:            -           

Matrix:            -           

Field duplicate samples may be taken and analyzed as an indication of overall precision. These analyses measure both field and lab precision; therefore, the results may have more variability than laboratory duplicates which only laboratory performance. It is also expected that soil duplicate results will have a greater variance than water matrices due to difficulties associated with collecting identical field duplicate samples.

The project QAPP should be reviewed for project-specific information.

Suggested criteria: if large RPD (> 50 %) is observed, confirm identification of the samples and note differences. If both samples and duplicate are <5 SQL, the RPD criteria is doubled.

| COMPOUND                                                                                                                                                                                     | SQL<br>ug/L | SAMPLE<br>CONC. | DUPLICATE<br>CONC. | RPD | ACTION |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|-----------------|--------------------|-----|--------|
|                                                                                                                                                                                              |             |                 |                    |     |        |
|                                                                                                                                                                                              |             |                 |                    |     |        |
| No field/laboratory duplicate analyzed as part of this data package. MS/MSD % recoveries RPD used to assess precision. RPD within the required criteria < 50 % for detected target analytes. |             |                 |                    |     |        |
|                                                                                                                                                                                              |             |                 |                    |     |        |
|                                                                                                                                                                                              |             |                 |                    |     |        |

## DATA REVIEW WORKSHEETS

All criteria were met   X    
 Criteria were not met  
 and/or see below       

### OTHER ISSUES

#### A. System Performance

List samples qualified based on the degradation of system performance during sample analysis:

| Sample ID | Comments | Actions |
|-----------|----------|---------|
| =====     | =====    | =====   |
| _____     | _____    | _____   |
| _____     | _____    | _____   |
| _____     | _____    | _____   |
| _____     | _____    | _____   |

Action:

Use professional judgment to qualify the data if it is determined that system performance has degraded during sample analyses. Inform the Contract Laboratory Program COR any action as a result of degradation of system performance which significantly affected the data.

#### B. Overall Assessment of Data

List samples qualified based on other issues:

| Sample ID                                                                                                                  | Comments | Actions |
|----------------------------------------------------------------------------------------------------------------------------|----------|---------|
| =====                                                                                                                      | =====    | =====   |
| _____                                                                                                                      | _____    | _____   |
| _No other issues that required the need to qualify the data. Results are valid and can be used for decision purposes._____ |          |         |
| _____                                                                                                                      | _____    | _____   |

Action:

1. Use professional judgment to determine if there is any need to qualify data which were not qualified based on the Quality Control (QC) criteria previously discussed.
2. Write a brief narrative to give the user an indication of the analytical limitations of the data. Inform the Contract Laboratory COR the action, any inconsistency of the data with the Sample Delivery Group (SDG) Narrative. If sufficient information on the intended use and required quality of the data is available, the reviewer should include their assessment of the usability of the data within the given context. This may be used as part of a formal Data Quality Assessment (DQA).
3. Sometimes, due to dilutions, re-analysis or SIM/Scan runs are being performed, there will be multiple results for a single analyte from a single sample. The following criteria and professional judgment are used to determine which result should be reported:
  - The analysis with the lower CRQL
  - The analysis with the better QC results
  - The analysis with the higher results

## EXECUTIVE NARRATIVE

SDG No: **JC20935** Laboratory: **Accutest, Florida**  
Analysis: **SW846-8015C** Number of Samples: **6**  
Location: **BMSMC, Building 5 Area**  
**Humacao, PR**

**SUMMARY:** Six (6) samples were analyzed for the low molecular weight alcohols (LMWAs) list following method SW846-8015C. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: "Test Methods for Evaluating Solid Waste, Physical/Chemical Methods SW-846 (Final Update III, December 1996)," specifically for Methods 8000/8015C are utilized. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

Results are valid and can be used for decision making purposes.

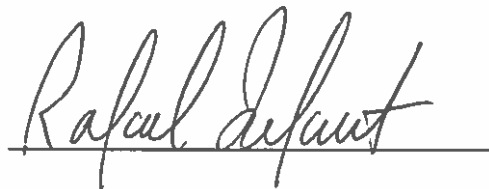
**Critical issues:** **None**  
**Major:** **None**  
**Minor:** **None**

**Critical findings:** **None**  
**Major findings:** **None**  
**Minor findings:** **None**

**COMMENTS:** Results are valid and can be used for decision making purposes.

**Reviewers Name:** **Rafael Infante**  
**Chemist License 1888**

**Signature:**

A handwritten signature in black ink, appearing to read "Rafael Infante", is written over a horizontal line.

**Date:**

**June 18, 2016**

# **SAMPLE ORGANIC DATA SAMPLE SUMMARY**

Sample ID: JC20935-1

Sample location: BMSMC Building 5 Area

Sampling date: 5/20/2016

Matrix: Groundwater

## **METHOD: 8015C**

| Analyte Name      | Result | Units | Dilution Factor | Lab Flag | Validation | Reportable |
|-------------------|--------|-------|-----------------|----------|------------|------------|
| Ethanol           | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| Isobutyl Alcohol  | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| Isopropyl Alcohol | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| n-Propyl Alcohol  | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| n-Butyl Alcohol   | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| sec-Butyl Alcohol | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| Methanol          | 200    | ug/l  | 1.0             | -        | U          | Yes        |

Sample ID: JC20935-2

Sample location: BMSMC Building 5 Area

Sampling date: 5/23/2016

Matrix: Groundwater

## **METHOD: 8015C**

| Analyte Name      | Result | Units | Dilution Factor | Lab Flag | Validation | Reportable |
|-------------------|--------|-------|-----------------|----------|------------|------------|
| Ethanol           | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| Isobutyl Alcohol  | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| Isopropyl Alcohol | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| n-Propyl Alcohol  | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| n-Butyl Alcohol   | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| sec-Butyl Alcohol | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| Methanol          | 200    | ug/l  | 1.0             | -        | U          | Yes        |

Sample ID: JC20935-3

Sample location: BMSMC Building 5 Area

Sampling date: 5/23/2016

Matrix: Groundwater

## **METHOD: 8015C**

| Analyte Name      | Result | Units | Dilution Factor | Lab Flag | Validation | Reportable |
|-------------------|--------|-------|-----------------|----------|------------|------------|
| Ethanol           | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| Isobutyl Alcohol  | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| Isopropyl Alcohol | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| n-Propyl Alcohol  | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| n-Butyl Alcohol   | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| sec-Butyl Alcohol | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| Methanol          | 200    | ug/l  | 1.0             | -        | U          | Yes        |

Sample ID: JC20935-4  
Sample location: BSMC Building 5 Area  
Sampling date: 5/23/2016  
Matrix: Soil

METHOD: 8015C

| Analyte Name      | Result | Units | Dilution Factor | Lab Flag | Validation | Reportable |
|-------------------|--------|-------|-----------------|----------|------------|------------|
| Ethanol           | 120    | ug/kg | 1.0             | -        | U          | Yes        |
| Isobutyl Alcohol  | 120    | ug/kg | 1.0             | -        | U          | Yes        |
| Isopropyl Alcohol | 120    | ug/kg | 1.0             | -        | U          | Yes        |
| n-Propyl Alcohol  | 120    | ug/kg | 1.0             | -        | U          | Yes        |
| n-Butyl Alcohol   | 120    | ug/kg | 1.0             | -        | U          | Yes        |
| sec-Butyl Alcohol | 120    | ug/kg | 1.0             | -        | U          | Yes        |
| Methanol          | 230    | ug/kg | 1.0             | -        | U          | Yes        |

Sample ID: JC20935-5  
Sample location: BSMC Building 5 Area  
Sampling date: 5/23/2016  
Matrix: Soil

METHOD: 8015C

| Analyte Name      | Result | Units | Dilution Factor | Lab Flag | Validation | Reportable |
|-------------------|--------|-------|-----------------|----------|------------|------------|
| Ethanol           | 110    | ug/kg | 1.0             | -        | U          | Yes        |
| Isobutyl Alcohol  | 110    | ug/kg | 1.0             | -        | U          | Yes        |
| Isopropyl Alcohol | 110    | ug/kg | 1.0             | -        | U          | Yes        |
| n-Propyl Alcohol  | 110    | ug/kg | 1.0             | -        | U          | Yes        |
| n-Butyl Alcohol   | 110    | ug/kg | 1.0             | -        | U          | Yes        |
| sec-Butyl Alcohol | 110    | ug/kg | 1.0             | -        | U          | Yes        |
| Methanol          | 230    | ug/kg | 1.0             | -        | U          | Yes        |

Sample ID: JC20935-6  
Sample location: BSMC Building 5 Area  
Sampling date: 5/20/2016  
Matrix: AQ - Equipment Blank

METHOD: 8015C

| Analyte Name      | Result | Units | Dilution Factor | Lab Flag | Validation | Reportable |
|-------------------|--------|-------|-----------------|----------|------------|------------|
| Ethanol           | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| Isobutyl Alcohol  | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| Isopropyl Alcohol | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| n-Propyl Alcohol  | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| n-Butyl Alcohol   | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| sec-Butyl Alcohol | 100    | ug/l  | 1.0             | -        | U          | Yes        |
| Methanol          | 200    | ug/l  | 1.0             | -        | U          | Yes        |

# DATA REVIEW WORKSHEETS

Project Number: JC20935  
 Date: 05/23-24/2016  
 Shipping Date: 05/24/2016  
 EPA Region: 2

## REVIEW OF VOLATILE ORGANIC PACKAGE

The following guidelines for evaluating volatile organics were created to delineate required validation actions. This document will assist the reviewer in using professional judgment to make more informed decision and in better serving the needs of the data users. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: "Test Methods for Evaluating Solid Waste, Physical/Chemical Methods SW-846 (Final Update III, December 1996)," specifically for Methods 8000/8015C are utilized. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

The hardcopied (laboratory name) Accutest data package received has been reviewed and the quality control and performance data summarized. The modified data review for VOCs included:

Lab. Project/SDG No.: JC20935 Sample matrix: Soil/Groundwater  
 No. of Samples: 6

Trip blank No.: -  
 Field blank No.: -  
 Equipment blank No.: JC20935-6  
 Field duplicate No.:

|                                                                         |                                                               |
|-------------------------------------------------------------------------|---------------------------------------------------------------|
| <input checked="" type="checkbox"/> Data Completeness                   | <input checked="" type="checkbox"/> Laboratory Control Spikes |
| <input checked="" type="checkbox"/> Holding Times                       | <input checked="" type="checkbox"/> Field Duplicates          |
| <input type="checkbox"/> N/A GC/MS Tuning                               | <input checked="" type="checkbox"/> Calibrations              |
| <input type="checkbox"/> N/A Internal Standard Performance              | <input checked="" type="checkbox"/> Compound Identifications  |
| <input checked="" type="checkbox"/> Blanks                              | <input checked="" type="checkbox"/> Compound Quantitation     |
| <input checked="" type="checkbox"/> Surrogate Recoveries                | <input checked="" type="checkbox"/> Quantitation Limits       |
| <input checked="" type="checkbox"/> Matrix Spike/Matrix Spike Duplicate |                                                               |

Overall Comments: Low molecular weight alcohols by SW-846\_8015C

### Definition of Qualifiers:

J- Estimated results  
 U- Compound not detected  
 R- Rejected data  
 UJ- Estimated not detected

Reviewer: Rafael Infante  
 Date: June 18, 2016





## DATA REVIEW WORKSHEETS

All criteria were met   X    
 Criteria were not met  
 and/or see below       

### HOLDING TIMES

The objective of this parameter is to ascertain the validity of the results based on the holding time of the sample from time of collection to the time of analysis.

Complete table for all samples and note the analysis and/or preservation not within criteria

| SAMPLE ID                                                                                        | DATE SAMPLED | DATE ANALYZED | pH | ACTION |
|--------------------------------------------------------------------------------------------------|--------------|---------------|----|--------|
|                                                                                                  |              |               |    |        |
| All samples analyzed within the recommended method holding time. All samples properly preserved. |              |               |    |        |
|                                                                                                  |              |               |    |        |
|                                                                                                  |              |               |    |        |
|                                                                                                  |              |               |    |        |
|                                                                                                  |              |               |    |        |
|                                                                                                  |              |               |    |        |
|                                                                                                  |              |               |    |        |
|                                                                                                  |              |               |    |        |

### Criteria

Aqueous samples – 14 days from sample collection for preserved samples ( $\text{pH} \leq 2$ ,  $4^{\circ}\text{C}$ ), no air bubbles.

Aqueous samples – 7 days from sample collection for unpreserved samples,  $4^{\circ}\text{C}$ , no air bubbles.

Soil samples- 7 days from sample collection.

Cooler temperature (Criteria:  $4 \pm 2^{\circ}\text{C}$ ):  $5.1^{\circ}\text{C}$

### Actions

If the VOCs vial(s) have air bubbles, estimate positive results (J) and reject nondetects (R).

If the % solids of soil samples is 10-50%, estimate positive results (J) and nondetects (UJ).

If the % solid of soil samples is  $< 10\%$ , estimate positive results (J) and reject nondetects (R).

If holding times are exceeded but  $< 14$  days beyond criteria, estimate positive results (J) and nondetects (UJ).

If holding times are exceeded but  $< 28$  days beyond criteria, estimate positive results (J) and reject nondetects (R).

If holding times are grossly exceeded ( $> 28$  days beyond criteria), reject all results (R).

If samples were not iced or if the ice were melted ( $> 10^{\circ}\text{C}$ ), estimate positive results (J) and nondetects (UJ).

## DATA REVIEW WORKSHEETS

All criteria were met N/A  
Criteria were not met see below \_\_\_\_\_

### GC/MS TUNING

The assessment of the tuning results is to determine if the sample instrumentation is within the standard tuning QC limits

N/A The BFB performance results were reviewed and found to be within the specified criteria.

N/A BFB tuning was performed for every 12 hours of sample analysis.

If no, use professional judgment to determine whether the associated data should be accepted, qualified or rejected.

List the samples affected: \_\_\_\_\_

If mass calibration is in error, all associated data are rejected.

## DATA REVIEW WORKSHEETS

All criteria were met   X    
 Criteria were not met  
 and/or see below           

### CALIBRATION VERIFICATION

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data.

Date of initial calibration:           05/17/16            
 Dates of continuing calibration: 05/17/16 (initial); 05/25/16; 05/26/16  
 Dates of final calibration verification: 05/25/16; 05/26/16  
 Instrument ID number:           GCGH            
 Matrix/Level:           Aqueous/low          

| DATE | LAB FILE ID# | CRITERIA OUT<br>RFs, %RSD, %D, r | COMPOUND | SAMPLES<br>AFFECTED |
|------|--------------|----------------------------------|----------|---------------------|
|      |              |                                  |          |                     |
|      |              |                                  |          |                     |
|      |              |                                  |          |                     |

**Note:** Initial, continuing, and final calibration verifications meets method specific criteria in at least one of the column, second column used for confirmation only.

### Criteria

All RFs must be  $> 0.05$  regardless of method requirements for SPCC.

All %RSD must be  $\leq 15\%$  regardless of method requirements for CCC.

All %Ds must be  $\leq 20\%$  regardless of method requirements for CCC.

It should be noted that Region 2 SOP HW-24 does not specify criterion for the curve correlation coefficient (r). A limit for r of  $\geq 0.995$  has therefore been utilized as professional judgment.

### Actions

If any compound has an initial RF or a continuing RF of  $< 0.05$ , estimate positive results (J) and reject nondetects (R), regardless of method requirements.

If any compound has a %RSD  $> 15\%$ , estimate positive results (J) and use professional judgment to qualify nondetects.

If any compound has a %RSD  $> 90\%$ , estimate positive results (J) and reject nondetects (R).

If any compound has a % D  $> 20\%$ , estimate positive results (J) and reject nondetects (R).

If any compound has a % D  $> 20\%$ , estimate positive results (J) and nondetects (UJ).

If any compound has a % D  $> 90\%$ , estimate positive results (J) and reject nondetects (R).

If any compound has  $r < 0.995$ , estimate positive results and nondetects.

A separate worksheet should be filled for each initial curve

## DATA REVIEW WORKSHEETS

All criteria were met ☒  
 Criteria were not met  
 and/or see below \_\_\_\_\_

### V A. BLANK ANALYSIS RESULTS (Sections 1 & 2)

The assessment of the blank analysis results is to determine the existence and magnitude of contamination problems. The criteria for evaluation of blanks apply only to blanks associated with the samples, including trip, equipment, and laboratory blanks. If problems with any blanks exist, all data associated with the case must be carefully evaluated to determine whether or not there is an inherent variability in the data for the case, or if the problem is an isolated occurrence not affecting other data.

List the contamination in the blanks below. High and low levels blanks must be treated separately.

#### Laboratory blanks

| DATE ANALYZED | LAB ID | LEVEL/MATRIX | COMPOUND | CONCENTRATION UNITS |
|---------------|--------|--------------|----------|---------------------|
| _____         | _____  | _____        | _____    | _____               |
| _____         | _____  | _____        | _____    | _____               |
| _____         | _____  | _____        | _____    | _____               |
| _____         | _____  | _____        | _____    | _____               |
| _____         | _____  | _____        | _____    | _____               |
| _____         | _____  | _____        | _____    | _____               |

#### Field/Equipment/Trip blank

| DATE ANALYZED | LAB ID | LEVEL/MATRIX | COMPOUND | CONCENTRATION UNITS |
|---------------|--------|--------------|----------|---------------------|
| _____         | _____  | _____        | _____    | _____               |
| _____         | _____  | _____        | _____    | _____               |
| _____         | _____  | _____        | _____    | _____               |
| _____         | _____  | _____        | _____    | _____               |
| _____         | _____  | _____        | _____    | _____               |
| _____         | _____  | _____        | _____    | _____               |
| _____         | _____  | _____        | _____    | _____               |
| _____         | _____  | _____        | _____    | _____               |
| _____         | _____  | _____        | _____    | _____               |
| _____         | _____  | _____        | _____    | _____               |

## DATA REVIEW WORKSHEETS

All criteria were met   X    
 Criteria were not met  
 and/or see below       

### V B. BLANK ANALYSIS RESULTS (Section 3)

#### Blank Actions

Action Levels (ALs) should be based upon the highest concentration of contaminant determined in any blank. Do not qualify any blank with another blank. The ALs for samples which have been diluted should be corrected for the sample dilution factor and/or % moisture, where applicable. No positive sample results should be reported unless the concentration of the compound in the samples exceeds the ALs:

ALs = 10x the amount of common contaminants (methylene chloride, acetone, 2-butanone, and toluene)  
 ALs = 5x for any other compounds

Specific actions are as follows:

If the concentration is < sample quantitation limit (SQL) and  $\leq$  AL, report the compound as not detected (U) at the SQL.

If the concentration is  $\geq$  SQL but  $\leq$  AL, report the compound as not detected (U) at the reported concentration.

If the concentration is  $\geq$  SQL and > AL, report the concentration unqualified.

Notes:

High and low level blanks must be treated separately

Compounds qualified "U" for blank contamination are still considered "hits" when qualifying for calibration criteria.

| CONTAMINATION<br>SOURCE/LEVEL | COMPOUND | CONC/UNITS | AL/UNITS | SQL | AFFECTED<br>SAMPLES |
|-------------------------------|----------|------------|----------|-----|---------------------|
|                               |          |            |          |     |                     |
|                               |          |            |          |     |                     |
|                               |          |            |          |     |                     |
|                               |          |            |          |     |                     |
|                               |          |            |          |     |                     |
|                               |          |            |          |     |                     |
|                               |          |            |          |     |                     |
|                               |          |            |          |     |                     |
|                               |          |            |          |     |                     |
|                               |          |            |          |     |                     |
|                               |          |            |          |     |                     |
|                               |          |            |          |     |                     |

## DATA REVIEW WORKSHEETS

All criteria were met ☒   
 Criteria were not met   
 and/or see below

### SURROGATE SPIKE RECOVERIES

Laboratory performance of individual samples is established by evaluation of surrogate spike recoveries. All samples are spiked with surrogate compounds prior to sample analysis. The accuracy of the analysis is measured by the surrogate percent recovery. Since the effects of the sample matrix are frequently outside the control of the laboratory and may present relatively unique problems, the validation of data is frequently subjective and demands analytical experience and professional judgment.

List the percent recoveries (%Rs) which do not meet the criteria for surrogate recovery.

Matrix: solid/aqueous

| SAMPLE ID | SURROGATE COMPOUND |      |        |     | ACTION |
|-----------|--------------------|------|--------|-----|--------|
|           | Hexanol            | DBFM | TOL-d8 | BFB |        |

All surrogate recoveries within laboratory control limits.

---



---



---



---



---

QC Limits\* (Aqueous)

LL to UL 73 to 123 to to to

QC Limits\* (Solid-Low)

LL to UL 69 to 121 to to to

QC Limits\* (Solid-Med)

LL to UL to to to to

1,2-DCA = 1,2-Dichloromethane-d4

TOL-d8 = Toluene-d8

DBFM = Dibromofluoromethane

BFB = Bromofluorobenzene

\* QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.

\* If QC limits are not available, use limits of 80 – 120 % for aqueous and 70 – 130 % for solid samples.

Actions:

| QUALITY            | %R < 10% | %R = 10% - LL | %R > UL |
|--------------------|----------|---------------|---------|
| Positive results   | J        | J             | J       |
| Nondetects results | R        | UJ            | Accept  |

Surrogate action should be applied:

If one or more surrogate in the VOC fraction is out of specification, but has a recovery of > 10%.

If any one surrogate in a fraction shows < 10 % recovery.

## DATA REVIEW WORKSHEETS

All criteria were met ☒   
 Criteria were not met   
 and/or see below \_\_\_\_\_

### VII. A MATRIX SPIKE/MATRIX SPIKE DUPLICATE (MS/MSD)

This data is generated to determine long term precision and accuracy in the analytical method for various matrices. This data alone cannot be used to evaluate the precision and accuracy of individual samples. If any % R in the MS or MSD falls outside the designated range, the reviewer should determine if there are matrix effects, i.e. LCS data are within the QC limits but MS/MSD data are outside QC limit.

#### 1. MS/MSD Recoveries and Precision Criteria

The laboratory should use one MS and a duplicate analysis of an unspiked field sample if target analytes are expected in the sample. If target analytes are not expected, MS/MSD should be analyzed.

List the %Rs, RPD of the compounds which do not meet the criteria.

Sample ID: JC20935-2MS/-MSD Matrix/Level: Groundwater/ow   
 Sample ID: JC20847-1AMS/-MSD Matrix/Level: Soil/ow

| MS OR MSD                                                           | COMPOUND | % R | RPD | QC LIMITS | ACTION |
|---------------------------------------------------------------------|----------|-----|-----|-----------|--------|
| <u>MS/MSD % recoveries and RPD within laboratory control limits</u> |          |     |     |           |        |
|                                                                     |          |     |     |           |        |
|                                                                     |          |     |     |           |        |
|                                                                     |          |     |     |           |        |
|                                                                     |          |     |     |           |        |
|                                                                     |          |     |     |           |        |

- \* QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.
- \* If QC limits are not available, use limits of 70 – 130 %.

Actions:

| QUALITY            | %R < LL | %R > UL |
|--------------------|---------|---------|
| Positive results   | J       | J       |
| Nondetects results | R       | Accept  |

## DATA REVIEW WORKSHEETS

All criteria were met ☒  
 Criteria were not met  
 and/or see below \_\_\_\_\_

MS/MSD criteria apply only to the unspiked sample, its dilutions, and the associated MS/MSD samples:

If the % R for the affected compounds were < LL (or 70 %), qualify positive results (J) and nondetects (UJ).

If the % R for the affected compounds were > UL (or 130 %), only qualify positive results (J).

If 25 % or more of all MS/MSD %R were < LL (or 70 %) or if two or more MS/MSD %Rs were < 10%, qualify all positive results (J) and reject nondetects (R).

### VII. B MATRIX SPIKE/MATRIX SPIKE DUPLICATE

#### MS/MSD – Unspiked Compounds

It should be noted that Region 2 SOP HW-24 does not specify a MS/MSD criteria for the unspiked compounds in the sample. A %RSD of < 50% has therefore been utilized as professional judgment.

If all target analytes were spiked in the MS/MSD, this review element is not applicable.

List the %RSD of the compounds which do not meet the criteria.

Sample ID: \_\_\_\_\_ - \_\_\_\_\_ Matrix/Level/Unit: \_\_\_\_\_ - \_\_\_\_\_

| COMPOUND | SAMPLE<br>CONC. | MS CONC. | MSD CONC. | % RSD | ACTION |
|----------|-----------------|----------|-----------|-------|--------|
|          |                 |          |           |       |        |
|          |                 |          |           |       |        |
|          |                 |          |           |       |        |
|          |                 |          |           |       |        |
|          |                 |          |           |       |        |
|          |                 |          |           |       |        |
|          |                 |          |           |       |        |
|          |                 |          |           |       |        |
|          |                 |          |           |       |        |

#### Actions:

\* If the % RSD > 50, qualify the positive result in the unspiked samples as estimated (J).

\* If the % RSD is not calculated (NC) due to nondetected value, use professional judgment to qualify the data.

A separate worksheet should be used for each MS/MSD pair.



## DATA REVIEW WORKSHEETS

All criteria were met   X    
 Criteria were not met  
 and/or see below           

### VIII. LABORATORY CONTROL SAMPLE (LCS) ANALYSIS

This data is generated to determine accuracy of the analytical method for various matrices.

#### 1. LCS Recoveries Criteria

Where LCS spiked with the same analyte at the same concentrations as the MS/MSD? **Yes**  
 or No. If no make note in data review memo.

List the %R of compounds which do not meet the criteria

| LCS ID                                              | COMPOUND | % R | QC LIMIT |
|-----------------------------------------------------|----------|-----|----------|
| <u>Recoveries within laboratory control limits.</u> |          |     |          |
|                                                     |          |     |          |
|                                                     |          |     |          |
|                                                     |          |     |          |
|                                                     |          |     |          |

- \* QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.
- \* If QC limits are not available, use limits of 70 – 130 %.

Actions:

| QUALITY            | %R < LL | %R > UL |
|--------------------|---------|---------|
| Positive results   | J       | J       |
| Nondetects results | R       | Accept  |

All analytes in the associated sample results are qualified for the following criteria.

If 25 % of the LCS recoveries were < LL (or 70 %), qualify all positive results (j) and reject nondetects (R).  
 If two or more LCS were below 10 %, qualify all positive results as (J) and reject nondetects (R).

#### 2. Frequency Criteria:

Where LCS analyzed at the required frequency and for each matrix? Yes or No.

If no, the data may be affected. Use professional judgment to determine the severity of the effect and qualify data accordingly. Discuss any actions below and list the samples affected.

## DATA REVIEW WORKSHEETS

All criteria were met   N/A    
 Criteria were not met  
 and/or see below           

### IX. FIELD/LABORATORY DUPLICATE PRECISION

Sample IDs:            -           

Matrix:            -   I  

Field/laboratory duplicates samples may be taken and analyzed as an indication of overall precision. These analyses measure both field and lab precision; therefore, the results may have more variability than laboratory duplicates which only laboratory performance. It is also expected that soil duplicate results will have a greater variance than water matrices due to difficulties associated with collecting identical field duplicate samples.

The project QAPP should be reviewed for project-specific information.

Suggested criteria: RPD  $\pm$  30% for aqueous samples, RPD  $\pm$  50 % for solid samples. If both samples and duplicate are <5 SQL, the RPD criteria is doubled.

| COMPOUND                                                                                                                                                                        | SQL | SAMPLE CONC. | DUPLICATE CONC. | RPD | ACTION |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|--------------|-----------------|-----|--------|
|                                                                                                                                                                                 |     |              |                 |     |        |
| No field/laboratory duplicate analyzed with this data package. MS/MSD % recoveries RPD used to assess precision. RPD within laboratory and generally acceptable control limits. |     |              |                 |     |        |
|                                                                                                                                                                                 |     |              |                 |     |        |
|                                                                                                                                                                                 |     |              |                 |     |        |

#### Actions:

Qualify as estimated positive results (J) and nondetects (UJ) for the compound that exceeded the above criteria. For organics, only the sample and duplicate will be qualified.

If an RPD cannot be calculated because one or both of the sample results is not detected, the following actions apply:

If one sample result is not detected and the other is greater than 5x the SQL qualify (J/UJ).

If one sample value is not detected and the other is greater than 5x the SQL and the SQLs for the sample and duplicate are significantly different, use professional judgment to determine if qualification is appropriate.

If one sample value is not detected and the other is less than 5x, use professional judgment to determine if qualification is appropriate.

If both sample and duplicate results are not detected, no action is needed.

All criteria were met N/A  
Criteria were not met  
and/or see below \_\_\_\_\_

The assessment of the internal standard (IS) parameter is used to assist the data reviewer in determining the condition of the analytical instrumentation.

\* Area of +100% or -50% of the IS area in the associated calibration standard.  
\* Retention time (RT) within 30 seconds of the IS area in the associated calibration standard.

| DATE | SAMPLE ID | IS OUT | IS AREA | ACCEPTABLE RANGE | ACTION |
|------|-----------|--------|---------|------------------|--------|
|------|-----------|--------|---------|------------------|--------|

[illegible]

1. IS actions should be applied to the compound quantitated with the out-of-control ISs

| QUALITY             | IS AREA < -25% | IS AREA = -25 %<br>TO - 50% | IS AREA > + 100% |
|---------------------|----------------|-----------------------------|------------------|
| Positive results    | J              | J                           | J                |
| Nondetected results | R              | UJ                          | ACCEPT           |

2. If a IS retention time varies more than 30 seconds, the chromatographic profile for that sample must be examined to determine if any false positive or negative exists. For shifts of a large magnitude, the reviewer may consider partial or total rejection of the data for the sample fraction.

## DATA REVIEW WORKSHEETS

All criteria were met ☒  
Criteria were not met  
and/or see below \_\_\_\_\_

### XII. SAMPLE QUANTITATION

The sample quantitation evaluation is to verify laboratory quantitation results. In the space below, please show a minimum of one sample calculation:

JC20935-2MS

Methanol

RF = 15.46

$$[ ] = (77617)/(15.46)$$

$$= 5,021 \text{ ppm OK}$$

**A. Dilution performed**

[illegible]

List samples which have  $\leq 50\%$  solids

If the % solids of a soil sample is 10-50%, estimate positive results (J) and nondetects (UJ)

If the % solids of a soil sample is  $< 10\%$ , estimate positive results (J) and reject nondetects (R)

## EXECUTIVE NARRATIVE

SDG No: **JC20935** Laboratory: **Accutest, New Jersey**  
Analysis: **SW846-8081B** Number of Samples: **2**

Location: **BMSMC, Building 5 Area**  
**Humacao, PR**

**SUMMARY:** Two (2) samples were analyzed for selected pesticides following method SW846-8081B. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence *Hazardous Waste Support Section SOP No. HW-36A, Revision 0, June, 2015. SOM02.2. Pesticide Data Validation*. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

Results are valid and can be used for decision making purposes.

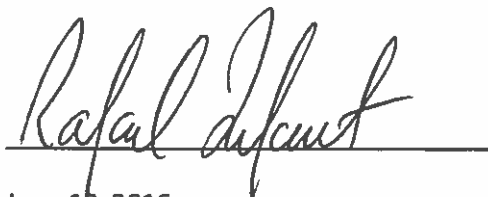
**Critical issues:** **None**  
**Major:** **None**  
**Minor:** **None**

**Critical findings:** **None**  
**Major findings:** **None**  
**Minor findings:** 1. No MS/MSD analyzed with this data package. Blank spike/blank spike % recoveries used to assess accuracy. % recoveries and RPD within laboratory control limits. No action taken.

**COMMENTS:** Results are valid and can be used for decision making purposes.

**Reviewers Name:** **Rafael Infante**  
**Chemist License 1888**

**Signature:**

A handwritten signature in black ink, appearing to read 'Rafael Infante', is written over a horizontal line.

**Date:**

**June 18, 2016**

# SAMPLE ORGANIC DATA SAMPLE SUMMARY

Sample ID: JC20935-2

Sample location: BMSMC Building 5 Area

Sampling date: 23-May-16

Matrix: AQ - Equipment Blank

## METHOD: 8081B

| Analyte Name        | Result | Units | Dilution Factor | Lab Flag | Validation | Reportable |
|---------------------|--------|-------|-----------------|----------|------------|------------|
| Aldrin              | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| alpha-BHC           | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| beta-BHC            | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| delta-BHC           | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| gamma-BHC (Lindane) | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| alpha-Chlordane     | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| gamma-Chlordane     | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| Dieldrin            | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| 4,4'-DDD            | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| 4,4'-DDE            | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| 4,4'-DDT            | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| Endrin              | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| Endosulfan sulfate  | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| Endrin aldehyde     | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| Endrin ketone       | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| Endosulfan-I        | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| Endosulfan-II       | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| Heptachlor          | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| Heptachlor epoxide  | 0.011  | ug/L  | 1               | -        | U          | Yes        |
| Methoxychlor        | 0.022  | ug/L  | 1               | -        | U          | Yes        |
| Toxaphene           | 0.28   | ug/L  | 1               | -        | U          | Yes        |

Sample ID: JC20935-6  
Sample location: BMSMC Building 5 Area  
Sampling date: 20-May-16  
Matrix: AQ - Equipment Blank

**METHOD: 8081B**

| Analyte Name        | Result | Units | Dilution Factor | Lab Flag | Validation | Reportable |
|---------------------|--------|-------|-----------------|----------|------------|------------|
| Aldrin              | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| alpha-BHC           | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| beta-BHC            | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| delta-BHC           | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| gamma-BHC (Lindane) | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| alpha-Chlordane     | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| gamma-Chlordane     | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| Dieldrin            | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| 4,4'-DDD            | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| 4,4'-DDE            | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| 4,4'-DDT            | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| Endrin              | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| Endosulfan sulfate  | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| Endrin aldehyde     | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| Endrin ketone       | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| Endosulfan-I        | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| Endosulfan-II       | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| Heptachlor          | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| Heptachlor epoxide  | 0.011  | ug/l  | 1               | -        | U          | Yes        |
| Methoxychlor        | 0.022  | ug/l  | 1               | -        | U          | Yes        |
| Toxaphene           | 0.28   | ug/l  | 1               | -        | U          | Yes        |



# DATA REVIEW WORKSHEETS

Project/Case Number: JC20935

Sampling Date: May 20-23, 2016

Shipping Date: May 23, 2016

EPA Region No.: 2

## REVIEW OF PESTICIDE ORGANIC PACKAGE

The following guidelines for evaluating volatile organics were created to delineate required validation actions. This document will assist the reviewer in using professional judgment to make more informed decision and in better serving the needs of the data users. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence *Hazardous Waste Support Section SOP No. HW-36A, Revision 0, June, 2015. SOM02.2. Pesticide Data Validation*. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

The hardcopied (laboratory name) Accutest data package received has been reviewed and the quality control and performance data summarized. The data review for VOCs included:

Lab. Project/SDG No.: JC20935 Sample matrix: Aqueous  
No. of Samples: 2

Trip blank No.: -  
Field blank No.: -  
Equipment blank No.: JC20935-6  
Field duplicate No.: -  
Field spikes No.: -  
QC audit samples: -

|                                                                         |                                                               |
|-------------------------------------------------------------------------|---------------------------------------------------------------|
| <input checked="" type="checkbox"/> Data Completeness                   | <input checked="" type="checkbox"/> Laboratory Control Spikes |
| <input checked="" type="checkbox"/> Holding Times                       | <input checked="" type="checkbox"/> Field Duplicates          |
| <input type="checkbox"/> N/A GC/MS Tuning                               | <input checked="" type="checkbox"/> Calibrations              |
| <input checked="" type="checkbox"/> Internal Standard Performance       | <input checked="" type="checkbox"/> Compound Identifications  |
| <input checked="" type="checkbox"/> Blanks                              | <input checked="" type="checkbox"/> Compound Quantitation     |
| <input checked="" type="checkbox"/> Surrogate Recoveries                | <input checked="" type="checkbox"/> Quantitation Limits       |
| <input checked="" type="checkbox"/> Matrix Spike/Matrix Spike Duplicate |                                                               |

Overall Comments: TCL\_pesticides\_list\_by\_SW846-8081B

### Definition of Qualifiers:

J- Estimated results  
U- Compound not detected  
R- Rejected data  
UJ- Estimated non-detected

Reviewer: Rafael Delant

Date: June 18, 2016

## DATA REVIEW WORKSHEETS

## DATA COMPLETENESS

### MISSING INFORMATION

DATE LAB. CONTACTED

DATE RECEIVED

[illegible]

## DATA REVIEW WORKSHEETS

All criteria were met X  
Criteria were not met \_\_\_\_\_  
and/or see below \_\_\_\_\_

### HOLDING TIMES

The objective of this parameter is to ascertain the validity of the results based on the holding time of the sample from time of collection to the time of analysis.

Complete table for all samples and note the analysis and/or preservation not within criteria

| SAMPLE ID                   | DATE SAMPLED | DATE EXTRACTED/ANALYZED | ACTION |
|-----------------------------|--------------|-------------------------|--------|
| Samples properly preserved. |              |                         |        |
|                             |              |                         |        |
|                             |              |                         |        |
|                             |              |                         |        |
|                             |              |                         |        |

Preservatives: All samples extracted and analyzed within the required criteria.

### Criteria

Aqueous samples - seven (7) days from sample collection for extraction; 40 days from sample collection for analysis.

Non-aqueous samples – fourteen (14) days from sample collection for extraction; 40 days from sample collection for analysis.

Cooler temperature (Criteria:  $4 \pm 2$  °C): 5.1°C - OK

### Actions

**Qualify aqueous sample results using preservation and technical holding time information as follows:**

- If there is no evidence that the samples were properly preserved ( $T = 4^{\circ}\text{C} \pm 2^{\circ}\text{C}$ ), and the samples were extracted or analyzed within the technical holding times, qualify detects as estimated (J) and non-detects as estimated (UJ).
- If there is no evidence that the samples were properly preserved ( $T = 4^{\circ}\text{C} \pm 2^{\circ}\text{C}$ ), and the samples were extracted or analyzed outside the technical holding times, qualify detects as estimated (J) and non-detects as estimated (UJ).
- If the samples were properly preserved, and were extracted and analyzed within the technical holding times, no qualification of the data is necessary.
- If the samples were properly preserved, and were extracted or analyzed outside the technical holding times, qualify detects as estimated (J) and non-detects as estimated (UJ). Note in the Data Review Narrative that holding times were exceeded and the effect of exceeding the holding time on the resulting data.

## DATA REVIEW WORKSHEETS

- e. Use professional judgment to qualify samples whose temperature upon receipt at the laboratory is either below 2 degrees centigrade or above 6 degrees centigrade.
- f. If technical holding times are grossly exceeded, use professional judgment to qualify the data.

### **Qualify non-aqueous sample results using preservation and technical holding time information as follows:**

- a. If there is no evidence that the samples were properly preserved ( $T = 4^{\circ}\text{C} \pm 2^{\circ}\text{C}$ ), and the samples were extracted or analyzed within the technical holding time, qualify detects as estimated (J) and non-detects as estimated (UJ).
- b. If there is no evidence that the samples were properly preserved ( $T = 4^{\circ}\text{C} \pm 2^{\circ}\text{C}$ ), and the samples were extracted or analyzed outside the technical holding time, qualify detects as estimated (J) and non-detects as estimated (UJ).
- c. If the samples were properly preserved, and were extracted and analyzed within the technical holding time, no qualification of the data is necessary.
- d. If the samples were properly preserved, and were extracted or analyzed outside the technical holding time, qualify detects as estimated (J) and non-detects as estimated (UJ). Note in the Data Review Narrative that holding times were exceeded and the effect of exceeding the holding time on the resulting data.
- e. Use professional judgment to qualify samples whose temperature upon receipt at the laboratory is either below 2 degrees centigrade or above 6 degrees centigrade.
- f. If technical holding times are grossly exceeded, use professional judgment to qualify the data.

## DATA REVIEW WORKSHEETS

All criteria were met   X    
Criteria were not met see below       

### GAS CHROMATOGRAPH WITH ELECTRON CAPTURE DETECTOR (GC/ECD) INSTRUMENT PERFORMANCE CHECK (SECTIONS 1 TO 5)

#### 1. Resolution Check Mixture

##### Criteria

Is the resolution between two adjacent peaks in the Resolution Check Mixture C greater than or equal to 80.0% for all analytes for the primary column and greater than or equal to 50.0% for the confirmation column?  
Yes? or No?

Is the resolution between two adjacent peaks in the Resolution Check Mixture (A and B) greater than or equal to 60.0%?  
Yes? or No?

Note: If resolution criteria are not met, the quantitative results may not be accurate due to inadequate resolution. Qualitative identifications may also be questionable if coelution exists.

##### Action

- a. Qualify detects for target compounds that were not adequately resolved as tentatively identified (NJ).
- b. Qualify non-detected compounds as unusable (R).

#### 2. Performance Evaluation Mixture (PEM) Resolution Criteria

##### Criteria

Is PEM analysis performed at the required frequency (at the end of each pesticide initial calibration sequence and every 12 hours)?  
Yes? or No?

##### Action

- a. If PEM is not performed at the required frequency, qualify all associated sample and blank results as unusable (R).

##### Criteria

Is PEM % Resolution < 90%?  
Yes? or No?

##### Action

- a. a. Qualify detects for target compounds that were not adequately resolved as tentatively identified (NJ).
- b. Qualify non-detected compounds as unusable (R).

## DATA REVIEW WORKSHEETS

All criteria were met X  
Criteria were not met see below \_\_\_\_\_

### 3. PEM 4,4'-DDT Breakdown

#### Criteria

Is the PEM 4,4'-DDT % Breakdown >20.0% and 4,4'-DDT is detected? Yes? or No?

#### Action

a. Qualify detects for 4,4'-DDT; detects for 4,4'-DDD; and detects for 4,4'-DDE as estimated (J)

#### Criteria

Is the PEM 4,4'-DDT % Breakdown >20.0% and 4,4'-DDT is not detected? Yes? or No?

#### Action

- a. Qualify non-detects for 4,4'- DDT as unusable (R )
- b. Qualify detects for 4,4'-DDD as tentatively identified (NJ)
- c. Qualify detects for 4,4'-DDE as tentatively identified (NJ)

### 4. PEM Endrin Breakdown

#### Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is detected? Yes? or No?

#### Action

a. Qualify detects for Endrin; detects for Endrin aldehyde; and detects for Endrin ketone as estimated (J)

#### Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is not detected? Yes? or No?

#### Action

- a. Qualify non-detects for Endrin as unusable (R )
- b. Qualify detects for Endrin aldehyde as tentatively identified (NJ)
- c. Qualify detects for Endrin ketone as tentatively identified (NJ)

## DATA REVIEW WORKSHEETS

All criteria were met X  
Criteria were not met see below       

### 5. Mid-point Individual Standard Mixture Resolution -

#### Criteria

Is the resolution between two adjacent peaks in the Resolution Check Mixture C greater than or equal to 80.0% for all analytes for the primary column and greater than or equal to 50.0% for the confirmation column?  
Yes? or No?

Is the resolution between two adjacent peaks in the Resolution Check Mixture (A and B) greater than or equal to 90.0%?  
Yes? or No?

**Note:** If resolution criteria are not met, the quantitative results may not be accurate due to inadequate resolution. Qualitative identifications may also be questionable if coelution exists.

#### Action

- a. Qualify detects for target compounds that were not adequately resolved as tentatively identified (NJ).
- b. Qualify non-detected compounds as unusable (R).

#### Criteria

Is mid-point individual standard mixture analysis performed at the required frequency (every 12 hours)?  
Yes? or No?

#### Action

- a. If the mid-point individual standard mixture analysis is not performed at the required frequency, qualify all associated sample and blank results as unusable (R).

## DATA REVIEW WORKSHEETS

All criteria were met X  
 Criteria were not met  
 and/or see below \_\_\_\_\_

### CALIBRATION VERIFICATION

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data.

Date of initial calibration: 05/16/16  
 Dates of initial calibration verification: 05/16/16  
 Dates of continuing calibration: 05/26/16  
 Dates of final calibration: 05/26/16  
 Instrument ID numbers: GC1G  
 Matrix/Level: Aqueous/low

| DATE                                                                                                                                                                                                                                                                                                                                       | LAB ID# | FILE | CRITERIA OUT<br>RFs, %RSD, %D, r | COMPOUND | SAMPLES AFFECTED |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|------|----------------------------------|----------|------------------|
|                                                                                                                                                                                                                                                                                                                                            |         |      |                                  |          |                  |
|                                                                                                                                                                                                                                                                                                                                            |         |      |                                  |          |                  |
|                                                                                                                                                                                                                                                                                                                                            |         |      |                                  |          |                  |
| Initial and initial calibration verification within the guidance document performance criteria.<br>Continuing calibration % differences meet the performance criteria in at least one of the two columns. Final calibration verification included in data. % differences meet the performance criteria in at least one of the two columns. |         |      |                                  |          |                  |
|                                                                                                                                                                                                                                                                                                                                            |         |      |                                  |          |                  |
|                                                                                                                                                                                                                                                                                                                                            |         |      |                                  |          |                  |

#### Criteria

Are a five point calibration curve delivered with concentration levels as shown in Table 3 of SOP HW-36A, Revision 0, June, 2015? Yes? or No?

#### Actions

If the standard concentrations listed in Table 3 are not used, use professional judgment to evaluate the effect on the data

#### Criteria

Are RT Windows calculated correctly? Yes? or No?

#### Action

Recalculate the windows and use the corrected values for all evaluations.



## DATA REVIEW WORKSHEETS

### Criteria

Are the Percent Relative Standard Deviation (%RSD) of the CFs for each of the single component target compounds less than or equal to 20.0%, except for alpha-BHC and delta-BHC?

Yes? or No?

Are the %RSD of the CFs for alpha-BHC and delta-BHC less than or equal to 25.0%. Yes? or No?

Is the %RSD of the CFs for each of the Toxaphene peaks must be < 30% when 5-point ICAL is performed?

Yes? or No?

Is the %RSD of the CFs for the two surrogates (tetrachloro-m-xylene and decachlorobiphenyl) less than or equal to 30.0%.

Yes? or No?

### Action

a. If the %RSD criteria are not met, qualify detects as estimated (J) and use professional judgment to qualify non-detected target compounds.

b. If the %RSD criteria are within allowable limits, no qualification of the data is necessary

### Continuing Calibration Checks

#### Criteria

Is the continuing calibration standard analyzed at the acceptable time intervals? Yes? or No?

#### Action

a. If more than 14 hours has elapsed from the injection of the instrument blank that begins an analytical sequence (opening CCV) and the injection of either a PEM or mid-point concentration of the Individual Standard Mixtures (A and B) or (C), qualify all data as unusable (R).

b. If more than 12 hours has elapsed from the injection of the instrument blank that begins an analytical sequence (opening CCV) and the injection of the last sample or blank that is part of the same analytical sequence, qualify all data as unusable (R).

c. If more than 72 hours has elapsed from the injection of the sample with a Toxaphene detection and the Toxaphene Calibration Verification Standard (CS3), qualify all data as unusable (R).

#### Criteria

Is the Percent Difference (%D) within  $\pm 25.0\%$  for the PEM sample?

Yes? or No?

#### Action

a. Qualify associated detects as estimated (J) and non-detects as estimated (UJ).

#### Criteria

For the Calibration Verification Standard (CS3); is the Percent Difference (%D) within  $\pm 25.0\%$ ?

Yes? or No?

#### Action

Qualify associated detects as estimated (J) and non-detects as estimated (UJ).

## DATA REVIEW WORKSHEETS

All criteria were met   X    
Criteria were not met  
and/or see below           

### Criteria

Is the PEM 4,4'-DDT % Breakdown >20.0% and 4,4'-DDT is detected?

Yes? or No?

### Action

- a. Qualify detects for 4,4'-DDT; detects for 4,4'-DDD; and detects for 4,4'-DDE as estimated (J)
- b. Non-detected associated compounds are not qualified

### Criteria

Is the PEM 4,4'-DDT % Breakdown >20.0% and 4,4'-DDT is not detected

Yes? or No?

### Action

- a. Qualify non-detects for 4,4'- DDT as unusable (R )
- b. Qualify detects for 4,4'-DDD as tentatively identified (NJ)
- c. Qualify detects for 4,4'-DDE as tentatively identified (NJ)

### Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is detected?

Yes? or No?

### Action

- a. Qualify detects for Endrin; detects for Endrin aldehyde; and detects for Endrin ketone as estimated (J)
- b. Non-detected associated compounds are not qualified

### Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is not detected

Yes? or No?

### Action

- a. Qualify non-detects for Endrin as unusable (R )
- b. Qualify detects for Endrin aldehyde as tentatively identified (NJ)
- c. Qualify detects for Endrin ketone as tentatively identified (NJ)

A separate worksheet should be filled for each initial curve

## DATA REVIEW WORKSHEETS

All criteria were met ☒  
 Criteria were not met  
 and/or see below \_\_\_\_\_

### BLANK ANALYSIS RESULTS (Sections 1 & 2)

The assessment of the blank analysis results is to determine the existence and magnitude of contamination problems. The criteria for evaluation of blanks apply only to blanks associated with the samples, including trip, equipment, and laboratory blanks. If problems with any blanks exist, all data associated with the case must be carefully evaluated to determine whether or not there is an inherent variability in the data for the case, or if the problem is an isolated occurrence not affecting other data.

List the contamination in the blanks below. High and low levels blanks must be treated separately.

CRQL concentration \_\_\_\_\_ N/A \_\_\_\_\_

#### Laboratory blanks

| DATE ANALYZED                                                                             | LAB ID | LEVEL/ MATRIX | COMPOUND | CONCENTRATION UNITS |
|-------------------------------------------------------------------------------------------|--------|---------------|----------|---------------------|
| No target analytes detected in method blanks at a reporting limit of 0.01 and 0.001 ug/L. |        |               |          |                     |
|                                                                                           |        |               |          |                     |
|                                                                                           |        |               |          |                     |
|                                                                                           |        |               |          |                     |
|                                                                                           |        |               |          |                     |

#### Field/Equipment/Trip blank

| DATE ANALYZED                                                                                             | LAB ID | LEVEL/ MATRIX | COMPOUND | CONCENTRATION UNITS |
|-----------------------------------------------------------------------------------------------------------|--------|---------------|----------|---------------------|
| No target analytes detected in the equipment blank. No field/trip blanks analyzed with this data package. |        |               |          |                     |
|                                                                                                           |        |               |          |                     |
|                                                                                                           |        |               |          |                     |
|                                                                                                           |        |               |          |                     |
|                                                                                                           |        |               |          |                     |
|                                                                                                           |        |               |          |                     |
|                                                                                                           |        |               |          |                     |
|                                                                                                           |        |               |          |                     |
|                                                                                                           |        |               |          |                     |
|                                                                                                           |        |               |          |                     |

## DATA REVIEW WORKSHEETS

All criteria were met   X    
 Criteria were not met  
 and/or see below       

### BLANK ANALYSIS RESULTS (Section 3)

#### Blank Actions

Action Levels (ALs) should be based upon the highest concentration of contaminant determined in any blank. Do not qualify any blank with another blank. The ALs for samples which have been diluted should be corrected for the sample dilution factor and/or % moisture, where applicable. No positive sample results should be reported unless the concentration of the compound in the samples exceeds the ALs:

The concentration of non-target compounds in all blanks must be less than or equal to 10 µg/L. The concentration of each target compound found in the method or field blanks must be less than its CRQL listed in the method.

Data concerning the field blanks are not evaluated as part of the CCS process. If field blanks are present, the data reviewer should evaluate this data in a similar fashion as the method blanks.

Specific actions are as follows:

#### Blank Actions for Pesticide Analyses

| Blank Type                                           | Blank Result        | Sample Result                    | Action for Samples                                   |
|------------------------------------------------------|---------------------|----------------------------------|------------------------------------------------------|
| Method, Sulfur Cleanup, Instrument, Field, TCLP/SPLP | Detects             | Not detected                     | No qualification required                            |
|                                                      | < CRQL              | < CRQL                           | Report CRQL value with a U                           |
|                                                      |                     | ≥ CRQL                           | No qualification required                            |
|                                                      | > CRQL              | < CRQL                           | Report CRQL value with a U                           |
|                                                      |                     | ≥ CRQL and ≤ blank concentration | Report blank value for sample concentration with a U |
|                                                      |                     | ≥ CRQL and > blank concentration | No qualification required                            |
|                                                      | = CRQL              | ≤ CRQL                           | Report CRQL value with a U                           |
|                                                      |                     | > CRQL                           | No qualification required                            |
|                                                      | Gross contamination | Detects                          | Report blank value for sample concentration with a U |

## DATA REVIEW WORKSHEETS

All criteria were met X  
Criteria were not met  
and/or see below \_\_\_\_\_

[illegible]

## DATA REVIEW WORKSHEETS

All criteria were met   X    
 Criteria were not met  
 and/or see below           

### SURROGATE SPIKE RECOVERIES

Laboratory performance of individual samples is established by evaluation of surrogate spike recoveries. All samples are spiked with surrogate compounds prior to sample analysis. The accuracy of the analysis is measured by the surrogate percent recovery. Since the effects of the sample matrix are frequently outside the control of the laboratory and may present relatively unique problems, the validation of data is frequently subjective and demands analytical experience and professional judgment.

List the percent recoveries (%Rs) which do not meet the criteria for surrogate recovery.

Matrix: Aqueous

| Lab<br>Sample ID | Lab<br>File ID | S1 a | S1 b | S2 a | S2 b |
|------------------|----------------|------|------|------|------|
| JC20935-2        | 1G123572.D     | 78   | 79   | 39   | 43   |
| JC20935-6        | 1G123579.D     | 84   | 79   | 53   | 59   |
| OP94259-BS1      | 1G123569.D     | 82   | 80   | 77   | 84   |
| OP94259-BSD      | 1G123570.D     | 74   | 74   | 66   | 73   |
| OP94259-MB1      | 1G123568.D     | 86   | 83   | 69   | 77   |

|                        |                    |
|------------------------|--------------------|
| Surrogate<br>Compounds | Recovery<br>Limits |
|------------------------|--------------------|

|                           |         |
|---------------------------|---------|
| S1 = Tetrachloro-m-xylene | 26-132% |
|---------------------------|---------|

|                         |         |
|-------------------------|---------|
| S2 = Decachlorobiphenyl | 10-118% |
|-------------------------|---------|

(a) Recovery from GC signal #1

(b) Recovery from GC signal #2

**Note:** Surrogate recoveries within laboratory control limits.

#### Actions:

- For any surrogate recovery greater than 150%, qualify detected target compounds as biased high (J+).
- Do not qualify non-detected target compounds for surrogate recovery > 150 %.
- If both surrogate recoveries are greater than or equal to 30% and less than or equal to 150%, no qualification of the data is necessary.
- For any surrogate recovery greater than or equal to 10% and less than 30%, qualify detected target compounds as biased low (J-).
- For any surrogate recovery greater than or equal to 10% and less than 30%, qualify non-detected target compounds as approximated (UJ).
- If low surrogate recoveries are from sample dilution, professional judgment should be used to determine if the resulting data should be qualified. If sample dilution is not a factor:
  - Qualify detected target compounds as biased low (J-).
  - Qualify non-detected target compounds as unusable (R).

## DATA REVIEW WORKSHEETS

- g. If surrogate RTs in PEMs, Individual Standard Mixtures, samples, and blanks are outside of the RT Windows, the reviewer must use professional judgment to qualify data.
- h. If surrogate RTs are within RT windows, no qualification of the data is necessary.
- i. If the two surrogates were not added to all samples, MS/MSDs, standards, LCSs, and blanks, use professional judgment in qualifying data as missing surrogate analyte may not directly apply to target analytes.

### Summary Surrogate Actions for Pesticide Analyses

| Criteria                                | Action*                   |                               |
|-----------------------------------------|---------------------------|-------------------------------|
|                                         | Detected Target Compounds | Non-detected Target Compounds |
| %R > 150%                               | J+                        | No qualification              |
| 30% < %R < 150%                         | No qualification          |                               |
| 10% < %R < 30%                          | J-                        | UJ                            |
| %R < 10% (sample dilution not a factor) | J-                        | R                             |
| %R < 10% (sample dilution is a factor)  | Use professional judgment |                               |
| RT out of RT window                     | Use professional judgment |                               |
| RT within RT window                     | No qualification          |                               |

- \* Use professional judgment in qualifying data, as surrogate recovery problems may not directly apply to target analytes.

## DATA REVIEW WORKSHEETS

All criteria were met  N/A   
 Criteria were not met  
 and/or see below \_\_\_\_\_

### MATRIX SPIKE/MATRIX SPIKE DUPLICATE (MS/MSD)

This data is generated to determine long term precision and accuracy in the analytical method for various matrices. This data alone cannot be used to evaluate the precision and accuracy of individual samples. If any % R in the MS or MSD falls outside the designated range, the reviewer should determine if there are matrix effects, i.e. LCS data are within the QC limits but MS/MSD data are outside QC limit.

#### 1. MS/MSD Recoveries and Precision Criteria

Data for MS and MSDs will not be present unless requested by the Region.

Notify the Contract Laboratory Program Project Officer (CLP PO) if a field blank was used for the MS and MSD, unless designated as such by the Region.

**NOTE:** For a Matrix Spike that does not meet criteria, apply the action to only the field sample used to prepare the Matrix Spike sample. If it is clearly stated in the data validation materials that the samples were taken through incremental sampling or some other method guaranteeing the homogeneity of the sample group, then the entire sample group may be qualified.

List the %Rs, RPD of the compounds which do not meet the criteria.

Sample ID: \_\_\_\_\_ - \_\_\_\_\_ Matrix/Level: \_\_\_\_\_ - \_\_\_\_\_

| MS OR MSD | COMPOUND | % R | RPD | QC LIMITS | ACTION |
|-----------|----------|-----|-----|-----------|--------|
|           |          |     |     |           |        |
|           |          |     |     |           |        |
|           |          |     |     |           |        |
|           |          |     |     |           |        |
|           |          |     |     |           |        |

**Note:** No MS/MSD sample analyzed with this data package. Blank spike/blank spike duplicate used to assess accuracy. % recoveries and RPD within laboratory control limits. No action taken.

#### Action

No qualification of the data is necessary on MS and MSD data alone. However, using professional judgment, the validator may use the MS and MSD results in conjunction with other QC criteria and determine the need for some qualification of the data.

A separate worksheet should be used for each MS/MSD pair.



# DATA REVIEW WORKSHEETS

All criteria were met   X    
 Criteria were not met  
 and/or see below           

## LABORATORY CONTROL SAMPLE (LCS) ANALYSIS

This data is generated to determine accuracy of the analytical method for various matrices.

### 1. LCS Recoveries Criteria

| LCS Spike Compound               | Recovery Limits (%) |
|----------------------------------|---------------------|
| gamma-BHC                        | 50 – 120            |
| Heptachlor epoxide               | 50 – 150            |
| Dieldrin                         | 30 – 130            |
| 4,4'-DDE                         | 50 – 150            |
| Endrin                           | 50 – 120            |
| Endosulfan sulfate               | 50 – 120            |
| trans-Chlordane                  | 30 – 130            |
| Tetrachloro-m-xylene (surrogate) | 30 – 150            |
| Decachlorobiphenyl (surrogate)   | 30 – 150            |

LCS concentrations:   0.25 ug/l  

List the %R of compounds which do not meet the criteria

| LCS ID | COMPOUND | % R | QC LIMIT |
|--------|----------|-----|----------|
|        |          |     |          |
|        |          |     |          |
|        |          |     |          |
|        |          |     |          |
|        |          |     |          |

### Action

The following guidance is suggested for qualifying sample data for which the associated LCS does not meet the required criteria.

- If the LCS recovery exceeds the upper acceptance limit, qualify detected target compounds as estimated (J). Do not qualify non-detected target compounds.
- If the LCS recovery is less than the lower acceptance limit, qualify detected target compounds as estimated (J) and non-detects as unusable (R).
- Use professional judgment to qualify data for compounds other than those compounds that are included in the LCS.
- Use professional judgment to qualify non-LCS compounds. Take into account the compound class, compound recovery efficiency, analytical problems associated with each compound, and comparability in the performance of the LCS compound to the non-LCS compound.
- If the LCS recovery is within allowable limits, no qualification of the data is necessary.

## DATA REVIEW WORKSHEETS

### 2. Frequency Criteria:

Where LCS analyzed at the required frequency and for each matrix? Yes or No.

If no, the data may be affected. Use professional judgment to determine the severity of the effect and qualify data accordingly. Discuss any actions below and list the samples affected.

**Note:** Blank spike/blank spike duplicate analyzed for aqueous matrices. % recoveries and RPD within laboratory control limits.

## DATA REVIEW WORKSHEETS

All criteria were met \_\_\_\_\_  
Criteria were not met \_\_\_\_\_  
and/or see below N/A

### FLORISIL CARTRIDGE PERFORMANCE CHECK

NOTE: Florisil cartridge cleanup is mandatory for all extracts.

#### Criteria

Is the Florisil cartridge performance check conducted at least once on each lot of cartridges used for sample cleanup or every 6 months, whichever is most frequent? Yes? or No? N/A

#### Criteria

Are the results for the Florisil Cartridge Performance Check solution included with the data package? Yes? or No? N/A

Note: If % criteria are not met, examine the raw data for the presence of polar interferences and use professional judgment in qualifying the data as follows:

#### Action:

- a. If the Percent Recovery is greater than 120% for any of the pesticide target compounds in the Florisil Cartridge Performance Check, qualify detected compounds as estimated (J). Do not qualify non-detected target compounds.
- b. If the Percent Recovery is greater than or equal to 80% and less than or equal to 120% for all the pesticide target compounds, no qualification of the data is necessary.
- c. If the Percent Recovery is greater than or equal to 10% and less than 80% for any of the pesticide target compounds in the Florisil Cartridge Performance Check, qualify detected target compounds as estimated (J) and non-detected target compounds as approximated (UJ).
- d. If the Percent Recovery is less than 10% for any of the pesticide target compounds in the Florisil Cartridge Performance Check, qualify detected compounds as estimated (J) and qualify non-detected target compounds as unusable (R).
- e. If the Percent Recovery of 2,4,5-trichlorophenol in the Florisil Cartridge Performance Check is greater than or equal to 5%, use professional judgment to qualify detected and non-detected target compounds, considering interference on the sample chromatogram.

Note: State in the Data Review Narrative potential effects on the sample data resulting from the Florisil Cartridge Performance Check analysis not yielding acceptable results.

Note: No information for florisil cartridge performance check included in data package. Florisil cartridge was not used for sample extraction/clean-up. No qualification of the data performed, professional judgment.

## DATA REVIEW WORKSHEETS

All criteria were met N/A  
Criteria were not met  
and/or see below \_\_\_\_\_

### GEL PERMEATION CHROMATOGRAPHY (GPC) PERFORMANCE CHECK

NOTE: GPC cleanup is mandatory for all soil samples.

If GPC criteria are not met, examine the raw data for the presence of high molecular weight contaminants; examine subsequent sample data for unusual peaks; and use professional judgment in qualifying the data. Notify the Contract Laboratory Program Project Officer (CLP PO) if the laboratory chooses to analyze samples under unacceptable GPC criteria.

#### Action:

- a. If the Percent Recovery is less than 10% for the pesticide compounds and surrogates during the GPC calibration check, the non-detected target compounds may be suspect, qualify detected compounds as estimated (J).
- b. If the Percent Recovery is less than 10% for the pesticide compounds and surrogates during the GPC calibration check, qualify all non-detected target compounds as unusable (R).
- c. If the Percent Recovery is greater than or equal to 10% and is less than 80% for any of the pesticide target compounds in the GPC calibration, qualify detected target compounds as estimated (J) and non-detected target compounds as approximated (UJ).
- d. If the Percent Recovery is greater than or equal to 80% and less than or equal to 120% for all the pesticide target compounds, no qualification of the data is necessary.
- e. If high recoveries (i.e., greater than 120%) were obtained for the pesticides and surrogates during the GPC calibration check, qualify detected compounds as estimated (J). Do not qualify non-detected target compounds.

Note: State in the Data Review Narrative potential effects on the sample data resulting from the GPC cleanup analyses not yielding acceptable results.

**Note:** No information for performance of GPC cleanup included in data package. No qualification of the data performed, professional judgment.

## DATA REVIEW WORKSHEETS

All criteria were met   X    
 Criteria were not met \_\_\_\_\_  
 and/or see below \_\_\_\_\_

### COMPOUND QUANTITATION AND REPORTED CONTRACT REQUIRED QUANTITATION LIMITS (CRQLS)

The sample quantitation evaluation is to verify laboratory quantitation results. In the space below, please show a minimum of one sample calculation:

JC20935-1

Tetrachloro-m-xylene

RF = 0.904

$$\begin{aligned} [ ] &= (83510150)(50)/(147.5 \times 10^6)(0.904) \\ &= 31.3 \text{ ppb} \quad \text{Ok} \end{aligned}$$

#### Action:

- If sample quantitation is different from the reported value, qualify result as unusable (R).
- When a sample is analyzed at more than one dilution, the lowest CRQLs are used unless a QC exceedance dictates the use of the higher CRQLs from the diluted sample.
- Replace concentrations that exceed the calibration range in the original analysis by crossing out the "E" and its corresponding value on the original reporting form and substituting the data from the diluted sample.
- Results between the MDL and CRQL should be qualified as estimated (J).
- Results less than the MDL should be reported at the CRQL and qualified (U). MDLs themselves are not reported.
- For non-aqueous samples, if the percent moisture is less than 70.0%, no qualification of the data is necessary. If the percent moisture is greater than or equal to 70.0% and less than 90.0%, qualify detects as estimated (J) and non-detects as approximated (UJ). If the percent moisture is greater than or equal to 90.0%, qualify detects as estimated (J) and non-detects as unusable (R) (see Table).

#### Percent Moisture Actions for Pesticide Analysis for Non-Aqueous Samples

| Criteria                 | Action                        |                                   |
|--------------------------|-------------------------------|-----------------------------------|
|                          | Detected Associated Compounds | Non-detected Associated Compounds |
| % Moisture < 70.0        | No qualification              |                                   |
| 70.0 < % Moisture < 90.0 | J                             | UJ                                |
| % Moisture > 90.0        | J                             | R                                 |

## DATA REVIEW WORKSHEETS

List samples which have  $\leq 50\%$  solids

---

---

---

---

---

---

Note: If any discrepancies are found, the Region's designated representative may contact the laboratory to obtain additional information that could resolve any differences. If a discrepancy remains unresolved, the reviewer must use professional judgment to decide which value is the most accurate. Under these circumstances, the reviewer may determine that qualification of data is warranted. Note in the Data Review Narrative a description of the reasons for data qualification and the qualification that is applied to the data.

Dilution performed

| SAMPLE ID | DILUTION FACTOR | REASON FOR DILUTION |
|-----------|-----------------|---------------------|
|           |                 |                     |
|           |                 |                     |
|           |                 |                     |
|           |                 |                     |
|           |                 |                     |
|           |                 |                     |
|           |                 |                     |
|           |                 |                     |
|           |                 |                     |
|           |                 |                     |
|           |                 |                     |
|           |                 |                     |
|           |                 |                     |
|           |                 |                     |
|           |                 |                     |

## DATA REVIEW WORKSHEETS

All criteria were met   N/A    
 Criteria were not met  
 and/or see below           

### FIELD DUPLICATE PRECISION

**NOTE:** In the absence of QAPP guidance for validating data from field duplicates, the following action will be taken.

Field duplicates samples may be taken and analyzed as an indication of overall precision. These analyses measure both field and lab precision; therefore, the results may have more variability than laboratory duplicates which only laboratory performance. It is also expected that soil duplicate results will have a greater variance than water matrices due to difficulties associated with collecting identical field duplicate samples. Identify which samples within the data package are field duplicates. Estimate the relative percent difference (RPD) between the values for each compound. If large RPDs (> 50%) is observed, confirm identification of samples and note difference in the executive summary.

Sample IDs:            -           

Matrix:            -           

| COMPOUND                                                                                                                                                       | SQL<br>ug/L | SAMPLE<br>CONC. | DUPLICATE<br>CONC. | RPD | ACTION |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|-----------------|--------------------|-----|--------|
|                                                                                                                                                                |             |                 |                    |     |        |
|                                                                                                                                                                |             |                 |                    |     |        |
| No field/laboratory duplicate analyzed with this data package. LCS/LCSD % recoveries RPD used to assess precision. RPD within the required criteria of < 50 %. |             |                 |                    |     |        |
|                                                                                                                                                                |             |                 |                    |     |        |
|                                                                                                                                                                |             |                 |                    |     |        |

#### Actions:

a. Qualify as estimated positive results (J) and nondetects (UJ) for the compound that exceeded the above criteria. For organics, only the sample and duplicate will be qualified.

b. If an RPD cannot be calculated because one or both of the sample results is not detected, the following actions apply:

- i. If one sample result is not detected and the other is greater than 5x the SQL qualify (J/UJ).
- ii. If one sample value is not detected and the other is greater than 5x the SQL and the SQLs for the sample and duplicate are significantly different, use professional judgment to determine if qualification is appropriate.
- iii. If one sample value is not detected and the other is less than 5x, use professional judgment to determine if qualification is appropriate.
- iv. If both sample and duplicate results are not detected, no action is needed.

## DATA REVIEW WORKSHEETS

### OVERALL ASSESSMENT OF DATA

**Action:**

1. Use professional judgment to determine if there is any need to qualify data which were not qualified based on the Quality Control (QC) criteria previously discussed.
2. Write a brief narrative to give the user an indication of the analytical limitations of the data.

**Note:** The Contract Laboratory Program Project Officer (CLP PO) must be informed if any inconsistency of the data with the Sample Delivery Group (SDG) Narrative. If sufficient information on the intended use and required quality of the data is available, the reviewer should include their assessment of the usability of the data within the given context. This may be used as part of a formal Data Quality Assessment (DQA).

**Overall assessment of the data:** Results are valid; the data can be used for decision making purposes.