



# Analytical Laboratory

Page 1 of 16

13339 Hagers Ferry Road  
Huntersville, NC 28078-7929  
McGuire Nuclear Complex - MG03A2  
Phone: 980-875-5245 Fax: 980-875-4349

## Order Summary Report

**Order Number:** J11070315

Project Name: WWTS - Biweekly

Customer Name(s): FGD WWTS

Customer Address: 3195 Pine Hall Rd  
Mailcode: Belews Steam Station  
Belews Creek, NC 28012

Lab Contact: Jason C Perkins Phone: 980-875-5348

**Report Authorized By:** \_\_\_\_\_ **Date:** 8/9/2011  
(Signature)

---

### Program Comments:

FGD BiMonthly

### Data Flags & Calculations:

Any analytical tests or individual analytes within a test flagged with an "X" or "1" indicate a deviation from the method quality system or quality control requirement. All results are reported on a dry weight basis unless otherwise noted.

### Data Package:

This data package includes analytical results that are applicable only to the samples described in this narrative. An estimation of the uncertainty of measurement for the results in the report is available upon request. This report shall not be reproduced, except in full, without the written consent of the Analytical Laboratory. Please contact the Analytical laboratory with any questions. The order of individual sections within this report is as follows:

*Job Summary Report, Sample Identification, Technical Validation of Data Package, Analytical Laboratory Certificate of Analysis, Analytical Laboratory QC Reports, Sub-contracted Laboratory Results, Customer Specific Data Sheets, Reports & Documentation, Customer Database Entries, Test Case Narratives, Chain of Custody (COC)*

### Certification:

The Analytical Laboratory holds the following State Certifications : North Carolina (DENR) Certificate #248, South Carolina (DHEC) Laboratory ID # 99005. Contact the Analytical Laboratory for definitive information about the certification status of specific methods.

## Sample ID's & Descriptions:

Sample ID	Plant/Station	Collection Date and Time	Collected By	Sample Description
2011015802	BELEWS	27-Jul-11 8:30 AM	TRAVIS THORNTON	FGD Purge Eff
2011015803	BELEWS	27-Jul-11 8:00 AM	TRAVIS THORNTON	EQ TANK EFF.
2011015804	BELEWS	27-Jul-11 8:00 AM	TRAVIS THORNTON	BIOREACTOR 1 INF.
2011015805	BELEWS	27-Jul-11 8:00 AM	TRAVIS THORNTON	BIOREACTOR 2 INF.
2011015806	BELEWS	27-Jul-11 8:00 AM	TRAVIS THORNTON	BIOREACTOR 2 EFF.
2011015807	BELEWS	19-Jul-11 9:30 AM	L.DAVIS	Trip Blank
2011015808	BELEWS	19-Jul-11 9:30 AM	L.DAVIS	FILTER BLANK
7 Total Samples				

# Technical Validation Review

## Checklist:

COC and .pdf report are in agreement with sample totals and analyses (compliance programs and procedures).

☒ Yes

☐ No

All Results are less than the laboratory reporting limits.

☐ Yes

☒ No

All laboratory QA/QC requirements are acceptable.

☒ Yes

☐ No

The Vendor Laboratories have been qualified by the Analytical Laboratory

Yes

## Report Sections Included:

☒ Job Summary Report

☒ Sample Identification

☒ Technical Validation of Data Package

☒ Analytical Laboratory Certificate of Analysis

☐ Analytical Laboratory QC Report

☒ Sub-contracted Laboratory Results

☐ Customer Specific Data Sheets, Reports, & Documentation

☐ Customer Database Entries

☐ Test Case Narratives

☒ Chain of Custody

☐ Electronic Data Deliverable (EDD) Sent Separately

Reviewed By: DataBase Administrator

Date: 8/9/2011

# Certificate of Laboratory Analysis

*This report shall not be reproduced, except in full.*

**Order # J11070315**

Site: FGD Purge Eff  
Collection Date: 27-Jul-11 8:30 AM

**Sample #: 2011015802**  
Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b><u>MERCURY (COLD VAPOR) IN WATER</u></b>							
Mercury (Hg)	<b>416</b>	ug/L		5	EPA 245.1	05-Aug-11 10:10	AGIBBS
<b><u>TOTAL RECOVERABLE METALS BY ICP</u></b>							
Boron (B)	<b>197</b>	mg/L		0.5	EPA 200.7	29-Jul-11 11:47	DJSULL1
<b><u>DISSOLVED METALS BY ICP-MS</u></b>							
Selenium (Se)	<b>389</b>	ug/L		10	EPA 200.8	01-Aug-11 11:50	KRICHAR
<b><u>TOTAL RECOVERABLE METALS BY ICP-MS</u></b>							
Arsenic (As)	<b>248</b>	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Chromium (Cr)	<b>359</b>	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Copper (Cu)	<b>335</b>	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Nickel (Ni)	<b>343</b>	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Selenium (Se)	<b>7110</b>	ug/L		20	EPA 200.8	03-Aug-11 11:41	MHH7131
Silver (Ag)	<b>&lt; 10</b>	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Zinc (Zn)	<b>616</b>	ug/L		20	EPA 200.8	03-Aug-11 11:41	MHH7131
<b><u>SELENIUM SPECIATION</u></b>							
Vendor Parameter	<b>Complete</b>				V_AS&C		
<b><u>TOTAL DISSOLVED SOLIDS</u></b>							
TDS	<b>22000</b>	mg/L		200	SM2540C	28-Jul-11 15:15	TJA7067

Site: EQ TANK EFF.  
Collection Date: 27-Jul-11 8:00 AM

**Sample #: 2011015803**  
Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b><u>MERCURY (COLD VAPOR) IN WATER</u></b>							
Mercury (Hg)	<b>118</b>	ug/L		2.5	EPA 245.1	05-Aug-11 10:12	AGIBBS
<b><u>TOTAL RECOVERABLE METALS BY ICP</u></b>							
Boron (B)	<b>134</b>	mg/L		0.5	EPA 200.7	29-Jul-11 11:51	DJSULL1
<b><u>DISSOLVED METALS BY ICP-MS</u></b>							
Selenium (Se)	<b>271</b>	ug/L		10	EPA 200.8	01-Aug-11 11:50	KRICHAR
<b><u>TOTAL RECOVERABLE METALS BY ICP-MS</u></b>							
Arsenic (As)	<b>214</b>	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Chromium (Cr)	<b>221</b>	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Copper (Cu)	<b>200</b>	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Nickel (Ni)	<b>211</b>	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131

# Certificate of Laboratory Analysis

*This report shall not be reproduced, except in full.*

Order # J11070315

Site: EQ TANK EFF.

Collection Date: 27-Jul-11 8:00 AM

Sample #: 2011015803

Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b>TOTAL RECOVERABLE METALS BY ICP-MS</b>							
Selenium (Se)	8980	ug/L		20	EPA 200.8	03-Aug-11 11:41	MHH7131
Silver (Ag)	< 10	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Zinc (Zn)	376	ug/L		20	EPA 200.8	03-Aug-11 11:41	MHH7131

Site: BIOREACTOR 1 INF.

Collection Date: 27-Jul-11 8:00 AM

Sample #: 2011015804

Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b>TOTAL RECOVERABLE METALS BY ICP</b>							
Boron (B)	176	mg/L		0.5	EPA 200.7	29-Jul-11 11:55	DJSULL1
<b>DISSOLVED METALS BY ICP-MS</b>							
Selenium (Se)	252	ug/L		10	EPA 200.8	01-Aug-11 11:50	KRICHR
<b>TOTAL RECOVERABLE METALS BY ICP-MS</b>							
Arsenic (As)	< 10	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Chromium (Cr)	< 10	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Copper (Cu)	< 10	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Nickel (Ni)	21.6	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Selenium (Se)	292	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Silver (Ag)	< 10	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Zinc (Zn)	< 20	ug/L		20	EPA 200.8	03-Aug-11 11:41	MHH7131
<b>SELENIUM SPECIATION</b>							
Vendor Parameter	Complete				V_AS&C		

Site: BIOREACTOR 2 INF.

Collection Date: 27-Jul-11 8:00 AM

Sample #: 2011015805

Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b>TOTAL RECOVERABLE METALS BY ICP</b>							
Boron (B)	167	mg/L		0.5	EPA 200.7	29-Jul-11 11:59	DJSULL1
<b>TOTAL RECOVERABLE METALS BY ICP-MS</b>							
Arsenic (As)	< 10	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Chromium (Cr)	< 10	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Copper (Cu)	< 10	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Nickel (Ni)	< 10	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Selenium (Se)	59.2	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Silver (Ag)	< 10	ug/L		10	EPA 200.8	03-Aug-11 11:41	MHH7131
Zinc (Zn)	< 20	ug/L		20	EPA 200.8	03-Aug-11 11:41	MHH7131

## Page 6 of 16

**Order # J11070315**

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b>DISSOLVED METALS BY ICP-MS</b>							

# Certificate of Laboratory Analysis

Page 7 of 16

*This report shall not be reproduced, except in full.*

**Order # J11070315**

Site: FILTER BLANK

Collection Date: 19-Jul-11 9:30 AM

**Sample #:** 2011015808

Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b><u>DISSOLVED METALS BY ICP-MS</u></b>							
Selenium (Se)	< 2	ug/L		2	EPA 200.8	01-Aug-11 11:37	KRICHAR



**APPLIED SPECIATION  
AND CONSULTING, LLC**

18804 Northcreek Parkway Bothell, WA, 98011  
Tel: (425) 483-3300 Fax: (425) 483-9818  
www.appliedspeciation.com

August 8, 2011

Jay Perkins  
Duke Energy Analytical Laboratory  
Mail Code MGO3A2 (Building 7405)  
13339 Hagers Ferry Rd.  
Huntersville, NC 28078  
(704) 875-5245

Project: Belews - FGD WWTS (Bi-Monthly Sampling) (LIMS # J11070315)

Dear Mr. Perkins,

Attached is the report associated with four (4) aqueous samples submitted for selenium speciation analysis on July 28, 2011. The samples were received in a sealed cooler at -0.3°C on July 29, 2011. Selenium speciation analysis was performed via ion chromatography inductively coupled plasma dynamic reaction cell mass spectrometry (IC-ICP-DRC-MS). Any issues associated with the analysis are addressed in the following report.

If you have any questions, please feel free to contact me at your convenience.

Sincerely,

A handwritten signature in black ink that reads "Ben Wozniak".

Ben Wozniak  
Project Manager  
Applied Speciation and Consulting, LLC



Applied Speciation and Consulting, LLC

Report prepared for:

Jay Perkins  
Duke Energy Analytical Laboratory  
Mail Code MGO3A2 (Building 7405)  
13339 Hagers Ferry Rd.  
Huntersville, NC 28078

Project: Belews - FGD WWTS (Bi-Monthly Sampling) (LIMS # J11070315)

August 8, 2011

## 1. Sample Reception

Four (4) aqueous samples in 125mL HDPE bottles (provided by Applied Speciation and Consulting) were submitted for selenium speciation analysis on July 28, 2011. The samples were received on July 29, 2011 in a sealed container at -0.3°C.

The samples were received in a laminar flow clean hood void of trace metals contamination and ultra-violet radiation. Upon reception, the samples were designated discrete sample identifiers. An aliquot of each sample was filtered (0.45µm) and these filtrates were stored in a secure, monitored cryofreezer (maintained at a temperature of -80°C) until selenium speciation analysis could be performed via ion chromatography inductively coupled plasma dynamic reaction cell mass spectrometry (IC-ICP-DRC-MS).

## 2. Sample Preparation

All sample preparation is performed in laminar flow clean hoods known to be free from trace metals contamination. All applied water for dilutions and sample preservatives are monitored for contamination to account for any biases associated with the sample results.

Selenium Speciation Analysis by IC-ICP-DRC-MS Prior to analysis, an aliquot of each sample was filtered with a syringe filter (0.45µm) and injected directly into a sealed autosampler vial. No further sample preparation was performed as any chemical alteration of the samples may shift the equilibrium of the system resulting in changes in speciation ratios.

## 3. Sample Analysis

All sample analysis is preceded by a minimum of a five-point calibration curve spanning the entire concentration range of interest. Calibration curves are performed at the beginning of

each analytical day. All calibration curves, associated with each species of interest, are standardized by linear regression resulting in a response factor. All sample results are **instrument blank corrected** to account for any operational biases associated with the analytical platform.

Prior to sample analysis, all calibration curves are verified using second source standards which are identified as initial calibration verification standards (ICV).

Ongoing instrument performance is identified by the analysis of continuing calibration verification standards (CCV) and continuing calibration blanks (CCB) at a minimal interval of every ten analytical runs.

*Selenium Speciation Analysis by IC-ICP-DRC-MS* All samples for selenium speciation analysis were analyzed by ion chromatography inductively coupled plasma dynamic reaction cell mass spectrometry (IC-ICP-DRC-MS) on August 2, 2011. An aliquot of each sample is injected onto an anion exchange column and mobilized by a basic ( $\text{pH} > 7$ ) gradient. The eluting selenium species are then introduced into a radio frequency (RF) plasma where energy-transfer processes cause desolvation, atomization, and ionization. The ions are extracted from the plasma through a differentially-pumped vacuum interface and travel through a pressurized chamber (DRC) containing a specific reactive gas which preferentially reacts with interfering ions of the same target mass to charge ratios ( $m/z$ ). A solid-state detector detects ions transmitted through the mass analyzer and the resulting current is processed by a data handling system.

Retention times for each eluting species are compared to known standards for species identification.

#### 4. Analytical Issues

The overall analyses went very well and no significant analytical issues were encountered. All sample results have been corrected in accordance with the continuing calibration verification recoveries to account for perceived instrument bias. All quality control parameters associated with these samples were within acceptance limits with the following exceptions:

The recoveries associated with the matrix spike (MS) and matrix spike duplicate (MSD) performed on the sample identified as Batch QC were below the established control limit of 75% for selenocyanate (0.0% for both). The MS and MSD also included selenite in the spiking solution which yielded elevated recoveries (168.2% and 166.0%, respectively). The low recoveries for selenocyanate correlate with the elevated recoveries of selenite suggesting that the sample matrix induces species conversion. The fact that no species conversion was observed in the ICV or CCVs, which contain both selenite and selenocyanate, demonstrates that the applied method stabilizes these selenium species in solution. Since the conversion of selenocyanate to selenite in the MS and MSD is a function of the sample matrix and the recoveries confirm a mass balance, no corrective action was required. The reported results

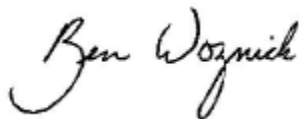
are deemed representative of the supplied samples and suggest that selenocyanate is not stable in the spiked sample matrix.

The estimated method detection limits (eMDLs) for selenite, selenate, and selenocyanate are generated from replicate analyses of the lowest standard in the calibration curve. Not all selenium species are present in preparation blanks; therefore, eMDL calculations based on preparation blanks are artificially biased low.

The eMDL for methylseleninic acid and selenomethionine is calculated from the average eMDL of selenite, selenate, and selenocyanate. The calibration does not contain methylseleninic acid or selenomethionine due to impurities in these standards which would bias the results for other selenium species.

If you have any questions or concerns regarding this report, please feel free to contact me.

Sincerely,

A handwritten signature in black ink that reads "Ben Wozniak". The signature is written in a cursive, flowing style.

Ben Wozniak  
Project Manager  
Applied Speciation and Consulting, LLC

Selenium Speciation Results for Duke Energy  
 Project Name: Belews - FGD WWTS (Bi-Monthly Sampling)  
 Contact: Jay Perkins  
 LIMS #J11070315

Date: August 8, 2011  
 Report Generated by: Ben Wozniak  
 Applied Speciation and Consulting, LLC

**Sample Results**

Sample ID	Se(IV)	Se(VI)	SeCN	MeSe(IV)	SeMe	Unknown Se Species (n)
FGD Purge Eff	144	149	ND (<1.9)	ND (<4.4)	ND (<4.4)	0 (0)
BioReactor 1 Inf	68.2	122	ND (<0.49)	2.4	ND (<1.1)	0 (0)
BioReactor 2 Eff	ND (<0.87)	ND (<1.9)	ND (<0.49)	ND (<1.1)	ND (<1.1)	0 (0)
Metals Trip Blk	ND (<0.17)	ND (<0.38)	ND (<0.10)	ND (<0.22)	ND (<0.22)	0 (0)

All results reflect the applied dilution and are reported in µg/L

ND = Not detected at the applied dilution

SeCN = Selenocyanate

MeSe(IV) = Methylseleninic acid

SeMe = Selenomethionine

Unknown Se Species = Total concentration of all unknown Se species observed by IC-ICP-MS

n = number of unknown Se species observed

Selenium Speciation Results for Duke Energy  
 Project Name: Belews - FGD WWTS (Bi-Monthly Sampling)  
 Contact: Jay Perkins  
 LIMS #J11070315

Date: August 8, 2011  
 Report Generated by: Ben Wozniak  
 Applied Speciation and Consulting, LLC

**Quality Control Summary - Preparation Blank Summary**

Analyte (µg/L)	PBW1	PBW2	PBW3	PBW4	Mean	StdDev	eMDL *	eMDL 10x	eMDL 50x	eMDL 200x
Se(IV)	0.000	0.000	0.000	0.000	0.000	0.000	0.017	0.17	0.87	3.5
Se(VI)	0.000	0.000	0.000	0.000	0.000	0.000	0.038	0.38	1.9	7.7
SeCN	0.000	0.000	0.000	0.000	0.000	0.000	0.010	0.10	0.49	1.9
MeSe(IV)	0.000	0.000	0.000	0.000	0.000	0.000	0.022	0.22	1.1	4.4
SeMe	0.000	0.000	0.000	0.000	0.000	0.000	0.022	0.22	1.1	4.4

eMDL = Estimated Method Detection Limit

\*Please see narrative regarding eMDL calculations

**Quality Control Summary - Certified Reference Materials**

Analyte (µg/L)	CRM	True Value	Result	Recovery
Se(IV)	LCS	9.57	9.48	99.0
Se(VI)	LCS	9.48	9.42	99.4
SeCN	LCS	8.92	9.10	102.0
MeSe(IV)	LCS	6.47	6.53	100.9
SeMe	LCS	9.32	8.74	93.7

Selenium Speciation Results for Duke Energy  
 Project Name: Belews - FGD WWTS (Bi-Monthly Sampling)  
 Contact: Jay Perkins  
 LIMS #J11070315

Date: August 8, 2011  
 Report Generated by: Ben Wozniak  
 Applied Speciation and Consulting, LLC

**Quality Control Summary - Matrix Duplicates**

Analyte (µg/L)	Sample ID	Rep 1	Rep 2	Mean	RPD
Se(IV)	Batch QC**	3.70	3.78	3.74	2.0
Se(VI)	Batch QC**	ND (<1.9)	ND (<1.9)	NC	NC
SeCN	Batch QC**	ND (<0.49)	ND (<0.49)	NC	NC
MeSe(IV)	Batch QC**	ND (<1.1)	ND (<1.1)	NC	NC
SeMe	Batch QC**	ND (<1.1)	ND (<1.1)	NC	NC

ND = Not detected at the applied dilution

NC = Value was not calculated due to one or more concentrations below the eMDL

\*\* Batch QC performed on BioReactor 2 Eff from LIMS # J11070314

**Quality Control Summary - Matrix Spike/ Matrix Spike Duplicate**

Analyte (µg/L)	Sample ID	Spike Conc	MS Result	Recovery	Spike Conc	MSD Result	Recovery	RPD
Se(IV)	Batch QC**	278.0	471.4	168.2*	278.0	465.3	166.0*	1.3
Se(VI)	Batch QC**	252.3	225.8	89.5	252.3	222.5	88.2	1.5
SeCN	Batch QC**	228.8	ND (<0.49)	0.0*	228.8	ND (<0.49)	0.0*	NC

NC = Value was not calculated due to one or more concentrations below the eMDL

\* The recovery is outside the established control limit of 75-125%; please see narrative

\*\* Batch QC performed on BioReactor 2 Eff from LIMS # J11070314





# CHAIN OF CUSTODY RECORD AND ANALYSIS REQUEST FORM

Page 16 of 16



**Duke Energy Analytical Laboratory**  
Mail Code MGO3A2 (Building 7405)  
13339 Hagers Ferry Rd  
Huntersville, N. C. 28078  
(704) 875-5245  
Fax: (704) 875-4349

Analytical Laboratory Use Only			
ORDER# <b>J11070315</b>	MATRIX: OTHER	Samples Originating From	NC SC
Logged By <b>cpt</b>	Date & Time <b>7-28-11</b>	SAMPLE PROGRAM Water _____ Ground NPDES Drinking Water UST RCRA Waste	
AS&C PO#133241		Cooler Temp (C) <b>0.8</b> Preserv.: 1=HCL 2=H <sub>2</sub> SO <sub>4</sub> 3=HNO <sub>3</sub> 4=Ice 5=None	

<sup>19</sup>Page 1 of 2  
**DISTRIBUTION**  
ORIGINAL to LAB,  
COPY to CLIENT

1) Project Name <b>Belews - FGD ( WWTS Bi-Monthly Sampling)</b>	2) Phone No:
2) Client: <b>Bill Kennedy, Melonie Martin, Wayne Chapman, Tom Johnson **</b>	4) Fax No:
5) Business Unit:	6) Process: Mail Code:
8) Oper. Unit:	10) Reso. Center:

Customer must Complete

LAB USE ONLY	
<sup>11</sup> Lab ID	
<b>2011015802</b>	
<b>03</b>	
<b>04</b>	
<b>05</b>	
<b>06</b>	
<b>08</b>	
<b>07</b>	

Customer to complete appropriate columns to right

Se Speciation Bottle ID	<sup>13</sup> Sample Description or ID	Date	Time	Signature	<sup>17</sup> Comp.	<sup>18</sup> Grab	TDS	Hg - 245.1	Metals*	Se, soluble (no dig.)**	Se, speciation - vendor to AS&C (Important to place filled bottle back into both baggies)
B07584	FGD Purge Eff	7/27/11	08:30	In Throat			1	1	1	1	1
	EQ Tank Eff.	7/27/11	08:00	Travis Thacker				1	1	1	
B10433	BioReactor 1 Inf	7/27/11	08:00	Travis Thacker					1	1	1
	BioReactor 2 Inf	7/27/11	08:00	Travis Thacker					1		
B11679	BioReactor 2 Eff	7/27/11	08:00	Travis Thacker				1	1		1
	(lab supplies all blank H2O)										
* sequence	Filter Blk	7/19/11	0930	R. Davis						1	
B08532	Metals Trip Blk	7/19/11	0930	R. Davis						1	1
Filtering of the Se is performed in the field please provide a filter blank too.											
** send field coll. bottles for sol. Se											

Customer to sign & date below - fill out from left to right.

1) Relinquished By <b>Travis Thacker</b>	Date/Time <b>7/27/11 09:00</b>	2) Accepted By <b>Courier</b>	Date/Time <b>7/27/11</b>
3) Relinquished By <b>Courier</b>	Date/Time <b>7/28/11 0900</b>	4) Accepted By <b>R. Davis</b>	Date/Time <b>7/28/11 0900</b>
5) Relinquished By	Date/Time	6) Accepted By:	Date/Time
7) Relinquished By <b>cpt</b>	Date/Time <b>7-28-11 1300</b>	8) Accepted By:	Date/Time
9) Seal/Locked By <b>cpt</b>	Date/Time <b>7-28-11</b>	10) Seal/Lock Opened By	Date/Time
11) Seal/Locked By	Date/Time	12) Seal/Lock Opened By	Date/Time

Customer, IMPORTANT!  
Please indicate desired turnaround.

<sup>22</sup>Requested Turnaround

14 Days \_\_\_\_\_

\*7 Days **8-7-11**

\*48 Hr \_\_\_\_\_

\*Other \_\_\_\_\_

\* Add. Cost Will Apply