



# Analytical Laboratory

Analytical Lab  
Page 1 of 16

13339 Hagers Ferry Road  
Huntersville, NC 28078-7929  
McGuire Nuclear Complex - MG03A2  
Phone: 980-875-5245 Fax: 980-875-4349

## Order Summary Report

**Order Number:** J11080323

Project Name: WWTS - Biweekly

Customer Name(s): Bill Kennedy, Melonie Martin, Wayne Chapman, Tom Johnson

Customer Address: 3195 Pine Hall Rd  
Mailcode: Belews Steam Station  
Belews Creek, NC 28012

Lab Contact: Jason C Perkins Phone: 980-875-5348

**Report Authorized By:** \_\_\_\_\_ **Date:** 9/7/2011  
**(Signature)**

---

### Program Comments:

Please contact the Program Manager (Jason C Perkins) with any questions regarding this report.

### Data Flags & Calculations:

Any analytical tests or individual analytes within a test flagged with a Qualifier indicate a deviation from the method quality system or quality control requirement. The qualifier description is found at the end of the Certificate of Analysis (sample results) under the qualifiers heading. All results are reported on a dry weight basis unless otherwise noted.

### Data Package:

This data package includes analytical results that are applicable only to the samples described in this narrative. An estimation of the uncertainty of measurement for the results in the report is available upon request. This report shall not be reproduced, except in full, without the written consent of the Analytical Laboratory. Please contact the Analytical laboratory with any questions. The order of individual sections within this report is as follows:

*Job Summary Report, Sample Identification, Technical Validation of Data Package, Analytical Laboratory Certificate of Analysis, Analytical Laboratory QC Reports, Sub-contracted Laboratory Results, Customer Specific Data Sheets, Reports & Documentation, Customer Database Entries, Test Case Narratives, Chain of Custody (COC)*

### Certification:

The Analytical Laboratory holds the following State Certifications : North Carolina (DENR) Certificate #248, South Carolina (DHEC) Laboratory ID # 99005. Contact the Analytical Laboratory for definitive information about the certification status of specific methods.

## Sample ID's & Descriptions:

Sample ID	Plant/Station	Collection Date and Time	Collected By	Sample Description
2011017841	BELEWS	24-Aug-11 8:05 AM	TO	FGD Purge Eff
2011017842	BELEWS	24-Aug-11 8:10 AM	TO	EQ TANK EFF.
2011017843	BELEWS	24-Aug-11 8:24 AM	TO	BIOREACTOR 1 INF.
2011017844	BELEWS	24-Aug-11 8:24 AM	TO	BIOREACTOR 2 INF.
2011017845	BELEWS	24-Aug-11 8:24 AM	TO	BIOREACTOR 2 EFF.
2011017846	BELEWS	16-Aug-11 11:40 AM	L.DAVIS	Trip Blank
2011017847	BELEWS	16-Aug-11 11:40 AM	L.DAVIS	FILTER BLANK
7 Total Samples				

# Technical Validation Review

## Checklist:

COC and .pdf report are in agreement with sample totals and analyses (compliance programs and procedures).

☒ Yes

☐ No

All Results are less than the laboratory reporting limits.

☐ Yes

☒ No

All laboratory QA/QC requirements are acceptable.

☒ Yes

☐ No

The Vendor Laboratories have been qualified by the Analytical Laboratory

Yes

## Report Sections Included:

☒ Job Summary Report

☒ Sample Identification

☒ Technical Validation of Data Package

☒ Analytical Laboratory Certificate of Analysis

☐ Analytical Laboratory QC Report

☒ Sub-contracted Laboratory Results

☐ Customer Specific Data Sheets, Reports, & Documentation

☐ Customer Database Entries

☒ Chain of Custody

☒ Electronic Data Deliverable (EDD) Sent Separately

Reviewed By: Mary Ann Ogle

Date: 9/7/2011

**Certificate of Laboratory Analysis***This report shall not be reproduced, except in full.***Order # J11080323**Site: FGD Purge Eff  
Collection Date: 24-Aug-11 8:05 AMSample #: **2011017841**  
Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b><u>INORGANIC IONS BY IC</u></b>							
Bromide	96	mg/L		10	EPA 300.0	31-Aug-11 02:12	JAHERMA
<b><u>MERCURY (COLD VAPOR) IN WATER</u></b>							
Mercury (Hg)	36.2	ug/L		5	EPA 245.1	26-Aug-11 09:25	AGIBBS
<b><u>TOTAL RECOVERABLE METALS BY ICP</u></b>							
Boron (B)	166	mg/L		0.5	EPA 200.7	31-Aug-11 14:06	DJSULL1
<b><u>DISSOLVED METALS BY ICP-MS</u></b>							
Selenium (Se)	169	ug/L		10	EPA 200.8	31-Aug-11 12:18	MHH7131
<b><u>TOTAL RECOVERABLE METALS BY ICP-MS</u></b>							
Arsenic (As)	24.5	ug/L		10	EPA 200.8	31-Aug-11 12:01	MHH7131
Chromium (Cr)	26.4	ug/L		10	EPA 200.8	31-Aug-11 12:01	MHH7131
Copper (Cu)	19.2	ug/L		10	EPA 200.8	31-Aug-11 12:01	MHH7131
Nickel (Ni)	104	ug/L		10	EPA 200.8	31-Aug-11 12:01	MHH7131
Selenium (Se)	745	ug/L		10	EPA 200.8	31-Aug-11 12:01	MHH7131
Silver (Ag)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:01	MHH7131
Zinc (Zn)	61.9	ug/L		20	EPA 200.8	31-Aug-11 12:01	MHH7131
<b><u>SELENIUM SPECIATION</u></b>							
Vendor Parameter	Complete				V_AS&C		
<b><u>TOTAL DISSOLVED SOLIDS</u></b>							
TDS	18000	mg/L		200	SM2540C	31-Aug-11 11:50	TJA7067

Site: EQ TANK EFF.  
Collection Date: 24-Aug-11 8:10 AMSample #: **2011017842**  
Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b><u>MERCURY (COLD VAPOR) IN WATER</u></b>							
Mercury (Hg)	204	ug/L		2.5	EPA 245.1	26-Aug-11 09:27	AGIBBS
<b><u>TOTAL RECOVERABLE METALS BY ICP</u></b>							
Boron (B)	161	mg/L		0.5	EPA 200.7	31-Aug-11 14:10	DJSULL1
<b><u>DISSOLVED METALS BY ICP-MS</u></b>							
Selenium (Se)	123	ug/L		10	EPA 200.8	31-Aug-11 12:21	MHH7131

# Certificate of Laboratory Analysis

Analytical Lab  
Page 5 of 16

*This report shall not be reproduced, except in full.*

Order # J11080323

Site: EQ TANK EFF.

Collection Date: 24-Aug-11 8:10 AM

Sample #: 2011017842

Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b>TOTAL RECOVERABLE METALS BY ICP-MS</b>							
Arsenic (As)	194	ug/L		10	EPA 200.8	31-Aug-11 12:04	MHH7131
Chromium (Cr)	239	ug/L		10	EPA 200.8	31-Aug-11 12:04	MHH7131
Copper (Cu)	161	ug/L		10	EPA 200.8	31-Aug-11 12:04	MHH7131
Nickel (Ni)	201	ug/L		10	EPA 200.8	31-Aug-11 12:04	MHH7131
Selenium (Se)	4650	ug/L		10	EPA 200.8	31-Aug-11 12:04	MHH7131
Silver (Ag)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:04	MHH7131
Zinc (Zn)	275	ug/L		20	EPA 200.8	31-Aug-11 12:04	MHH7131

Site: BIOREACTOR 1 INF.

Collection Date: 24-Aug-11 8:24 AM

Sample #: 2011017843

Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b>TOTAL RECOVERABLE METALS BY ICP</b>							
Boron (B)	141	mg/L		0.5	EPA 200.7	31-Aug-11 14:14	DJSULL1
<b>DISSOLVED METALS BY ICP-MS</b>							
Selenium (Se)	102	ug/L		10	EPA 200.8	31-Aug-11 12:24	MHH7131
<b>TOTAL RECOVERABLE METALS BY ICP-MS</b>							
Arsenic (As)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:08	MHH7131
Chromium (Cr)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:08	MHH7131
Copper (Cu)	17.5	ug/L		10	EPA 200.8	31-Aug-11 12:08	MHH7131
Nickel (Ni)	16.1	ug/L		10	EPA 200.8	31-Aug-11 12:08	MHH7131
Selenium (Se)	330	ug/L		10	EPA 200.8	31-Aug-11 12:08	MHH7131
Silver (Ag)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:08	MHH7131
Zinc (Zn)	< 20	ug/L		20	EPA 200.8	31-Aug-11 12:08	MHH7131

## SELENIUM SPECIATION

Vendor Parameter Complete V\_AS&C

Site: BIOREACTOR 2 INF.

Collection Date: 24-Aug-11 8:24 AM

Sample #: 2011017844

Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b>TOTAL RECOVERABLE METALS BY ICP</b>							
Boron (B)	144	mg/L		0.5	EPA 200.7	31-Aug-11 14:18	DJSULL1

# Certificate of Laboratory Analysis

Analytical Lab  
Page 6 of 16

*This report shall not be reproduced, except in full.*

Order # J11080323

Site: BIOREACTOR 2 INF.

Collection Date: 24-Aug-11 8:24 AM

Sample #: 2011017844

Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b>TOTAL RECOVERABLE METALS BY ICP-MS</b>							
Arsenic (As)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:11	MHH7131
Chromium (Cr)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:11	MHH7131
Copper (Cu)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:11	MHH7131
Nickel (Ni)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:11	MHH7131
Selenium (Se)	22.0	ug/L		10	EPA 200.8	31-Aug-11 12:11	MHH7131
Silver (Ag)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:11	MHH7131
Zinc (Zn)	< 20	ug/L		20	EPA 200.8	31-Aug-11 12:11	MHH7131

Site: BIOREACTOR 2 EFF.

Collection Date: 24-Aug-11 8:24 AM

Sample #: 2011017845

Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b>INORGANIC IONS BY IC</b>							
Bromide	91	mg/L		10	EPA 300.0	31-Aug-11 03:15	JAHERMA
<b>MERCURY (COLD VAPOR) IN WATER</b>							
Mercury (Hg)	< 1	ug/L		1	EPA 245.1	26-Aug-11 09:34	AGIBBS
<b>TOTAL RECOVERABLE METALS BY ICP</b>							
Boron (B)	145	mg/L		0.5	EPA 200.7	31-Aug-11 14:22	DJSULL1
<b>TOTAL RECOVERABLE METALS BY ICP-MS</b>							
Arsenic (As)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:14	MHH7131
Chromium (Cr)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:14	MHH7131
Copper (Cu)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:14	MHH7131
Nickel (Ni)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:14	MHH7131
Selenium (Se)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:14	MHH7131
Silver (Ag)	< 10	ug/L		10	EPA 200.8	31-Aug-11 12:14	MHH7131
Zinc (Zn)	< 20	ug/L		20	EPA 200.8	31-Aug-11 12:14	MHH7131
<b>SELENIUM SPECIATION</b>							
Vendor Parameter	Complete			V_AS&C			

Site: Trip Blank

Collection Date: 16-Aug-11 11:40 AM

Sample #: 2011017846

Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b>TOTAL RECOVERABLE METALS BY ICP</b>							
Boron (B)	< 0.05	mg/L		0.05	EPA 200.7	31-Aug-11 14:02	DJSULL1

# Certificate of Laboratory Analysis

Analytical Lab  
Page 7 of 16

*This report shall not be reproduced, except in full.*

Order # J11080323

Site: Trip Blank

Collection Date: 16-Aug-11 11:40 AM

Sample #: 2011017846

Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b>TOTAL RECOVERABLE METALS BY ICP-MS</b>							
Arsenic (As)	< 1	ug/L		1	EPA 200.8	31-Aug-11 11:55	MHH7131
Chromium (Cr)	< 1	ug/L		1	EPA 200.8	31-Aug-11 11:55	MHH7131
Copper (Cu)	< 1	ug/L		1	EPA 200.8	31-Aug-11 11:55	MHH7131
Nickel (Ni)	< 1	ug/L		1	EPA 200.8	31-Aug-11 11:55	MHH7131
Selenium (Se)	< 1	ug/L		1	EPA 200.8	31-Aug-11 11:55	MHH7131
Silver (Ag)	< 1	ug/L		1	EPA 200.8	31-Aug-11 11:55	MHH7131
Zinc (Zn)	< 2	ug/L		2	EPA 200.8	31-Aug-11 11:55	MHH7131

## **SELENIUM SPECIATION**

Vendor Parameter Complete V\_AS&C

Site: FILTER BLANK

Collection Date: 16-Aug-11 11:40 AM

Sample #: 2011017847

Matrix: OTHER

Analyte	Result	Units	Qualifiers	RDL	Method	Analysis Date/Time	Analyst
<b><u>DISSOLVED METALS BY ICP-MS</u></b>							
Selenium (Se)	< 1	ug/L		1	EPA 200.8	31-Aug-11 11:58	MHH7131



**APPLIED SPECIATION  
AND CONSULTING, LLC**

18804 Northcreek Parkway Bothell, WA, 98011  
Tel: (425) 483-3300 Fax: (425) 483-9818  
[www.appliedspeciation.com](http://www.appliedspeciation.com)

August 30, 2011

Jay Perkins  
Duke Energy Analytical Laboratory  
Mail Code MGO3A2 (Building 7405)  
13339 Hagers Ferry Rd.  
Huntersville, NC 28078  
(704) 875-5245

Project: Belews – FGD WWTS (Bi-Monthly Sampling) (LIMS #J11080323)

Dear Mr. Perkins,

Attached is the report associated with four (4) aqueous samples submitted for selenium speciation analysis on August 25, 2011. The samples were received in a sealed cooler at  $-0.3^{\circ}\text{C}$  on August 26, 2011. Selenium speciation analysis was performed via ion chromatography inductively coupled plasma dynamic reaction cell mass spectrometry (IC-ICP-DRC-MS). Any issues associated with the analysis are addressed in the following report.

If you have any questions, please feel free to contact me at your convenience.

Sincerely,

A handwritten signature in black ink that reads "Ben Wozniak".

Ben Wozniak  
Project Manager  
Applied Speciation and Consulting, LLC



Applied Speciation and Consulting, LLC

Report prepared for:

Jay Perkins  
Duke Energy Analytical Laboratory  
Mail Code MGO3A2 (Building 7405)  
13339 Hagers Ferry Rd.  
Huntersville, NC 28078

Project: Belews – FGD WWTS (Bi-Monthly Sampling) (LIMS #J11080323)

August 30, 2011

## 1. Sample Reception

Four (4) aqueous samples in 125mL HDPE bottles (provided by Applied Speciation and Consulting) were submitted for selenium speciation analysis on August 25, 2011. The samples were received on August 26, 2011 in a sealed container at -0.3°C.

The samples were received in a laminar flow clean hood void of trace metals contamination and ultra-violet radiation. Upon reception, the samples were designated discrete sample identifiers. An aliquot of each sample was filtered (0.45µm) and these filtrates were stored in a secure, monitored cryofreezer (maintained at a temperature of -80°C) until selenium speciation analysis could be performed via ion chromatography inductively coupled plasma dynamic reaction cell mass spectrometry (IC-ICP-DRC-MS).

## 2. Sample Preparation

All sample preparation is performed in laminar flow clean hoods known to be free from trace metals contamination. All applied water for dilutions and sample preservatives are monitored for contamination to account for any biases associated with the sample results.

Selenium Speciation Analysis by IC-ICP-DRC-MS Prior to analysis, an aliquot of each sample was filtered with a syringe filter (0.45µm) and injected directly into a sealed autosampler vial. No further sample preparation was performed as any chemical alteration of the samples may shift the equilibrium of the system resulting in changes in speciation ratios.

## 3. Sample Analysis

All sample analysis is preceded by a minimum of a five-point calibration curve spanning the entire concentration range of interest. Calibration curves are performed at the beginning of

each analytical day. All calibration curves, associated with each species of interest, are standardized by linear regression resulting in a response factor. All sample results are **instrument blank corrected** to account for any operational biases associated with the analytical platform.

Prior to sample analysis, all calibration curves are verified using second source standards which are identified as initial calibration verification standards (ICV).

Ongoing instrument performance is identified by the analysis of continuing calibration verification standards (CCV) and continuing calibration blanks (CCB) at a minimal interval of every ten analytical runs.

*Selenium Speciation Analysis by IC-ICP-DRC-MS* All samples for selenium speciation analysis were analyzed by ion chromatography inductively coupled plasma dynamic reaction cell mass spectrometry (IC-ICP-DRC-MS) on August 26, 2011. An aliquot of each sample is injected onto an anion exchange column and mobilized by a basic ( $\text{pH} > 7$ ) gradient. The eluting selenium species are then introduced into a radio frequency (RF) plasma where energy-transfer processes cause desolvation, atomization, and ionization. The ions are extracted from the plasma through a differentially-pumped vacuum interface and travel through a pressurized chamber (DRC) containing a specific reactive gas which preferentially reacts with interfering ions of the same target mass to charge ratios ( $m/z$ ). A solid-state detector detects ions transmitted through the mass analyzer and the resulting current is processed by a data handling system.

Retention times for each eluting species are compared to known standards for species identification.

#### 4. Analytical Issues

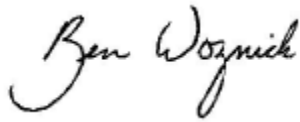
The overall analyses went well and no significant analytical issues were encountered. All quality control parameters associated with these samples were within acceptance limits.

The estimated method detection limits (eMDLs) for selenite, selenate, and selenocyanate are generated from replicate analyses of the lowest standard in the calibration curve. Not all selenium species are present in preparation blanks; therefore, eMDL calculations based on preparation blanks are artificially biased low.

The eMDL for methylseleninic acid and selenomethionine is calculated from the average eMDL of selenite, selenate, and selenocyanate. The calibration does not contain methylseleninic acid or selenomethionine due to impurities in these standards which would bias the results for other selenium species.

If you have any questions or concerns regarding this report, please feel free to contact me.

Sincerely,

A handwritten signature in black ink that reads "Ben Wozniak". The signature is written in a cursive, flowing style.

Ben Wozniak  
Project Manager  
Applied Speciation and Consulting, LLC

Selenium Speciation Results for Duke Energy  
Project Name: Belews – FGD WWTS (Bi-Monthly Sampling)  
Contact: Jay Perkins  
LIMS #J11080323

Date: August 30, 2011  
Report Generated by: Ben Wozniak  
Applied Speciation and Consulting, LLC

**Sample Results**

Sample ID	Se(IV)	Se(VI)	SeCN	MeSe(IV)	SeMe	Unknown Se Species (n)
FGD Purge Eff	25.9	90.5	ND (<3.4)	ND (<3.4)	ND (<3.4)	0 (0)
BioReactor 1 Inf	10.8	40.1	ND (<0.86)	0.88	ND (<0.85)	0 (0)
BioReactor 2 Eff	ND (<0.82)	ND (<0.87)	ND (<0.86)	ND (<0.85)	ND (<0.85)	0 (0)
Metals Trip Blk	ND (<0.16)	ND (<0.17)	ND (<0.17)	ND (<0.17)	ND (<0.17)	0 (0)

All results reflect the applied dilution and are reported in µg/L

ND = Not detected at the applied dilution

SeCN = Selenocyanate

MeSe(IV) = Methylseleninic acid

SeMe = Selenomethionine

Unknown Se Species = Total concentration of all unknown Se species observed by IC-ICP-MS

n = number of unknown Se species observed

Selenium Speciation Results for Duke Energy  
Project Name: Belews – FGD WWTS (Bi-Monthly Sampling)  
Contact: Jay Perkins  
LIMS #J11080323

Date: August 30, 2011  
Report Generated by: Ben Wozniak  
Applied Speciation and Consulting, LLC

**Quality Control Summary - Preparation Blank Summary**

Analyte (µg/L)	PBW1	PBW2	PBW3	PBW4	Mean	StdDev	eMDL *	eMDL 10x	eMDL 50x	eMDL 200x
Se(IV)	-0.07	-0.07	-0.07	-0.07	-0.07	0.00	0.016	0.16	0.82	3.3
Se(VI)	0.00	0.00	0.00	0.00	0.00	0.00	0.017	0.17	0.87	3.5
SeCN	0.00	0.00	0.00	0.00	0.00	0.00	0.017	0.17	0.86	3.4
MeSe(IV)	0.00	0.00	0.00	0.00	0.00	0.00	0.017	0.17	0.85	3.4
SeMe	0.00	0.00	0.00	0.00	0.00	0.00	0.017	0.17	0.85	3.4

eMDL = Estimated Method Detection Limit

\*Please see narrative regarding eMDL calculations

**Quality Control Summary - Certified Reference Materials**

Analyte (µg/L)	CRM	True Value	Result	Recovery
Se(IV)	LCS	9.57	10.15	106.0
Se(VI)	LCS	9.48	9.779	103.2
SeCN	LCS	8.92	9.296	104.2
MeSe(IV)	LCS	6.47	7.082	109.5
SeMe	LCS	9.32	9.635	103.4

Selenium Speciation Results for Duke Energy  
Project Name: Belews – FGD WWTS (Bi-Monthly Sampling)  
Contact: Jay Perkins  
LIMS #J11080323

Date: August 30, 2011  
Report Generated by: Ben Wozniak  
Applied Speciation and Consulting, LLC

**Quality Control Summary - Matrix Duplicates**

Analyte (µg/L)	Sample ID	Rep 1	Rep 2	Mean	RPD
Se(IV)	BioReactor 2 Eff	ND (<0.82)	ND (<0.82)	NC	NC
Se(VI)	BioReactor 2 Eff	ND (<0.87)	ND (<0.87)	NC	NC
SeCN	BioReactor 2 Eff	ND (<0.86)	ND (<0.86)	NC	NC
MeSe(IV)	BioReactor 2 Eff	ND (<0.85)	ND (<0.85)	NC	NC
SeMe	BioReactor 2 Eff	ND (<0.85)	ND (<0.85)	NC	NC

ND = Not detected at the applied dilution

NC = Value was not calculated due to one or more concentrations below the eMDL

**Quality Control Summary - Matrix Spike/ Matrix Spike Duplicate**

Analyte (µg/L)	Sample ID	Spike Conc	MS Result	Recovery	Spike Conc	MSD Result	Recovery	RPD
Se(IV)	BioReactor 2 Eff	278.0	282.3	101.5	278.0	284.2	102.2	0.7
Se(VI)	BioReactor 2 Eff	252.3	255.6	101.3	252.3	259.6	102.9	1.6
SeCN	BioReactor 2 Eff	228.8	220.0	96.2	228.8	220.4	96.4	0.2



Duke Energy Analytical Laboratory  
Mail Code MGO3A2 (Building 7405)  
13339 Hagers Ferry Rd  
Huntersville, N. C. 28078  
(704) 875-5245  
Fax: (704) 875-4349

Analytical Laboratory Use Only

ORDER# J11080323 MATRIX: OTHER

Samples  
Originating From

NC  
SC

Analytical Lab  
Page 15 of 16

Page 1 of 2  
DISTRIBUTION  
ORIGINAL to LAB,  
COPY to CLIENT

1) Project Name <b>Belews - FGD</b> WWTS Bi-Monthly Sampling)		2) Phone No:
2) Client: <b>Bill Kennedy, Melonie Martin, Wayne Chapman, Tom Johnson **</b>		4) Fax No:
5) Business Unit:	6) Process:	Mail Code:
8) Oper. Unit:	9) Res. Type:	10) Reso. Center:

IV: <b>AS&amp;C</b>	4.9 Cooler Temp (C)
IV: <b>PO#133241</b>	15 Preserv.: 1=HCl 2=H <sub>2</sub> SO <sub>4</sub> 3=HNO <sub>3</sub> 4=Ice 5=None
MR #	4 3,4 4 3,4 4

Customer to complete all appropriate non-shaded areas.

Sampling conducted: 2nd and 4th Wednesday

Se Speciation Bottle ID	13 Sample Description or ID	Date	Time	Signature	17 Comp.	18 Grab	TDS	Hg - 245.1	Br (Dionex)	Metals*	Se, soluble (no dig.)	Se, speciation - vendor to AS&C (Important to place filled bottle back into both baggies)
B10319	FGD Purge Eff	8/24	8:05	TO			1	1	1	1	1	1
	EQ Tank Eff.	8/24	8:10	TO				1		1	1	
B10680	BioReactor 1 Inf	8/24	8:24	TO						1	1	1
	BioReactor 2 Inf	8/24	8:24	TO						1		
B10696	BioReactor 2 Eff	8/24	8:24	TO				1	1	1		1
	Sequence Filter Blk	8/16/11	1140	R. Davis							1	
B10381	Metals Trip Blk	8/16/11	1140	R. Davis						1		1
Filtering of the Se is performed in the field please provide a filter blank too.												

Customer to sign & date below - fill out from left to right

1) Relinquished By <b>COURIER</b>	Date/Time 8/25/11	2) Accepted By <b>COURIER</b>	Date/Time	Customer, IMPORTANT! Please indicate desired turnaround.	22 Requested Turnaround 14 Days _____ * 7 Days _____ * 48 Hr _____ * Other _____ * Add. Cost Will Apply
3) Relinquished By <b>COURIER</b>	Date/Time 8/25/11	4) Accepted By <b>Kathleen Davis</b>	Date/Time 8/25/11 9:15		
5) Relinquished By <b>R. Davis</b>	Date/Time 8/25/11 1300	6) Accepted By:	Date/Time		
7) Relinquished By	Date/Time	8) Accepted By: <b>Nancy Cullen</b>	Date/Time 8/26/11 9:30		
9) Seal/Locked By <b>R. Davis</b>	Date/Time 8/25/11 1300	10) Seal/Lock Opened By	Date/Time		
11) Seal/Locked By	Date/Time	12) Seal/Lock Opened By	Date/Time		
Comments * B by ICP As, Cr, Cu, Ni, Se, Ag, Zn by IMS Digestions = TRM thomas.d.johnson@siemens.com					





# Duke Energy Analytical Laboratory

Mail Code MGO3A2 (Building 7405)  
13339 Hagers Ferry Rd  
Huntersville, N. C. 28078  
(704) 875-5245  
Fax: (704) 875-4349

ORDER# <b>J11080323</b>		MATRIX: OTHER		Samples Originating From NC SC	
Logged By <b>CPK</b>	Date & Time <b>8/25/11 0926</b>	Cooler Temp (C) <b>4.9</b>		SAMPLE PROGRAM Water Ground NPDES Drinking Water UST RCRA Waste	
AS&C PO#133241		Preserv.: 1=HCL 2=H <sub>2</sub> SO <sub>4</sub> 3=HNO <sub>3</sub> 4=Ice 5=None			

Page 1 of 2  
Analytical Lab  
Page 16 of 16  
**DISTRIBUTION**  
ORIGINAL to LAB,  
COPY to CLIENT

1) Project Name <b>Belews - FGD WWTS Bi-Monthly Sampling</b>		2) Phone No:
2) Client: <b>Bill Kennedy, Melonie Martin, Wayne Chapman, Tom Johnson **</b>		4) Fax No:
5) Business Unit:	6) Process:	Mail Code:
8) Oper. Unit:	9) Res. Type:	10) Reso. Center:

Customer to complete all appropriate non-shaded areas.						16 Analyses Required		17 Comp.		18 Grab		TDS		Hg - 245.1		Br (Dionex)		Metals*		Se, soluble (no dig.)		Se, speciation - vendor to AS&C (Important to place filled bottle back into both baggies)	
Sampling conducted: 2nd and 4th Wednesday																							
Date		Time		Signature																			
8/24		8:05		TO								1		1		1		1		1		1	
8/24		8:10		TO										1				1		1			
8/24		8:24		TO														1		1		1	
8/24		8:24		TO														1					
8/24		8:24		TO								1		1		1						1	
8/16/11		1140		R. Davis																1			
8/16/11		1140		R. Davis														1				1	
Filtering of the Se is performed in the field please provide a filter blank too.																							

LAB USE ONLY
11 Lab ID
2011017841
42
43
44
45
47
46

Se Speciation Bottle ID	13 Sample Description or ID
B10319	FGD Purge Eff
	EQ Tank Eff.
B10680	BioReactor 1 Inf
	BioReactor 2 Inf
B10696	BioReactor 2 Eff
	sequence Filter Blk
B10381	Metals Trip Blk

1) Relinquished By <b>COURIER</b>	Date/Time <b>8/25/11</b>	2) Accepted By <b>COURIER</b>	Date/Time <b>8/25/11 9:15</b>
3) Relinquished By <b>R. Davis</b>	Date/Time <b>8/25/11 1300</b>	4) Accepted By <b>Katasha Davis</b>	Date/Time <b>8/25/11 1300</b>
5) Relinquished By <b>R. Davis</b>	Date/Time <b>8/25/11 1300</b>	6) Accepted By	Date/Time
7) Relinquished By	Date/Time	8) Accepted By	Date/Time
9) Seal/Locked By <b>R. Davis</b>	Date/Time <b>8/25/11 1300</b>	10) Seal/Lock Opened By	Date/Time
11) Seal/Locked By	Date/Time	12) Seal/Lock Opened By	Date/Time
Comments <b>* B by ICP As, Cr, Cu, Ni, Se, Ag, Zn by IMS Digestions = TRM thomas.d.johnson@siemens.com</b>			

Customer, IMPORTANT!  
Please indicate desired turnaround.

22 Requested Turnaround
14 Days
* 7 Days
- 48 Hr
* Other
* Add. Cost Will Apply