



Analytical Laboratory

Page 1 of 33

13339 Hagers Ferry Road
Huntersville, NC 28078-7929
McGuire Nuclear Complex - MG03A2
Phone: 980-875-5245 Fax: 980-875-4349

Order Summary Report

Order Number: J11110204

Customer Name(s): Bill Kennedy, Melonie Martin, Wayne Chapman, Tom Johnson

Customer Address: 3195 Pine Hall Rd
Mailcode: Belews Steam Station
Belews Creek, NC 28012

Lab Contact: Jason C Perkins **Phone:** 980-875-5348

Report Authorized By: _____ **Date:** 11/17/2011
(Signature)

Program Comments:

Please contact the Program Manager (Jason C Perkins) with any questions regarding this report.

Data Flags & Calculations:

Any analytical tests or individual analytes within a test flagged with a Qualifier indicate a deviation from the method quality system or quality control requirement. The qualifier description is found at the end of the Certificate of Analysis (sample results) under the qualifiers heading. All results are reported on a dry weight basis unless otherwise noted.

Data Package:

This data package includes analytical results that are applicable only to the samples described in this narrative. An estimation of the uncertainty of measurement for the results in the report is available upon request. This report shall not be reproduced, except in full, without the written consent of the Analytical Laboratory. Please contact the Analytical laboratory with any questions. The order of individual sections within this report is as follows:

Job Summary Report, Sample Identification, Technical Validation of Data Package, Analytical Laboratory Certificate of Analysis, Analytical Laboratory QC Reports, Sub-contracted Laboratory Results, Customer Specific Data Sheets, Reports & Documentation, Customer Database Entries, Test Case Narratives, Chain of Custody (COC)

Certification:

The Analytical Laboratory holds the following State Certifications : North Carolina (DENR) Certificate #248, South Carolina (DHEC) Laboratory ID # 99005. Contact the Analytical Laboratory for definitive information about the certification status of specific methods.

Sample ID's & Descriptions:

| Sample ID | Plant/Station | Collection Date and Time | Collected By | Sample Description |
|-----------------|---------------|-----------------------------|--------------|-------------------------|
| 2011024429 | BELEWS | 07-Nov-11 11:00 AM | dean m | FGD Purge Eff |
| 2011024430 | BELEWS | 07-Nov-11 11:05 AM | dean m | BIOREACTOR 1 INF. |
| 2011024431 | BELEWS | 07-Nov-11 11:05 AM | dean m | BIOREACTOR 1 INF. BLANK |
| 2011024432 | BELEWS | 07-Nov-11 11:10 AM | dean m | BIOREACTOR 2 EFF. |
| 2011024433 | BELEWS | 07-Nov-11 11:10 AM | dean m | BIOREACTOR 2 EFF. BLANK |
| 2011024434 | BELEWS | 07-Nov-11 11:10 AM | dean m | FILTER BLANK |
| 2011024435 | BELEWS | 07-Nov-11 11:10 AM | dean m | Trip Blank |
| 7 Total Samples | | | | |

Technical Validation Review

Checklist:

COC and .pdf report are in agreement with sample totals and analyses (compliance programs and procedures).

☒ Yes

☐ No

All Results are less than the laboratory reporting limits.

☐ Yes

☒ No

All laboratory QA/QC requirements are acceptable.

☒ Yes

☐ No

The Vendor Laboratories have been qualified by the Analytical Laboratory

Yes

Report Sections Included:

☒ Job Summary Report

☒ Sample Identification

☒ Technical Validation of Data Package

☒ Analytical Laboratory Certificate of Analysis

☐ Analytical Laboratory QC Report

☒ Sub-contracted Laboratory Results

☐ Customer Specific Data Sheets, Reports, & Documentation

☐ Customer Database Entries

☒ Chain of Custody

☒ Electronic Data Deliverable (EDD) Sent Separately

Reviewed By: DataBase Administrator

Date: 11/17/2011

Certificate of Laboratory Analysis

This report shall not be reproduced, except in full.

Order # J11110204

Site: FGD Purge Eff
Collection Date: 07-Nov-11 11:00 AM

Sample #: 2011024429
Matrix: OTHER

| Analyte | Result | Units | Qualifiers | RDL | Method | Analysis Date/Time | Analyst |
|--|----------|--------|------------|------|-----------|--------------------|---------|
| <u>Carbonate, Bicarbonate, and Hydroxide Alkalinity</u> | | | | | | | |
| Carbonate (CO3) | Complete | | | | V_PRISM | | |
| Hydroxide (OH) | Complete | | | | V_PRISM | | |
| Bicarbonate (HCO3) | Complete | | | | V_PRISM | | |
| <u>NITRITE + NITRATE (COLORIMETRIC)</u> | | | | | | | |
| Nitrite + Nitrate (Colorimetric) | 17 | mg-N/L | | 0.25 | EPA 353.2 | 09-Nov-11 12:42 | BGN9034 |
| <u>INORGANIC IONS BY IC</u> | | | | | | | |
| Bromide | 87 | mg/L | | 5 | EPA 300.0 | 14-Nov-11 16:26 | JAHERMA |
| Chloride | 5900 | mg/L | | 100 | EPA 300.0 | 14-Nov-11 16:26 | JAHERMA |
| Sulfate | 1300 | mg/L | | 100 | EPA 300.0 | 14-Nov-11 16:26 | JAHERMA |
| <u>MERCURY (COLD VAPOR) IN WATER</u> | | | | | | | |
| Mercury (Hg) | 258 | ug/L | | 5 | EPA 245.1 | 11-Nov-11 09:33 | AGIBBS |
| <u>Mercury Dissolved (cold vapor) in Water (Filtered)</u> | | | | | | | |
| Mercury (Hg) | < 2.5 | ug/L | | 2.5 | EPA 245.1 | 11-Nov-11 10:45 | AGIBBS |
| <u>TOTAL RECOVERABLE METALS BY ICP</u> | | | | | | | |
| Boron (B) | 157 | mg/L | | 0.5 | EPA 200.7 | 15-Nov-11 13:00 | DJSULL1 |
| Calcium (Ca) | 3420 | mg/L | | 0.1 | EPA 200.7 | 15-Nov-11 13:00 | DJSULL1 |
| Lithium (Li) | 0.128 | mg/L | | 0.05 | EPA 200.7 | 15-Nov-11 13:00 | DJSULL1 |
| Magnesium (Mg) | 783 | mg/L | | 0.05 | EPA 200.7 | 15-Nov-11 13:00 | DJSULL1 |
| Potassium (K) | 49.5 | mg/L | | 1 | EPA 200.7 | 15-Nov-11 13:00 | DJSULL1 |
| Sodium (Na) | 41.3 | mg/L | | 0.5 | EPA 200.7 | 15-Nov-11 13:00 | DJSULL1 |
| <u>DISSOLVED METALS BY ICP-MS</u> | | | | | | | |
| Selenium (Se) | 177 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 11:33 | DJSULL1 |
| <u>TOTAL RECOVERABLE METALS BY ICP-MS</u> | | | | | | | |
| Arsenic (As) | 156 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:20 | DJSULL1 |
| Cadmium (Cd) | < 10 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:20 | DJSULL1 |
| Chromium (Cr) | 175 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:20 | DJSULL1 |
| Copper (Cu) | 101 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:20 | DJSULL1 |
| Nickel (Ni) | 167 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:20 | DJSULL1 |
| Selenium (Se) | 4110 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:20 | DJSULL1 |
| Silver (Ag) | < 10 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:20 | DJSULL1 |
| Zinc (Zn) | 192 | ug/L | | 20 | EPA 200.8 | 09-Nov-11 10:20 | DJSULL1 |
| <u>SELENIUM SPECIATION</u> | | | | | | | |
| Vendor Parameter | Complete | | | | V_AS&C | | |

Certificate of Laboratory Analysis

Page 5 of 33

*This report shall not be reproduced, except in full.***Order # J11110204**

Site: FGD Purge Eff

Collection Date: 07-Nov-11 11:00 AM

Sample #: 2011024429

Matrix: OTHER

| Analyte | Result | Units | Qualifiers | RDL | Method | Analysis Date/Time | Analyst |
|--------------------------------------|--------|-------|------------|-----|---------|--------------------|---------|
| <u>TOTAL DISSOLVED SOLIDS</u> | | | | | | | |
| TDS | 18000 | mg/L | | 200 | SM2540C | 15-Nov-11 14:50 | TJA7067 |
| <u>TOTAL SUSPENDED SOLIDS</u> | | | | | | | |
| TSS | 2400 | mg/L | | 250 | SM2540D | 09-Nov-11 14:50 | TJA7067 |

Site: BIOREACTOR 1 INF.

Collection Date: 07-Nov-11 11:05 AM

Sample #: 2011024430

Matrix: OTHER

| Analyte | Result | Units | Qualifiers | RDL | Method | Analysis Date/Time | Analyst |
|--|----------|--------|------------|------|-----------|--------------------|---------|
| <u>Carbonate, Bicarbonate, and Hydroxide Alkalinity</u> | | | | | | | |
| Hydroxide (OH) | Complete | | | | V_PRISM | | |
| Bicarbonate (HCO3) | Complete | | | | V_PRISM | | |
| Carbonate (CO3) | Complete | | | | V_PRISM | | |
| <u>NITRITE + NITRATE (COLORIMETRIC)</u> | | | | | | | |
| Nitrite + Nitrate (Colorimetric) | 16 | mg-N/L | | 0.25 | EPA 353.2 | 09-Nov-11 12:45 | BGN9034 |
| <u>INORGANIC IONS BY IC</u> | | | | | | | |
| Bromide | 92 | mg/L | | 5 | EPA 300.0 | 14-Nov-11 22:30 | JAHERMA |
| Chloride | 6500 | mg/L | | 100 | EPA 300.0 | 14-Nov-11 22:30 | JAHERMA |
| Sulfate | 1400 | mg/L | | 100 | EPA 300.0 | 14-Nov-11 22:30 | JAHERMA |
| <u>MERCURY 1631</u> | | | | | | | |
| Vendor Parameter | Complete | | | | V_BRAND | | |
| <u>MERCURY (COLD VAPOR) IN WATER</u> | | | | | | | |
| Mercury (Hg) | < 2.5 | ug/L | | 2.5 | EPA 245.1 | 11-Nov-11 09:36 | AGIBBS |
| <u>TOTAL RECOVERABLE METALS BY ICP</u> | | | | | | | |
| Boron (B) | 161 | mg/L | | 0.5 | EPA 200.7 | 15-Nov-11 13:28 | DJSULL1 |
| Calcium (Ca) | 2930 | mg/L | | 0.1 | EPA 200.7 | 15-Nov-11 13:28 | DJSULL1 |
| Lithium (Li) | < 0.05 | mg/L | | 0.05 | EPA 200.7 | 15-Nov-11 13:28 | DJSULL1 |
| Magnesium (Mg) | 729 | mg/L | | 0.05 | EPA 200.7 | 15-Nov-11 13:28 | DJSULL1 |
| Potassium (K) | 21.4 | mg/L | | 1 | EPA 200.7 | 15-Nov-11 13:28 | DJSULL1 |
| Sodium (Na) | 39.8 | mg/L | | 0.5 | EPA 200.7 | 15-Nov-11 13:28 | DJSULL1 |

Certificate of Laboratory Analysis

Page 6 of 33

*This report shall not be reproduced, except in full.***Order # J11110204**

Site: BIOREACTOR 1 INF.

Collection Date: 07-Nov-11 11:05 AM

Sample #: 2011024430

Matrix: OTHER

| Analyte | Result | Units | Qualifiers | RDL | Method | Analysis Date/Time | Analyst |
|--|--------|-------|------------|-----|-----------|--------------------|---------|
| <u>TOTAL RECOVERABLE METALS BY ICP-MS</u> | | | | | | | |
| Arsenic (As) | < 10 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:23 | DJSULL1 |
| Cadmium (Cd) | < 10 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:23 | DJSULL1 |
| Chromium (Cr) | < 10 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:23 | DJSULL1 |
| Copper (Cu) | < 10 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:23 | DJSULL1 |
| Nickel (Ni) | 55.5 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:23 | DJSULL1 |
| Selenium (Se) | 121 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:23 | DJSULL1 |
| Silver (Ag) | < 10 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:23 | DJSULL1 |
| Zinc (Zn) | < 20 | ug/L | | 20 | EPA 200.8 | 09-Nov-11 10:23 | DJSULL1 |

SELENIUM SPECIATION

Vendor Parameter Complete V_AS&C

Site: BIOREACTOR 1 INF. BLANK

Collection Date: 07-Nov-11 11:05 AM

Sample #: 2011024431

Matrix: OTHER

| Analyte | Result | Units | Qualifiers | RDL | Method | Analysis Date/Time | Analyst |
|----------------------------|----------|-------|------------|-----|---------|--------------------|---------|
| <u>MERCURY 1631</u> | | | | | | | |
| Vendor Parameter | Complete | | | | V_BRAND | | |

Site: BIOREACTOR 2 EFF.

Collection Date: 07-Nov-11 11:10 AM

Sample #: 2011024432

Matrix: OTHER

| Analyte | Result | Units | Qualifiers | RDL | Method | Analysis Date/Time | Analyst |
|--|----------|-------|------------|-----|---------|--------------------|---------|
| <u>Carbonate, Bicarbonate, and Hydroxide Alkalinity</u> | | | | | | | |
| Hydroxide (OH) | Complete | | | | V_PRISM | | |
| Bicarbonate (HCO3) | Complete | | | | V_PRISM | | |
| Carbonate (CO3) | Complete | | | | V_PRISM | | |

NITRITE + NITRATE (COLORIMETRIC)

| | | | | | | | |
|----------------------------------|--------|--------|--|------|-----------|-----------------|---------|
| Nitrite + Nitrate (Colorimetric) | < 0.01 | mg-N/L | | 0.01 | EPA 353.2 | 09-Nov-11 12:46 | BGN9034 |
|----------------------------------|--------|--------|--|------|-----------|-----------------|---------|

INORGANIC IONS BY IC

| | | | | | | | |
|----------|------|------|--|-----|-----------|-----------------|---------|
| Bromide | 97 | mg/L | | 5 | EPA 300.0 | 15-Nov-11 00:05 | JAHERMA |
| Chloride | 6500 | mg/L | | 100 | EPA 300.0 | 15-Nov-11 00:05 | JAHERMA |
| Sulfate | 1400 | mg/L | | 100 | EPA 300.0 | 15-Nov-11 00:05 | JAHERMA |

MERCURY 1631

Vendor Parameter Complete V_BRAND

MERCURY (COLD VAPOR) IN WATER

| | | | | | | | |
|--------------|-----|------|--|---|-----------|-----------------|--------|
| Mercury (Hg) | < 1 | ug/L | | 1 | EPA 245.1 | 11-Nov-11 09:38 | AGIBBS |
|--------------|-----|------|--|---|-----------|-----------------|--------|

Certificate of Laboratory Analysis

Page 7 of 33

This report shall not be reproduced, except in full.

Order # J11110204

Site: BIOREACTOR 2 EFF.

Collection Date: 07-Nov-11 11:10 AM

Sample #: 2011024432

Matrix: OTHER

| Analyte | Result | Units | Qualifiers | RDL | Method | Analysis Date/Time | Analyst |
|---|------------------|-------|------------|------|-----------|--------------------|---------|
| <u>TOTAL RECOVERABLE METALS BY ICP</u> | | | | | | | |
| Boron (B) | 169 | mg/L | | 0.5 | EPA 200.7 | 15-Nov-11 13:32 | DJSULL1 |
| Calcium (Ca) | 3220 | mg/L | | 0.1 | EPA 200.7 | 15-Nov-11 13:32 | DJSULL1 |
| Lithium (Li) | < 0.05 | mg/L | | 0.05 | EPA 200.7 | 15-Nov-11 13:32 | DJSULL1 |
| Magnesium (Mg) | 729 | mg/L | | 0.05 | EPA 200.7 | 15-Nov-11 13:32 | DJSULL1 |
| Potassium (K) | 25.5 | mg/L | | 1 | EPA 200.7 | 15-Nov-11 13:32 | DJSULL1 |
| Sodium (Na) | 41.3 | mg/L | | 0.5 | EPA 200.7 | 15-Nov-11 13:32 | DJSULL1 |

TOTAL RECOVERABLE METALS BY ICP-MS

| | | | | | | | |
|---------------|----------------|------|--|----|-----------|-----------------|---------|
| Arsenic (As) | < 10 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:26 | DJSULL1 |
| Cadmium (Cd) | < 10 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:26 | DJSULL1 |
| Chromium (Cr) | < 10 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:26 | DJSULL1 |
| Copper (Cu) | < 10 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:26 | DJSULL1 |
| Nickel (Ni) | < 10 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:26 | DJSULL1 |
| Selenium (Se) | < 10 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:26 | DJSULL1 |
| Silver (Ag) | < 10 | ug/L | | 10 | EPA 200.8 | 09-Nov-11 10:26 | DJSULL1 |
| Zinc (Zn) | < 20 | ug/L | | 20 | EPA 200.8 | 09-Nov-11 10:26 | DJSULL1 |

SELENIUM SPECIATION

Vendor Parameter **Complete** V_AS&C

Site: BIOREACTOR 2 EFF. BLANK

Collection Date: 07-Nov-11 11:10 AM

Sample #: 2011024433

Matrix: OTHER

| Analyte | Result | Units | Qualifiers | RDL | Method | Analysis Date/Time | Analyst |
|----------------------------|-----------------|-------|------------|-----|---------|--------------------|---------|
| <u>MERCURY 1631</u> | | | | | | | |
| Vendor Parameter | Complete | | | | V_BRAND | | |

Site: FILTER BLANK

Collection Date: 07-Nov-11 11:10 AM

Sample #: 2011024434

Matrix: OTHER

| Analyte | Result | Units | Qualifiers | RDL | Method | Analysis Date/Time | Analyst |
|--|-------------|-------|------------|-----|-----------|--------------------|---------|
| <u>DISSOLVED METALS BY ICP-MS</u> | | | | | | | |
| Selenium (Se) | 5.52 | ug/L | | 1 | EPA 200.8 | 09-Nov-11 11:21 | DJSULL1 |

Certificate of Laboratory Analysis

Page 8 of 33

This report shall not be reproduced, except in full.

Order # J11110204

Site: Trip Blank

Collection Date: 07-Nov-11 11:10 AM

Sample #: 2011024435

Matrix: OTHER

| Analyte | Result | Units | Qualifiers | RDL | Method | Analysis Date/Time | Analyst |
|--|----------|-------|------------|-------|-----------|--------------------|---------|
| <u>TOTAL RECOVERABLE METALS BY ICP</u> | | | | | | | |
| Boron (B) | < 0.05 | mg/L | | 0.05 | EPA 200.7 | 15-Nov-11 12:44 | DJSULL1 |
| Calcium (Ca) | 0.026 | mg/L | | 0.01 | EPA 200.7 | 15-Nov-11 12:44 | DJSULL1 |
| Lithium (Li) | < 0.005 | mg/L | | 0.005 | EPA 200.7 | 15-Nov-11 12:44 | DJSULL1 |
| Magnesium (Mg) | < 0.005 | mg/L | | 0.005 | EPA 200.7 | 15-Nov-11 12:44 | DJSULL1 |
| Potassium (K) | < 0.1 | mg/L | | 0.1 | EPA 200.7 | 15-Nov-11 12:44 | DJSULL1 |
| Sodium (Na) | < 0.05 | mg/L | | 0.05 | EPA 200.7 | 15-Nov-11 12:44 | DJSULL1 |
| <u>TOTAL RECOVERABLE METALS BY ICP-MS</u> | | | | | | | |
| Arsenic (As) | < 1 | ug/L | | 1 | EPA 200.8 | 09-Nov-11 09:49 | DJSULL1 |
| Cadmium (Cd) | < 1 | ug/L | | 1 | EPA 200.8 | 09-Nov-11 09:49 | DJSULL1 |
| Chromium (Cr) | < 1 | ug/L | | 1 | EPA 200.8 | 09-Nov-11 09:49 | DJSULL1 |
| Copper (Cu) | < 1 | ug/L | | 1 | EPA 200.8 | 09-Nov-11 09:49 | DJSULL1 |
| Nickel (Ni) | < 1 | ug/L | | 1 | EPA 200.8 | 09-Nov-11 09:49 | DJSULL1 |
| Selenium (Se) | < 1 | ug/L | | 1 | EPA 200.8 | 09-Nov-11 09:49 | DJSULL1 |
| Silver (Ag) | < 1 | ug/L | | 1 | EPA 200.8 | 09-Nov-11 09:49 | DJSULL1 |
| Zinc (Zn) | 4.74 | ug/L | | 2 | EPA 200.8 | 09-Nov-11 09:49 | DJSULL1 |
| <u>SELENIUM SPECIATION</u> | | | | | | | |
| Vendor Parameter | Complete | | | | V_AS&C | | |



Full-Service Analytical &
Environmental Solutions

NC Certification No. 402
SC Certification No. 99012
NC Drinking Water Cert No. 37735

Case Narrative

11/14/2011

Duke Energy Corporation (04)
Jay Perkins
13339 Hagers Ferry Road
Huntersville, NC 28078

Project: HAPS/MACT Testing Belews Creek
Project No.: J11110204
Lab Submittal Date: 11/08/2011
Prism Work Order: 1110216

This data package contains the analytical results for the project identified above and includes a Case Narrative, Sample Results and Chain of Custody. Unless otherwise noted, all samples were received in acceptable condition and processed according to the referenced methods.

Data qualifiers are flagged individually on each sample. A key reference for the data qualifiers appears at the end of this case narrative.

Please call if you have any questions relating to this analytical report.

Respectfully,

PRISM LABORATORIES, INC.

VP Laboratory Services

Reviewed By

Data Qualifiers Key Reference:

| | |
|-----|--|
| HT | Sample received and analyzed outside of the hold time. |
| BRL | Below Reporting Limit |
| MDL | Method Detection Limit |
| RPD | Relative Percent Difference |
| * | Results reported to the reporting limit. All other results are reported to the MDL with values between MDL and reporting limit indicated with a J. |

This report should not be reproduced, except in its entirety, without the written consent of Prism Laboratories, Inc.



| Client Sample ID | Lab Sample ID | Matrix | Date Sampled | Date Received |
|-----------------------------|---------------|--------|--------------|---------------|
| 2011024429/FGD Purge Eff | 1110216-01 | Water | 11/07/11 | 11/08/11 |
| 2011024430/BioReactor 1 Inf | 1110216-02 | Water | 11/07/11 | 11/08/11 |
| 2011024432/BioReactor 2 Eff | 1110216-03 | Water | 11/07/11 | 11/08/11 |

Samples received in good condition at 0.4 degrees C unless otherwise noted.



Duke Energy Corporation (04)
Attn: Jay Perkins
13339 Hagers Ferry Road
Huntersville, NC 28078

Project: HAPS/MACT Testing Belews
Creek
Project No.: J11110204
Sample Matrix: Water

Client Sample ID: 2011024429/FGD Purge Eff
Prism Sample ID: 1110216-01
Prism Work Order: 1110216
Time Collected: 11/07/11 11:00
Time Submitted: 11/08/11 16:35

| Parameter | Result | Units | Report Limit | MDL | Dilution Factor | Method | Analysis Date/Time | Analyst | Batch ID |
|-------------------------------------|--------|----------|-----------------|-----|--------------------|-------------|-----------------------|---------|-------------|
| General Chemistry Parameters | | | | | | | | | |
| pH | 7.1 HT | pH Units | | | 1 | *SM4500-H B | 11/10/11 13:00 | JAB | P1K0219 |
| Total Alkalinity | 58 | mg/L | 5.0 | 1.4 | 1 | *SM2320 B | 11/11/11 9:35 | JAB | P1K0249 |
| Carbonate Alkalinity | BRL | mg/L | 5.0 | 1.4 | 1 | *SM2320 B | 11/11/11 9:35 | JAB | P1K0250 |
| Bicarbonate Alkalinity | 58 | mg/L | 5.0 | 1.4 | 1 | *SM2320 B | 11/11/11 9:35 | JAB | P1K0251 |



Duke Energy Corporation (04)
Attn: Jay Perkins
13339 Hagers Ferry Road
Huntersville, NC 28078

Project: HAPS/MACT Testing Belews
Creek
Project No.: J11110204
Sample Matrix: Water

Client Sample ID: 2011024430/BioReactor 1 Inf
Prism Sample ID: 1110216-02
Prism Work Order: 1110216
Time Collected: 11/07/11 11:05
Time Submitted: 11/08/11 16:35

| Parameter | Result | Units | Report Limit | MDL | Dilution Factor | Method | Analysis Date/Time | Analyst | Batch ID |
|-------------------------------------|--------|----------|-----------------|-----|--------------------|-------------|-----------------------|---------|-------------|
| General Chemistry Parameters | | | | | | | | | |
| pH | 7.1 HT | pH Units | | | 1 | *SM4500-H B | 11/10/11 13:00 | JAB | P1K0219 |
| Total Alkalinity | 46 | mg/L | 5.0 | 1.4 | 1 | *SM2320 B | 11/11/11 9:35 | JAB | P1K0249 |
| Carbonate Alkalinity | BRL | mg/L | 5.0 | 1.4 | 1 | *SM2320 B | 11/11/11 9:35 | JAB | P1K0250 |
| Bicarbonate Alkalinity | 46 | mg/L | 5.0 | 1.4 | 1 | *SM2320 B | 11/11/11 9:35 | JAB | P1K0251 |



Duke Energy Corporation (04)
Attn: Jay Perkins
13339 Hagers Ferry Road
Huntersville, NC 28078

Project: HAPS/MACT Testing Belews
Creek
Project No.: J11110204
Sample Matrix: Water

Client Sample ID: 2011024432/BioReactor 2 Eff
Prism Sample ID: 1110216-03
Prism Work Order: 1110216
Time Collected: 11/07/11 11:10
Time Submitted: 11/08/11 16:35

| Parameter | Result | Units | Report Limit | MDL | Dilution Factor | Method | Analysis Date/Time | Analyst | Batch ID |
|-------------------------------------|--------|----------|-----------------|-----|--------------------|-------------|-----------------------|---------|-------------|
| General Chemistry Parameters | | | | | | | | | |
| pH | 6.8 HT | pH Units | | | 1 | *SM4500-H B | 11/10/11 13:00 | JAB | P1K0219 |
| Total Alkalinity | 100 | mg/L | 5.0 | 1.4 | 1 | *SM2320 B | 11/11/11 9:35 | JAB | P1K0249 |
| Carbonate Alkalinity | BRL | mg/L | 5.0 | 1.4 | 1 | *SM2320 B | 11/11/11 9:35 | JAB | P1K0250 |
| Bicarbonate Alkalinity | 100 | mg/L | 5.0 | 1.4 | 1 | *SM2320 B | 11/11/11 9:35 | JAB | P1K0251 |



Duke Energy Corporation (04)
Attn: Jay Perkins
13339 Hagers Ferry Road
Huntersville, NC 28078

Project: HAPS/MACT Testing Belews
Creek
Project No: J11110204

Prism Work Order: 1110216
Time Submitted: 11/8/2011 4:35:00PM

General Chemistry Parameters - Quality Control

| Analyte | Result | Reporting Limit | Units | Spike Level | Source Result | %REC Limits | RPD | RPD Limit | Notes |
|---------------------------------|--------|--------------------|----------|-------------------------------|------------------|-------------------------------|--------|--------------|-------|
| Batch P1K0219 - NO PREP | | | | | | | | | |
| LCS (P1K0219-BS1) | | | | Prepared & Analyzed: 11/10/11 | | | | | |
| pH | 6.91 | | pH Units | 6.860 | | 101 | 99-101 | | |
| Batch P1K0249 - NO PREP | | | | | | | | | |
| Blank (P1K0249-BLK1) | | | | Prepared & Analyzed: 11/11/11 | | | | | |
| Total Alkalinity | BRL | 5.0 | mg/L | | | | | | |
| LCS (P1K0249-BS1) | | | | Prepared & Analyzed: 11/11/11 | | | | | |
| Total Alkalinity | 250 | 5.0 | mg/L | 250.0 | | 100 | 90-110 | | |
| LCS Dup (P1K0249-BSD1) | | | | Prepared & Analyzed: 11/11/11 | | | | | |
| Total Alkalinity | 249 | 5.0 | mg/L | 250.0 | | 100 | 90-110 | 0.4 | 200 |
| Duplicate (P1K0249-DUP2) | | | | Source: 1110216-03 | | Prepared & Analyzed: 11/11/11 | | | |
| Total Alkalinity | 101 | 5.0 | mg/L | | 102 | | | 0.4 | 20 |
| Batch P1K0250 - NO PREP | | | | | | | | | |
| Blank (P1K0250-BLK1) | | | | Prepared & Analyzed: 11/11/11 | | | | | |
| Carbonate Alkalinity | BRL | 5.0 | mg/L | | | | | | |
| LCS (P1K0250-BS1) | | | | Prepared & Analyzed: 11/11/11 | | | | | |
| Carbonate Alkalinity | 250 | 5.0 | mg/L | | | | 90-110 | | |
| LCS Dup (P1K0250-BSD1) | | | | Prepared & Analyzed: 11/11/11 | | | | | |
| Carbonate Alkalinity | 249 | 5.0 | mg/L | | | | 90-110 | 0.4 | 200 |



Duke Energy Corporation (04)
Attn: Jay Perkins
13339 Hagers Ferry Road
Huntersville, NC 28078

Project: HAPS/MACT Testing Belews
Creek
Project No: J11110204

Prism Work Order: 1110216
Time Submitted: 11/8/2011 4:35:00PM

General Chemistry Parameters - Quality Control

| Analyte | Result | Reporting Limit | Units | Spike Level | Source Result | %REC | %REC Limits | RPD | RPD Limit | Notes |
|---------------------------------|--------|---------------------------|-------|----------------|-------------------------------|------|----------------|-----|--------------|-------|
| Batch P1K0250 - NO PREP | | | | | | | | | | |
| Duplicate (P1K0250-DUP2) | | Source: 1110216-03 | | | Prepared & Analyzed: 11/11/11 | | | | | |
| Carbonate Alkalinity | BRL | 5.0 | mg/L | | BRL | | | | 20 | |
| Batch P1K0251 - NO PREP | | | | | | | | | | |
| Blank (P1K0251-BLK1) | | | | | Prepared & Analyzed: 11/11/11 | | | | | |
| Bicarbonate Alkalinity | BRL | 5.0 | mg/L | | | | | | | |
| LCS (P1K0251-BS1) | | | | | Prepared & Analyzed: 11/11/11 | | | | | |
| Bicarbonate Alkalinity | 250 | 5.0 | mg/L | 250.0 | | 100 | 90-110 | | | |
| LCS Dup (P1K0251-BSD1) | | | | | Prepared & Analyzed: 11/11/11 | | | | | |
| Bicarbonate Alkalinity | 249 | 5.0 | mg/L | 250.0 | | 100 | 90-110 | 0.4 | 200 | |
| Duplicate (P1K0251-DUP2) | | Source: 1110216-03 | | | Prepared & Analyzed: 11/11/11 | | | | | |
| Bicarbonate Alkalinity | 101 | 5.0 | mg/L | | 102 | | | 0.4 | 20 | |

November 16, 2011

Duke Energy
ATTN: Jay Perkins
Scientific Support-Laboratory
13339 Hagers Ferry Road
Huntersville NC 28078
jcperkins@duke-energy.com
labcustomer@duke-energy.com

RE: Project DUK-HV1101

Client Project: J11110204

Dear Mr. Perkins,

On November 9, 2011, Brooks Rand Labs (BRL) received two (2) wastewater samples and two (2) corresponding field blanks. Samples were logged-in for total mercury (Hg) analysis. All samples were received, prepared, analyzed, and stored according to BRL SOPs and EPA methodology.


The results were blank-corrected as described in the calculations section of the applicable SOP(s) and may be evaluated using adjusted reporting limits to account for sample aliquot size. Please refer to the *Sample Results* page for sample-specific detection limits and other details.

The analysis of the fourth instrument blank produced an abnormal peak shape and was omitted from the sequence. The quality control sample was re-analyzed, produced a typical peak shape, and was reported as -IBL5. Aside from concentration qualifiers, all data was reported without qualification and all associated quality control sample results met the acceptance criteria.

BRL, an accredited laboratory, certifies the reported results of all analyses for which BRL is NELAP accredited meet all NELAP requirements. For more details, see the *Report Information* page of the report.

Please feel free to contact me if you have any questions regarding this report.

Sincerely,

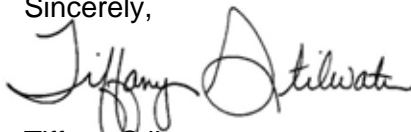

Tiffany Stilwater
Project Manager
tiffany@brooksrands.com

Report Information

Laboratory Accreditation

BRL is accredited by the *National Environmental Laboratory Accreditation Program* (NELAP) through the State of Florida Department of Health, Bureau of Laboratories (E87982) and is certified to perform many environmental analyses. BRL is also certified by many other states to perform environmental analyses. For a current list of our accreditations/certifications, please visit our website at <http://www.brooksrand.com/default.asp?contentID=586>. Results reported relate only to the samples listed in the report.

Field Quality Control Samples

Please be notified that certain EPA methods require the collection of field quality control samples of an appropriate type and frequency; failure to do so is considered a deviation from some methods and for compliance purposes should only be done with the approval of regulatory authorities. Please see the specific EPA methods for details regarding required field quality control samples.

Common Abbreviations

| | | | |
|------------|-------------------------------------|------------|------------------------------------|
| BLK | method blank | MS | matrix spike |
| BRL | Brooks Rand Labs | MSD | matrix spike duplicate |
| BS | laboratory fortified blank | ND | non-detect |
| CAL | calibration standard | NR | non-reportable |
| CCV | continuing calibration verification | PS | post preparation spike |
| COC | chain of custody record | REC | percent recovery |
| CRM | certified reference material | RPD | relative percent difference |
| D | dissolved fraction | RSD | relative standard deviation |
| DUP | duplicate | SCV | secondary calibration verification |
| ICV | initial calibration verification | SOP | standard operating procedure |
| MDL | method detection limit | SRM | standard reference material |
| MRL | method reporting limit | T | total recoverable fraction |

Definition of Data Qualifiers

(Effective 9/23/09)

| | |
|------------|---|
| B | Detected by the instrument, the result is > the MDL but ≤ the MRL. Result is reported and considered an estimate. |
| E | An estimated value due to the presence of interferences. A full explanation is presented in the narrative. |
| H | Holding time and/or preservation requirements not met. Result is estimated. |
| J | Estimated value. A full explanation is presented in the narrative. |
| J-M | Duplicate precision (RPD) for associated QC sample was not within acceptance criteria. Result is estimated. |
| J-N | Spike recovery for associated QC sample was not within acceptance criteria. Result is estimated. |
| M | Duplicate precision (RPD) was not within acceptance criteria. Result is estimated. |
| N | Spike recovery was not within acceptance criteria. Result is estimated. |
| R | Rejected, unusable value. A full explanation is presented in the narrative. |
| U | Result is ≤ the MDL or client requested reporting limit (CRRL). Result reported as the MDL or CRRL. |
| X | Result is not BLK-corrected and is within 10x the absolute value of the highest detectable BLK in the batch. Result is estimated. |

These qualifiers are based on those previously utilized by Brooks Rand, Ltd., those found in the EPA SOW ILM03.0, Exhibit B, Section III, pg. B-18, and the USEPA Laboratory Data Validation Functional Guidelines for Evaluating Inorganic Analyses; USEPA; July 2002. These supersede all previous qualifiers ever employed by BRL.

Sample Information

| Sample | Lab ID | Report Matrix | Type | Sampled | Received |
|-------------------------|------------|----------------|-------------|------------|------------|
| BioReactor 1 Inf | 1146018-01 | FGD Wastewater | Sample | 11/07/2011 | 11/09/2011 |
| BioReactor 1 Inf Hg Blk | 1146018-02 | DIW | Field Blank | 11/07/2011 | 11/09/2011 |
| BioReactor 2 Eff | 1146018-03 | FGD Wastewater | Sample | 11/07/2011 | 11/09/2011 |
| BioReactor2 Eff Hg Blk | 1146018-04 | DIW | Field Blank | 11/07/2011 | 11/09/2011 |

Batch Summary

| Analyte | Lab Matrix | Method | Prepared | Analyzed | Batch | Sequence |
|---------|------------|----------|------------|------------|---------|----------|
| Hg | Water | EPA 1631 | 11/11/2011 | 11/14/2011 | B111787 | 1100803 |

Sample Results

| Sample | Analyte | Report Matrix | Fraction | Result | Qualifier | MDL | MRL | Unit | Batch | Sequence |
|--------------------------------|---------|----------------|----------|--------|-----------|------|------|------|---------|----------|
| BioReactor 1 Inf | | | | | | | | | | |
| 1146018-01 | Hg | FGD Wastewater | T | 163 | | 1.52 | 4.04 | ng/L | B111787 | 1100803 |
| BioReactor 1 Inf Hg Blk | | | | | | | | | | |
| 1146018-02 | Hg | DIW | T | 0.15 | U | 0.15 | 0.40 | ng/L | B111787 | 1100803 |
| BioReactor 2 Eff | | | | | | | | | | |
| 1146018-03 | Hg | FGD Wastewater | T | 85.4 | | 3.03 | 8.08 | ng/L | B111787 | 1100803 |
| BioReactor2 Eff Hg Blk | | | | | | | | | | |
| 1146018-04 | Hg | DIW | T | 0.15 | U | 0.15 | 0.40 | ng/L | B111787 | 1100803 |

Accuracy & Precision Summary

Batch: B111787
Lab Matrix: Water
Method: EPA 1631

| Sample | Analyte | Native | Spike | Result | Units | REC & Limits | RPD & Limits |
|--------------|---|--------|-------|--------|-------|--------------|--------------|
| B111787-SRM1 | Certified Reference Material (1145032, NIST 1641d 1000x dilution) | | | | | | |
| | Hg | | 15.68 | 17.19 | ng/L | 110% 85-115 | |
| B111787-MS2 | Matrix Spike (1146014-03) | | | | | | |
| | Hg | 141.8 | 707.1 | 815.4 | ng/L | 95% 71-125 | |
| B111787-MSD2 | Matrix Spike Duplicate (1146014-03) | | | | | | |
| | Hg | 141.8 | 707.1 | 953.6 | ng/L | 115% 71-125 | 16% 24 |

Method Blanks & Reporting Limits

Batch: B111787
Matrix: Water
Method: EPA 1631
Analyte: Hg

| Sample | Result | Units |
|---------------|--------|--------------------------|
| B111787-BLK1 | 0.05 | ng/L |
| B111787-BLK2 | 0.08 | ng/L |
| B111787-BLK3 | 0.009 | ng/L |
| B111787-BLK4 | 0.04 | ng/L |
| Average: 0.04 | | Standard Deviation: 0.03 |
| Limit: 0.50 | | Limit: 0.10 |
| | | MDL: 0.15 |
| | | MRL: 0.40 |

Instrument Calibration

Sequence: 1100803
Instrument: THG-10
Date: 11/14/2011
Analyte: Hg

Total Mercury and Mercury Speciation by CVAFS
Method: EPA 1631

| Lab ID | True Value | Result | Units | REC & Limits | |
|--------------|------------|--------|----------|--------------|--------|
| 1100803-IBL1 | | 4.10 | pg of Hg | | |
| 1100803-IBL2 | | 6.93 | pg of Hg | | |
| 1100803-IBL3 | | 4.84 | pg of Hg | | |
| 1100803-CAL1 | 25.00 | 24.46 | pg of Hg | 98% | |
| 1100803-CAL2 | 100.0 | 105.6 | pg of Hg | 106% | |
| 1100803-CAL3 | 500.0 | 437.4 | pg of Hg | 87% | |
| 1100803-CAL4 | 2500 | 2629 | pg of Hg | 105% | |
| 1100803-CAL5 | 10000 | 10670 | pg of Hg | 107% | |
| 1100803-ICV1 | 1568 | 1719 | pg of Hg | 110% | 85-115 |
| 1100803-IBL5 | | 11.27 | pg of Hg | | |
| 1100803-CCB1 | | 7.07 | pg of Hg | | |
| 1100803-CCB2 | | 12.9 | pg of Hg | | |
| 1100803-CCV1 | 500.0 | 433.4 | pg of Hg | 87% | 77-123 |
| 1100803-CCB3 | | 8.47 | pg of Hg | | |
| 1100803-CCV2 | 500.0 | 525.5 | pg of Hg | 105% | 77-123 |
| 1100803-CCV3 | 500.0 | 518.0 | pg of Hg | 104% | 77-123 |

Sample Containers

| | | | | | | | |
|---------------------------------|------------------|-------------------------------|----------------|--------------|-------|-----------------------|------------------|
| Lab ID: 1146018-01 | | Report Matrix: FGD Wastewater | | | | Collected: 11/07/2011 | |
| Sample: BioReactor 1 Inf | | Sample Type: Sample | | | | Received: 11/09/2011 | |
| Des | Container | Size | Lot | Preservation | P-Lot | pH | Ship. Cont. |
| A | Bottle FLPE Hg-T | 250mL | 71470160 10 | none | n/a | | Cardboard Box |
| Lab ID: 1146018-02 | | Report Matrix: DIW | | | | Collected: 11/07/2011 | |
| Sample: BioReactor 1 Inf Hg Blk | | Sample Type: Field Blank | | | | Received: 11/09/2011 | |
| Des | Container | Size | Lot | Preservation | P-Lot | pH | Ship. Cont. |
| A | Bottle FLPE Hg-T | 250mL | 71470160 10 | none | n/a | | Cardboard Box |
| Lab ID: 1146018-03 | | Report Matrix: FGD Wastewater | | | | Collected: 11/07/2011 | |
| Sample: BioReactor 2 Eff | | Sample Type: Sample | | | | Received: 11/09/2011 | |
| Des | Container | Size | Lot | Preservation | P-Lot | pH | Ship. Cont. |
| A | Bottle FLPE Hg-T | 250mL | 71470160 10 | none | n/a | | Cardboard Box |
| Lab ID: 1146018-04 | | Report Matrix: DIW | | | | Collected: 11/07/2011 | |
| Sample: BioReactor2 Eff Hg Blk | | Sample Type: Field Blank | | | | Received: 11/09/2011 | |
| Des | Container | Size | Lot | Preservation | P-Lot | pH | Ship. Cont. |
| A | Bottle FLPE Hg-T | 250mL | 71470160 10 | none | n/a | | Cardboard Box |

Shipping Containers

Cardboard Box

Received: November 9, 2011 8:45
Tracking No: 4726 7966 5611 via FedEx
Coolant Type: None
Temperature: ambient

Description: Cardboard Box
Damaged in transit? No
Returned to client? No

Custody seals present? No
Custody seals intact? No
COC present? Yes

CHAIN OF CUSTODY RECORD AND ANALYSIS REQUEST FORM

1146018



Duke Energy Analytical Laboratory
Mail Code MGO3A2 (Building 7405)
13333 Hagers Ferry Rd
Huntersville, N. C. 28078
(704) 875-5245
Fax: (704) 875-4349

Customer must Complete

1) Project Name: HAPS/MACT Testing
2) Client: Bill Kennedy, Ron Laws, Alleg Stowe, Wayne Chapman, Melonie Martin, Tom Johnson
3) Business Unit: 20003
4) Process: 3500
5) Oper. Unit: BC00
6) Res. Type: 69400
7) Project ID: MACTCAR

| 11 Lab ID | 13 Sample Description or ID |
|------------|-----------------------------|
| 2011024430 | FGD Purge Eff |
| 2011024431 | BioReactor 1 Inf |
| 2011024432 | BioReactor 1 Inf Hg Bk |
| 2011024433 | BioReactor 2 Eff |
| 2011024434 | BioReactor 2 Eff Hg Bk |
| 2011024435 | Filter Bk |
| 2011024436 | Metals Trip Bk |

Customer to complete appropriate columns to right

| Se Speciation Bottle ID | 13 Sample Description or ID | Date | Time | Signature | 17 Comp. | 18 Grab | TDS, TSS | Hg - 245.1 | Hg Dissolved, 245.1 | Metals* | Se, soluble | Se, Speciation, V_ASC | Hg 1631, V_BRand | Carbonate alkalinity, bicarbonate alkalinity, alkalinity, total (4.5), pH - V_Prism | Chloride, Sulfate, Bromide - Dionex | Nitrate-nitrite, C_NO3/NO2 |
|-------------------------|-----------------------------|---------|-------|-------------|----------|---------|----------|------------|---------------------|---------|-------------|-----------------------|------------------|---|-------------------------------------|----------------------------|
| | FGD Purge Eff | 11/7/11 | 11:00 | [Signature] | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| | BioReactor 1 Inf | 11/7/11 | 11:05 | [Signature] | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| | BioReactor 1 Inf Hg Bk | 11/7/11 | 11:10 | [Signature] | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| | BioReactor 2 Eff | | | | | | | | | | | | | | | |
| | BioReactor 2 Eff Hg Bk | | | | | | | | | | | | | | | |
| | Filter Bk | | | | | | | | | | | | | | | |
| | Metals Trip Bk | | | | | | | | | | | | | | | |

Customer to sign & date below - fill out from left to right.

1) Relinquished By: [Signature] Date/Time: 11/7/11 11:30am

2) Accepted By: [Signature] Date/Time: 11/8/11 0900

3) Relinquished By: [Signature] Date/Time: 11/8/11 1300

4) Accepted By: [Signature] Date/Time: 11/8/11 0845

5) Relinquished By: [Signature] Date/Time: 11/8/11 1300

6) Accepted By: [Signature] Date/Time: 11/9/11 0845

7) Relinquished By: [Signature] Date/Time: 11/8/11 1300

8) Accepted By: [Signature] Date/Time: 11/9/11 0845

9) Sealed/locked By: [Signature] Date/Time: 11/8/11 1300

10) Sealed/locked Opened By: [Signature] Date/Time: 11/9/11 0845

11) Sealed/locked By: [Signature] Date/Time: 11/8/11 1300

12) Sealed/locked Opened By: [Signature] Date/Time: 11/9/11 0845

Comments: Metals=TRM/IMS = As, Cd, Cr, Cu, Ni, Se, Ag, Zn TRM/ICP = B, Ca, K, Li, Mg, Na.

Customer, IMPORTANT!
Please indicate desired turnaround.

22 Requested Turnaround
14 Days _____
7 Days _____
48 Hr _____
Other _____
Add. Cost Will Apply
11-15-11

Analytical Laboratory Use Only

14MS # 31110204
Matrix: OTHER
Date & Time 11/8/11 0900
Cooler Temp (C) _____
15 Preserve: 1=HCL, 2=H2SO4, 3=HNO3, 4=Ice, 5=None
16 Analyses Required
17 Comp. TDS, TSS
18 Grab
Samples Originating From: _____
SAMPLE PROGRAM: _____
Drinking Water: _____
Waste: _____
Ground Water: _____
RCRA: _____
UST: _____

19 Page 1 of 2
DISTRIBUTION
ORIGINAL to LAB,
COPY to CLIENT

7147016010

546
1

ORIGIN ID: SRWA (980) 875-5213
C. SHARMA
DUKE ENERGY
13339 HAGERS FERRY RD
BLDG # 7405
HUNTERSVILLE, NC 28078
UNITED STATES, US


SHIP DATE: 08NOV11
ACTWGT: 3.4 LB
CAD: 798987/CAFE2509


BILL SENDER

TO


ATTN: MICHELLE BRISCOE
BROOKS RAND
3958 6TH AVENUE NW

SEATTLE WA 98107
(206) 632-6206
INV: REF: DEPT:

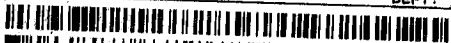

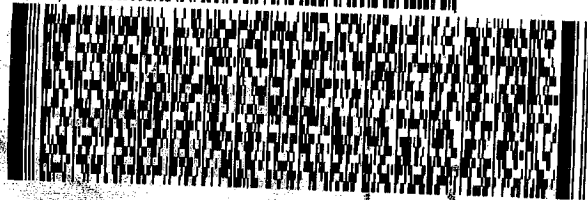

FedEx
Express



TRK#
0201


4726 7966 5611

WED - 09 NOV A1
PRIORITY OVERNIGHT

NC BFIA

98107
WA-US SEA

Part # 156148-434 NRIT 01-08

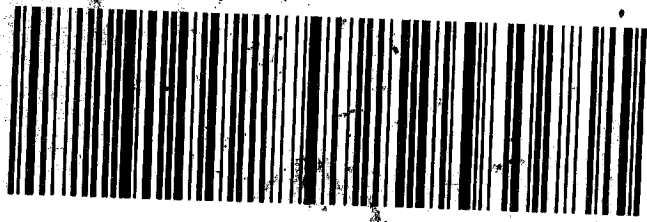

580C1/8C58/108C

7
263

J11131186868125



**APPLIED SPECIATION
AND CONSULTING, LLC**

18804 Northcreek Parkway Bothell, WA, 98011
Tel: (425) 483-3300 Fax: (425) 483-9818
www.appliedspeciation.com

November 14, 2011

Jay Perkins
Duke Energy Analytical Laboratory
Mail Code MGO3A2 (Building 7405)
13339 Hagers Ferry Rd.
Huntersville, NC 28078
(704) 875-5245

Project: HAPS/MACT Testing Belews Creek (LIMS # J11110204)

Dear Mr. Perkins,

Attached is the report associated with four (4) aqueous samples submitted for selenium speciation analysis on November 8, 2011. The samples were received in a sealed cooler at -0.3°C on November 9, 2011. Selenium speciation analysis was performed via ion chromatography inductively coupled plasma dynamic reaction cell mass spectrometry (IC-ICP-DRC-MS). Any issues associated with the analysis are addressed in the following report.

If you have any questions, please feel free to contact me at your convenience.

Sincerely,

A handwritten signature in black ink, appearing to read "Russell Gerads".

Russell Gerads
Vice President
Applied Speciation and Consulting, LLC

Applied Speciation and Consulting, LLC

Report prepared for:

Jay Perkins
Duke Energy Analytical Laboratory
Mail Code MGO3A2 (Building 7405)
13339 Hagers Ferry Rd.
Huntersville, NC 28078

Project: HAPS/MACT Testing Belews Creek (LIMS # J11110204)

November 14, 2011

1. Sample Reception

Four (4) aqueous samples in 125mL HDPE bottles (provided by Applied Speciation and Consulting) were submitted for selenium speciation analysis on November 8, 2011. The samples were received on November 9, 2011 in a sealed container at -0.3°C.

The samples were received in a laminar flow clean hood, void of trace metals contamination and ultra-violet radiation, and designated a discrete sample identifier. An aliquot of each sample was filtered (0.45µm) and each filtrate was stored in a secure, monitored cryofreezer (maintained at a temperature of -80°C) until selenium speciation analysis could be performed via ion chromatography inductively coupled plasma dynamic reaction cell mass spectrometry (IC-ICP-DRC-MS).

2. Sample Preparation

All sample preparation is performed in laminar flow clean hoods known to be free from trace metals contamination. All applied water for dilutions and sample preservatives are monitored for contamination to account for any biases associated with the sample results.

Selenium Speciation Analysis by IC-ICP-DRC-MS Prior to analysis, an aliquot of each sample was filtered with a syringe filter (0.45µm) and injected directly into a sealed autosampler vial. No further sample preparation was performed as any chemical alteration of a sample may shift the equilibrium of the system, resulting in changes in speciation ratios.

3. Sample Analysis

All sample analysis is preceded by a minimum of a five-point calibration curve spanning the entire concentration range of interest. Calibration curves are performed at the beginning of

each analytical day. All calibration curves, associated with each species of interest, are standardized by linear regression resulting in a response factor. All sample results are **instrument blank corrected** to account for any operational biases associated with the analytical platform.

Prior to sample analysis, all calibration curves are verified using second source standards which are identified as initial calibration verification standards (ICV).

Ongoing instrument performance is identified by the analysis of continuing calibration verification standards (CCV) and continuing calibration blanks (CCB) at a minimal interval of every ten analytical runs.

Selenium Speciation Analysis by IC-ICP-DRC-MS Each sample for selenium speciation analysis was analyzed by ion chromatography inductively coupled plasma dynamic reaction cell mass spectrometry (IC-ICP-DRC-MS) on November 11, 2011. An aliquot of each sample is injected onto an anion exchange column and mobilized by a basic ($\text{pH} > 7$) gradient. The eluting selenium species are then introduced into a radio frequency (RF) plasma where energy-transfer processes cause desolvation, atomization, and ionization. The ions are extracted from the plasma through a differentially-pumped vacuum interface and travel through a pressurized chamber (DRC) containing a specific reactive gas which preferentially reacts with interfering ions of the same target mass to charge ratios (m/z). A solid-state detector detects ions transmitted through the mass analyzer and the resulting current is processed by a data handling system.

Retention times for each eluting species are compared to known standards for species identification.

4. Analytical Issues

The overall analyses went well and no significant analytical issues were encountered. All quality control parameters associated with this sample were within acceptance limits.

The estimated method detection limits (eMDLs) for selenite, selenate, and selenocyanate are generated from replicate analyses of the lowest standard in the calibration curve. Not all selenium species are present in preparation blanks; therefore, eMDL calculations based on preparation blanks are artificially biased low.

The eMDL for methylseleninic acid and selenomethionine is calculated from the average eMDL of selenite, selenate, and selenocyanate. The calibration does not contain methylseleninic acid or selenomethionine due to impurities in these standards which would bias the results for other selenium species.

All selenium speciation results have been corrected for instrument drift in accordance with the continuing calibration verification standards. All quality control parameters were within acceptance limits signifying that the applied correction was appropriate.

If you have any questions or concerns regarding this report, please feel free to contact me.

Sincerely,

A handwritten signature in black ink, appearing to read 'Russell Gerads', with a stylized, flowing script.

Russell Gerads
Vice President
Applied Speciation and Consulting, LLC

Selenium Speciation Results for Duke Energy
 Project Name: HAPS/MACT Testing Belews Creek
 Contact: Jay Perkins
 LIMS #J11110204

Date: November 14, 2011
 Report Generated by: Russell Gerads
 Applied Speciation and Consulting, LLC

Sample Results

| Sample ID | Se(IV) | Se(VI) | SeCN | MeSe(IV) | SeMe | Unknown Se Species (n) |
|------------------|------------|------------|------------|------------|------------|------------------------|
| FGD Purge Eff | 89.1 | 76.4 | ND (<4.3) | ND (<5.1) | ND (<5.1) | 0 (0) |
| BioReactor 1 Inf | 25.1 | 62.9 | ND (<1.1) | 3.4 | ND (<1.3) | 0 (0) |
| BioReactor 2 Eff | ND (<1.2) | ND (<1.5) | ND (<1.1) | ND (<1.3) | ND (<1.3) | 0 (0) |
| Metals Trip Blk | ND (<0.24) | ND (<0.30) | ND (<0.22) | ND (<0.25) | ND (<0.25) | 0 (0) |

All results reflect the applied dilution and are reported in µg/L

ND = Not detected at the applied dilution

SeCN = Selenocyanate

MeSe(IV) = Methylseleninic acid

SeMe = Selenomethionine

Unknown Se Species = Total concentration of all unknown Se species observed by IC-ICP-MS

n = number of unknown Se species observed

Selenium Speciation Results for Duke Energy
 Project Name: HAPS/MACT Testing Belews Creek
 Contact: Jay Perkins
 LIMS #J11110204

Date: November 14, 2011
 Report Generated by: Russell Gerads
 Applied Speciation and Consulting, LLC

Quality Control Summary - Preparation Blank Summary

| Analyte (µg/L) | PBW1 | PBW2 | PBW3 | PBW4 | Mean | StdDev | eMDL* | eMDL 10x | eMDL 50x | eMDL 200x |
|----------------|-------|-------|-------|-------|-------|--------|-------|----------|----------|-----------|
| Se(IV) | 0.000 | 0.000 | 0.000 | 0.000 | 0.000 | 0.000 | 0.024 | 0.24 | 1.2 | 4.8 |
| Se(VI) | 0.000 | 0.000 | 0.000 | 0.000 | 0.000 | 0.000 | 0.030 | 0.30 | 1.5 | 6.1 |
| SeCN | 0.000 | 0.000 | 0.000 | 0.000 | 0.000 | 0.000 | 0.022 | 0.22 | 1.1 | 4.3 |
| MeSe(IV) | 0.000 | 0.000 | 0.000 | 0.000 | 0.000 | 0.000 | 0.025 | 0.25 | 1.3 | 5.1 |
| SeMe | 0.000 | 0.000 | 0.000 | 0.000 | 0.000 | 0.000 | 0.025 | 0.25 | 1.3 | 5.1 |

eMDL = Estimated Method Detection Limit

*Please see narrative regarding eMDL calculations

Quality Control Summary - Certified Reference Materials

| Analyte (µg/L) | CRM | True Value | Result | Recovery |
|----------------|-----|------------|--------|----------|
| Se(IV) | LCS | 9.57 | 9.76 | 102.0 |
| Se(VI) | LCS | 9.48 | 9.55 | 100.8 |
| SeCN | LCS | 8.92 | 9.43 | 105.8 |
| MeSe(IV) | LCS | 6.47 | 6.38 | 98.6 |
| SeMe | LCS | 9.32 | 9.64 | 103.5 |

Selenium Speciation Results for Duke Energy
 Project Name: HAPS/MACT Testing Belews Creek
 Contact: Jay Perkins
 LIMS #J11110204

Date: November 14, 2011
 Report Generated by: Russell Gerads
 Applied Speciation and Consulting, LLC

Quality Control Summary - Matrix Duplicates

| Analyte (µg/L) | Sample ID | Rep 1 | Rep 2 | Mean | RPD |
|----------------|---------------|-----------|-----------|------|-----|
| Se(IV) | FGD Purge Eff | 89.1 | 84.1 | 86.6 | 5.7 |
| Se(VI) | FGD Purge Eff | 76.4 | 73.6 | 75.0 | 3.6 |
| SeCN | FGD Purge Eff | ND (<4.3) | ND (<4.3) | NC | NC |
| MeSe(IV) | FGD Purge Eff | ND (<5.1) | ND (<5.1) | NC | NC |
| SeMe | FGD Purge Eff | ND (<5.1) | ND (<5.1) | NC | NC |

ND = Not detected at the applied dilution

NC = Value was not calculated due to one or more concentrations below the eMDL

Quality Control Summary - Matrix Spike/ Matrix Spike Duplicate

| Analyte (µg/L) | Sample ID | Spike Conc | MS Result | Recovery | Spike Conc | MSD Result | Recovery | RPD |
|----------------|---------------|------------|-----------|----------|------------|------------|----------|-----|
| Se(IV) | FGD Purge Eff | 1112 | 1476 | 124.9 | 1112 | 1496 | 126.7 | 1.3 |
| Se(VI) | FGD Purge Eff | 1009 | 1082 | 99.8 | 1009 | 1112 | 102.8 | 2.8 |
| SeCN | FGD Purge Eff | 915.0 | 634.2 | 69.3* | 915.0 | 633.1 | 69.2* | 0.2 |

*The low recovery is attributed to matrix induced species conversion

CHAIN OF CUSTODY RECORD AND ANALYSIS REQUEST FORM



Duke Energy Analytical Laboratory

Mail Code MGO3A2 (Building 7405)
13339 Hagers Ferry Rd
Huntersville, N.C. 28078
(704) 875-5245
Fax: (704) 875-4349

32 of 33

Customer must Complete

| | |
|--|----------------------------|
| 1) Project Name Bellevue Creek | 2) Phone No: |
| 3) Client: Bill Kennedy, Ron Laws, Allen Stowe, Wayne Chapman, Melonie Martin, Tom Johnson | 4) Fax No: |
| 5) Business Unit: 20003 | 6) Process: 3500 |
| 7) Oper. Unit: BC00 | 8) Project ID: MACTCAR |
| 9) Pres. Type: 69400 | 10) Project ID: MACTCAR |

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|-------------|
| 11) Lab ID | 12) Lab ID | 13) Lab ID | 14) Lab ID | 15) Lab ID | 16) Lab ID | 17) Lab ID | 18) Lab ID | 19) Lab ID | 20) Lab ID | 21) Lab ID | 22) Lab ID | 23) Lab ID | 24) Lab ID | 25) Lab ID | 26) Lab ID | 27) Lab ID | 28) Lab ID | 29) Lab ID | 30) Lab ID | 31) Lab ID | 32) Lab ID | 33) Lab ID | 34) Lab ID | 35) Lab ID | 36) Lab ID | 37) Lab ID | 38) Lab ID | 39) Lab ID | 40) Lab ID | 41) Lab ID | 42) Lab ID | 43) Lab ID | 44) Lab ID | 45) Lab ID | 46) Lab ID | 47) Lab ID | 48) Lab ID | 49) Lab ID | 50) Lab ID | 51) Lab ID | 52) Lab ID | 53) Lab ID | 54) Lab ID | 55) Lab ID | 56) Lab ID | 57) Lab ID | 58) Lab ID | 59) Lab ID | 60) Lab ID | 61) Lab ID | 62) Lab ID | 63) Lab ID | 64) Lab ID | 65) Lab ID | 66) Lab ID | 67) Lab ID | 68) Lab ID | 69) Lab ID | 70) Lab ID | 71) Lab ID | 72) Lab ID | 73) Lab ID | 74) Lab ID | 75) Lab ID | 76) Lab ID | 77) Lab ID | 78) Lab ID | 79) Lab ID | 80) Lab ID | 81) Lab ID | 82) Lab ID | 83) Lab ID | 84) Lab ID | 85) Lab ID | 86) Lab ID | 87) Lab ID | 88) Lab ID | 89) Lab ID | 90) Lab ID | 91) Lab ID | 92) Lab ID | 93) Lab ID | 94) Lab ID | 95) Lab ID | 96) Lab ID | 97) Lab ID | 98) Lab ID | 99) Lab ID | 100) Lab ID |
|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|-------------|

Customer to complete appropriate columns to right

| Se Speciation Bottle ID | 13 Sample Description or ID | Date | Time | Signature | 17 Comp. | 18 Grab | 19 Analyses Required | 20 TDS, TSS | 21 Hg - 245.1 | 22 Hg Dissolved, 245.1 | 23 Metals* | 24 Se, soluble | 25 Se, Speciation, V_ASC | 26 Hg 1631, V_BRand | 27 Carbonate alkalinity, bicarbonate alkalinity, alkalinity, total (4.5), pH - V_Prism | 28 Chloride, Sulfate, Bromide - Dionex | 29 Nitrate-nitrite, C_NO3/NO2 |
|-------------------------|-----------------------------|----------|----------|-------------|----------|---------|----------------------|-------------|---------------|------------------------|------------|----------------|--------------------------|---------------------|--|--|-------------------------------|
| | 1000 Pange Eff | 11/11/11 | 11:30 AM | [Signature] | | | | | | | | | | | | | |
| | BioReactor 1 Inf Hg BIK | 11/11/11 | 11:30 AM | [Signature] | | | | | | | | | | | | | |
| | BioReactor 2 Eff Hg BIK | 11/11/11 | 11:30 AM | [Signature] | | | | | | | | | | | | | |
| | BioReactor 2 Eff Hg BIK | 11/11/11 | 11:30 AM | [Signature] | | | | | | | | | | | | | |
| | Filter BIK | 11/11/11 | 11:30 AM | [Signature] | | | | | | | | | | | | | |
| | Metals Trip BIK | 11/11/11 | 11:30 AM | [Signature] | | | | | | | | | | | | | |

Customer to sign & date below - fill out from left to right.

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---------------------------|--------------------------|-----------------------------------|-------------------------------|-------------------------------|-------------------------------|-------------------------------|-------------------------------|-------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|---------------------------------|
| 1) Requested By Burner | 2) Accepted By Burner | 3) Date/Time 11/11/11 11:30 AM | 4) Date/Time 11/11/11 0900 | 5) Date/Time 11/11/11 1300 | 6) Date/Time 11/11/11 1300 | 7) Date/Time 11/11/11 1300 | 8) Date/Time 11/11/11 1300 | 9) Date/Time 11/11/11 1300 | 10) Date/Time 11/11/11 1300 | 11) Date/Time 11/11/11 1300 | 12) Date/Time 11/11/11 1300 | 13) Date/Time 11/11/11 1300 | 14) Date/Time 11/11/11 1300 | 15) Date/Time 11/11/11 1300 | 16) Date/Time 11/11/11 1300 | 17) Date/Time 11/11/11 1300 | 18) Date/Time 11/11/11 1300 | 19) Date/Time 11/11/11 1300 | 20) Date/Time 11/11/11 1300 | 21) Date/Time 11/11/11 1300 | 22) Date/Time 11/11/11 1300 | 23) Date/Time 11/11/11 1300 | 24) Date/Time 11/11/11 1300 | 25) Date/Time 11/11/11 1300 | 26) Date/Time 11/11/11 1300 | 27) Date/Time 11/11/11 1300 | 28) Date/Time 11/11/11 1300 | 29) Date/Time 11/11/11 1300 | 30) Date/Time 11/11/11 1300 | 31) Date/Time 11/11/11 1300 | 32) Date/Time 11/11/11 1300 | 33) Date/Time 11/11/11 1300 | 34) Date/Time 11/11/11 1300 | 35) Date/Time 11/11/11 1300 | 36) Date/Time 11/11/11 1300 | 37) Date/Time 11/11/11 1300 | 38) Date/Time 11/11/11 1300 | 39) Date/Time 11/11/11 1300 | 40) Date/Time 11/11/11 1300 | 41) Date/Time 11/11/11 1300 | 42) Date/Time 11/11/11 1300 | 43) Date/Time 11/11/11 1300 | 44) Date/Time 11/11/11 1300 | 45) Date/Time 11/11/11 1300 | 46) Date/Time 11/11/11 1300 | 47) Date/Time 11/11/11 1300 | 48) Date/Time 11/11/11 1300 | 49) Date/Time 11/11/11 1300 | 50) Date/Time 11/11/11 1300 | 51) Date/Time 11/11/11 1300 | 52) Date/Time 11/11/11 1300 | 53) Date/Time 11/11/11 1300 | 54) Date/Time 11/11/11 1300 | 55) Date/Time 11/11/11 1300 | 56) Date/Time 11/11/11 1300 | 57) Date/Time 11/11/11 1300 | 58) Date/Time 11/11/11 1300 | 59) Date/Time 11/11/11 1300 | 60) Date/Time 11/11/11 1300 | 61) Date/Time 11/11/11 1300 | 62) Date/Time 11/11/11 1300 | 63) Date/Time 11/11/11 1300 | 64) Date/Time 11/11/11 1300 | 65) Date/Time 11/11/11 1300 | 66) Date/Time 11/11/11 1300 | 67) Date/Time 11/11/11 1300 | 68) Date/Time 11/11/11 1300 | 69) Date/Time 11/11/11 1300 | 70) Date/Time 11/11/11 1300 | 71) Date/Time 11/11/11 1300 | 72) Date/Time 11/11/11 1300 | 73) Date/Time 11/11/11 1300 | 74) Date/Time 11/11/11 1300 | 75) Date/Time 11/11/11 1300 | 76) Date/Time 11/11/11 1300 | 77) Date/Time 11/11/11 1300 | 78) Date/Time 11/11/11 1300 | 79) Date/Time 11/11/11 1300 | 80) Date/Time 11/11/11 1300 | 81) Date/Time 11/11/11 1300 | 82) Date/Time 11/11/11 1300 | 83) Date/Time 11/11/11 1300 | 84) Date/Time 11/11/11 1300 | 85) Date/Time 11/11/11 1300 | 86) Date/Time 11/11/11 1300 | 87) Date/Time 11/11/11 1300 | 88) Date/Time 11/11/11 1300 | 89) Date/Time 11/11/11 1300 | 90) Date/Time 11/11/11 1300 | 91) Date/Time 11/11/11 1300 | 92) Date/Time 11/11/11 1300 | 93) Date/Time 11/11/11 1300 | 94) Date/Time 11/11/11 1300 | 95) Date/Time 11/11/11 1300 | 96) Date/Time 11/11/11 1300 | 97) Date/Time 11/11/11 1300 | 98) Date/Time 11/11/11 1300 | 99) Date/Time 11/11/11 1300 | 100) Date/Time 11/11/11 1300 |
|---------------------------|--------------------------|-----------------------------------|-------------------------------|-------------------------------|-------------------------------|-------------------------------|-------------------------------|-------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|---------------------------------|

Customer, IMPORTANT!
Please indicate desired turnaround.

| | | | | | |
|-------------------------|---------|--------|-------|-------|---------------------|
| 22 Requested Turnaround | 14 Days | 7 Days | 48 Hr | Other | Add Cost Will Apply |
|-------------------------|---------|--------|-------|-------|---------------------|

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|-------------|
| 1) Lab ID | 2) Lab ID | 3) Lab ID | 4) Lab ID | 5) Lab ID | 6) Lab ID | 7) Lab ID | 8) Lab ID | 9) Lab ID | 10) Lab ID | 11) Lab ID | 12) Lab ID | 13) Lab ID | 14) Lab ID | 15) Lab ID | 16) Lab ID | 17) Lab ID | 18) Lab ID | 19) Lab ID | 20) Lab ID | 21) Lab ID | 22) Lab ID | 23) Lab ID | 24) Lab ID | 25) Lab ID | 26) Lab ID | 27) Lab ID | 28) Lab ID | 29) Lab ID | 30) Lab ID | 31) Lab ID | 32) Lab ID | 33) Lab ID | 34) Lab ID | 35) Lab ID | 36) Lab ID | 37) Lab ID | 38) Lab ID | 39) Lab ID | 40) Lab ID | 41) Lab ID | 42) Lab ID | 43) Lab ID | 44) Lab ID | 45) Lab ID | 46) Lab ID | 47) Lab ID | 48) Lab ID | 49) Lab ID | 50) Lab ID | 51) Lab ID | 52) Lab ID | 53) Lab ID | 54) Lab ID | 55) Lab ID | 56) Lab ID | 57) Lab ID | 58) Lab ID | 59) Lab ID | 60) Lab ID | 61) Lab ID | 62) Lab ID | 63) Lab ID | 64) Lab ID | 65) Lab ID | 66) Lab ID | 67) Lab ID | 68) Lab ID | 69) Lab ID | 70) Lab ID | 71) Lab ID | 72) Lab ID | 73) Lab ID | 74) Lab ID | 75) Lab ID | 76) Lab ID | 77) Lab ID | 78) Lab ID | 79) Lab ID | 80) Lab ID | 81) Lab ID | 82) Lab ID | 83) Lab ID | 84) Lab ID | 85) Lab ID | 86) Lab ID | 87) Lab ID | 88) Lab ID | 89) Lab ID | 90) Lab ID | 91) Lab ID | 92) Lab ID | 93) Lab ID | 94) Lab ID | 95) Lab ID | 96) Lab ID | 97) Lab ID | 98) Lab ID | 99) Lab ID | 100) Lab ID |
|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|-------------|

19 Page 1 of 2
DISTRIBUTION
ORIGINAL TO LAB,
COPY TO CLIENT

11-15-11

