delid by 15 10/11/16

CETIFICATION

SDG No:

JC27318

Laboratory:

Accutest, New Jersey

Site:

BMS, Building 5 Area, PR

Matrix:

Groundwater

Humacao, PR

SUMMARY:

Groundwater samples (Table 1) were collected on the BMSMC facility – Building 5 Area. The BMSMC facility is located in Humacao, PR. Samples were taken September 06-08, 2016 and were analyzed in Accutest Laboratory of Dayton, New Jersey for the ABN TCL Special List (1,4-Dioxane and Naphthalene were analyzed following the SIM technique); TCL pesticides list; and for low molecular weight alcohols (LMWA) the results were reported under SDG No.: JC27318. Results were validated using the latest validation guidelines (July, 2015) of the EPA Hazardous Waste Support Section. The analyses performed are shown in Table 1. Individual data review worksheets are enclosed for each target analyte group. The data sample organic data samples summary form shows for analytes results that were qualified.

In summary the results are valid and can be used for decision taking purposes.

Table 1. Samples analyzed and analysis performed

SAMPLE ID	SAMPLE DESCRIPTION	MATRIX	ANALYSIS PERFORMED
JC27318-1	S-30	Groundwater	ABN TCL special list; 1,-4-dioxane and Naphthalene (SIM); Pesticides TCL list; LMWA
JC27318-2	S-34	Groundwater	ABN TCL special list; 1,-4-dioxane and Naphthalene (SIM); Pesticides TCL list; LMWA
JC27318-3	S-33	Groundwater	ABN TCL special list; 1,-4-dioxane and Naphthalene (SIM); Pesticides TCL list; LMWA
JC27318-4	S-37	Groundwater	ABN TCL special list; 1,-4-dioxane and Naphthalene (SIM); LMWA
JC27318-5	S-36	Groundwater	ABN TCL special list; 1,-4-dioxane and Naphthalene (SIM); Pesticides TCL list; LMWA
JC27318-6	S-40D	Groundwater	ABN TCL special list; 1,-4-dioxane and Naphthalene (SIM); Pesticides TCL list; LMWA
JC27318-7	S-40S	Groundwater	ABN TCL special list; 1,-4-dioxane and Naphthalene (SIM); Pesticides TCL list; LMWA

Reviewer Name:

Rafael Infante

Chemist License 1888

Signature:

Date:

September 30, 2016

Report of Analysis

Client Sample ID: S-30

Lab Sample ID: JC27318-1

Matrix: Method:

Project:

AQ - Ground Water

SW846 8270D SW846 3510C

BMSMC, Building 5 Area, PR

Date Sampled: 09/06/16

Date Received: 09/09/16

Percent Solids: n/a

Q

	File ID	DF	Analyzed	Ву	Prep Date	Prep Batch	Analytical Batch
Run #1	P107510.D	1	09/13/16	RL	09/12/16	OP96966	EP4759
Run #2	P107694.D	50	09/22/16	AD	09/12/16	OP96966	EP4772

	Initial Volume	Final Volume
Run #1	950 ml	1.0 ml
Run #2	950 ml	1.0 ml

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Unit
95-57-8	2-Chlorophenol	ND	5.3	0.86	ug/l
59-50-7	4-Chloro-3-methyl phenol	ND	5.3	0.94	ug/l
120-83-2	2,4-Dichlorophenol	ND	2.1	1.3	ug/I
105-67-9	2,4-Dimethylphenol	ND	5.3	2.6	ug/l
51-28-5	2,4-Dinitrophenol	ND	11	1.6	ug/l
534-52-1	4,6-Dinitro-o-cresol	ND	5.3	1.4	ug/l
95-48-7	2-Methylphenol	ND	2.1	0.93	ug/l
	3&4-Methylphenol	ND	2.1	0.93	ug/l
88-75-5	2-Nitrophenol	ND	5.3	1.0	ug/l
100-02-7	4-Nitrophenol	ND	11	1.2	ug/l
87-86-5	Pentachlorophenol	ND	4.2	1.5	ug/l
108-95-2	Phenol	ND	2.1	0.41	ug/l
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.3	1.5	ug/l
95-95-4	2,4,5-Trichlorophenol	ND	5.3	1.4	ug/l
88-06-2	2,4,6-Trichlorophenol	ND	5.3	0.97	ug/l
83-32-9	Acenaphthene	ND	1.1	0.20	ug/l
208-96-8	Acenaphthylene	ND	1.1	0.14	ug/l
98-86-2	Acetophenone	ND	2.1	0.22	ug/I
120-12-7	Anthracene	ND	1.1	0.22	ug/I
1912-24-9	Atrazine	ND	2.1	0.47	ug/l
100-52-7	Benzaldehyde	ND	5.3	0.30	ug/l
56-55-3	Benzo(a)anthracene	ND	1.1	0.21	ug/l
50-32-8	Benzo(a)pyrene	ND	1.1	0.22	ug/l
205-99-2	Benzo(b)fluoranthene	ND	1.1	0.22	ug/l
191-24-2	Benzo(g,h,i)perylene	ND	1.1	0.36	ug/l
207-08-9	Benzo(k)fluoranthene	ND	1.1	0.22	ug/l
101-55-3	4-Bromophenyl phenyl ether	ND	2.1	0.43	ug/l
85-68-7	Butyl benzyl phthalate	ND	2.1	0.48	ug/l
92-52-4	1,1'-Biphenyl	ND	1.1	0.22	ug/l
91-58-7	2-Chloronaphthalene	ND	2.1	0.25	ug/l
106-47-8	4-Chloroaniline	ND	5.3	0.36	ug/l
86-74-8	Carbazole	ND	1.1	0.24	ug/l
					-



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

N = Indicates presumptive evidence of a compound

10 of 1221

Client Sample ID: S-30 Lab Sample ID: JC27318-1 Date Sampled: 09/06/16 Matrix: AQ - Ground Water Date Received: 09/09/16 Method: SW846 8270D SW846 3510C Percent Solids: n/a

Project: BMSMC, Building 5 Area, PR

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	2.1	0.68	ug/l	
218-01-9	Chrysene	ND	1.1	0.19	ug/l	
111-91-1	bis(2-Chloroethoxy)methane	ND	2.1	0.29	ug/l	
111-44-4	bis(2-Chloroethyl)ether	ND	2.1	0.26	ug/l	
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.1	0.42	ug/l	
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.1	0.39	ug/l	
121-14-2	2,4-Dinitrotoluene	ND	1.1	0.58	ug/l	
606-20-2	2,6-Dinitrotoluene	ND	1.1	0.50	ug/l	
91-94-1	3,3'-Dichlorobenzidine	ND	2.1	0.53	ug/l	
123-91-1	1,4-Dioxane	1330 a	53	35	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	1.1	0.35	ug/l	
132-64-9	Dibenzofuran	ND	5.3	0.23	ug/l	
84-74-2	Di-n-butyl phthalate	ND	2.1	0.52	ug/l	
117-84-0	Di-n-octyl phthalate	ND	2.1	0.25	ug/l	
84-66-2	Diethyl phthalate	ND	2.1	0.28	ug/l	
131-11-3	Dimethyl phthalate	ND	2.1	0.23	ug/l	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.1	1.7	ug/l	
206-44-0	Fluoranthene	ND	1.1	0.18	ug/l	
86-73-7	Fluorene	ND	1.1	0.18	ug/l	
118-74-1	Hexachlorobenzene	ND	1.1	0.34	ug/l	
87-68-3	Hexachlorobutadiene	ND	1.1	0.52	ug/l	
77-47-4	Hexachlorocyclopentadiene	ND	11	2.9	บg/1	
67-72-1	Hexachloroethane	ND	2.1	0.41	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.1	0.35	ug/l	
78-59-1	Isophorone	ND	2.1	0.29	ug/[
90-12-0	1-Methylnaphthalene	ND	1.1	0.28	ug/l	
91-57-6	2-Methylnaphthalene	ND	1.1	0.22	ug/l	
88-74-4	2-Nitroaniline	ND	5.3	0.29	ug/l	
99-09-2	3-Nitroaniline	ND	5.3	0.41	ug/l	
100-01-6	4-Nitroaniline	ND	5.3	0.46	ug/l	
98-95-3	Nitrobenzene	ND	2.1	0.68	ug/l	17
621-64-7	N-Nitroso-di-n-propylamine	ND	2.1	0.51	ug/l	
86-30-6	N-Nitrosodiphenylamine	ND	5.3	0.23	ug/l	
85-01-8	Phenanthrene	ND	1.1	0.18	ug/l	- /
129-00-0	Pyrene	ND	1.1	0.23	ug/l	
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.1	0.39	ug/l	_ \
CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limi	ts	

ND = Not detected

367-12-4

MDL = Method Detection Limit

59%

0% b

RL = Reporting Limit

E = Indicates value exceeds calibration range

2-Fluorophenol

J = Indicates an estimated value

14-88%

B = Indicates analyte found in associated method blank

N = Indicates presumptive evidence of a compound





fact Infante Méndez 1C # 1881

Page 3 of 3

Client Sample ID: S-30

Lab Sample ID: JC27318-1

Matrix: Method:

Project:

AQ - Ground Water

SW846 8270D SW846 3510C BMSMC, Building 5 Area, PR Date Sampled: 09/06/16

Date Received: 09/09/16

Percent Solids: n/a

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# I	Run# 2	Limits
4165-62-2	Phenol-d5 2,4,6-Tribromophenol Nitrobenzene-d5 2-Fluorobiphenyl Terphenyl-d14	38%	0% b	10-110%
118-79-6		100%	0% b	39-149%
4165-60-0		98%	0% b	32-128%
321-60-8		97%	0% b	35-119%
1718-51-0		72%	0% b	10-126%

(a) Result is from Run# 2

(b) Outside control limits due to dilution.





E = Indicates value exceeds calibration range

B = Indicates analyte found in associated method blank N = Indicates presumptive evidence of a compound

Project:

Run #1

SGS Accutest LabLink@928311 09:27 28-Sep-2016

Report of Analysis

Page 1 of 1

Client Sample ID:	S-30
Lab Sample ID:	JC27318-1
Matrix:	AQ - Grou
Method:	SW846 821

950 ml

ınd Water SW846 8270D BY SIM SW846 3510C Date Sampled: 09/06/16 Date Received: 09/09/16

BMSMC, Building 5 Area, PR

1.0 ml

Initial Volume Final Volume

Percent Solids: n/a

File ID DF Analyzed By Prep Date Prep Batch Analytical B Run #1 3P55793.D 1 09/16/16 SG 09/12/16 OP96966A E3P2564 Run #2	
--	--

Run #2						
CAS No.	Compound	Result	RL	MDL	Units	Q
91-20-3	Naphthalene	ND	0.11	0.031	ug/l	
CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Lim	its	
4165-60-0	Nitrobenzene-d5	67%		24-1	25%	
321-60-8	2-Fluorobiphenyl	50%		19-1	27%	
1718-51-0	Terphenyl-d14	46%		10-1	19%	



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank N = Indicates presumptive evidence of a compound

Report of Analysis

By

DFT

Page 1 of 1

Analytical Batch

GGH5498

Client Sample ID: S-30

Lab Sample ID:

JC27318-1

Analyzed

09/22/16

Date Sampled:

09/06/16

Matrix: Method: AO - Ground Water SW846-8015C (DAI)

DF

1

Date Received:

09/09/16

Project:

Run #1 a

64-17-5

78-83-1

67-63-0

71-23-8

71-36-3

78-92-2

67-56-1

CAS No.

111-27-3

111-27-3

BMSMC, Building 5 Area, PR

Percent Solids: n/a

n/a

Q

Prep Batch

Run #2

Ethanol

Methanol

Hexanol

Hexanol

Isobutyl Alcohol

n-Propyl Alcohol

n-Butyl Alcohol

File ID

GH106564.D

Low Molecular Alcohol List CAS No. Compound Result RL

> ND 200 ND 100 100

> > 122%

119%

Isopropyl Alcohol ND ND ND ND

sec-Butyl Alcohol ND Surrogate Recoveries Run#1

Run# 2

100

100

100

200

Limits 56-145% 56-145%

Prep Date

MDL

55

36

68

43

87

66

71

Units

ug/l

ug/l

ug/L

ug/l

ug/l

ug/l

ug/l

(a) Sample originally analyzed within the holding time.



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

Report of Analysis

Page 1 of 1

Client Sample ID:

Lab Sample ID: JC27318-1

Matrix:

AO - Ground Water

Method: Project:

SW846 8081B SW846 3510C

BMSMC, Building 5 Area, PR

Date Sampled: Date Received:

0

09/06/16 09/09/16

Percent Solids:

File ID DF Analyzed By Prep Date Prep Batch **Analytical Batch** 1G127356.D Run #1 1 09/19/16 DS 09/13/16 OP96986 G1G4087

Run #2

Run #1

Run #2

Initial Volume

Final Volume

1000 ml

10.0 ml

Pesticide TCL List

CAS No. Compound Result RL MDL Units 309-00-2 Aldrin ND 0.010 0.0060ug/l 319-84-6 alpha-BHC ND 0.010 0.0060ug/l 319-85-7 beta-BHC ND 0.010 0.0057 ug/l 319-86-8 delta-BHC ND 0.010 0.0046 ug/I 58-89-9 gamma-BHC (Lindane) ND 0.010 0.0028ug/l alpha-Chlordane 5103-71-9 ND 0.010 0.0046ug/l 5103-74-2 gamma-Chlordane ND 0.010 0.0046 ug/l 60-57-1 Dieldrin ND 0.010 0.0036ug/i 72-54-8 4,4'-DDD ND 0.010 0.0038ug/l 4,4'-DDE 72-55-9 ND 0.010 0.0062 ug/I 50-29-3 4,4'-DDT ug/l ND 0.010 0.005072-20-8 Endrin ND 0.010 0.0050ug/l Endosulfan sulfate 1031-07-8 ND 0.0100.0053ug/l 7421-93-4 Endrin aldehyde ND 0.010 0.0051ug/l Endrin ketone 53494-70-5 ND 0.0100.0051ug/l Endosulfan-I 959-98-8 ND 0.010 0.0050ug/l Endosulfan-II ug/l 33213-65-9 ND 0.010 0.0043 76-44-8 Heptachlor ND 0.0100.0038ug/l 1024-57-3 Heptachlor epoxide ND 0.0100.0065ug/l 72-43-5 Methoxychlor ND 0.020 0.0057 ug/l 8001-35-2 Toxaphene ND 0.25 0.18 ug/l CAS No. Surrogate Recoveries Run#1 Run# 2 Limits 877-09-8 Tetrachloro-m-xylene 314% a 26-132% 877-09-8 Tetrachloro-m-xylene 303% a 26-132% 2051-24-3 Decachlorobiphenyl 234% a 10-118% 2051-24-3 Decachlorobiphenyl 219% a 10-118%

(a) High percent recoveries and no positive found in the sample.



ND = Not detected RL = Reporting Limit

MDL = Method Detection Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank



Report of Analysis

Page 1 of 3

		Samp			S-34
T -1.	a.	-1-	TT	1	1027

JC27318-2 Lab Sample ID:

Matrix: Method: AQ - Ground Water

SW846 8270D SW846 3510C

Date Sampled: Date Received:

09/07/16 09/09/16

Q

Percent Solids: n/a

Project:

BMSMC, Building 5 Area, PR

File ID DF Analyzed Ву Prep Date Prep Batch **Analytical Batch** Run #1 6P29814.D 1 09/14/16 AC 09/13/16 OP96981 E6P1386

Run #2

Initial Volume

1000 ml

Final Volume 1.0 ml

Run #1 Run #2

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Unit
95-57-8	2-Chlorophenol	ND	5.0	0.82	ug/l
59-50-7	4-Chloro-3-methyl phenol	ND	5.0	0.89	ug/l
120-83-2	2,4-Dichlorophenol	ND	2.0	1.3	ug/l
105-67-9	2,4-Dimethylphenol	ND	5.0	2.4	ug/l
51-28-5	2,4-Dinitrophenol	ND	10	1.6	ug/l
534-52-1	4,6-Dinitro-o-cresol a	ND	5.0	1.3	ug/l
95-48-7	2-Methylphenol	ND	2.0	0.89	ug/l
	3&4-Methylphenol	ND	2.0	0.88	ug/l
88-75-5	2-Nitrophenol	ND	5.0	0.96	ug/l
100-02-7	4-Nitrophenol	ND	10	1.2	ug/l
87-86-5	Pentachlorophenol	ND	4.0	1.4	ug/l
108-95-2	Phenol	ND	2.0	0.39	ug/l
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.0	1.5	ug/l
95-95-4	2,4,5-Trichlorophenol	ND	5.0	1.3	ug/l
88-06-2	2,4,6-Trichlorophenol	ND	5.0	0.92	ug/l
83-32-9	Acenaphthene	ND	1.0	0.19	ug/l
208-96-8	Acenaphthylene	ND	1.0	0.14	ug/l
98-86-2	Acetophenone	ND	2.0	0.21	ug/l
120-12-7	Anthracene	ND	1.0	0.21	ug/l
1912-24-9	Atrazine	ND	2.0	0.45	ug/l
100-52-7	Benzaldehyde	ND	5.0	0.29	ug/l
56-55-3	Benzo(a)anthracene	ND	1.0	0.20	ug/l
50-32-8	Вепго(а)ругепе	ND	1.0	0.21	ug/l
205-99-2	Benzo(b)fluoranthene	ND	1.0	0.21	ug/l
191-24-2	Benzo(g,h,i)perylene	ND	1.0	0.34	ug/l
207-08-9	Benzo(k)fluoranthene	ND	1.0	0.21	ug/l
101-55-3	4-Bromophenyl phenyl ether	ND	2.0	0.40	ug/l
85-68-7	Butyl benzyl phthalate	ND	2.0	0.46	ug/l
92-52-4	1,1'-Biphenyl	ND	1.0	0.21	ug/l
91-58-7	2-Chloronaphthalene	ND	2.0	0.24	ug/l
106-47-8	4-Chloroaniline	ND	5.0	0.34	ug/i
86-74-8	Carbazole	ND	1.0	0.23	ug/l



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

N = Indicates presumptive evidence of a compound

Page 2 of 3

Report of Analysis

Client Sample ID: S-34 Lab Sample ID: JC27318-2 09/07/16 Date Sampled: Matrix: AQ - Ground Water Date Received: 09/09/16 Method: SW846 8270D SW846 3510C Percent Solids: n/a

Project: BMSMC, Building 5 Area, PR

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	2.0	0.65	ug/l	
218-01-9	Chrysene	ND	1.0	0.18	ug/l	
111-91-1	bis(2-Chloroethoxy)methane	ND	2.0	0.28	ug/l	
111-44-4	bis(2-Chloroethyl)ether	ND	2.0	0.25	ug/l	
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.0	0.40	ug/l	
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.0	0.37	ug/l	
121-14-2	2,4-Dinitrotoluene	ND	1.0	0.55	ug/l	
606-20-2	2,6-Dinitrotoluene	ND	1.0	0.48	ug/I	
91-94-1	3,3'-Dichlorobenzidine	ND	2.0	0.51	ug/l	
123-91-1	1,4-Dioxane	12.6	1.0	0.66	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	1.0	0.33	ug/l	
132-64-9	Dibenzofuran	ND	5.0	0.22	ug/l	
84-74-2	Di-n-butyl phthalate	ND	2.0	0.50	ug/l	
117-84-0	Di-n-octyl phthalate	ND	2.0	0.23	ug/l	
84-66-2	Diethyl phthalate	ND	2.0	0.26	ug/l	
131-11-3	Dimethyl phthalate	ND	2.0	0.22	ug/l	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.0	1.7	ug/l	
206-44-0	Fluoranthene	ND	1.0	0.17	ug/l	
86-73-7	Fluorene	ND	1.0	0.17	ug/l	
118-74-1	Hexachlorobenzene	ND	1.0	0.33	ug/l	
87-68-3	Hexachlorobutadiene	ND	1.0	0.49	ug/l	
77-47-4	Hexachlorocyclopentadiene	ND	10	2.8	ug/l	
67-72-1	Hexachloroethane	ND	2.0	0.39	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.0	0.33	ug/l	
78-59-1	Isophorone	ND	2.0	0.28	ug/l	
90-12-0	1-Methylnaphthalene	ND	1.0	0.26	ug/l	
91-57-6	2-Methylnaphthalene	ND	1.0	0.21	ug/l	
88-74-4	2-Nitroaniline	ND	5.0	0.28	ug/l	
99-09-2	3-Nitroaniline	ND	5.0	0.39	ug/l	
100-01-6	4-Nitroaniline	ND	5.0	0.44	ug/l	SOCHOO DE
98-95-3	Nitrobenzene	ND	2.0	0.64	ug/l	OF STATE OF PAR
621-64-7	N-Nitroso-di-n-propylamine	ND	2.0	0.48	ug/l	3
86-30-6	N-Nitrosodiphenylamine	ND	5.0	0.22	ug/l	2/ Unfael Infante
85-01-8	Phenanthrene	ND	1.0	0.18	ug/l	Mendez 8
129-00-0	Pyrene	ND	1.0	0.22	ug/l	\ \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.0	0.37	ug/l	
CAS No.	Surrogate Recoveries	Run# I	Run# 2	Lim	its	CIMCO LICENCIADO
367-12-4	2-Fluorophenol	50%		14-8	8%	



MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

 $B \,=\, Indicates \,\, analyte \,\, found \,\, in \,\, associated \,\, method \,\, blank$

N = Indicates presumptive evidence of a compound

Client Sample ID: S-34

Lab Sample ID: JC27318-2

Matrix: Method:

Project:

AQ - Ground Water

SW846 8270D SW846 3510C BMSMC, Building 5 Area, PR

Date Sampled: 09/07/16 Date Received: 09/09/16

Percent Solids: n/a

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-62-2 118-79-6 4165-60-0 321-60-8 1718-51-0	Phenol-d5 2,4,6-Tribromophenol Nitrobenzene-d5 2-Fluorobiphenyl Terphenyl-d14	35% 121% 81% 92% 86%		10-110% 39-149% 32-128% 35-119% 10-126%

(a) This compound in BS is outside in house QC limits bias high.



E = Indicates value exceeds calibration range

B = Indicates analyte found in associated method blank

Report of Analysis

By

IJ

Prep Date

09/13/16

Page 1 of 1

Client Sample ID: S-34

Lab Sample ID: JC27318-2

File ID

3M64190.D

Matrix: Method: AQ - Ground Water

DF

1

SW846 8270D BY SIM SW846 3510C

Date Sampled:

09/07/16 Date Received: 09/09/16

Percent Solids:

Project:

BMSMC, Building 5 Area, PR

Prep Batch **Analytical Batch** OP96981A E3M3051

Run #1 Run #2

Initial Volume Final Volume Run #1 1000 ml 1.0 ml

Run #2

CAS No. Compound Result RL MDL Units Q

Analyzed

09/14/16

91-20-3 Naphthalene 0.10 ND 0.029 ug/l

CAS No. Surrogate Recoveries Run# 2 Run#1 Limits

4165-60-0 Nitrobenzene-d5 77% 24-125% 321-60-8 2-Fluorobiphenyl 69% 19-127% 1718-51-0 Terphenyl-d14 62% 10-119%



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

Report of Analysis

Page 1 of 1

Client Sample ID: S-34

Lab Sample ID: JC27318-2

Matrix: Method:

Project:

AQ - Ground Water

SW846-8015C (DAI)

BMSMC, Building 5 Area, PR

Date Sampled: Date Received:

09/07/16 09/09/16

Percent Solids: n/a

Run #1 a	File ID GH106565.D	DF 1	Analyzed 09/22/16	By DFT	Prep Date n/a	Prep Batch	Analytical Batch GGH5498
Run #2 b	GH106481.D	1	09/19/16	EC	n/a	n/a	GGH5494

Low Molecular Alcohol List

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5 78-83-1 67-63-0 71-23-8 71-36-3	Ethanol Isobutyl Alcohol Isopropyl Alcohol n-Propyl Alcohol n-Butyl Alcohol	ND ND ND ND ND	200 100 100 100 100	55 36 68 43 87	ug/l ug/l ug/l ug/l ug/l	
78-92-2 67-56-1	sec-Butyl Alcohol Methanol	ND ND	100 200	66 71	ug/l ug/l	
CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Lim	its	
111-27-3 111-27-3	Hexanol Hexanol	114% 113%	88%		45% 45%	

- (a) Sample originally analyzed within the holding time.
- (b) Confirmation run.



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

Report of Analysis

Page 1 of 1

	CIIC					
-1	Lah	S	mr	حا	IT	1+

S-34 JC27318-2

Matrix:

AQ - Ground Water

Method:

SW846 8081B SW846 3510C

Date Sampled: Date Received:

09/07/16 09/09/16

Percent Solids: n/a

Project: BMSMC, Building 5 Area, PR

Run #1

File ID DF 1G127357.D 1

Analyzed 09/19/16

By Prep Date DS 09/13/16

Prep Batch OP96986

Q

Analytical Batch G1G4087

Run #2

Initial Volume 990 ml

Final Volume

10.0 ml

Run #1 Run #2

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units
309-00-2	Aldrin	ND	0.010	0.0061	ug/l
319-84-6	alpha-BHC	ND	0.010	0.0061	ug/l
319-85-7	beta-BHC	ND	0.010	0.0057	ug/l
319-86-8	delta-BHC	ND	0.010	0.0046	ug/l
58-89-9	gamma-BHC (Lindane)	ND	0.010	0.0028	ug/l
5103-71-9	alpha-Chlordane	ND	0.010	0.0047	ug/l
5103-74-2	gamma-Chlordane	ND	0.010	0.0046	ug/l
60-57-1	Dieldrin	ND	0.010	0.0036	ug/l
72-54-8	4,4'-DDD	ND	0.010	0.0038	ug/l
72-55-9	4,4'-DDE	ND	0.010	0.0062	ug/l
50-29-3	4,4'-DDT	ND	0.010	0.0050	ug/l
72-20-8	Endrin	ND	0.010	0.0051	ug/l
1031-07-8	Endosulfan sulfate	ND	0.010	0.0053	ug/l
7421-93-4	Endrin aldehyde	ND	0.010	0.0052	ug/l
53494-70-5	Endrin ketone	ND	0.010	0.0051	ug/l
959-98-8	Endosulfan-I	ND	0.010	0.0050	ug/l
33213-65-9	Endosulfan-II	ND	0.010	0.0043	ug/l
76-44-8	Heptachlor	ND	0.010	0.0038	ug/l
1024-57-3	Heptachlor epoxide	ND	0.010	0.0066	ug/l
72-43-5	Methoxychlor	ND	0.020	0.0057	ug/l
8001-35-2	Toxaphene	ND	0.25	0.19	ug/l
CAS No.	Surrogate Recoveries	Run#1	Run# 2	Limi	ts
877-09-8	Tetrachloro-m-xylene	200% a		26-13	32%
877-09-8	Tetrachloro-m-xylene	153% a		26-13	32%
2051-24-3	Decachlorobiphenyl	130% a		10-11	18%
2051-24-3	Decachlorobiphenyl	98%		10-11	18%

fael Infante Méndez

ND = Not detected

MDL = Method Detection Limit

J = Indicates an estimated value B = Indicates analyte found in associated method blank

RL = Reporting Limit

N = Indicates presumptive evidence of a compound

E = Indicates value exceeds calibration range

⁽a) High percent recoveries and no positive found in the sample.

Report of Analysis

By

AC

Prep Date

09/13/16

Page 1 of 3

Client Sample ID:

Lab Sample ID: JC27318-3

File ID

6P29815.D

Matrix:

AQ - Ground Water

SW846 8270D SW846 3510C

Date Sampled: Date Received:

Q

09/07/16 09/09/16

Method: Project:

Analyzed

09/14/16

Percent Solids: n/a

BMSMC, Building 5 Area, PR

Prep Batch **Analytical Batch** OP96981 E6P1386

Run #1

Run #2

Final Volume **Initial Volume**

DF

1

Run #1

1000 ml

1.0 ml

Run #2

ABN TCL Special List

		-			
CAS No.	Compound	Result	RL	MDL	Unite
95-57-8	2-Chlorophenol	ND	5.0	0.82	ug/l
59-50-7	4-Chloro-3-methyl phenol	ND	5.0	0.89	ug/l
120-83-2	2,4-Dichlorophenol	ND	2.0	1.3	ug/l
105-67-9	2,4-Dimethylphenol	ND	5.0	2.4	ug/l
51-28-5	2,4-Dinitrophenol	ND	10	1.6	ug/l
534-52-1	4,6-Dinitro-o-cresol a	ND	5.0	1.3	ug/l
95-48-7	2-Methylphenol	ND	2.0	0.89	ug/l
	3&4-Methylphenol	ND	2.0	0.88	ug/l
88-75-5	2-Nitrophenol	ND	5.0	0.96	ug/l
100-02-7	4-Nitrophenol	ND	10	1.2	ug/l
87-86-5	Pentachlorophenol	ND	4.0	1.4	ug/l
108-95-2	Phenol	ND	2.0	0.39	ug/l
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.0	1.5	ug/l
95-95-4	2,4,5-Trichlorophenol	ND	5.0	1.3	ug/l
88-06-2	2,4,6-Trichlorophenol	ND	5.0	0.92	ug/l
83-32-9	Acenaphthene	ND	1.0	0.19	ug/l
208-96-8	Acenaphthylene	ND	1.0	0.14	ug/l
98-86-2	Acetophenone	ND	2.0	0.21	ug/I
120-12-7	Anthracene	1.4	1.0	0.21	ug/l
1912-24-9	Atrazine	ND	2.0	0.45	ug/l
100-52-7	Benzaldehyde	ND	5.0	0.29	ug/I
56-55-3	Benzo(a)anthracene	ND	1.0	0.20	ug/l
50-32-8	Benzo(a)pyrene	ND	1.0	0.21	ug/l
205-99-2	Benzo(b) fluoranthene	ND	1.0	0.21	ug/l
191-24-2	Benzo(g,h,i)perylene	ND	1.0	0.34	ug/l
207-08-9	Benzo(k)fluoranthene	ND	1.0	0.21	ug/l
101-55-3	4-Bromophenyl phenyl ether	ND	2.0	0.40	ug/l
85-68-7	Butyl benzyl phthalate	ND	2.0	0.46	ug/l
92-52-4	1,1'-Biphenyl	ND	1.0	0.21	ug/l
91-58-7	2-Chloronaphthalene	ND	2.0	0.24	ug/l
106-47-8	4-Chloroaniline	ND	5.0	0.34	ug/l
86-74-8	Carbazole	ND	1.0	0.23	ug/l



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

N = Indicates presumptive evidence of a compound

22 of 1221

Client Sample ID: Lab Sample ID:

JC27318-3

Date Sampled: 09/07/16 Date Received: 09/09/16

Matrix: Method: AQ - Ground Water SW846 8270D SW846 3510C


Percent Solids: n/a

Project:

BMSMC, Building 5 Area, PR

ABN TCL Special List

ABN TCL	Special List					
CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	2.0	0.65	ug/l	
218-01-9	Chrysene	ND	1.0	0.18	ug/l	
111-91-1	bis(2-Chloroethoxy)methane	ND	2.0	0.28	ug/l	
111-44-4	bis(2-Chloroethyl)ether	ND	2.0	0.25	ug/l	
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.0	0.40	ug/l	
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.0	0.37	ug/l	
121-14-2	2,4-Dinitrotoluene	ND	1.0	0.55	ug/I	
606-20-2	2,6-Dinitrotoluene	ND	1.0	0.48	ug/l	
91-94-1	3,3'-Dichlorobenzidine	ND	2.0	0.51	ug/l	
123-91-1	1,4-Dioxane	18.2	1.0	0.66	ug/I	
53-70-3	Dibenzo(a,h)anthracene	ND	1.0	0.33	ug/l	
132-64-9	Dibenzofuran	ND	5.0	0.22	ug/l	
84-74-2	Di-n-butyl phthalate	ND	2.0	0.50	ug/l	
117-84-0	Di-n-octyl phthalate	ND	2.0	0.23	ug/l	
84-66-2	Diethyl phthalate	ND	2.0	0.26	ug/l	
131-11-3	Dimethyl phthalate	ND	2.0	0.22	ug/l	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.0	1.7	ug/l	
206-44-0	Fluoranthene	ND	1.0	0.17	ug/l	
86-73-7	Fluorene	ND	1.0	0.17	ug/l	
118-74-1	Hexachlorobenzene	ND	1.0	0.33	ug/l	
87-68-3	Hexachlorobutadiene	ND	1.0	0.49	ug/l	
77-47-4	Hexachlorocyclopentadiene	ND	10	2.8	ug/l	
67-72-1	Hexachloroethane	ND	2.0	0.39	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.0	0.33	ug/J	
78-59-1	Isophorone	ND	2.0	0.28	ug/l	
90-12-0	1-Methylnaphthalene	ND	1.0	0.26	ug/I	
91-57-6	2-Methylnaphthalene	ND	1.0	0.21	ug/i	
88-74-4	2-Nitroaniline	ND	5.0	0.28	ug/l	
99-09-2	3-Nitroaniline	ND	5.0	0.39	ug/i	
100-01-6	4-Nitroaniline	ND	5.0	0.44	ug/l	SE BOCHOO OF PIE
98-95-3	Nitrobenzene	ND	2.0	0.64	ug/l	S POUNDO OF S
621-64-7	N-Nitroso-di-n-propylamine	ND	2.0	0.48	ug/l	
86-30-6	N-Nitrosodiphenylamine	ND	5.0	0.22	ug/l	tuel Infante
85-01-8	Phenanthrene	ND	1.0	0.18	ug/l	Méndez 8
129-00-0	Ругепе	ND	1.0	0.22	ug/l	1C 1888 S
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.0	0.37	ug/l	(Sec.) 150
CAS No.	Surrogate Recoveries	Run#1	Run# 2	Lim	its	CO LICENCING
367-12-4	2-Fluorophenol	60%		14-8	8%	

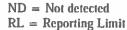

MDL = Method Detection Limit

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

E = Indicates value exceeds calibration range

Client Sample ID: Lab Sample ID:

JC27318-3

Matrix: Method:

Project:

AQ - Ground Water

SW846 8270D SW846 3510C BMSMC, Building 5 Area, PR

09/07/16 Date Sampled: 09/09/16 Date Received:

Percent Solids: n/a

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# I	Run# 2	Limits
4165-62-2 118-79-6 4165-60-0 321-60-8	Phenol-d5 2,4,6-Tribromophenol Nitrobenzene-d5 2-Fluorobiphenyl	41% 128% 91% 106%		10-110% 39-149% 32-128% 35-119%
1718-51-0	Terphenyl-d14	116%		10-126%

(a) This compound in BS is outside in house QC limits bias high.



E = Indicates value exceeds calibration range

B = Indicates analyte found in associated method blank

N = Indicates presumptive evidence of a compound

Report of Analysis

Page 1 of 1

Client Sample ID:

S-33

Terphenyl-d14

Lab Sample ID: JC27318-3

Matrix: Method:

Project:

1718-51-0

AQ - Ground Water

Initial Volume Final Volume

SW846 8270D BY SIM SW846 3510C BMSMC, Building 5 Area, PR

Date Sampled:

09/07/16 09/09/16

Date Received:

Percent Solids:

Run #1	File ID 3M64191.D	DF 1	Analyzed 09/14/16	By JJ	Prep Date 09/13/16	Prep Batch OP96981A	Analytical Batch E3M3051
Run #2							

Run #1 Run #2	1000 mJ 1.0 mI						
CAS No.	Compound	Result	RL	MDL	Units	Q	
91-20-3	Naphthalene	ND	0.10	0.029	ug/l		
CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Lim	its		
4165-60-0 321-60-8	Nitrobenzene-d5 2-Fluorobiphenyl	87% 74%			25% 27%		

73%



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

10-119%

B = Indicates analyte found in associated method blank

Report of Analysis

Page 1 of 1

Client Sample ID: S-33

Lab Sample ID: JC27318-3

Matrix: Method:

AQ - Ground Water SW846-8015C (DAI)

Date Sampled: 09/07/16 Date Received: 09/09/16

Project:

BMSMC, Building 5 Area, PR

Percent Solids: n/a

Run #1 ^a Run #2 ^b	File ID GH106566.D GH106482.D	DF 1 1	Analyzed 09/22/16 09/19/16	By DFT EC	Prep Date n/a n/a	Prep Batch n/a n/a	Analytical Batch GGH5498 GGH5494

Low Molecular Alcohol List

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5 78-83-1 67-63-0 71-23-8 71-36-3 78-92-2 67-56-1	Ethanol Isobutyl Alcohol Isopropyl Alcohol n-Propyl Alcohol n-Butyl Alcohol sec-Butyl Alcohol Methanol	ND ND ND ND ND ND ND	200 100 100 100 100 100 200	55 36 68 43 87 66 71	ug/l ug/l ug/l ug/l ug/l ug/l ug/l	
CAS No. 111-27-3 111-27-3	Surrogate Recoveries Hexanol Hexanol	Run# 1 110% 104%	Run# 2	Limi 56-14 56-14	15%	

⁽a) Sample originally analyzed within the holding time.

(b) Confirmation run.



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

Report of Analysis

By

DS

Page 1 of 1

Client Sample ID:	S
Lab Sample ID:	J
Matrix:	A

S-33 C27318-3

AQ - Ground Water SW846 8081B SW846 3510C

Date Sampled: 09/07/16 Date Received:

Q

09/09/16

Method: Project:

BMSMC, Building 5 Area, PR

Analyzed

09/19/16

Percent Solids: n/a

File ID DF Run #1 1G127358.D 1 Run #2

Prep Date 09/13/16

Prep Batch OP96986

Analytical Batch G1G4087

Initial Volume Run #1 990 ml Run #2

Final Volume 10.0 ml

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units
309-00-2	Aldrin	ND	0.010	0.0061	ug/l
319-84-6	alpha-BHC	ND	0.010	0.0061	ug/l
319-85-7	beta-BHC	ND	0.010	0.0057	ug/l
319-86-8	delta-BHC	ND	0.010	0.0046	ug/l
58-89-9	gamma-BHC (Lindane)	ND	0.010	0.0028	ug/l
5103-71-9	alpha-Chlordane	ND	0.010	0.0047	ug/l
5103-74-2	gamma-Chlordane	ND	0.010	0.0046	ug/l
60-57-1	Dieldrin	ND	0.010	0.0036	ug/l
72-54-8	4,4'-DDD	ND	0.010	0.0038	ug/l
72-55-9	4,4'-DDE	ND	0.010	0.0062	ug/l
50-29-3	4,4'-DDT	ND	0.010	0.0050	ug/l
72-20-8	Endrin	ND	0.010	0.0051	ug/l
1031-07-8	Endosulfan sulfate	ND	0.010	0.0053	ug/l
7421-93-4	Endrin aldehyde	ND	0.010	0.0052	ug/l
53494-70-5	Endrin ketone	ND	0.010	0.0051	ug/l
959-98-8	Endosulfan-I	ND	0.010	0.0050	ug/l
33213-65-9	Endosulfan-II	ND	0.010	0.0043	ug/l
76-44-8	Heptachlor	ND	0.010	0.0038	ug/l
1024-57-3	Heptachlor epoxide	ND	0.010	0.0066	ug/l
72-43-5	Methoxychlor	ND	0.020	0.0057	ug/l
8001-35-2	Toxaphene	ND	0.25	0.19	ug/l
CAS No.	Surrogate Recoveries	Run#1	Run# 2	Limi	ts
877-09-8	Tetrachloro-m-xylene	157% a		26-13	32%
877-09-8	Tetrachloro-m-xylene	135% a		26-13	32%
0051 015	TS 11 11 1				

(a) High percent recoveries and no positive found in the sample.



2051-24-3

2051-24-3

86%

71%

10-118%

10-118%

Decachlorobiphenyl

Decachlorobiphenyl

ND = Not detected

MDL = Method Detection Limit

J = Indicates an estimated value

RL = Reporting Limit

B = Indicates analyte found in associated method blank

E = Indicates value exceeds calibration range

N = Indicates presumptive evidence of a compound

Report of Analysis

Page 1 of 3

Client Sample ID: S-37

Lab Sample ID:

JC27318-4

AQ - Ground Water

1

Date Sampled: Date Received:

09/07/16 09/09/16

Matrix: Method:

SW846 8270D SW846 3510C

Percent Solids: n/a

Project:

BMSMC, Building 5 Area, PR

Run #1

File ID 6P29816.D DF Analyzed 09/14/16

By Prep Date AC 09/13/16

Prep Batch OP96981

Q

Analytical Batch E6P1386

Run #2

Initial Volume Final Volume Run #1 1000 ml 1.0 ml

Run #2

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units
95-57-8	2-Chlorophenol	ND	5.0	0.82	ug/l
59-50-7	4-Chloro-3-methyl phenol	ND	5.0	0.89	ug/l
120-83-2	2,4-Dichlorophenol	ND	2.0	1.3	ug/l
105-67-9	2,4-Dimethylphenol	ND	5.0	2.4	ug/l
51-28-5	2,4-Dinitrophenol	ND	10	1.6	ug/l
534-52-1	4,6-Dinitro-o-cresol a	ND	5.0	1.3	ug/l
95-48-7	2-Methylphenol	ND	2.0	0.89	ug/l
	3&4-Methylphenol	ND	2.0	0.88	ug/l
88-75-5	2-Nitrophenol	ND	5.0	0.96	ug/l
100-02-7	4-Nitrophenol	ND	10	1.2	ug/l
87-86-5	Pentachlorophenol	ND	4.0	1.4	ug/l
108-95-2	Phenol	ND	2.0	0.39	ug/l
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.0	1.5	ug/l
95-95-4	2,4,5-Trichlorophenol	ND	5.0	1.3	ug/l
88-06-2	2,4,6-Trichlorophenol	ND	5.0	0.92	ug/l
83-32-9	Acenaphthene	ND	1.0	0.19	ug/l
208-96-8	Acenaphthylene	ND	1.0	0.14	ug/l
98-86-2	Acetophenone	ND	2.0	0.21	ug/l
120-12-7	Anthracene	ND	1.0	0.21	ug/l
1912-24-9	Atrazine	ND	2.0	0.45	ug/l
100-52-7	Benzaldehyde	ND	5.0	0.29	ug/l
56-55-3	Benzo(a)anthracene	ND	1.0	0.20	ug/l
50-32-8	Benzo(a) pyrene	ND	1.0	0.21	ug/l
205-99-2	Benzo(b)fluoranthene	ND	1.0	0.21	ug/l
191-24-2	Benzo(g,h,i)perylene	ND	1.0	0.34	ug/l
207-08-9	Benzo(k)fluoranthene	ND	1.0	0.21	ug/l
101-55-3	4-Bromophenyl phenyl ether	ND	2.0	0.40	ug/l
85-68-7	Butyl benzyl phthalate	ND	2.0	0.46	ug/l
92-52-4	1,1'-Biphenyl	ND	1.0	0.21	ug/l
91-58-7	2-Chloronaphthalene	ND	2.0	0.24	ug/l
106-47-8	4-Chloroaniline	ND	5.0	0.34	ug/l
86-74-8	Carbazole	ND	1.0	0.23	ug/l

fael Infante Méndez

ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

Client Sample ID: S-37 Lab Sample ID:

JC27318-4

AQ - Ground Water

Date Sampled: 09/07/16 Date Received: 09/09/16

Matrix: Method: SW846 8270D SW846 3510C

Percent Solids: n/a

Q

Project:

BMSMC, Building 5 Area, PR

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	
105-60-2	Caprolactam	ND	2.0	0.65	ug/l	
218-01-9	Chrysene	ND	1.0	0.18	ug/l	
111-91-1	bis(2-Chloroethoxy)methane	ND	2.0	0.28	ug/l	
111-44-4	bis(2-Chloroethyl)ether	ND	2.0	0.25	ug/l	
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.0	0.40	ug/l	
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.0	0.37	ug/l	
121-14-2	2,4-Dinitrotoluene	ND	1.0	0.55	ug/l	
606-20-2	2,6-Dinitrotoluene	ND	1.0	0.48	ug/l	
91-94-1	3,3'-Dichlorobenzidine	ND	2.0	0.51	ug/l	
123-91-1	1,4-Dioxane	19.7	1.0	0.66	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	1.0	0.33	ug/l	
132-64-9	Dibenzofuran	ND	5.0	0.22	ug/l	
84-74-2	Di-n-butyl phthalate	ND	2.0	0.50	ug/l	
117-84-0	Di-n-octyl phthalate	ND	2.0	0.23	ug/l	
84-66-2	Diethyl phthalate	ND	2.0	0.26	ug/l	
131-11-3	Dimethyl phthalate	NĐ	2.0	0.22	ug/l	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.0	1.7	ug/l	
206-44-0	Fluoranthene	ND	1.0	0.17	ug/l	
86-73-7	Fluorene	ND	1.0	0.17	ug/l	
118-74-1	Hexachlorobenzene	ND	1.0	0.33	ug/l	
87-68-3	Hexachlorobutadiene	ND	1.0	0.49	ug/l	
77-47-4	Hexachlorocyclopentadiene	ND	10	2.8	ug/l	
67-72-1	Hexachloroethane	ND	2.0	0.39	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.0	0.33	ug/I	
78-59-1	Isophorone	ND	2.0	0.28	ug/l	
90-12-0	1-Methylnaphthalene	ND	1.0	0.26	ug/l	
91-57-6	2-Methylnaphthalene	ND	1.0	0.21	ug/l	
88-74-4	2-Nitroaniline	ND	5.0	0.28	ug/l	
99-09-2	3-Nitroaniline	ND	5.0	0.39	ug/l	
100-01-6	4-Nitroaniline	ND	5.0	0.44	ug/l	
98-95-3	Nitrobenzene	ND	2.0	0.64	ug/l	
621-64-7	N-Nitroso-di-n-propylamine	ND	2.0	0.48	ug/l	
86-30-6	N-Nitrosodiphenylamine	ND	5.0	0.22	ug/l	
85-01-8	Phenanthrene	ND	1.0	0.18	ug/l	
129-00-0	Pyrene	ND	1.0	0.22	ug/l	
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.0	0.37	ug/l	
CAS No.	Surrogate Recoveries	Run#1	Run# 2	Limi	ts	



ND = Not detected

367-12-4

MDL = Method Detection Limit

53%

RL = Reporting Limit

E = Indicates value exceeds calibration range

2-Fluorophenol

J = Indicates an estimated value

14-88%

B = Indicates analyte found in associated method blank

Client Sample ID: S-37

Lab Sample ID: JC27318-4

Date Sampled: (

09/07/16

Matrix: Method: AQ - Ground Water SW846 8270D SW846 3510C Date Received:

09/09/16

Project:

BMSMC, Building 5 Area, PR

Percent Solids: n/a

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run#1	Run# 2	Limits
4165-62-2 118-79-6 4165-60-0 321-60-8 1718-51-0	Phenol-d5 2,4,6-Tribromophenol Nitrobenzene-d5 2-Fluorobiphenyl Terphenyl-d14	36% 126% 89% 99% 111%		10-110% 39-149% 32-128% 35-119% 10-126%

(a) This compound in BS is outside in house QC limits bias high.





MDL = Method Detection Limit

RL = Reporting Limit

J = Indicates an estimated value

B = Indicates analyte found in associated method blank



E = Indicates value exceeds calibration range

Report of Analysis

Page 1 of 1

Client Sample ID:

S-37

Lab Sample ID: JC27318-4

File ID

3M64192.D

Date Sampled:

09/07/16

Matrix:

AQ - Ground Water

Date Received:

09/09/16

Method:

SW846 8270D BY SIM SW846 3510C

Percent Solids:

Project:

BMSMC, Building 5 Area, PR

Prep Date

Prep Batch **Analytical Batch** OP96981A E3M3051

Run #1 Run #2

Initial Volume Final Volume 1000 mi

Run #1 Run #2

91-20-3

1.0 ml

DF

1

CAS No. Compound Result

ND

Analyzed

09/14/16

RLMDL Units

Q

0.10

By

IJ

0.029

09/13/16

ug/l

CAS No. Surrogate Recoveries Run#1

Run# 2 Limits

4165-60-0 321-60-8 1718-51-0

Nitrobenzene-d5 2-Fluorobiphenyl Terphenyl-d14

Naphthalene

84% 74% 78% 24-125% 19-127% 10-119%



ND = Not detected

MDL = Method Detection Limit

J = Indicates an estimated value

RL = Reporting Limit

B = Indicates analyte found in associated method blank N = Indicates presumptive evidence of a compound

E = Indicates value exceeds calibration range

Report of Analysis

Page 1 of 1

Client Sample ID: S-37

Lab Sample ID: JC27318-4

AQ - Ground Water

Date Sampled: 09/07/16

Matrix: Method:

SW846-8015C (DAI)

Date Received: 09/09/16

Project:

BMSMC, Building 5 Area, PR

Percent Solids: n/a

	-,	Dividivio,	Dunum ₆	o :, x	10
	-				

	File ID	DF	Analyzed	Ву	Prep Date	Prep Batch	Analytical Batch
		1	09/22/16	DFT	n/a	n/a	GGH5498
Run #2 b	GH106483.D	1	09/19/16	EC	n/a	n/a	GGH5494

Low Molecular Alcohol List

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5 78-83-1 67-63-0 71-23-8 71-36-3 78-92-2 67-56-1	Ethanol Isobutyl Alcohol Isopropyl Alcohol n-Propyl Alcohol n-Butyl Alcohol sec-Butyl Alcohol Methanol	ND ND ND ND ND ND	200 100 100 100 100 100 200	55 36 68 43 87 66 71	ug/l ug/l ug/l ug/l ug/l ug/l	
CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Lim	its	
111-27-3 111-27-3	Hexanol Hexanol	108% 105%	81%		45% 45%	

- (a) Sample originally analyzed within the holding time.
- (b) Confirmation run.



Report of Analysis

Page 1 of 3

Client Sample ID:

S-36

Lab Sample ID:

JC27318-5

AQ - Ground Water

DF

I

Date Sampled:

09/07/16

Matrix: Method:

SW846 8270D SW846 3510C

Date Received:

09/09/16

Project:

BMSMC, Building 5 Area, PR

Percent Solids:

Q

Run #1 Run #2 File ID 6P29817.D Analyzed 09/14/16

By Prep Date AC 09/13/16

Prep Batch OP96981

Analytical Batch

E6P1386

Initial Volume Final Volume 1000 ml

Run #1 Run #2 1.0 ml

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units
95-57-8	2-Chlorophenol	ND	5.0	0.82	ug/l
59-50-7	4-Chloro-3-methyl phenol	ND	5.0	0.89	ug/l
120-83-2	2,4-Dichlorophenol	ND	2.0	1.3	ug/l
105-67-9	2,4-Dimethylphenol	ND	5.0	2.4	ug/l
51-28-5	2,4-Dinitrophenol	ND	10	1.6	ug/l
534-52-1	4,6-Dinitro-o-cresol a	ND	5.0	1.3	ug/l
95-48-7	2-Methylphenol	ND	2.0	0.89	ug/l
	3&4-Methylphenol	ND	2.0	0.88	ug/l
88-75-5	2-Nitrophenol	ND	5.0	0.96	ug/l
100-02-7	4-Nitrophenol	ND	10	1.2	ug/l
87-86-5	Pentachlorophenol	ND	4.0	1.4	ug/l
108-95-2	Phenol	ND	2.0	0.39	ug/l
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.0	1.5	ug/I
95-95-4	2,4,5-Trichlorophenol	ND	5.0	1.3	ug/l
88-06-2	2,4,6-Trichlorophenol	ND	5.0	0.92	ug/l
83-32-9	Acenaphthene	ND	1.0	0.19	ug/l
208-96-8	Acenaphthylene	ND	1.0	0.14	ug/l
98-86-2	Acetophenone	ND	2.0	0.21	ug/l
120-12-7	Anthracene	ND	1.0	0.21	ug/l
1912-24-9	Atrazine	ND	2.0	0.45	ug/l
100-52-7	Benzaldehyde	ND	5.0	0.29	ug/l
56-55-3	Benzo(a)anthracene	ND	1.0	0.20	ug/l
50-32-8	Benzo(a)pyrene	ND	1.0	0.21	ug/l
205-99-2	Benzo(b)fluoranthene	ND	1.0	0.21	ug/l
191-24-2	Benzo(g,h,i)perylene	ND	1.0	0.34	ug/l
207-08-9	Benzo(k)fluoranthene	ND	1.0	0.21	ug/l
101-55-3	4-Bromophenyl phenyl ether	ND	2.0	0.40	ug/l
85-68-7	Butyl benzyl phthalate	ND	2.0	0.46	ug/l
92-52-4	1,1'-Biphenyl	ND	1.0	0.21	ug/l
91-58-7	2-Chloronaphthalene	ND	2.0	0.24	ug/l
106-47-8	4-Chloroaniline	ND	5.0	0.34	ug/I
86-74-8	Carbazole	ND	1.0	0.23	ug/]
					-

itael Infante Méndez 16 # 1888

ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

Client Sample ID: Lab Sample ID:

S-36

JC27318-5

Date Sampled:

09/07/16 09/09/16

Matrix: Method: AQ - Ground Water SW846 8270D SW846 3510C BMSMC, Building 5 Area, PR Date Received:

Percent Solids: n/a

Project:

ABN TCL Special List

ABN TCL	Special List					
CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	2.0	0.65	ug/l	
218-01-9	Chrysene	ND	1.0	0.18	ug/l	
111-91-1	bis(2-Chloroethoxy)methane	ND	2.0	0.28	ug/l	
111-44-4	bis(2-Chloroethyl)ether	ND	2.0	0.25	ug/l	
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.0	0.40	ug/l	
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.0	0.37	ug/l	
121-14-2	2,4-Dinitrotoluene	ND	1.0	0.55	ug/l	
606-20-2	2,6-Dinitrotoluene	ND	1.0	0.48	ug/l	
91-94-1	3,3'-Dichlorobenzidine	ND	2.0	0.51	ug/l	29
53-70-3	Dibenzo(a,h)anthracene	ND	1.0	0.33	ug/l	
132-64-9	Dibenzofuran	ND	5.0	0.22	ug/l	
84-74-2	Di-n-butyl phthalate	ND	2.0	0.50	ug/l	
117-84-0	Di-n-octyl phthalate	ND	2.0	0.23	ug/l	
84-66-2	Diethyl phthalate	ND	2.0	0.26	ug/l	
131-11-3	Dimethyl phthalate	ND	2.0	0.22	ug/l	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.0	1.7	ug/l	
206-44-0	Fluoranthene	ND	1.0	0.17	ug/l	
86-73-7	Fluorene	ND	1.0	0.17	ug/l	
118-74-1	Hexachlorobenzene	ND	1.0	0.33	ug/l	
87-68-3	Hexachlorobutadiene	ND	1.0	0.49	ug/l	
77-47-4	Hexachlorocyclopentadiene	ND	10	2.8	ug/i	
67-72-1	Hexachloroethane	ND	2.0	0.39	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.0	0.33	ug/l	
78-59-1	Isophorone	ND	2.0	0.28	ug/l	
90-12-0	1-Methylnaphthalene	ND	1.0	0.26	ug/l	
91-57-6	2-Methylnaphthalene	ND	1.0	0.21	ug/l	
88-74-4	2-Nitroaniline	ND	5.0	0.28	ug/l	
99-09-2	3-Nitroaniline	ND	5.0	0.39	ug/l	
100-01-6	4-Nitroaniline	ND	5.0	0.44	ug/l	
98-95-3	Nitrobenzene	ND	2.0	0.64	ug/l	SE ISOCHOO DE PLE
621-64-7	N-Nitroso-di-n-propylamine	ND	2.0	0.48	ug/l	Sec. Marie Par
86-30-6	N-Nitrosodiphenylamine	ND	5.0	0.22	ug/l	The state of the s
85-01-8	Phenanthrene	ND	1.0	0.18	ug/l	tael Infante
129-00-0	Pyrene	ND	1.0	0.22	ug/l	Méndez
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.0	0.37	ug/l	c 16 = 1888
					U	10
CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limi	its	CO LICENCIAS
367-12-4	2-Fluorophenol	48%		14-8	8%	
4165-62-2	Phenol-d5	32%		10-1		



MDL = Method Detection Limit

RL = Reporting Limit

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

E = Indicates value exceeds calibration range

Page 3 of 3

Client Sample ID:

JC27318-5

Lab Sample ID:

AQ - Ground Water

Date Sampled: 09/07/16

Matrix: Method: Project:

SW846 8270D SW846 3510C BMSMC, Building 5 Area, PR

Date Received: 09/09/16

Percent Solids: n/a

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
118-79-6	2,4,6-Tribromophenol	117%		39-149%
4165-60-0	Nitrobenzene-d5	86%		32-128%
321-60-8	2-Fluorobiphenyl	94%		35-119%
1718-51-0	Terphenyl-d14	92%		10-126%

(a) This compound in BS is outside in house QC limits bias high.



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

Report of Analysis

Page 1 of 1

		nt	Sample II	D: S-36
1	l –	_		

Lab Sample ID: Matrix:

JC27318-5

AQ - Ground Water

SW846 8270D BY SIM SW846 3510C

Date Sampled: 09/07/16

Date Received: 09/09/16 Percent Solids: n/a

Method: Project:

BMSMC, Building 5 Area, PR

1.0 ml

File ID DF Analyzed By Prep Date Prep Batch **Analytical Batch** 3M64193.D Run #1 09/14/16 JJ 09/13/16 OP96981A E3M3051

Run #2

Final Volume Initial Volume

1000 mf

Run #1 Run #2

CAS No.	Compound	Result	RL	MDL	Units	Q
91-20-3 123-91-1	Naphthalene 1,4-Dioxane	ND 3.23	0.10 0.10	0.029 0.049	ug/l ug/l	
CAS No.	Surrogate Recoveries	Run# I	Run# 2	Limi	ts	
4165-60-0 321-60-8 1718-51-0	Nitrobenzene-d5 2-Fluorobiphenyl Terphenyl-d14	82% 71% 68%		24-12 19-12 10-11	27%	



E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

N = Indicates presumptive evidence of a compound

Page 1 of 1

Client Sample ID:

Lab Sample ID: JC27318-5

Matrix: Method: AQ - Ground Water

SW846-8015C (DAI)

Date Sampled: 09/07/16 Date Received: 09/09/16

Percent Solids: n/a

Project:

BMSMC, Building 5 Area, PR

	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1 a	GH106568.D	1	09/22/16	DFT	n/a	n/a	GGH5498
Run #2 b	GH106484.D	1	09/19/16	EC	n/a	n/a	GGH5494

Low Molecular Alcohol List

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5 78-83-1 67-63-0 71-23-8 71-36-3 78-92-2	Ethanol Isobutyl Alcohol Isopropyl Alcohol n-Propyl Alcohol n-Butyl Alcohol sec-Butyl Alcohol	ND ND ND ND ND	200 100 100 100 100 100	55 36 68 43 87 66	ug/l ug/l ug/l ug/l ug/l ug/l	
67-56-1 CAS No. 111-27-3 111-27-3	Methanol Surrogate Recoveries Hexanol Hexanol	ND Run# 1 224% c 227% c	200 Run# 2 176% ^c	76	ug/l its 45% 45%	

- (a) Sample originally analyzed within the holding time.
- (b) Confirmation run.
- (c) Outside of in house control limits. No associated positive result.



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

Report of Analysis

Client Sample ID:	S-36		
Lab Sample ID:	JC27318-5	Date Sampled:	09/07/16
Matrix:	AQ - Ground Water	Date Received:	09/09/16
Method:	SW846 8081B SW846 3510C	Percent Solids:	n/a

Project: BMSMC, Building 5 Area, PR

	Run #1 Run #2	File ID 1G127359.D	DF 1	Analyzed 09/19/16	By DS	Prep Date 09/13/16	Prep Batch OP96986	Analytical Batch G1G4087	
- 1	L								1

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units
309-00-2	Aldrin	ND	0.010	0.0060	ug/l
319-84-6	alpha-BHC	ND	0.010	0.0060	ug/l
319-85-7	beta-BHC	ND	0.010	0.0057	ug/l
319-86-8	delta-BHC	ND	0.010	0.0046	ug/l
58-89-9	gamma-BHC (Lindane)	ND	0.010	0.0028	ug/l
5103-71-9	alpha-Chlordane	ND	0.010	0.0046	ug/l
5103-74-2	gamma-Chlordane	ND	0.010	0.0046	ug/l
60-57-1	Dieldrin	ND	0.010	0.0036	ug/l
72-54-8	4,4'-DDD	ND	0.010	0.0038	ug/l
72-55-9	4,4'-DDE	ND	0.010	0.0062	ug/l
50-29-3	4,4'-DDT	ND	0.010	0.0050	ug/l
72-20-8	Endrin	ND	0.010	0.0050	ug/l
1031-07-8	Endosulfan sulfate	ND	0.010	0.0053	ug/l
7421-93-4	Endrin aldehyde	ND	0.010	0.0051	ug/l
53494-70-5	Endrin ketone	ND	0.010	0.0051	ug/l
959-98-8	Endosulfan-I	ND	0.010	0.0050	ug/l
33213-65-9	Endosulfan-II	ND	0.010	0.0043	ug/l
76-44-8	Heptachlor	ND	0.010	0.0038	ug/l
1024-57-3	Heptachlor epoxide	ND	0.010	0.0065	ug/l
72-43-5	Methoxychlor	ND	0.020	0.0057	ug/l
8001-35-2	Toxaphene	ND	0.25	0.18	ug/l
CAS No.	Surrogate Recoveries	Run#1	Run# 2	Limi	ts
877-09-8	Tetrachloro-m-xylene	146% ^a		26-13	32%
877-09-8	Tetrachloro-m-xylene	148% ^a		26-13	2%
2051-24-3	Decachlorobiphenyl	112%		10-11	8%
2051-24-3	Decachlorobiphenyl	102%		10-11	.8%



(a) High percent recoveries and no positive found in the sample.

Q

ND = Not detected MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

N = Indicates presumptive evidence of a compound

Report of Analysis

By

Page 1 of 3

Client Sample ID: S-40D

Lab Sample ID:

JC27318-6

Matrix: Method: AO - Ground Water

SW846 8270D SW846 3510C BMSMC, Building 5 Area, PR Date Sampled:

09/08/16 Date Received: 09/09/16

Percent Solids: n/a

Project:

File ID Run #1 6P29778.D DF 1

Analyzed 09/13/16

Prep Date AC 09/13/16

Prep Batch OP96981

Q

Analytical Batch E6P1385

Run #2

Initial Volume 980 ml

Final Volume 1.0 ml

Run #1 Run #2

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units
95-57-8	2-Chlorophenol	ND	5.1	0.84	ug/l
59-50-7	4-Chloro-3-methyl phenol	ND	5.1	0.91	ug/l
120-83-2	2,4-Dichlorophenol	ND	2.0	1.3	ug/l
105-67-9	2,4-Dimethylphenol	ND	5.1	2.5	ug/l
51-28-5	2,4-Dinitrophenol	ND	10	1.6	ug/l
534-52-1	4,6-Dinitro-o-cresol a	ND	5.1	1.3	ug/l
95-48-7	2-Methylphenol	ND	2.0	0.91	ug/l
	3&4-Methylphenol	ND	2.0	0.90	ug/l
88-75-5	2-Nitrophenol	ND	5.1	0.98	ug/l
100-02-7	4-Nitrophenol	ND	10	1.2	ug/l
87-86-5	Pentachlorophenol	ND	4.1	1.4	ug/l
108-95-2	Phenol	ND	2.0	0.40	ug/l
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.1	1.5	ug/l
95-95-4	2,4,5-Trichlorophenol	ND	5.1	1.4	ug/l
88-06-2	2,4,6-Trichlorophenol	ND	5.1	0.94	ug/l
83-32-9	Acenaphthene	ND	1.0	0.19	ug/l
208-96-8	Acenaphthylene	ND	1.0	0.14	ug/l
98-86-2	Acetophenone	ND	2.0	0.21	ug/l
120-12-7	Anthracene	ND	1.0	0.22	ug/l
1912-24-9	Atrazine	ND	2.0	0.46	ug/l
100-52-7	Benzaldehyde	ND	5.1	0.29	ug/l
56-55-3	Benzo(a)anthracene	ND	1.0	0.21	ug/l
50-32-8	Benzo(a)pyrene	ND	1.0	0.22	ug/l
205-99-2	Benzo(b)fluoranthene	ND	1.0	0.21	ug/I
191-24-2	Benzo(g,h,i)perylene	ND	1.0	0.35	ug/l
207-08-9	Benzo(k)fluoranthene	ND	1.0	0.21	ug/l
101-55-3	4-Bromophenyl phenyl ether	ND	2.0	0.41	ug/l
85-68-7	Butyl benzyl phthalate	ND	2.0	0.47	ug/l
92-52-4	1,1'-Biphenyl	ND	1.0	0.22	ug/l
91-58-7	2-Chloronaphthalene	ND	2.0	0.24	ug/l
106-47-8	4-Chloroaniline	ND	5.1	0.35	ug/l
86-74-8	Carbazole	ND	1.0	0.23	ug/l

tael Infante Méndez = 1888

ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

Client Sample ID: S-40D

JC27318-6

Lab Sample ID: Matrix:

AQ - Ground Water

Method: Project:

SW846 8270D SW846 3510C

BMSMC, Building 5 Area, PR

Date Sampled: 09/08/16 Date Received: 09/09/16

Percent Solids: n/a

Q

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units
105-60-2	Caprolactam	ND	2.0	0.66	ug/l
218-01-9	Chrysene	ND	1.0	0.18	ug/l
111-91-1	bis(2-Chloroethoxy)methane	ND	2.0	0.28	ug/l
111-44-4	bis(2-Chloroethyl)ether	ND	2.0	0.25	ug/l
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.0	0.41	ug/l
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.0	0.37	ug/l
121-14-2	2,4-Dinitrotoluene	ND	1.0	0.56	ug/I
606-20-2	2,6-Dinitrotoluene	ND	1.0	0.49	ug/l
91-94-1	3,3'-Dichlorobenzidine	ND	2.0	0.52	ug/l
53-70-3	Dibenzo(a,h)anthracene	ND	1.0	0.34	ug/I
132-64-9	Dibenzofuran	ND	5.1	0.22	ug/I
84-74-2	Di-n-butyi phthalate	ND	2.0	0.51	ug/l
117-84-0	Di-n-octyl phthalate	ND	2.0	0.24	ug/l
84-66-2	Diethyl phthalate	ND	2.0	0.27	ug/l
131-11-3	Dimethyl phthalate	ND	2.0	0.22	ug/l
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.0	1.7	ug/l
206-44-0	Fluoranthene	ND	1.0	0.17	ug/l
86-73-7	Fluorene	ND	1.0	0.17	ug/l
118-74-1	Hexachlorobenzene	ND	1.0	0.33	ug/l
87-68-3	Hexachlorobutadiene	ND	1.0	0.50	ug/l
77-47-4	Hexachlorocyclopentadiene	ND	10	2.8	ug/l
67-72-1	Hexachloroethane	ND	2.0	0.40	ug/l
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.0	0.34	ug/l
78-59-1	Isophorone	ND	2.0	0.28	ug/l
90-12-0	1-Methylnaphthalene	ND	1.0	0.27	ug/l
91-57-6	2-Methylnaphthalene	ND	1.0	0.21	ug/l
88-74-4	2-Nitroaniline	ND	5.1	0.28	ug/l
99-09-2	3-Nitroaniline	ND	5.1	0.39	ug/I
100-01-6	4-Nitroaniline	ND	5.1	0.45	ug/l
98-95-3	Nitrobenzene	ND	2.0	0.66	ug/l
621-64-7	N-Nitroso-di-n-propylamine	ND	2.0	0.49	ug/I
86-30-6	N-Nitrosodiphenylamine	ND	5.1	0.23	ug/i
85-01-8	Phenanthrene	ND	1.0	0.18	ug/l
129-00-0	Pyrene	ND	1.0	0.22	ug/l
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.0	0.38	ug/l
CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Lim	its
367-12-4	2-Fluorophenol	48%		14-8	8%
4165-62-2	Phenol-d5	33%		10-1	10%



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

N = Indicates presumptive evidence of a compound

JC27318

Page 3 of 3

Client Sample ID: S-40D

Lab Sample ID: JC27318-6 Matrix:

AQ - Ground Water

Date Sampled: 09/08/16 Date Received: 09/09/16

SW846 8270D SW846 3510C BMSMC, Building 5 Area, PR

Percent Solids: n/a

ABN TCL Special List

Method:

Project:

CAS No.	Surrogate Recoveries	Run#1	Run# 2	Limits
118-79-6	2,4,6-Tribromophenol	113%		39-149%
4165-60-0	Nitrobenzene-d5	79%		32-128%
321-60-8	2-Fluorobiphenyl	87%		35-119%
1718-51-0	Terphenyl-d14	92%		10-126%

(a) This compound in BS is outside in house QC limits bias high.



E = Indicates value exceeds calibration range

B = Indicates analyte found in associated method blank

Report of Analysis

Page 1 of 1

Client Sample ID: S-40D JC27318-6

Lab Sample ID: Matrix:

AO - Ground Water

SW846 8270D BY SIM SW846 3510C BMSMC, Building 5 Area, PR

09/08/16 Date Sampled: Date Received: 09/09/16

Percent Solids: n/a

Q

File ID DF Analyzed By Prep Date Prep Batch **Analytical Batch** Run #1 3M64194.D 1 09/14/16 IJ 09/13/16 OP96981A E3M3051

Run #2

Method:

Project:

Initial Volume Final Volume Run #1 980 ml 1.0 ml

Run #2

CAS No. Compound Result RL MDL Units 91-20-3 Naphthalene ND 0.100.030ug/I 123-91-1 1,4-Dioxane 4.82 0.100.050 ug/l CAS No. Surrogate Recoveries Run# 2 Run#1 Limits 4165-60-0 Nitrobenzene-d5 82% 24-125% 321-60-8 2-Fluorobiphenyl 68% 19-127% 1718-51-0 Terphenyl-d14 71% 10-119%



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

Report of Analysis

By

EC

DFT

Page 1 of 1

Client Sample ID: S-40D

Lab Sample ID: JC27318-6

File ID

GH106569.D

GH106485.D

Matrix: Method:

Project:

Run #1

Run #2 a

AQ - Ground Water

SW846-8015C (DAI)

DF

1

1

BMSMC, Building 5 Area, PR

Date Sampled: 09/08/16 Date Received: 09/09/16

Percent Solids: n/a

Prep Date	Prep Batch	Analytical Batch
n/a	n/a	GGH5498
n/a	n/a	GGH5494

Low Molecular Alcohol List

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5 78-83-1 67-63-0 71-23-8 71-36-3 78-92-2	Ethanol Isobutyl Alcohol Isopropyl Alcohol n-Propyl Alcohol n-Butyl Alcohol sec-Butyl Alcohol	ND ND ND ND ND	200 100 100 100 100 100	55 36 68 43 87 66	ug/l ug/l ug/l ug/l ug/l ug/l	
67-56-1	Methanol	ND	200	71	ug/l	
CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Lim	its	
111-27-3 111-27-3	Hexanol Hexanol	121% 116%	94%		45% 45%	

Analyzed

09/22/16

09/19/16

(a) Confirmation run.



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

Report of Analysis

Page 1 of 1

Client Sample ID: S-40D Lab Sample ID:

JC27318-6

AQ Ground Water

Date Sampled: 09/08/16 Date Received: 09/09/16

Q

Matrix: Mcthod:

SW846 8081B SW846 3510C

Percent Solids: n/a

Project:

BMSMC, Building 5 Area, PR

File ID DF Analyzed By Prep Date Prep Batch **Analytical Batch** Run #1 1G127360.D 09/13/16 OP96986 ŀ 09/19/16 DS G1G4087

Run #2

Initial Volume Final Volume 1000 ml 10.0 ml

Run #1 Run #2

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units	
309-00-2	Aldrin	ND	0.010	0.0060	ug/l	
319-84-6	alpha-BHC	ND	0.010	0.0060	ug/l	
319-85-7	beta-BHC	ND	0.010	0.0057	ug/l	
319-86-8	delta-BHC	ND	0.010	0.0046	ug/l	
58-89-9	gamma-BHC (Lindane)	ND	0.010	0.0028	ug/l	
5103-71-9	alpha-Chlordane	ND	0.010	0.0046	ug/i	
5103-74-2	gamma-Chlordane	ND	0.010	0.0046	ug/l	
60-57-1	Dieldrin	ND	0.010	0.0036	ug/l	
72-54-8	4,4'-DDD	ND	0.010	0.0038	ug/l	
72-55-9	4,4'-DDE	ND	0.010	0.0062	ug/l	
50-29-3	4,4'-DDT	ND	0.010	0.0050	ug/l	
72-20-8	Endrin	ND	0.010	0.0050	ug/l	
1031-07-8	Endosulfan sulfate	ND	0.010	0.0053	ug/l	
7421-93-4	Endrin aldehyde	ND	0.010	0.0051	ug/l	
53494-70-5	Endrin ketone	ND	0.010	0.0051	ug/l	
959-98-8	Endosulfan-I	ND	0.010	0.0050	ug/l	
33213-65-9	Endosulfan-II	ND	0.010	0.0043	ug/l	
76-44-8	Heptachlor	ND	0.010	0.0038	ug/l	
1024-57-3	Heptachlor epoxide	ND	0.010	0.0065	ug/l	
72-43-5	Methoxychlor	ND	0.020	0.0057	ug/I	
8001-35-2	Toxaphene	ND	0.25	0.18	ug/l	
CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits		
877-09-8	Tetrachloro-m-xylene	272% a		26-132%		
877-09-8	Tetrachloro-m-xylene	275% a		26-132%		
2051-24-3	Decachlorobiphenyl	167% a	10-118%			
2051-24-3	Decachlorobiphenyl	153% ^a		10-118%		

dael Infante Méndez

(a) High percent recoveries and no positive found in the sample.

ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

Report of Analysis

Page 1 of 3

Client Sample ID: S-40S

Lab Sample ID:

JC27318-7

Matrix:

AQ - Ground Water

SW846 8270D SW846 3510C

Date Sampled: 09/08/16

Date Received: 09/09/16

Percent Solids: n/a

Project:

Method:

BMSMC, Building 5 Area, PR

Run #1

File ID DF 6P29818.D 1

Analyzed 09/14/16

Ву Prep Date AC 09/13/16

Prep Batch OP96981

Q

Analytical Batch E6P1386

Run #2

Initial Volume

1000 mf

Final Volume 1.0 mf

Run #1 Run #2

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units
95-57-8	2-Chlorophenol	ND	5.0	0.82	ug/l
59-50-7	4-Chloro-3-methyl phenol	ND	5.0	0.89	ug/l
120-83-2	2,4-Dichlorophenol	ND	2.0	1.3	ug/l
105-67-9	2,4-Dimethylphenol	ND	5.0	2.4	ug/l
51-28-5	2,4-Dinitrophenol	ND	10	1.6	ug/l
534-52-1	4,6-Dinitro-o-cresol a	ND	5.0	1.3	ug/l
95-48-7	2-Methylphenol	ND	2.0	0.89	ug/l
	3&4-Methylphenol	ND	2.0	0.88	ug/i
88-75-5	2-Nitrophenol	ND	5.0	0.96	ug/l
100-02-7	4-Nitrophenol	ND	10	1.2	ug/l
87-86-5	Pentachlorophenol	ND	4.0	1.4	ug/l
108-95-2	Phenol	ND	2.0	0.39	ug/l
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.0	1.5	ug/l
95-95-4	2,4,5-Trichlorophenol	ND	5.0	1.3	ug/l
88-06-2	2,4,6-Trichlorophenol	ND	5.0	0.92	ug/l
83-32-9	Acenaphthene	ND	1.0	0.19	ug/l
208-96-8	Acenaphthylene	ND	1.0	0.14	ug/l
98-86-2	Acetophenone	ND	2.0	0.21	ug/l
120-12-7	Anthracene	ND	1.0	0.21	ug/l
1912-24-9	Atrazine	ND	2.0	0.45	ug/I
100-52-7	Benzaldehyde	ND	5.0	0.29	ug/l
56-55-3	Benzo(a)anthracene	ND	1.0	0.20	ug/l
50-32-8	Benzo(a)pyrene	ND	1.0	0.21	ug/l
205-99-2	Benzo(b)fluoranthene	ND	1.0	0.21	ug/l
191-24-2	Benzo(g,h,i)perylene	ND	1.0	0.34	ug/l
207-08-9	Benzo(k)fluoranthene	ND	1.0	0.21	ug/l
101-55-3	4-Bromophenyl phenyl ether	ND	2.0	0.40	ug/l
85-68-7	Butyl benzyl phthalate	ND	2.0	0.46	ug/l
92-52-4	1,1'-Biphenyl	ND	1.0	0.21	ug/I
91-58-7	2-Chloronaphthalene	ND	2.0	0.24	ug/l
106-47-8	4-Chloroaniline	ND	5.0	0.34	ug/l
00.81.0	0 1 1	110			-9.

tael Infante Méndez IC = 1888

ND = Not detected

86-74-8

MDL = Method Detection Limit

ND

1.0

0.23

RL = Reporting Limit

E = Indicates value exceeds calibration range

Carbazole

J = Indicates an estimated value

ug/l

B = Indicates analyte found in associated method blank

Report of Analysis

Client Sample ID: S-40S Lab Sample ID:

JC27318-7

AQ - Ground Water SW846 8270D SW846 3510C Date Sampled: 09/08/16 Date Received: 09/09/16 Percent Solids: n/a

Q

Method: Project:

Matrix:

BMSMC, Building 5 Area, PR

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units
105-60-2	Caprolactam	ND	2.0	0.65	ug/f
218-01-9	Chrysene	ND	1.0	0.18	ug/l
111-91-1	bis(2-Chloroethoxy)methane	ND	2.0	0.28	ug/l
111-44-4	bis(2-Chloroethyl)ether	ND	2.0	0.25	ug/l
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.0	0.40	ug/l
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.0	0.37	ug/l
121-14-2	2,4-Dinitrotoluene	ND	1.0	0.55	ug/l
606-20-2	2,6-Dinitrotoluene	ND	1.0	0.48	ug/l
91-94-1	3,3'-Dichlorobenzidine	ND	2.0	0.51	ug/l
123-91-1	1.4-Dioxane	12.6	1.0	0.66	ug/l
53-70-3	Dibenzo(a,h)anthracene	ND	1.0	0.33	ug/l
132-64-9	Dibenzofuran	ND	5.0	0.22	ug/l
84-74-2	Di-n-butyl phthalate	ND	2.0	0.50	ug/l
117-84-0	Di-n-octyl phthalate	ND	2.0	0.23	ug/l
84-66-2	Diethyl phthalate	ND	2.0	0.26	ug/l
131-11-3	Dimethyl phthalate	ND	2.0	0.22	ug/l
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.0	1.7	ug/l
206-44-0	Fluoranthene	ND	1.0	0.17	ug/l
86-73-7	Fluorene	ND	1.0	0.17	ug/l
118-74-1	Hexachlorobenzene	ND	1.0	0.33	ug/l
87-68-3	Hexachlorobutadiene	ND	1.0	0.49	ug/l
77-47-4	Hexachlorocyclopentadiene	ND	10	2.8	ug/l
67-72-1	Hexachloroethane	ND	2.0	0.39	ug/l
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.0	0.33	ug/I
78-59-1	Isophorone	ND	2.0	0.28	ug/l
90-12-0	1-Methylnaphthalene	ND	1.0	0.26	ug/l
91-57-6	2-Methylnaphthalene	ND	1.0	0.21	ug/l
88-74-4	2-Nitroaniline	ND	5.0	0.28	ug/l
99-09-2	3-Nitroaniline	ND	5.0	0.39	ug/l
100-01-6	4-Nitroaniline	ND	5.0	0.44	ug/l
98-95-3	Nitrobenzene	ND	2.0	0.64	ug/l
621-64-7	N-Nitroso-di-n-propylamine	ND	2.0	0.48	ug/l
86-30-6	N-Nitrosodiphenylamine	ND	5.0	0.22	ug/I
85-01-8	Phenanthrene	ND	1.0	0.18	ug/l
129-00-0	Pyrene	ND	1.0	0.22	ug/l
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.0	0.37	ug/l
CAS No.	Surrogate Recoveries	Run#1	Run# 2	Limit	s



ND = Not detected

367-12-4

MDL = Method Detection Limit

47%

RL = Reporting Limit

E = Indicates value exceeds calibration range

2-Fluorophenol

J = Indicates an estimated value

14-88%

B = Indicates analyte found in associated method blank

Report of Analysis

Page 3 of 3

Client Sample ID: S-40S

Lab Sample ID: JC27318-7

Matrix: Method:

Project:

AQ - Ground Water

SW846 8270D SW846 3510C

BMSMC, Building 5 Area, PR

Date Sampled: 09/08/16 Date Received: 09/09/16

Percent Solids: n/a

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run#1	Run# 2	Limits
4165-62-2	Phenol-d5	32%		10-110%
118-79-6	2,4,6-Tribromophenol	111%		39-149%
4165-60-0	Nitrobenzene-d5	85%		32-128%
321-60-8	2-Fluorobiphenyl	92%		35-119%
1718-51-0	Terphenyl-d14	88%		10-126%

(a) This compound in BS is outside in house QC limits bias high.



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank



SGS Accutest LabLink@928311 09:27 28-Sep-2016

Report of Analysis

Page 1 of 1

Client Sample ID: S-40S

Lab Sample ID:

JC27318-7

Matrix:

AO - Ground Water

Method: Project:

SW846 8270D BY SIM SW846 3510C BMSMC, Building 5 Area, PR

Date Sampled: Date Received:

09/08/16 09/09/16

Percent Solids: n/a

File ID DF Analyzed By Prep Date Prep Batch **Analytical Batch** Run #1 3M64195.D 1 09/14/16 IJ 09/13/16 OP96981A E3M3051

Run #2

Run #1

CAS No.

4165-60-0

Initial Volume

Final Volume

1000 mf

1.0 ml

Run #2 Compound

RL

MDL

Units

0

91-20-3 Naphthalene ND

Result

Run#1

0.10

Run# 2

0.029 ug/l

CAS No. Surrogate Recoveries

Nitrobenzene-d5

84%

24-125% 19-127% 10-119%

Limits

321-60-8 2-Fluorobiphenyl Terphenyl-d14 1718-51-0

70% 66%



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

SGS Accutest LabLink@928311 09:27 28-Sep-2016

Report of Analysis

Page 1 of 1

Client Sample ID: S-40S

Lab Sample ID: JC27318-7

Matrix:

AQ - Ground Water SW846-8015C (DAI)

Method: Project:

BMSMC, Building 5 Area, PR

Date Sampled: 09/08/16 Date Received: 09/09/16

Percent Solids: n/a

	File ID	DF	Analyzed	Ву	Prep Date	Prep Batch	Analytical Batch
Run #1	GH106570.D	1	09/22/16	DFT	n/a	n/a	GGH5498
Run #2 a	GH106486.D	1	09/19/16	EC	n/a	n/a	GGH5494

Low Molecular Alcohol List

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5 78-83-1 67-63-0 71-23-8 71-36-3 78-92-2 67-56-1	Ethanol Isobutyl Alcohol Isopropyl Alcohol n-Propyl Alcohol n-Butyl Alcohol sec-Butyl Alcohol Methanol	ND ND ND ND ND ND	200 100 100 100 100 100 200	55 36 68 43 87 66	ug/l ug/l ug/l ug/l ug/l ug/l ug/l	
CAS No. 111-27-3 111-27-3	Surrogate Recoveries Hexanol Hexanol	Run# 1 112% 115%	Run# 2	Lim 56-1	_	

(a) Confirmation run.



ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

SGS Accutest LabLink@928311 09:27 28-Sep-2016

Report of Analysis

DS

Prep Date

09/13/16

Page 1 of 1

Client Sample ID: S-40S

Lab Sample ID: Matrix:

JC27318-7

AQ - Ground Water

SW846 8081B SW846 3510C

Date Sampled: 09/08/16

Q

Date Received: 09/09/16 Percent Solids: n/a

Project: BMSMC, Building 5 Area, PR

File ID DF Analyzed By 1

Analytical Batch Prep Batch OP96986 G1G4087

Run #1 Run #2

Mcthod:

Initial Volume 1000 ml

1G127361.D

Final Volume 10.0 ml

09/19/16

Run #1 Run #2

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units
309-00-2	Aldrin	ND	0.010	0.0060	ug/l
319-84-6	alpha-BHC	ND	0.010	0.0060	ug/l
319-85-7	beta-BHC	ND	0.010	0.0057	ug/l
319-86-8	delta-BHC	ND	0.010	0.0046	ug/l
58-89-9	gamma-BHC (Lindane)	ND	0.010	0.0028	ug/l
5103-71-9	alpha-Chlordane	ND	0.010	0.0046	ug/l
5103-74-2	gamma-Chlordane	ND	0.010	0.0046	ug/l
60-57-1	Dieldrin	ND	0.010	0.0036	ug/l
72-54-8	4,4'-DDD	ND	0.010	0.0038	ug/l
72-55-9	4,4'-DDE	ND	0.010	0.0062	ug/l
50-29-3	4,4'-DDT	ND	0.010	0.0050	ug/l
72-20-8	Endrin	ND	0.010	0.0050	ug/l
1031-07-8	Endosulfan sulfate	ND	0.010	0.0053	ug/l
7421-93-4	Endrin aldehyde	ND	0.010	0.0051	ug/l
53494-70-5	Endrin ketone	ND	0.010	0.0051	ug/l
959-98-8	Endosulfan-I	ND	0.010	0.0050	ug/l
33213-65-9	Endosulfan-II	ND	0.010	0.0043	ug/l
76-44-8	Heptachlor	ND	0.010	0.0038	ug/l
1024-57-3	Heptachlor epoxide	ND	0.010	0.0065	ug/l
72-43-5	Methoxychlor	ND	0.020	0.0057	ug/l
8001-35-2	Toxaphene	ND	0.25	0.18	ug/l
CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limi	ts
877-09-8	Tetrachloro-m-xylene	133% a		26-13	32%
877-09-8	Tetrachloro-m-xylene	135% a		26-13	32%
2051-24-3	Decachlorobiphenyl	80%		10-1	18%
2051-24-3	Decachlorobiphenyl	63%		10-1	18%



(a) High percent recoveries and no positive found in the sample.

ND = Not detected

MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

ACCUTEST	GW		СНА	IN (OF (CUS	T)D	Y			.55									1	_0	F_/
NJ			221 TEL 712	5 flume (029-0200	III, Dayer	n, NJ 00	110 1490-1	ARD				F 40	àď	2)	153	593	à .	-ŧ	Circles Co				
Client / Reporting Information	*A.B.(******				neth de el	00m			r jie liki	स्ट्राट (44 <u>C</u> .	- 1						I =			JC	7. 1	
Continuo y Harina	Project Name		D Tropic	4 murriers	mary 1	Der to	(X-444)			-		2051	911	rednes	Sad Az	rajvapa p	1 646	TEST	CODE	shoot	Ψ		Matrix Codes
Anderson Mulholland & Associates Street Andrees	BMSMC 3r	d Quarter Groun	chapter See	upling 2	016							Ì	3					1		ì			DW - Orinang Year
2700 Westchneiber Avenue, Suite 417	Strapt				. Pro-						4	~ -, i	02.10D				ĺ		Ĺ	i		-	GW - Gets and Was WW - Victor SW - Sunface West
City Siave	Co Cay		State	Compa	informat ny fiterna	lon (F gr	Person	i Branco	Report	-1			2	-				ĺ					SO Sor
Purchase NY Press Cortag	18577 Humacao		PR		ACCIONAL TO A CONTRACT OF THE								2 V V	-		1	1						SED Sedment
Terry Taylor	02rd 2016			30007	-							1	1	89				l	1				LIG-Other Liques AIR - Air
Priorie 8	Fat 8 Client Purchas	re Circlar a		Coy				Store			Σip	:	Naphthalene	1 4		}		l			'] .	SCL : Citiar Sale WP : Wide
914-251-0406 Sareglerish harrierist	Phone 4 Propert Manage			Afternio								_ :	2 2	, g				l	1	1			FB Finks Blance EG-Equipment Mars
N. Rivera,R. Stuart, J.D. Valle, D. Linde	Hrand Terry Taylo	•			•								De and	Pesticides	80158	ļ	1]				RG-Arres Blank TB-The Blank
2.6			Conclus	_	1		Ъ	Nam	Des 100 per		Dellas.	⇉	9 9	6	Vle B					1			
Field ID / Point of Collection	MECHANI VIII I		Bru			İ.,		10 F	g 1	dil	8 8	113	1,4-040	Organo	LMA		Į.	l			1 /		
1 5-30		9-6-16	1645	NR	GW	_	3	ᆁ	12 1		A 5	- -	_		13	<u>_</u>	-	<u> </u>	 	<u> </u>			LAB USE CHILY
2 9-34		9-7-16		_	$\overline{}$	6		- -		3		- -2		<u>X</u>	X	1_	_	<u> </u>	╙		Ш	\square	£41
3 5-33		9-7-16	1350		GW	6_	-3	- -		1	- -	-	XX	X	X				<u> </u>				VIIOI
4 5-37		9.7 11			GW	6	3	+	ļ			12	۷ ک	_	X	\perp	_	L	<u> </u>				
5 S-36		4 7 11	1656	NK	Gw	6	13	-		4	44				<u>- X</u>	1	\perp						
1 5-40D		1-1-16	1736	NC	ČN.	6	2	-	2		41	()	مرك		X	_	ļ.,	_				I	
7 6 405		9-8-16	1403	7 2		6	2	-	1		$\bot\!\!\!\!\bot$	LL:		<u> 17</u>	<u> ' 'X</u>					Ш			
1 5-103		9-9-16	1539	75/	GW	6	3	+]	1	44	12	<u> </u>	47	X	1_							
							H	+	-	Н	+	- -	-	_	_	<u> </u>		_				\Box	
		 					Н	+-	Н-	-	- -	- -	+		<u> </u>	\vdash	_						
							H		Н-	╢	++	+	- -		_	_	\square		\square		_		
		1000円	data V	10	100	Tix	14.	8 4	121 m	13.5	0 2	3 7	50 Sult	m m2.5	1	11.2	11000	27.0	,		_		
Total Total Total (Survived days)					4.4				Inform	(B)		4 1	NES		2	3.5	Com	146	40.3	353	100	32	3836
SAS. 16 Sharkees Days Sad. 16 Septembers Days (by Contract on	Approved the Chap	about PAT); / Date:				al "A" (L	avel (1		1177		A Aresia										Dir.	
18 Day RUSH		ASESSMENT	r QA Þ≃	nto :	ULLTI (61 "B" L Lavel 3+4	.8441 Z 6 I	1			SP Coo a Formu	ngary E -	•	Add	10 SV	OC n	port 1	-Mat	ylnag	إسلادام	ene		
Districts			0		U Reduci					EDU	Portua					_							
2 Day EMERICENCY	LABEL	MERICATIO	N OF		-	et -C- Contributi	m 747	- Ban															
1 Day EMERSENCY E-Marganique Rush T/A cinta analysis VA Lastyre						Communic	La Terr	- Pron.	m + Q0	Surr	nary							_					
E TELEFORT TO THE CONTROL OF THE CON	84	mple Custody me	of the discount	mied be	low sach	U Reduc Since sa	mpies	Cher	• (3C 52 100 por		y + Peri	ينو ا اعد	data Churin	r delbes			_	organization			F L 10	- 22 2 - 4	A CONTRACTOR
· Inthital	9-8-16/200	Fel	163							- 4	FY	_			Page 274	3	30	ocatead a	Dy:				TARRET .
	hada Tibuur:	Secolard By:		_			e Tubup	ds.Ped 1	by:						9/1			l manhad		-		_	
Professional pyr	late Planac	Testing Sy:					4		_		- п	bend											
6		Ts.				- 1	14	27	40	64	100	_		Lanca States	od Telluna	-				Onlan	- 6	inches To	~ 3 7 9

JC27318: Chain of Custody Page 1 of 3

EXECUTIVE NARRATIVE

SDG No:

JC27318

Laboratory:

Accutest, New Jersey

Analysis:

SW846-8270D

Number of Samples:

7

Location:

BMSMC, Building 5 Area

Humacao, PR

SUMMARY: Seven (7) samples were analyzed for the ABN TCL list following method SW846-8270D; Naphthalene and 1,4-Dioxane were also analyzed by SW846-8270D using the selective ion monitoring (SIM) technique. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: EPA Hazardous Waste Support Section, SOP HW-35A, July 2015—Revision 0. Semivolatile Data Validation. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

Results are valid and can be used for decision making purposes.

Critical issues:

None

Major:

None

Minor:

None

Critical findings: Major findings:

None None

Minor findings:

1. Initial and continuing calibration verifications meet the method and guidance document required performance criteria except in the cases described in the Data Review Worhseet. Analytes not meeting the continuing calibration verification method performance criteria and validation guidance document performance criteria qualified as estimated (J) or (UJ) in affected samples.

Analytes not meeting the continuing calibration verification method performance criteria but were within the validation guidance document performance criteria were not qualified. .

No closing calibration verification included in data package. No action taken, professional judgment.

2. MS/MSD % recoveries and RPD within laboratory control limits except for the cases described in this document.

MS/MSD % recovery for 1,4-dioxane in samples JC27318-1MS/MSD and JC27318-3MS/MSD outside laboratory control limits. No action taken, analyte concentration high compared to amount spiked.

Several analyse did not meet the RPD laboratory control limits in sample JC27318-2MS/MSD. No qualification made on the basis of RPD, professional judgment.

COMMENTS:

Results are valid and can be used for decision making purposes.

Reviewers Name:

Rafael Infante

Chamist License 1888

Signature:

Date:

September 30, 2016

SAMPLE ORGANIC DATA SAMPLE SUMMARY

Sample ID: JC27318-1

Sample location: BMSMC Building 5 Area

Sampling date: 9/6/2016

Matrix: Groundwater

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	5.3	ug/l	1	-	U	Yes
4-Chloro-3-methyl phenol	5.3	ug/l	1	-	U	Yes
2,4-Dichlorophenol	2.1	ug/l	1	-	U	Yes
2,4-Dimethylphenol	5.3	ug/l	1	-	U	Yes
2,4-Dinitrophenol	11	ug/l	1	-	U	Yes
4,6-Dinitro-o-cresol	5.3	ug/l	1	-	U	Yes
2-Methylphenol	2.1	ug/l	1	-	U	Yes
3&4-Methylphenol	2.1	ug/l	1	-	U	Yes
2-Nitrophenol	5.3	ug/l	1	-	U	Yes
4-Nitrophenol	11	ug/l	1	-	U	Yes
Pentachlorophenol	4.2	ug/l	1	-	U	Yes
Phenol	2.1	ug/l	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	5.3	ug/l	1	-	U	Yes
2,4,5-Trichlorophenol	5.3	ug/l	1	-	U	Yes
2,4,6-Trichlorophenol	5.3	ug/l	1	-	U	Yes
Acenaphthene	1.1	ug/l	1	=	U	Yes
Acenaphthylene	1.1	ug/l	1	=	U	Yes
Acetophenone	2.1	ug/l	1	-	U	Yes
Anthracene	1.1	ug/l	1	=	U	Yes
Atrazine	2.1	ug/l	1	=	U	Yes
Benzaldehyde	5.3	ug/l	1	-	U	Yes
Benzo(a)anthracene	1.1	ug/l	1	-	U	Yes
Benzo(a)pyrene	1.1	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	1.1	ug/l	1	-	U	Yes
Benzo(g,h,i)perylene	1.1	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	1.1	ug/l	1	-	U	Yes
4-Bromophenyl phenyl ether	2.1	ug/l	1	-	U	Yes
Butyl benzyl phthalate	2.1	ug/l	1	-	U	Yes
1,1'-Biphenyl	1.1	ug/l	1	-	U	Yes
2-Chloronaphthalene	2.1	ug/l	1	-	U	Yes
4-Chloroaniline	5.3	ug/l	1	-	U	Yes
Carbazole	1.1	ug/l	1	-	U	Yes
Caprolactam	2.1	ug/l	1	-	U	Yes
Chrysene	1.1	ug/l	1	-	U	Yes
bis(2-Chloroethoxy)methane	2.1	ug/l	1	-	U	Yes

bis(2-Chloroethyl)ether	2.1	ug/l	1	-	U	Yes
bis(2-Chloroisopropyl)ether	2.1	ug/l	1	=	U	Yes
4-Chlorophenyl phenyl ether	2.1	ug/l	1	=	U	Yes
2,4-Dinitrotoluene	1.1	ug/l	1	-	U	Yes
2,6-Dinitrotoluene	1.1	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.1	ug/l	1	-	U	Yes
1,4-Dioxane	1330	ug/l	50	-	-	Yes
Dibenzo(a,h)anthracene	1.1	ug/l	1	-	U	Yes
Dibenzofuran	5.3	ug/l	1	-	U	Yes
Di-n-butyl phthalate	2.1	ug/l	1	=	U	Yes
Di-n-octyl phthalate	2.1	ug/l	1	=	U	Yes
Diethyl phthalate	2.1	ug/l	1	-	U	Yes
Dimethyl phthalate	2.1	ug/l	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	2.1	ug/l	1	-	U	Yes
Fluoranthene	1.1	ug/l	1	-	U	Yes
Fluorene	1.1	ug/l	1	-	U	Yes
Hexachlorobenzene	1.1	ug/l	1	-	U	Yes
Hexachlorobutadiene	1.1	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	11	ug/l	1	-	U	Yes
Hexachloroethane	2.1	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.1	ug/l	1	-	U	Yes
Isophorone	2.1	ug/l	1	-	U	Yes
1-Methylnaphthalene	1.1	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.1	ug/l	1	-	U	Yes
2-Nitroaniline	5.3	ug/l	1	-	U	Yes
3-Nitroaniline	5.3	ug/l	1	-	U	Yes
4-Nitroaniline	5.3	ug/l	1	-	U	Yes
Nitrobenzene	2.1	ug/l	1	=	U	Yes
N-Nitroso-di-n-propylamine	2.1	ug/l	1	-	U	Yes
Nitrosodiphenylamine	5.3	ug/l	1	=	U	Yes
Phenanthrene	1.1	ug/l	1	-	U	Yes
Pyrene	1.1	ug/l	1	=	U	Yes
1,2,4,5-Tetrachlorobenzene	2.1	ug/l	1	-	U	Yes
METHOD:	8270D (SII	M)				
Naphthalene	0.11	ug/l	1	-	U	Yes

Sample location: BMSMC Building 5 Area

Sampling date: 9/7/2016

Matrix: Groundwater

Analyte Name	Result	Units	Dilution Factor	Lah Flag	Validation	Renortable
2-Chlorophenol	5.0	ug/l	1	Lab Hag	U	Yes
4-Chloro-3-methyl phenol	5.0	ug/l	1	_	U	Yes
2,4-Dichlorophenol	2.0	ug/l	1	_	U	Yes
2,4-Dimethylphenol	5.0	ug/l	1	_	U	Yes
2,4-Dinitrophenol	10	ug/l	1	_	U	Yes
4,6-Dinitro-o-cresol	5.0	ug/l	1	_	U	Yes
2-Methylphenol	2.0	ug/l	1	_	U	Yes
3&4-Methylphenol	2.0	ug/l	1	_	U	Yes
2-Nitrophenol	5.0	ug/l	1	_	U	Yes
4-Nitrophenol	10	ug/l	1	_	U	Yes
Pentachlorophenol	4.0	ug/l	1	_	U	Yes
Phenol	2.0	ug/l	1	_	U	Yes
2,3,4,6-Tetrachlorophenol	5.0	ug/l	1	_	U	Yes
2,4,5-Trichlorophenol	5.0	ug/l	1	_	U	Yes
2,4,6-Trichlorophenol	5.0	ug/l	1	_	U	Yes
Acenaphthene	1.0	ug/l	1	_	U	Yes
Acenaphthylene	1.0	ug/l	1	_	U	Yes
Acetophenone	2.0	ug/l	1	_	U	Yes
Anthracene	1.0	ug/l	1	_	U	Yes
Atrazine	2.0	ug/l	1	_	U	Yes
Benzaldehyde	5.0	ug/l	1	_	U	Yes
Benzo(a)anthracene	1.0	ug/l	1	_	U	Yes
Benzo(a)pyrene	1.0	ug/l	1	_	U	Yes
Benzo(b)fluoranthene	1.0	ug/l	1	_	U	Yes
Benzo(g,h,i)perylene	1.0	ug/l	1	_	U	Yes
Benzo(k)fluoranthene	1.0	ug/l	1	_	U	Yes
4-Bromophenyl phenyl ether	2.0	ug/l	1	_	U	Yes
Butyl benzyl phthalate	2.0	ug/l	1	_	U	Yes
1,1'-Biphenyl	1.0	ug/l	1	-	U	Yes
2-Chloronaphthalene	2.0	ug/l	1	_	U	Yes
4-Chloroaniline	5.0	ug/l	1	_	U	Yes
Carbazole	1.0	ug/l	1	_	U	Yes
Caprolactam	2.0	ug/l	1	_	Ū	Yes
•		٥,				

Chrysene	1.0	ug/l	1	-	U	Yes
bis(2-Chloroethoxy)methane	2.0	ug/l	1	-	U	Yes
bis(2-Chloroethyl)ether	2.0	ug/l	1	_	U	Yes
bis(2-Chloroisopropyl)ether	2.0	ug/l	1	-	U	Yes
4-Chlorophenyl phenyl ether	2.0	ug/l	1	-	U	Yes
2,4-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
2,6-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.0	ug/l	1	-	U	Yes
1,4-Dioxane	12.6	ug/l	1	-	-	Yes
Dibenzo(a,h)anthracene	1.0	ug/l	1	-	U	Yes
Dibenzofuran	5.0	ug/l	1	=	U	Yes
Di-n-butyl phthalate	2.0	ug/l	1	-	U	Yes
Di-n-octyl phthalate	2.0	ug/l	1	-	UJ	Yes
Diethyl phthalate	2.0	ug/l	1	=	U	Yes
Dimethyl phthalate	2.0	ug/l	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	2.0	ug/l	1	-	U	Yes
Fluoranthene	1.0	ug/l	1	-	U	Yes
Fluorene	1.0	ug/l	1	-	U	Yes
Hexachlorobenzene	1.0	ug/l	1	-	U	Yes
Hexachlorobutadiene	1.0	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	10	ug/l	1	-	U	Yes
Hexachloroethane	2.0	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.0	ug/l	1	-	U	Yes
Isophorone	2.0	ug/l	1	-	U	Yes
1-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.0	ug/l	1	=	U	Yes
2-Nitroaniline	5.0	ug/l	1	-	U	Yes
3-Nitroaniline	5.0	ug/l	1	-	U	Yes
4-Nitroaniline	5.0	ug/l	1	=	U	Yes
Nitrobenzene	2.0	ug/l	1	-	U	Yes
N-Nitroso-di-n-propylamine	2.0	ug/l	1	=	U	Yes
Nitrosodiphenylamine	5.0	ug/l	1	-	U	Yes
Phenanthrene	1.0	ug/l	1	-	U	Yes
Pyrene	1.0	ug/l	J	=	U	Yes
1,2,4,5-Tetrachlorobenzene	2.0	ug/l	1	-	U	Yes
METHOD:	8270D (SI	M)				

0.10

ug/l 1

U

Yes

Naphthalene

Sample location: BMSMC Building 5 Area

Sampling date: 6/10/2016 Matrix: Groundwater

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	5.0	ug/l	1	-	U	Yes
4-Chloro-3-methyl phenol	5.0	ug/l	1	-	U	Yes
2,4-Dichlorophenol	2.0	ug/l	1	-	U	Yes
2,4-Dimethylphenol	5.0	ug/l	1	-	U	Yes
2,4-Dinitrophenol	10	ug/l	1	-	U	Yes
4,6-Dinitro-o-cresol	5.0	ug/l	1	-	U	Yes
2-Methylphenol	2.0	ug/l	1	-	U	Yes
3&4-Methylphenol	2.0	ug/l	1	-	U	Yes
2-Nitrophenol	5.0	ug/l	1	-	U	Yes
4-Nitrophenol	10	ug/l	1	-	U	Yes
Pentachlorophenol	4.0	ug/l	1	-	U	Yes
Phenol	2.0	ug/l	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	5.0	ug/l	1	-	U	Yes
2,4,5-Trichlorophenol	5.0	ug/l	1	-	U	Yes
2,4,6-Trichlorophenol	5.0	ug/l	1	-	U	Yes
Acenaphthene	1.0	ug/l	1	-	U	Yes
Acenaphthylene	1.0	ug/l	1	-	U	Yes
Acetophenone	2.0	ug/l	1	-	U	Yes
Anthracene	1.4	ug/l	1	-	-	Yes
Atrazine	2.0	ug/l	1	-	U	Yes
Benzaldehyde	5.0	ug/l	1	-	U	Yes
Benzo(a)anthracene	1.0	ug/l	1	-	U	Yes
Benzo(a)pyrene	1.0	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	1.0	ug/l	1	-	U	Yes
Benzo(g,h,i)perylene	1.0	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	1.0	ug/l	1	-	U	Yes
4-Bromophenyl phenyl ether	2.0	ug/l	1	-	U	Yes
Butyl benzyl phthalate	2.0	ug/l	1	-	U	Yes
1,1'-Biphenyl	1.0	ug/l	1	-	U	Yes
2-Chloronaphthalene	2.0	ug/l	1	-	U	Yes
4-Chloroaniline	5.0	ug/l	1	-	U	Yes
Carbazole	1.0	ug/l	1	-	U	Yes

Caprolactam	2.0	ug/l	1	-	U	Yes
Chrysene	1.0	ug/l	1	-	U	Yes
bis(2-Chloroethoxy)methane	2.0	ug/l	1	-	U	Yes
bis(2-Chloroethyl)ether	2.0	ug/l	1	-	U	Yes
bis(2-Chloroisopropyl)ether	2.0	ug/l	1	-	U	Yes
4-Chlorophenyl phenyl ether	2.0	ug/l	1	-	U	Yes
2,4-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
2,6-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.0	ug/l	1	-	U	Yes
1,4-Dioxane	18.2	ug/l	1	-	-	Yes
Dibenzo(a,h)anthracene	1.0	ug/l	1	=	U	Yes
Dibenzofuran	5.0	ug/l	1	=	U	Yes
Di-n-butyl phthalate	2.0	ug/l	1	-	U	Yes
Di-n-octyl phthalate	2.0	ug/l	1	=	UJ	Yes
Diethyl phthalate	2.0	ug/l	1	-	U	Yes
Dimethyl phthalate	2.0	ug/l	1	=	U	Yes
bis(2-Ethylhexyl)phthalate	2.0	ug/l	1	-	U	Yes
Fluoranthene	1.0	ug/l	1	-	U	Yes
Fluorene	1.0	ug/l	1	-	U	Yes
Hexachlorobenzene	1.0	ug/l	1	=	U	Yes
Hexachlorobutadiene	1.0	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	11	ug/l	1	-	U	Yes
Hexachloroethane	2.0	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.0	ug/l	1	-	U	Yes
Isophorone	2.0	ug/l	1	=	U	Yes
1-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.0	ug/l	1	=	U	Yes
2-Nitroaniline	5.0	ug/l	1	-	U	Yes
3-Nitroaniline	5.0	ug/l	1	=	U	Yes
4-Nitroaniline	5.0	ug/l	1	-	U	Yes
Nitrobenzene	2.0	ug/l	1	=	U	Yes
N-Nitroso-di-n-propylamine	2.0	ug/l	1	-	U	Yes
Nitrosodiphenylamine	5.0	ug/l	1	=	U	Yes
Phenanthrene	1.0	ug/l	1	-	U	Yes
Pyrene	1.0	ug/l	1	-	U	Yes
1,2,4,5-Tetrachlorobenzene	2.0	ug/l	1	-	U	Yes

METHOD: 8270D (SIM)

Sample location: BMSMC Building 5 Area

Sampling date: 9/7/2016 Matrix: Groundwater

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	5.0	ug/l	1	-	U	Yes
4-Chloro-3-methyl phenol	5.0	ug/l	1	-	U	Yes
2,4-Dichlorophenol	2.0	ug/l	1	-	U	Yes
2,4-Dimethylphenol	5.0	ug/l	1	-	U	Yes
2,4-Dinitrophenol	10	ug/l	1	-	U	Yes
4,6-Dinitro-o-cresol	5.0	ug/l	1	-	U	Yes
2-Methylphenol	2.0	ug/l	1	-	U	Yes
3&4-Methylphenol	2.0	ug/l	1	-	U	Yes
2-Nitrophenol	5.0	ug/l	1	-	U	Yes
4-Nitrophenol	10	ug/l	1	-	U	Yes
Pentachlorophenol	5.0	ug/l	1	-	U	Yes
Phenol	2.0	ug/l	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	5.0	ug/l	1	-	U	Yes
2,4,5-Trichlorophenol	5.0	ug/l	1	-	U	Yes
2,4,6-Trichlorophenol	5.0	ug/l	1	-	U	Yes
Acenaphthene	1.0	ug/l	1	-	U	Yes
Acenaphthylene	1.0	ug/l	1	-	U	Yes
Acetophenone	2.0	ug/l	1	-	U	Yes
Anthracene	1.0	ug/l	1	-	U	Yes
Atrazine	2.0	ug/l	1	-	U	Yes
Benzaldehyde	5.0	ug/l	1	-	U	Yes
Benzo(a)anthracene	1.0	ug/l	1	-	U	Yes
Benzo(a)pyrene	1.0	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	1.0	ug/l	1	-	U	Yes
Benzo(g,h,i)perylene	1.0	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	1.0	ug/l	1	-	U	Yes
4-Bromophenyl phenyl ether	2.0	ug/l	1	-	U	Yes
Butyl benzyl phthalate	2.0	ug/l	1	-	U	Yes
1,1'-Biphenyl	1.0	ug/l	1	-	U	Yes
2-Chloronaphthalene	2.0	ug/l	1	-	U	Yes
4-Chloroaniline	5.0	ug/l	1	-	U	Yes

Carbazole	1.0	ug/l	1	-	U	Yes
Caprolactam	2.0	ug/l	1	-	U	Yes
Chrysene	1.0	ug/l	1	-	U	Yes
bis(2-Chloroethoxy)methane	2.0	ug/l	1	-	U	Yes
bis(2-Chloroethyl)ether	2.0	ug/l	1	-	U	Yes
bis(2-Chloroisopropyl)ether	2.0	ug/l	1	-	U	Yes
4-Chlorophenyl phenyl ether	2.0	ug/l	1	-	U	Yes
2,4-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
2,6-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.0	ug/l	1	-	U	Yes
1,4-Dioxane	19.7	ug/l	1	-	-	Yes
Dibenzo(a,h)anthracene	1.0	ug/l	1	-	U	Yes
Dibenzofuran	5.0	ug/l	1	-	U	Yes
Di-n-butyl phthalate	2.0	ug/l	1	-	U	Yes
Di-n-octyl phthalate	2.0	ug/l	1	-	UJ	Yes
Diethyl phthalate	2.0	ug/l	1	-	U	Yes
Dimethyl phthalate	2.0	ug/l	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	2.1	ug/l	1	-	-	Yes
Fluoranthene	1.0	ug/l	1	-	U	Yes
Fluorene	1.0	ug/l	1	-	U	Yes
Hexachlorobenzene	1.0	ug/l	1	-	U	Yes
Hexachlorobutadiene	1.0	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	10	ug/l	1	-	U	Yes
Hexachloroethane	2.0	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.0	ug/l	1	-	U	Yes
Isophorone	2.0	ug/l	1	-	U	Yes
1-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Nitroaniline	5.0	ug/l	1	-	U	Yes
3-Nitroaniline	5.0	ug/l	1	-	U	Yes
4-Nitroaniline	5.0	ug/l	1	-	U	Yes
Nitrobenzene	2.0	ug/l	1	-	U	Yes
N-Nitroso-di-n-propylamine	2.0	ug/l	1	-	U	Yes
Nitrosodiphenylamine	5.0	ug/l	1	-	U	Yes
Phenanthrene	1.0	ug/l	1	-	U	Yes
Pyrene	1.0	ug/l	1	-	U	Yes
1,2,4,5-Tetrachlorobenzene	2.0	ug/l	1	-	U	Yes
METHOD	9370D /CU	۸.4۱				
	8270D (SII		1		11	Voc
Naphthalene	0.10	ug/l	1	-	U	Yes

Sample location: BMSMC Building 5 Area

Sampling date: 9/7/2016 Matrix: Groundwater

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	5.0	ug/l	1	-	U	Yes
4-Chloro-3-methyl phenol	5.0	ug/l	1	-	U	Yes
2,4-Dichlorophenol	2.0	ug/l	1	-	U	Yes
2,4-Dimethylphenol	5.0	ug/l	1	-	U	Yes
2,4-Dinitrophenol	10	ug/l	1	-	U	Yes
4,6-Dinitro-o-cresol	5.0	ug/l	1	-	U	Yes
2-Methylphenol	2.0	ug/l	1	-	U	Yes
3&4-Methylphenol	2.0	ug/l	1	-	U	Yes
2-Nitrophenol	5.0	ug/l	1	-	U	Yes
4-Nitrophenol	10	ug/l	1	-	U	Yes
Pentachlorophenol	5.0	ug/l	1	-	U	Yes
Phenol	2.0	ug/l	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	5.0	ug/l	1	-	U	Yes
2,4,5-Trichlorophenol	5.0	ug/l	1	-	U	Yes
2,4,6-Trichlorophenol	5.0	ug/l	1	-	U	Yes
Acenaphthene	1.0	ug/l	1	-	U	Yes
Acenaphthylene	1.0	ug/l	1	-	U	Yes
Acetophenone	2.0	ug/l	1	-	U	Yes
Anthracene	1.0	ug/l	1	-	U	Yes
Atrazine	2.0	ug/l	1	-	U	Yes
Benzaldehyde	5.0	ug/l	1	-	U	Yes
Benzo(a)anthracene	1.0	ug/l	1	-	U	Yes
Benzo(a)pyrene	1.0	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	1.0	ug/l	1	-	U	Yes
Benzo(g,h,i)perylene	1.0	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	1.0	ug/l	1	-	U	Yes
4-Bromophenyl phenyl ether	2.0	ug/l	1	-	U	Yes
Butyl benzyl phthalate	2.0	ug/l	1	-	U	Yes
1,1'-Biphenyl	1.0	ug/l	1	-	U	Yes
2-Chloronaphthalene	2.0	ug/l	1	-	U	Yes
4-Chloroaniline	1.0	ug/l	1	-	U	Yes
Carbazole	1.0	ug/l	1	-	U	Yes

Caprolactam	2.0	ug/l	1	_	U	Yes
Chrysene	1.0	ug/l	1	=	U	Yes
bis(2-Chloroethoxy)methane	2.0	ug/l	1	=	U	Yes
bis(2-Chloroethyl)ether	2.0	ug/l	1	-	U	Yes
bis(2-Chloroisopropyl)ether	2.0	ug/l	1	-	U	Yes
4-Chlorophenyl phenyl ether	2.0	ug/l	1	-	U	Yes
2,4-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
2,6-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.0	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	1.0	ug/l	1	-	U	Yes
Dibenzofuran	5.0	ug/l	1	-	U	Yes
Di-n-butyl phthalate	2.0	ug/l	1	-	U	Yes
Di-n-octyl phthalate	2.0	ug/l	1	-	UJ	Yes
Diethyl phthalate	2.0	ug/l	1	-	U	Yes
Dimethyl phthalate	2.0	ug/l	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	2.0	ug/l	1	-	U	Yes
Fluoranthene	1.0	ug/l	1	-	U	Yes
Fluorene	1.0	ug/l	1	-	U	Yes
Hexachlorobenzene	1.0	ug/l	1	-	U	Yes
Hexachlorobutadiene	1.0	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	10	ug/l	1	-	U	Yes
Hexachloroethane	2.0	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.0	ug/l	1	-	U	Yes
Isophorone	2.0	ug/l	1	-	U	Yes
1-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Nitroaniline	5.0	ug/l	1	-	U	Yes
3-Nitroaniline	5.0	ug/l	1	-	U	Yes
4-Nitroaniline	5.0	ug/l	1	-	U	Yes
Nitrobenzene	2.0	ug/l	1	-	U	Yes
N-Nitroso-di-n-propylamine	2.0	ug/l	1	_	U	Yes
Nitrosodiphenylamine	5.0	ug/l	1	-	U	Yes
Phenanthrene	1.0	ug/l	1	_	U	Yes
Pyrene	1.0	ug/l	1	=	U	Yes
1,2,4,5-Tetrachlorobenzene	2.0	ug/l	1	_	U	Yes
METHOD:	•					
Naphthalene	0.10	ug/l	1	_	U	Yes
1,4-Dioxane	3.23	ug/l	1	-	-	Yes

Sample location: BMSMC Building 5 Area

Sampling date: 9/8/2016 Matrix: Groundwater

2-Chlorophenol 5.1 ug/l 1 - U Yes 4-Chloro-3-methyl phenol 5.1 ug/l 1 - U Yes 2,4-Dichlorophenol 2.0 ug/l 1 - U Yes 2,4-Dimethylphenol 5.1 ug/l 1 - U Yes 2,4-Dimethylphenol 5.1 ug/l 1 - U Yes 2,4-Dimethylphenol 10 ug/l 1 - U Yes 4,6-Dinitrophenol 10 ug/l 1 - U Yes 2,4-Dinitrophenol 2.0 ug/l 1 - U Yes 3&4-Methylphenol 2.0 ug/l 1 - U Yes 3&4-Methylphenol 2.0 ug/l 1 - U Yes 2-Nitrophenol 5.1 ug/l 1 - U Yes 2-Nitrophenol 5.1 ug/l 1 - U Yes 4-Nitrophenol 5.1 ug/l 1 - U Yes 4-Nitrophenol 10 ug/l 1 - U Yes Pentachlorophenol 10 ug/l 1 - U Yes Phenol 2.0 ug/l 1 - U Yes 2,3,4,6-Tetrachlorophenol 5.1 ug/l 1 - U Yes 2,3,4,6-Tetrachlorophenol 5.1 ug/l 1 - U Yes 2,4,5-Trichlorophenol 5.1 ug/l 1 - U Yes Acenaphthene 1.0 ug/l 1 - U Yes Acenaphthene 1.0 ug/l 1 - U Yes Acenaphthylene 2.0 ug/l 1 - U Yes Acenaphthylene 1.0 ug/l 1 - U Yes Benzo(a)pyrene 1.0 ug/l 1 - U Yes Benzo(b)fluoranthene 1.0 ug/l 1 - U Ye	Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2,4-Dichlorophenol 2.0 ug/l 1 - U Yes 2,4-Dinitrophenol 10 ug/l 1 - U Yes 2,4-Dinitrophenol 10 ug/l 1 - U Yes 4,6-Dinitro-o-cresol 5.1 ug/l 1 - U Yes 2-Methylphenol 2.0 ug/l 1 - U Yes 3&4-Methylphenol 2.0 ug/l 1 - U Yes 3-Nitrophenol 5.1 ug/l 1 - U Yes 4-Nitrophenol 10 ug/l 1 - U Yes 4-Nitrophenol 4.1 ug/l 1 - U Yes 4-Nitrophenol 4.1 ug/l 1 - U Yes Pentachlorophenol 4.1 ug/l 1 - U Yes Phenol 2.0 ug/l 1 - U Yes 2,4,5-Trichlorophenol 5.1 ug/l 1 - U </td <td>2-Chlorophenol</td> <td>5.1</td> <td>ug/l</td> <td>1</td> <td>-</td> <td>U</td> <td>Yes</td>	2-Chlorophenol	5.1	ug/l	1	-	U	Yes
2,4-Dimethylphenol 5.1 ug/l 1 - U Yes 2,4-Dinitrophenol 10 ug/l 1 - U Yes 4,6-Dinitro-o-cresol 5.1 ug/l 1 - U Yes 2-Methylphenol 2.0 ug/l 1 - U Yes 3&4-Methylphenol 2.0 ug/l 1 - U Yes 2-Nitrophenol 5.1 ug/l 1 - U Yes 4-Nitrophenol 10 ug/l 1 - U Yes 4-Nitrophenol 4.1 ug/l 1 - U Yes 4-Nitrophenol 4.1 ug/l 1 - U Yes Pentachlorophenol 4.1 ug/l 1 - U Yes Phenol 2.0 ug/l 1 - U Yes 2,4,6-Trichlorophenol 5.1 ug/l 1 - U Yes Acenaphthene 1.0 ug/l 1 - U	4-Chloro-3-methyl phenol	5.1	ug/l	1	=	U	Yes
2,4-Dinitrophenol 10 ug/l 1 - U Yes 4,6-Dinitro-o-cresol 5.1 ug/l 1 - U Yes 2-Methylphenol 2.0 ug/l 1 - U Yes 3&4-Methylphenol 2.0 ug/l 1 - U Yes 2-Nitrophenol 5.1 ug/l 1 - U Yes 4-Nitrophenol 10 ug/l 1 - U Yes 4-Nitrophenol 10 ug/l 1 - U Yes 4-Nitrophenol 4.1 ug/l 1 - U Yes Pentachlorophenol 4.1 ug/l 1 - U Yes Phenol 2.0 ug/l 1 - U Yes 2,4,6-Tetrachlorophenol 5.1 ug/l 1 - U Yes Acenaphthene 1.0 ug/l 1 - U Yes Acenaphthene 1.0 ug/l 1 - U	2,4-Dichlorophenol	2.0	ug/l	1	=	U	Yes
4,6-Dinitro-o-cresol 5.1 ug/l 1 - U Yes 2-Methylphenol 2.0 ug/l 1 - U Yes 3&4-Methylphenol 2.0 ug/l 1 - U Yes 2-Nitrophenol 5.1 ug/l 1 - U Yes 4-Nitrophenol 10 ug/l 1 - U Yes Pentachlorophenol 4.1 ug/l 1 - U Yes Phenol 2.0 ug/l 1 - U Yes Phenol 2.0 ug/l 1 - U Yes 2,3,4,6-Tetrachlorophenol 5.1 ug/l 1 - U Yes 2,4,5-Trichlorophenol 5.1 ug/l 1 - U Yes Acenaphthene 1.0 ug/l 1 - U Yes Acenaphthylene 1.0 ug/l 1 - U Yes Acetophenone 2.0 ug/l 1 - U	2,4-Dimethylphenol	5.1	ug/l	1	=	U	Yes
2-Methylphenol 2.0 ug/l 1 - U Yes 3&4-Methylphenol 2.0 ug/l 1 - U Yes 2-Nitrophenol 5.1 ug/l 1 - U Yes 4-Nitrophenol 10 ug/l 1 - U Yes Pentachlorophenol 4.1 ug/l 1 - U Yes Phenol 2.0 ug/l 1 - U Yes 2,3,4,6-Tetrachlorophenol 5.1 ug/l 1 - U Yes 2,4,5-Trichlorophenol 5.1 ug/l 1 - U Yes Acetaphthene 1.0 ug/l 1 - U Yes Aceaphthene 1.0 ug/l 1 - U Yes Acetophenone 2.0 ug/l 1 - U Yes Atrazine 2.0 ug/l 1 - U	2,4-Dinitrophenol	10	ug/l	1	=	U	Yes
3&4-Methylphenol 2.0 ug/l 1 - U Yes 2-Nitrophenol 5.1 ug/l 1 - U Yes 4-Nitrophenol 10 ug/l 1 - U Yes Pentachlorophenol 4.1 ug/l 1 - U Yes Phenol 2.0 ug/l 1 - U Yes 2,3,4,6-Tetrachlorophenol 5.1 ug/l 1 - U Yes 2,4,5-Trichlorophenol 5.1 ug/l 1 - U Yes Acenaphthene 1.0 ug/l 1 - U Yes Acenaphthylene 1.0 ug/l 1 - U Yes Acetophenone 2.0 ug/l 1 - U Yes Atrazine 2.0 ug/l 1 - U Yes Benzo(a)anthracene 1.0 ug/l 1 - U	4,6-Dinitro-o-cresol	5.1	ug/l	1	=	U	Yes
2-Nitrophenol 5.1 ug/l 1 - U Yes 4-Nitrophenol 10 ug/l 1 - U Yes Pentachlorophenol 4.1 ug/l 1 - U Yes Phenol 2.0 ug/l 1 - U Yes 2,3,4,6-Tetrachlorophenol 5.1 ug/l 1 - U Yes 2,4,5-Trichlorophenol 5.1 ug/l 1 - U Yes Acenaphthene 1.0 ug/l 1 - U Yes Acenaphthylene 1.0 ug/l 1 - U Yes Acetophenone 2.0 ug/l 1 - U Yes Actazine 1.0 ug/l 1 - U Yes Benzaldehyde 5.1 ug/l 1 - U Yes Benzo(a)apyrene 1.0 ug/l 1 - U	2-Methylphenol	2.0	ug/l	1	-	U	Yes
4-Nitrophenol 10 ug/l 1 - U Yes Pentachlorophenol 4.1 ug/l 1 - U Yes Phenol 2.0 ug/l 1 - U Yes 2,3,4,6-Tetrachlorophenol 5.1 ug/l 1 - U Yes 2,4,5-Trichlorophenol 5.1 ug/l 1 - U Yes 2,4,6-Trichlorophenol 5.1 ug/l 1 - U Yes Acenaphthene 1.0 ug/l 1 - U Yes Acenaphthylene 1.0 ug/l 1 - U Yes Acetophenone 2.0 ug/l 1 - U Yes Acetophenone 2.0 ug/l 1 - U Yes Atrazine 1.0 ug/l 1 - U Yes Benzolehyde 5.1 ug/l 1 - U Yes Benzo(a)anthracene 1.0 ug/l 1 - U	3&4-Methylphenol	2.0	ug/l	1	=	U	Yes
Pentachlorophenol 4.1 ug/l 1 - U Yes Phenol 2.0 ug/l 1 - U Yes 2,3,4,6-Tetrachlorophenol 5.1 ug/l 1 - U Yes 2,4,5-Trichlorophenol 5.1 ug/l 1 - U Yes 2,4,6-Trichlorophenol 5.1 ug/l 1 - U Yes Acenaphthene 1.0 ug/l 1 - U Yes Acenaphthylene 1.0 ug/l 1 - U Yes Acetophenone 2.0 ug/l 1 - U Yes Actophenone 2.0 ug/l 1 - U Yes Antracene 1.0 ug/l 1 - U Yes Benzaldehyde 5.1 ug/l 1 - U Yes Benzo(a)apyrene 1.0 ug/l 1 - U	2-Nitrophenol	5.1	ug/l	1	-	U	Yes
Phenol 2.0 ug/l 1 - U Yes 2,3,4,6-Tetrachlorophenol 5.1 ug/l 1 - U Yes 2,4,5-Trichlorophenol 5.1 ug/l 1 - U Yes 2,4,6-Trichlorophenol 5.1 ug/l 1 - U Yes Acenaphthene 1.0 ug/l 1 - U Yes Acenaphthylene 1.0 ug/l 1 - U Yes Acetophenone 2.0 ug/l 1 - U Yes Acetophenone 2.0 ug/l 1 - U Yes Anthracene 1.0 ug/l 1 - U Yes Benzaldehyde 5.1 ug/l 1 - U Yes Benzo(a)anthracene 1.0 ug/l 1 - U Yes Benzo(b)fluoranthene 1.0 ug/l 1 - U </td <td>4-Nitrophenol</td> <td>10</td> <td>ug/l</td> <td>1</td> <td>-</td> <td>U</td> <td>Yes</td>	4-Nitrophenol	10	ug/l	1	-	U	Yes
2,3,4,6-Tetrachlorophenol 5.1 ug/l 1 - U Yes 2,4,5-Trichlorophenol 5.1 ug/l 1 - U Yes 2,4,6-Trichlorophenol 5.1 ug/l 1 - U Yes Acenaphthene 1.0 ug/l 1 - U Yes Acenaphthylene 1.0 ug/l 1 - U Yes Acetophenone 2.0 ug/l 1 - U Yes Anthracene 1.0 ug/l 1 - U Yes Atrazine 2.0 ug/l 1 - U Yes Benzaldehyde 5.1 ug/l 1 - U Yes Benzo(a)anthracene 1.0 ug/l 1 - U Yes Benzo(b)fluoranthene 1.0 ug/l 1 - U Yes Benzo(g,h,i)perylene 1.0 ug/l 1 - U Yes Benzo(k)fluoranthene 1.0 ug/l 1 -<	Pentachlorophenol	4.1	ug/l	1	-	U	Yes
2,4,5-Trichlorophenol 5.1 ug/l 1 - U Yes 2,4,6-Trichlorophenol 5.1 ug/l 1 - U Yes Acenaphthene 1.0 ug/l 1 - U Yes Acenaphthylene 1.0 ug/l 1 - U Yes Acetophenone 2.0 ug/l 1 - U Yes Anthracene 1.0 ug/l 1 - U Yes Atrazine 2.0 ug/l 1 - U Yes Benzaldehyde 5.1 ug/l 1 - U Yes Benzo(a)anthracene 1.0 ug/l 1 - U Yes Benzo(b)fluoranthene 1.0 ug/l 1 - U Yes Benzo(g,h,i)perylene 1.0 ug/l 1 - U Yes Benzo(k)fluoranthene 1.0 ug/l 1 - U Yes Benzo(k)fluoranthene 2.0 ug/l 1 -	Phenol	2.0	ug/l	1	-	U	Yes
2,4,6-Trichlorophenol 5.1 ug/l 1 - U Yes Acenaphthene 1.0 ug/l 1 - U Yes Acenaphthylene 1.0 ug/l 1 - U Yes Acetophenone 2.0 ug/l 1 - U Yes Anthracene 1.0 ug/l 1 - U Yes Atrazine 2.0 ug/l 1 - U Yes Benzaldehyde 5.1 ug/l 1 - U Yes Benzo(a)anthracene 1.0 ug/l 1 - U Yes Benzo(a)pyrene 1.0 ug/l 1 - U Yes Benzo(b)fluoranthene 1.0 ug/l 1 - U Yes Benzo(g,h,i)perylene 1.0 ug/l 1 - U Yes Benzo(k)fluoranthene 1.0 ug/l 1 - U Yes 4-Bromophenyl phenyl ether 2.0 ug/l 1 -	2,3,4,6-Tetrachlorophenol	5.1	ug/l	1	-	U	Yes
Acenaphthene 1.0 ug/l 1 - U Yes Acenaphthylene 1.0 ug/l 1 - U Yes Acetophenone 2.0 ug/l 1 - U Yes Anthracene 1.0 ug/l 1 - U Yes Atrazine 2.0 ug/l 1 - U Yes Benzaldehyde 5.1 ug/l 1 - U Yes Benzo(a)anthracene 1.0 ug/l 1 - U Yes Benzo(a)pyrene 1.0 ug/l 1 - U Yes Benzo(b)fluoranthene 1.0 ug/l 1 - U Yes Benzo(k)fluoranthene 1.0 ug/l 1 - U Yes Benzo(k)fluoranthene 1.0 ug/l 1 - U Yes 4-Bromophenyl phenyl ether 2.0 ug/l 1 - U Yes Butyl benzyl phthalate 2.0 ug/l 1 -	2,4,5-Trichlorophenol	5.1	ug/l	1	-	U	Yes
Acenaphthylene 1.0 ug/l 1 - U Yes Acetophenone 2.0 ug/l 1 - U Yes Anthracene 1.0 ug/l 1 - U Yes Atrazine 2.0 ug/l 1 - U Yes Benzaldehyde 5.1 ug/l 1 - U Yes Benzo(a)anthracene 1.0 ug/l 1 - U Yes Benzo(a)pyrene 1.0 ug/l 1 - U Yes Benzo(b)fluoranthene 1.0 ug/l 1 - U Yes Benzo(k)fluoranthene 1.0 ug/l 1 - U Yes 4-Bromophenyl phenyl ether 2.0 ug/l 1 - U Yes Butyl benzyl phthalate 2.0 ug/l 1 - U Yes 1,1'-Biphenyl 1.0 ug/l 1 - U Yes	2,4,6-Trichlorophenol	5.1	ug/l	1	-	U	Yes
Acetophenone 2.0 ug/l 1 - U Yes Anthracene 1.0 ug/l 1 - U Yes Atrazine 2.0 ug/l 1 - U Yes Benzaldehyde 5.1 ug/l 1 - U Yes Benzo(a)anthracene 1.0 ug/l 1 - U Yes Benzo(a)pyrene 1.0 ug/l 1 - U Yes Benzo(b)fluoranthene 1.0 ug/l 1 - U Yes Benzo(k)fluoranthene 1.0 ug/l 1 - U Yes 4-Bromophenyl phenyl ether 2.0 ug/l 1 - U Yes Butyl benzyl phthalate 2.0 ug/l 1 - U Yes 1,1'-Biphenyl 1.0 ug/l 1 - U Yes	Acenaphthene	1.0	ug/l	1	-	U	Yes
Anthracene 1.0 ug/l 1 - U Yes Atrazine 2.0 ug/l 1 - U Yes Benzaldehyde 5.1 ug/l 1 - U Yes Benzo(a)anthracene 1.0 ug/l 1 - U Yes Benzo(a)pyrene 1.0 ug/l 1 - U Yes Benzo(b)fluoranthene 1.0 ug/l 1 - U Yes Benzo(k)fluoranthene 1.0 ug/l 1 - U Yes 4-Bromophenyl phenyl ether 2.0 ug/l 1 - U Yes Butyl benzyl phthalate 2.0 ug/l 1 - U Yes 1,1'-Biphenyl 1.0 ug/l 1 - U Yes	Acenaphthylene	1.0	ug/l	1	-	U	Yes
Atrazine 2.0 ug/l 1 - U Yes Benzaldehyde 5.1 ug/l 1 - U Yes Benzo(a)anthracene 1.0 ug/l 1 - U Yes Benzo(a)pyrene 1.0 ug/l 1 - U Yes Benzo(b)fluoranthene 1.0 ug/l 1 - U Yes Benzo(k)fluoranthene 1.0 ug/l 1 - U Yes 4-Bromophenyl phenyl ether 2.0 ug/l 1 - U Yes Butyl benzyl phthalate 2.0 ug/l 1 - U Yes 1,1'-Biphenyl 1.0 ug/l 1 - U Yes	Acetophenone	2.0	ug/l	1	-	U	Yes
Benzaldehyde 5.1 ug/l 1 - U Yes Benzo(a)anthracene 1.0 ug/l 1 - U Yes Benzo(a)pyrene 1.0 ug/l 1 - U Yes Benzo(b)fluoranthene 1.0 ug/l 1 - U Yes Benzo(g,h,i)perylene 1.0 ug/l 1 - U Yes Benzo(k)fluoranthene 1.0 ug/l 1 - U Yes 4-Bromophenyl phenyl ether 2.0 ug/l 1 - U Yes Butyl benzyl phthalate 2.0 ug/l 1 - U Yes 1,1'-Biphenyl 1.0 ug/l 1 - U Yes	Anthracene	1.0	ug/l	1	-	U	Yes
Benzo(a)anthracene 1.0 ug/l 1 - U Yes Benzo(a)pyrene 1.0 ug/l 1 - U Yes Benzo(b)fluoranthene 1.0 ug/l 1 - UJ Yes Benzo(g,h,i)perylene 1.0 ug/l 1 - U Yes Benzo(k)fluoranthene 1.0 ug/l 1 - U Yes 4-Bromophenyl phenyl ether 2.0 ug/l 1 - U Yes Butyl benzyl phthalate 2.0 ug/l 1 - U Yes 1,1'-Biphenyl 1.0 ug/l 1 - U Yes	Atrazine	2.0	ug/l	1	-	U	Yes
Benzo(a)pyrene 1.0 ug/l 1 - U Yes Benzo(b)fluoranthene 1.0 ug/l 1 - UJ Yes Benzo(g,h,i)perylene 1.0 ug/l 1 - U Yes Benzo(k)fluoranthene 1.0 ug/l 1 - U Yes 4-Bromophenyl phenyl ether 2.0 ug/l 1 - U Yes Butyl benzyl phthalate 2.0 ug/l 1 - U Yes 1,1'-Biphenyl 1.0 ug/l 1 - U Yes	Benzaldehyde	5.1	ug/l	1	-	U	Yes
Benzo(b)fluoranthene 1.0 ug/l 1 - UJ Yes Benzo(g,h,i)perylene 1.0 ug/l 1 - U Yes Benzo(k)fluoranthene 1.0 ug/l 1 - U Yes 4-Bromophenyl phenyl ether 2.0 ug/l 1 - U Yes Butyl benzyl phthalate 2.0 ug/l 1 - U Yes 1,1'-Biphenyl 1.0 ug/l 1 - U Yes	Benzo(a)anthracene	1.0		1	-	U	Yes
Benzo(g,h,i)perylene 1.0 ug/l 1 - U Yes Benzo(k)fluoranthene 1.0 ug/l 1 - U Yes 4-Bromophenyl phenyl ether 2.0 ug/l 1 - U Yes Butyl benzyl phthalate 2.0 ug/l 1 - U Yes 1,1'-Biphenyl 1.0 ug/l 1 - U Yes	Benzo(a)pyrene	1.0	ug/l	1	-	U	Yes
Benzo(k)fluoranthene1.0ug/l1-UYes4-Bromophenyl phenyl ether2.0ug/l1-UYesButyl benzyl phthalate2.0ug/l1-UYes1,1'-Biphenyl1.0ug/l1-UYes	• •	1.0	ug/l	1	-	UJ	Yes
4-Bromophenyl phenyl ether 2.0 ug/l 1 - U Yes Butyl benzyl phthalate 2.0 ug/l 1 - U Yes 1,1'-Biphenyl 1.0 ug/l 1 - U Yes	Benzo(g,h,i)perylene	1.0	ug/l	1	-	U	Yes
Butyl benzyl phthalate 2.0 ug/l 1 - U Yes 1,1'-Biphenyl 1.0 ug/l 1 - U Yes	Benzo(k)fluoranthene	1.0	ug/l	1	-	U	Yes
1,1'-Biphenyl 1.0 ug/l 1 - U Yes		2.0	ug/l	1	-	U	Yes
	Butyl benzyl phthalate	2.0		1	-	U	Yes
2-Chloronaphthalene 2.0 ug/l 1 - U Yes	1,1'-Biphenyl	1.0	ug/l	1	-	U	Yes
	•	2.0	ug/l	1	-	U	Yes
4-Chloroaniline 5.1 ug/l 1 - U Yes				1	-		Yes
Carbazole 1.0 ug/l 1 - U Yes	Carbazole	1.0	ug/l	1	-	U	Yes

Caprolactam	2.0	ug/l	1	-	U	Yes
Chrysene	1.0	ug/l	1	-	U	Yes
bis(2-Chloroethoxy)methane	2.0	ug/l	1	=	U	Yes
bis(2-Chloroethyl)ether	2.0	ug/l	1	-	U	Yes
bis(2-Chloroisopropyl)ether	2.0	ug/l	1	-	U	Yes
4-Chlorophenyl phenyl ether	2.0	ug/l	1	-	U	Yes
2,4-Dinitrotoluene	1.0	ug/l	1	-	UJ	Yes
2,6-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.0	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	1.0	ug/l	1	-	U	Yes
Dibenzofuran	5.1	ug/l	1	-	U	Yes
Di-n-butyl phthalate	2.0	ug/l	1	-	U	Yes
Di-n-octyl phthalate	2.0	ug/l	1	-	UJ	Yes
Diethyl phthalate	2.0	ug/l	1	-	U	Yes
Dimethyl phthalate	2.0	ug/l	1	=	U	Yes
bis(2-Ethylhexyl)phthalate	2.0	ug/l	1	-	U	Yes
Fluoranthene	1.0	ug/l	1	-	U	Yes
Fluorene	1.0	ug/l	1	-	U	Yes
Hexachlorobenzene	1.0	ug/l	1	-	U	Yes
Hexachlorobutadiene	1.0	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	10	ug/l	1	-	U	Yes
Hexachloroethane	2.0	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.0	ug/l	1	-	U	Yes
Isophorone	2.0	ug/l	1	-	U	Yes
1-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Nitroaniline	5.1	ug/l	1	-	U	Yes
3-Nitroaniline	5.1	ug/l	1	-	U	Yes
4-Nitroaniline	5.1	ug/l	1	-	U	Yes
Nitrobenzene	2.0	ug/l	1	-	U	Yes
N-Nitroso-di-n-propylamine	2.0	ug/l	1	-	U	Yes
Nitrosodiphenylamine	5.1	ug/l	1	-	U	Yes
Phenanthrene	1.0	ug/l	1	_	U	Yes
Pyrene	1.0	ug/l	1	=	U	Yes
1,2,4,5-Tetrachlorobenzene	2.0	ug/l	1	_	U	Yes
METHOD:	•	M)				
Naphthalene	0.10	ug/l	1	_	U	Yes
1,4-Dioxane	4.82	ug/l	1	-	-	Yes

Sample location: BMSMC Building 5 Area

Sampling date: 9/8/2016 Matrix: Groundwater

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	5.0	ug/l	1	-	U	Yes
4-Chloro-3-methyl phenol	5.0	ug/l	1	-	U	Yes
2,4-Dichlorophenol	2.0	ug/l	1	-	U	Yes
2,4-Dimethylphenol	5.0	ug/l	1	-	U	Yes
2,4-Dinitrophenol	10	ug/l	1	-	U	Yes
4,6-Dinitro-o-cresol	5.0	ug/l	1	-	U	Yes
2-Methylphenol	2.0	ug/l	1	-	U	Yes
3&4-Methylphenol	2.0	ug/l	1	-	U	Yes
2-Nitrophenol	5.0	ug/l	1	-	U	Yes
4-Nitrophenol	10	ug/l	1	-	U	Yes
Pentachlorophenol	5.0	ug/l	1	-	U	Yes
Phenol	2.0	ug/l	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	5.0	ug/l	1	-	U	Yes
2,4,5-Trichlorophenol	5.0	ug/l	1	-	U	Yes
2,4,6-Trichlorophenol	5.0	ug/l	1	-	U	Yes
Acenaphthene	1.0	ug/l	1	-	U	Yes
Acenaphthylene	1.0	ug/l	1	-	U	Yes
Acetophenone	2.0	ug/l	1	-	U	Yes
Anthracene	1.0	ug/l	1	-	U	Yes
Atrazine	2.0	ug/l	1	-	U	Yes
Benzaldehyde	5.0	ug/l	1	-	U	Yes
Benzo(a)anthracene	1.0	ug/l	1	-	U	Yes
Benzo(a)pyrene	1.0	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	1.0	ug/l	1	-	U	Yes
Benzo(g,h,i)perylene	1.0	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	1.0	ug/l	1	-	U	Yes
4-Bromophenyl phenyl ether	2.0	ug/l	1	-	U	Yes
Butyl benzyl phthalate	2.0	ug/l	1	-	U	Yes
1,1'-Biphenyl	1.0	ug/l	1	-	U	Yes
2-Chloronaphthalene	2.0	ug/l	1	-	U	Yes
4-Chloroaniline	5.0	ug/l	1	-	U	Yes
Carbazole	1.0	ug/l	1	-	U	Yes
Caprolactam	2.0	ug/l	1	-	U	Yes

Chrysene	1.0	ug/l	1	-	U	Yes
bis(2-Chloroethoxy)methane	2.0	ug/l	1	-	U	Yes
bis(2-Chloroethyl)ether	2.0	ug/l	1	-	U	Yes
bis(2-Chloroisopropyl)ether	2.0	ug/l	1	-	U	Yes
4-Chlorophenyl phenyl ether	2.0	ug/l	1	-	U	Yes
2,4-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
2,6-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.0	ug/l	1	-	U	Yes
1,4-Dioxane	12.6	ug/l	1	-	-	Yes
Dibenzo(a,h)anthracene	1.0	ug/l	1	-	U	Yes
Dibenzofuran	5.0	ug/l	1	-	U	Yes
Di-n-butyl phthalate	2.0	ug/l	1	-	U	Yes
Di-n-octyl phthalate	2.0	ug/l	1	-	UJ	Yes
Diethyl phthalate	2.0	ug/l	1	-	U	Yes
Dimethyl phthalate	2.0	ug/l	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	2.0	ug/l	1	-	U	Yes
Fluoranthene	1.0	ug/l	1	-	U	Yes
Fluorene	1.0	ug/l	1	-	U	Yes
Hexachlorobenzene	1.0	ug/l	1	-	U	Yes
Hexachlorobutadiene	1.0	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	10	ug/l	1	-	U	Yes
Hexachloroethane	2.0	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.0	ug/l	1	-	U	Yes
Isophorone	2.0	ug/l	1	-	U	Yes
1-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Nitroaniline	5.0	ug/l	1	-	U	Yes
3-Nitroaniline	5.0	ug/l	1	-	U	Yes
4-Nitroaniline	5.0	ug/l	1	-	U	Yes
Nitrobenzene	2.0	ug/l	1	-	U	Yes
N-Nitroso-di-n-propylamine	2.0	ug/l	1	-	U	Yes
Nitrosodiphenylamine	5.0	ug/l	1	-	U	Yes
Phenanthrene	1.0	ug/l	1	-	U	Yes
Pyrene	1.0	ug/l	1	-	U	Yes
1,2,4,5-Tetrachlorobenzene	2.0	ug/l	1	-	U	Yes
METHOD:	8270D (SI	M)				
Naphthalene	0.10	ug/l	1	-	U	Yes

	Date:September_06-08,_2016
	Shipping Date:September_08,_2016
	EPA Region: 2
REVIEW OF SEMIVOLATILE O	RGANIC PACKAGE
The following guidelines for evaluating volatile organization actions. This document will assist the remake more informed decision and in better serving results were assessed according to USEPA data following order of precedence: EPA Hazardous W 2015 –Revision 0. Semivolatile Data Validation. The QC on the data review worksheets are from the prima noted.	viewer in using professional judgment to the needs of the data users. The sample validation guidance documents in the laste Support Section, SOP HW-35A, July C criteria and data validation actions listed
The hardcopied (laboratory name) _Accutest reviewed and the quality control and performance data included:	
Lab. Project/SDG No.:JC27318 No. of Samples:7_SIM/7_SCAN	Sample matrix:Groundwater
Trip blank No.:	V 2000 V
Field blank No.:	
Equipment blank No.:	
Field duplicate No.:	
X Data CompletenessX Holding TimesX GC/MS TuningX Internal Standard PerformanceX BlanksX Surrogate RecoveriesX Matrix Spike/Matrix Spike Duplicate	X Laboratory Control Spikes X Field Duplicates X Calibrations X Compound Identifications X Compound Quantitation X Quantitation Limits
_Overall Comments:_SVOCs_TCL_special_list_analyzed_ _Naphthalene_and_1,4-Dioxane_analyzed_by_method_S	
Definition of Qualifiers:	
J- Estimated results	
U- Compound not detected	
R- Rejected data	
UJ- Estimated notificial	
Reviewer: Aul Mull	
Date: September_30, 2016	

Project Number:_JC27318_____

DATA COMPLETENESS

MISSING INFORMATION	DATE LAB. CONTACTED	DATE RECEIVED
4		
		<u> </u>
	S-Gr. 9001	
	P Leading to	27 (200 102)
S-2723 (12		
	V	
		
	400.00	

All criteria were mel _	X_
Criteria were not met	
and/or see below	

HOLDING TIMES

The objective of this parameter is to ascertain the validity of the results based on the holding time of the sample from time of collection to the time of analysis.

Complete table for all samples and note the analysis and/or preservation not within criteria

SAMPLE ID	DATE SAMPLED	DATE EXTRACTED/ANALYZED	pН	ACTION		
All samples extracted and analyzed within method recommended holding time. Samples properly preserved except in the cases described in this document.						

Cooler temperature (Criteria: 4 ± 2 °C): _____4.2°C____

Actions

Results will be qualified based on the criteria of the following Table:

Table 1. Holding Time Actions for Semivolatile Analyses

l able 1. Holding Time Actions for Semivolatile Analyses					
	Preserved		Ac	tion	
Matrix		Criteria	Detected	Non-Detected	
***			Associated Compounds	Associated Compounds	
			Compounds	Compounds	
	No	≤ 7 days (for extraction) ≤ 40 days (for analysis)	Use professi	onal judgment	
	No	> 7 days (for extraction) > 40 days (for analysis)	J	Use professional judgment	
Aqueous	Yes	≤ 7 days (for extraction) ≤ 40 days (for analysis)	No qualification		
	Yes	> 7 days (for extraction) > 40 days (for analysis)	1	ບມ	
	Yes/No	Grossly Exceeded	J	UJ or R	
	No	≤ 14 days (for extraction) ≤ 40 days (for analysis)	Use professi	onal judgment	
Non-Aqueous	No	> 14 days (for extraction) > 40 days (for analysis)			
	Yes	≤ 14 days (for extraction) ≤ 40 days (for analysis)	No qualification		
	Yes	> 14 days (for extraction) > 40 days (for analysis)	J	UJ	
	Yes/No	Grossly Exceeded	J	UJ or R	

		Cnter	All criteria were metX ia were not met see below
GC/MS TUNIN	G		
The assessme tuning QC limit	nt of the tuning results is to determine is	f the sample instrumentation	is within the standard
_X The D	FTPP performance results were review	ed and found to be within the	specified criteria.
_X DFTP	tuning was performed for every 12 ho	urs of sample analysis.	
If no, use profe or rejected.	essional judgment to determine whether	the associated data should	be accepted, qualified
Notes:	These requirements do not apply w Monitoring (SIM) technique.	vhen samples are analyzed	by the Selected Ion
Notes:	All mass spectrometer conditions m analysis. Background subtraction unacceptable No data should be qualified based of	actions resulting in spe	
	The requirement to analyze the instru analysis of PAHs/pentachlorophenol in	•	·
List	the	samples	affected:

Actions:

- If sample are analyzed without a preceding valid instrument performance check or are analyzed
 hours after the Instrument Performance Check, qualify all data in those samples as unusable
 (R).
- 2. If ion abundance criteria are not met, use professional judgment to determine to what extent the data may be utilized.
- 3. State in the Data Review Narrative, decisions to use analytical data associated with DFTPP instrument performance checks not meeting the contract requirements.
- 4. Use professional judgment to determine if associated data should be qualified based on the spectrum of the mass calibration compounds.

			Crite	riteria were metX eria were not met for see below				
INITIAL C	ALIBRATION '	VERIFICATION						
		· · · · · · · · · · · · · · · · · · ·	strument calibration are estab ining acceptable quantitative da					
Date of initial calibration:09/14/16_(SIM)								
Instrumen	Date of initial calibration: _08/17/16_(SCAN) 08/17/16_(SCAN)_							
Instrument	t ID numbers:_	_09/21-22/16_(SCAN) GCMSP Aqueous/low						
DATE	LAB FILE	CRITERIA OUT RFs, %RSD, %D, r	COMPOUND	SAMPLES AFFECTED				
	ID#	KF5, 70KOD, 70D, I		AFFECTED				
Initial a	and initial calib		ts the method and guidance va	lidation document				
Note:								
Actions:								
Qualify the	initial calibrat	ion analytes listed in T	able 2 using the following criter	ria:				

Table 3. Initial Calibration Actions for Semivolatile Analysis

Criteria		Action
Спета	Detect	Non-detect
Initial Calibration not performed at specified frequency and sequence	Use professional judgment R	Use professional judgment R
Initial Calibration not performed at the specified concentrations	J	UJ
RRF < Minimum RRF in Table 2 for target analyte	Use professional judgment J+ or R	R
RRF ≥ Minimum RRF in Table 2 for target analyte	No qualification	No qualification
%RSD > Maximum %RSD in Table 2 for target analyte	J	Use professional judgment
%RSD ≤ Maximum %RSD in Table 2 for target analyte	No qualification	No qualification

Initial Calibration

Table 2. RRF, %RSD, and %D Acceptance Criteria in Initial Calibration and CCV for Semivolatile Analysis

Analyte	Minimum RRF	Maximum %RSD	Opening Maximum %D ¹	Opening Maximum %D¹
1,4-Dioxane	0.010	40.0	± 40.0	± 50.0
Benzaldehyde	0.100	40.0	± 40.0	± 50.0
Phenol	0.080	20.0	± 20.0	±25.0
Bis(2-chloroethyl)ether	0.100	20.0	± 20.0	±25.0
2-Chlorophenol	0.200	20.0	±20.0	±25.0
2-Methylphenol	0.010	20,0	±20.0	±25.0
3-Methylphenol	0.010	20.0	±20.0	±25.0
2,2'-Oxybis-(1-chloropropane)	0.010	20.0	± 25.0	± 50.0
Acetophenone	0.060	20.0	±20.0	±25.0
4-Methylphenol	0.010	20.0	± 20.0	±25.0
N-Nitroso-di-n-propylamine	0.080	20.0	± 25.0	±25.0
Hexachloroethane	0.100	20.0	± 20.0	± 25.0
Nitrobenzene	0.090	20.0	±20.0	±25.0
Isophorone	0.100	20.0	± 20.0	±25.0
2-Nitrophenol	0.060	20.0	± 20.0	±25.0
2,4-Dimethylphenol	0.050	20.0	±25.0	± 50.0
Bis(2-chloroethoxy)methane	0.080	20.0	± 20.0	±25.0
2,4-Dichlorophenol	0.060	20.0	± 20.0	±25.0
Naphthalene	0.200	20.0	± 20.0	±25.0
4-Chloroaniline	0.010	40.0	± 40.0	± 50.0
Hexachlorobutadiene	0.040	20.0	± 20.0	±25.0
Caprolactam	0.010	40.0	±30.0	± 50.0
4-Chloro-3-methylphenol	0.040	20.0	± 20.0	±25.0
2-Methylnaphthalene	0.100	20.0	±20.0	±25.0
Hexachlorocyclopentadiene	0.010	40.0	± 40.0	±50.0
2,4,6-Trichlorophenol	0.090	20.0	± 20.0	±25.0
2,4,5-Trichlorophenol	0.100	20.0	± 20.0	±25.0
1,1'-Biphenyl	0.200	20.0	± 20.0	±25.0

Analyte	Minimum RRF	Maximum %RSD	Opening Maximum %D ^t	Opening Maximum %D'
2-Chloronaphthalene	0.300	20.0	±20.0	±25.0
2-Nitroaniline	0.060	20.0	±25.0	± 25.0
Dimethylphthalate	0.300	20.0	±25.0	±25.0
2,6-Dinitrotoluene	0.080	20.0	±20.0	±25.0
Acenaphthylene	0.400	20.0	±20.0	± 25.0
3-Nitroaniline	0.010	20.0	±25.0	± 50.0
Acenaphthene	0.200	20.0	±20.0	± 25.0
2,4-Dinitrophenol	0.010	40.0	± 50.0	± 50.0
4-Nitrophenol	0.010	40.0	± 40.0	± 50.0
Dibenzofuran	0.300	20.0	± 20.0	± 25.0
2,4-Dinitrotoluene	0.070	20.0	±20.0	± 25.0
Diethylphthalate	0.300	20.0	±20.0	± 25.0
1,2,4,5-Tetrachlorobenzene	0.100	20.0	± 20.0	±25.0
4-Chlorophenyl-phenylether	0.100	20.0	±20.0	±25.0
Fluorene	0.200	20.0	±20.0	±25.0
4-Nitroaniline	0.010	40.0	± 40.0	± 50.0
4,6-Dinitro-2-methylphenol	0.010	40.0	±30.0	± 50.0
4-Bromophenyl-phenyl ether	0.070	20.0	±20.0	±25.0
N-Nitrosodiphenylamine	0.100	20.0	±20.0	±25.0
l-lexachlorobenzene	0.050	20.0	±20.0	±25.0
Atrazine	0.010	40.0	±25.0	± 50.0
Pentachlorophenol	0.010	40.0	± 40.0	± 50.0
Phenanthrene	0.200	20.0	±20.0	±25.0
Anthracene	0.200	20.0	±20.0	± 25.0
Carbazole	0.050	20.0	±20.0	±25,0
Di-n-butylphthalate	0.500	20.0	± 20.0	±25.0
Fluoranthene	0.100	20.0	±20.0	±25.0
Pyrene	0.400	20.0	±25.0	± 50.0
Butylbenzylphthalate	0.100	20.0	±25.0	± 50.0

Analyte	Minimum RRF	Maximum %RSD	Opening Maximum %D ¹	Opening Maximum %D ^t
3,3'-Dichlorobenzidine	0.010	40.0	± 40.0	± 50.0
Benzo(a)anthracene	0.300	20.0	± 20.0	± 25.0
Chrysene	0.200	20.0	± 20.0	± 50.0
Bis(2-ethylhexyl) phthalate	0.200	20.0	± 25.0	± 50.0
Di-n-octylphthalate	0.010	40.0	±40.0	± 50.0
Benzo(b)fluoranthene	0.010	20.0	±25.0	± 50.0
Benzo(k)fluoranthene	0.010	20.0	± 25.0	± 50.0
Benzo(a)pyrene	0.010	20.0	± 20.0	± 50.0
Indeno(1,2,3-cd)pyrene	0.010	20.0	±25.0	± 50.0
Dibenzo(a,h)anthracene	0.010	20.0	±25.0	± 50.0
Benzo(g,h,i)perylene	0.010	20.0	± 30.0	± 50.0
2,3,4,6-Tetrachlorophenol	0.040	20.0	±20.0	± 50.0
Naphthalene	0.600	20.0	±25.0	±25.0
2-Methylnaphthalene	0.300	20.0	±20.0	± 25.0
Acenaphthylene	0.900	20.0	± 20.0	± 25.0
Acenaphthene	0.500	20.0	± 20.0	± 25.0
Fluorene	0.700	20.0	±25.0	± 50.0
Phenanthrene	0.300	20.0	±25.0	± 50.0
Anthracene	0.400	20.0	± 25.0	± 50.0
Fluoranthene	0.400	20.0	±25.0	± 50.0
Pyrene	0.500	20.0	± 30.0	± 50.0
Benzo(a)anthracene	0.400	20.0	±25.0	± 50.0
Chyrsene	0.400	20.0	±25.0	± 50.0
Benzo(b)fluoranthene	0.100	20.0	±30.0	£ 50.0
Benzo(k)fluoranthene	0.100	20.0	±30.0	± 50.0
Benzo(a)pyrene	0.100	20.0	± 25.0	± 50.0
Indeno(1,2,3-cd)pyrene	0.100	20.0	± 40.0	± 50.0
Dibenzo(a,h)anthracene	0.010	25.0	± 40.0	± 50.0
Benzo(g,h,i)perylene	0.020	25.0	± 40.0	± 50.0

Pentachlorophenol	0.010	40.0	±50.0	± 50.0	
Deuterated Monitoring Compounds					

Analyte	Minimum RRF	Maximum %RSD	Opening Maximum %D¹	Closing Maximum %D
I,4-Dioxane-d ₈	0.010	20.0	±25.0	± 50.0
Phenol-d ₅	0.010	20.0	±25.0	±25.0
Bis-(2-chloroethyl)ether-d ₈	0.100	20.0	±20.0	± 25.0
2-Chlorophenol-d4	0.200	20.0	± 20.0	± 25.0
4-Methylphenol-d ₈	0.010	20.0	±20.0	±25.0
4-Chloroaniline-d4	0.010	40.0	±40.0	± 50.0
Nitrobenzene-d ₅	0.050	20.0	± 20.0	±25.0
2-Nitrophenol-d ₄	0.050	20.0	±20.0	±25.0
2,4-Dichlorophenol-d3	0.060	20.0	±20.0	± 25.0
Dimethylphthalate-d ₆	0.300	20.0	± 20.0	±25.0
Acenaphthylene-d ₈	0.400	20.0	± 20.0	±25.0
4-Nitrophenol-d ₄	0.010	40.0	± 40.0	± 50.0
Fluorene-d ₁₀	0.100	20.0	±20.0	±25.0
4,6-Dinitro-2-methylphenol-d2	0.010	40.0	±30.0	±50.0
Anthracene-d ₁₀	0,300	20.0	± 20.0	±25.0
Pyrene-d ₁₀	0.300	20.0	±25.0	± 50.0
Benzo(a)pyrene-d ₁₂	0.010	20.0	± 20.0	± 50.0
Fluoranthene-d ₁₀ (SIM)	0.400	20.0	±25.0	±50.0
2-Methylnaphthalene-d ₁₀ (SIM)	0.300	20.0	± 20.0	±25.0

¹ If a closing CCV is acting as an opening CCV, all target analytes must meet the requirements for an opening CCV.

Note: If analysis by SIM technique is requested for PAH/pentachlorophenols, calibration standards analyzed at 0.10, 0.20, 0.40, 0.80, and 1.0 ng/uL for each target compound of interest and the associated DMCs. Pentachlorophenol will require only a four point initial calibration at 0.20, 0.40, 0.80, and 1.0 ng/uL.

All criteria were met	
Criteria were not mel	
and/or see below	.X

CONTINUING CALIBRATION VERIFICATION

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data.

Date of ini	tial calibration:	09/1	4/16_(SIM)	08/26/16_(SIM)
Date of ini	tial calibration		08/26/16	
Date of co	ntinuing calibra	/):_09/15/16;_09/16/16 <u> </u>	09/13/16	
Date of clo	osing CCV:		-	÷
Date of closing CCV: - GCMS3P GCMS3P				GCMS3M
Matrix/Lev	/el:	Aqı	Jeous/low	Aqueous/low
Date of ini	tial calibration:	08/17/16: 09/21-22	9/16 (Scan)	08/23/16_(Scan)
Date of ini	tial calibration	verification (ICV): 08/		08/23/16
Date of co	ntinuing calibr	ation verification (CC)		09/13/16
Date of clo	osina CCV:	-	<u></u>	
Instrumen	t ID numbers:	GCMSF		GCMS6P
Matrix/Lev	rel:	Aqı	leous/low	
DATE	LAB FILE	CRITERIA OUT	COMPOUND	SAMPLES
	ID#	RFs, %RSD, <u>%D</u> , r		AFFECTED
GCMS6P				
09/13/16	cc1353-50	25 %	1,4-dioxane*	JC27318-6
	-22.6 %	2,4-dinitrotoluene		
		-22.1 %	4,6-dinitro-o-cresol*	
		-24.1 %	Pentachlorophenol*	
		-53.4 %	di-n-octylphthalate	
		-29.1 %	Benzo(b)fluorathene	
09/13/16	cc1354-50	29.1 %	Benzaldehyde*	JC27318-6
09/14/16	cc1353-25	20.4 %	Caprolactam*	JC27318-2; -3; 4; -
		-25.3 %	Hexachlorocyclopentadiene*	5; -7
		-36.0 %	4-nitrophenol*	
		-25.0 %	Pentachlorophenol*	
		-45.1 %	di-n-octylphthalate	
09/14/16	cc1354-25	25.2 %	Benzaldehyde*	JC27318-2; -3; 4; -
		20.3 %	Atrazine*	5; -7
GCMSP				
09/12/16	cc4722-25	27.2 %	1,4-dioxane*	QC samples
		-31.7 %	n-nitrosodimethylamine	
		45.5 %	Hexachlorocyclopentadiene	
		-37.1 %	2-nitroaniline	
		-22.5 %	4,6-dinitro-o-cresol*	
		27.5 %	Indeno(1,2,3-cd)pyrene	
		32.3 %	Dibenz(a,h)anthracene	

Benzo(g,h,i)perylene

32.9 %

DATE	LAB F	FILE	CRITERIA OUT	COMPOUND	SAMPLES
	ID#		RFs, %RSD, <u>%D</u> , r		AFFECTED
GCMSP					
			23.3 %	Hexachlorocyclopentadiene*	
			-36.1 %	2-nitroaniline	
			-28.0	4-nitrophenol*	
			-28.8	4,6-dinitro-o-cresol	
09/13/16	cc4723-	-50	24.8	Benzaldehyde*	JC27318-1

Note: Initial and continuing calibration verifications meet the method and guidance document required performance criteria except for the cases described in this document.

Analytes not meeting the method and guidance document performance criteria are qualified as estimated (J) in affected samples.

* Analytes not meeting the method performance criteria but within the guidance document performed criteria. No action taken.

No closing calibration verification included in data package. No action taken, professional judgment.

Actions:

Notes: Verify that the CCV is run at the required frequency (an opening and closing CCV must be run within 12-hour period).

All DMCs must meet the RRF values given in Table 2. No qualification of the data is necessary on DMCs RRF and %RSD/%D alone. Use professional judgment to evaluate DMCs and %RSD/%D data in conjunction with DMCs recoveries to determine the need for qualification of the data.

Qualify the initial calibration analytes listed in Table 2 using the following criteria in the CCVs:

Table 4. CCV Actions for Semivolatile Analysis

Cute at a fun Outside CCN	Cairada for Chaire CCV	Action		
Criteria for Opening CCV	Criteria for Closing CCV	Detect	Non-detect	
CCV not performed at required frequency and sequence	CCV not performed at required frequency	Use professional judgment R	Use professional judgment R	
CCV not performed at specified concentration	CCV not performed at specified concentration	Use professional judgment	Use professional judgment	
RRF < Minimum RRF in Table 2 for target analyte	RRF < Minimum RRF in Table 2 for target analyte	Use professional judgment J or R	R	
RRF ≥ Minimum RRF in Table 2 for target analyte	RRF ≥ Minimum RRF in Table 2 for target analyte	No qualification	No qualification	
%D outside the Opening Maximum %D limits in Table 2 for target analyte	%D outside the Closing Maximum %D limits in Table 2 for target analyte	J	Ωĵ	
%D within the inclusive Opening Maximum %D limits in Table 2 for target analyte	%D within the inclusive Closing Maximum %D limits in Table 2 for target analyte	No qualification	No qualification	

All criteria were met _X
Criteria were not met
and/or see below

BLANK ANALYSIS RESULTS (Sections 1 & 2)

The assessment of the blank analysis results is to determine the existence and magnitude of contamination problems. The criteria for evaluation of blanks apply only to blanks associated with the samples, including trip, equipment, and laboratory blanks. If problems with any blanks exist, all data associated with the case must be carefully evaluated to determine whether or not there is an inherent variability in the data for the case, or if the problem is an isolated occurrence not affecting other data.

List the contamination in the blanks below. High and low levels blanks must be treated separately.

Notes: The concentration of non-target compounds in all blanks must be less than or equal to 10 ug/L.

The concentration of target compounds in all blanks must be less than its CRQL listed in the method.

Samples taken from a drinking water tap do not have and associated field blank.

Laboratory blanks

DATE Analyzed	LAB ID	LEVEL/ MATRIX	COMPOUND	CONCENTRATION UNITS
No_target_ana	alytes_detected	_in_method_bla	inks	
Field/Equipment	t/Trip blank			
DATE ANALYZED	LAB ID	LEVEL/ MATRIX	COMPOUND	CONCENTRATION UNITS
_No_field/trip/ed	quipment_blank	s_analyzed_wit	h_this_data_package	
Note:				· · · · ·

All criteria were metX
Criteria were not met
and/or see below

BLANK ANALYSIS RESULTS (Section 3)

Blank Actions

Qualify samples based on the criteria summarized in Table 5:

Table 5. Blank and TCLP/SPLP LEB Actions for Semivolatile Analysis

Blank Type	Blank Result	Sample Result	Action	
	Detect	Non-detect	No qualification	
	< CRQL	< CRQL	Report at CRQL and qualify as non-detect (U)	
		≥CRQL	Use professional judgment	
		< CRQL	Report at CRQL and qualify as non-detect (U)	
Method,	≥CRQL	≥ CRQL but < Blank Result	Report at sample results and qualify as non-detect (U) or as unusable (R)	
TCLP/SPLP LEB, Field		≥ CRQL and ≥ Blank Result	Use professional judgment	
	Grossly high	Detect	Report at sample results and qualify as unusable (R)	
	TIC > 5.0 ug/L (water) or 0.0050 mg/L (TCLP leachate) or TIC > 170 ug/Kg (soil)	Detect	Use professional judgment	

List samples qualified

CONTAMINATION SOURCE/LEVEL	COMPOUND	CONC/UNITS	AL/UNITS	SQL	AFFECTED SAMPLES

Matrix: Groundwater

All criteria were mel _X
Criteria were not met
and/or see below

SURROGATE SPIKE RECOVERIES - DEUTERATED MONITORING COMPOUNDS (DMCs)

Laboratory performance of individual samples is established by evaluation of surrogate spike recoveries – deuterated monitoring compounds. All samples are spiked with surrogate compounds prior to sample analysis. The accuracy of the analysis is measured by the surrogate percent recovery. Since the effects of the sample matrix are frequently outside the control of the laboratory and may present relatively unique problems, the validation of data is frequently subjective and demands analytical experience and professional judgment.

Notes: Recoveries for DMCs in samples and blanks must be within the limits specified in Table 6

The recovery limits for any of the compounds listed in Table 6 may be expanded at any time during the period of performance if USEPA determines that the limits are too restrictive.

If a DMC is not added in the samples and blanks or the concentrations of DMCs in the samples and blank not the specified, use professional judgment in qualifying the data.

Action Criteria Non-detect Detect %R < 10% (excluding DMCs with 10% as a lower J-R acceptance limit) $10\% \le \%R$ (excluding DMCs with 10% as a lower j_ UJ acceptance limit) < Lower Acceptance Limit Lower Acceptance limit $\leq \%R \leq Upper Acceptance Limit$ No qualification No qualification %R > Upper Acceptance Limit J+No qualification

Table 7. DMC Actions for Semivolatile Analysis

List the percent recoveries (%Rs) which do not meet the criteria for DMCs (surrogate) recovery.

SAMPLE ID	SURROGATE COMPOUND	ACTION
_deuterated_sun	e_required_criteria_except_in_the_cases_described_in_ rogates_added_to_the_samples_were_within_laboratory cribed_in_this_document.	
		an No antina taliani
_JC27318-1	None_of_the_surrogates_recovered_due_to_diluti surrogates_recovered_within_control_limits_in_un	onNo_action_taken;

Table 8. Semivolatile DMCs and the Associated Target Analytes

Table 6. Semivolatile Divies and the Associated Target Analytes								
1,4-Dioxane-d ₈ (DMC-1)	Phenol-d ₅ (DMC-2)	Bis(2-Chloroethyl) ether-d ₈ (DMC-3)						
1,4-Dioxane	Benzaldehyde	Bis(2-chloroethyl)ether						
	Phenol	2,2'-Oxybis(1-chloropropane)						
		Bis(2-chloroethoxy)methane						
2-Chlorophenol-d4(DMC-4)	4-Methylphenol-ds (DMC-5)	4-Chloroaniline-d ₄ (DMC-6)						
2-Chlorophenol	2-Methylphenol	4-Chloroaniline						
	3-Methylphenol	Hexachlorocyclopentadiene						
	4-Methylphenol	Dichlorobenzidine						
	2,4-Dimethylphenol							
Nitrobenzene-d ₅ (DMC-7)	2-Nitrophenol-d4 (DMC-8)	2,4-Dichlorophenol-d3(DMC-9)						
Acetophenone	Isophorone	2,4-Dichlorophenol						
N-Nitroso-di-n-propylamine	2-Nitrophenol	Hexachlorobutadiene						
Hexachloroethane		Hexachlorocyclopentadiene						
Nitrobenzene		4-Chloro-3-methylphenol						
2,6-Dinitrotoluene		2,4,6-Trichlorophenol						
2,4-Dinitrotoluene	188	2,4,5-Trichlorophenol						
N-Nitrosodiphenylamine		1,2,4,5-Tetrachlorobenzene						
		*Pentachlorophenol						
		2,3,4,6-Tetrachlorophenol						
Dimethylphthalate-d ₄ (DMC-10)	Acenaphthylene-da (DMC-11)	4-Nitrophenol-d ₄ (DMC-12)						
Caprolactam	*Naphthalene	2-Nitroaniline						
1,1'-Biphenyl	*2-Methylnaphthalene	3-Nitroaniline						
Dimethylphthalate	2-Chloronaphthalene	2,4-Dinitrophenol						
Diethylphthalate	*Acenaphthylene	4-Nitrophenol						
Di-n-butylphthalate	*Acenaphthene	4-Nitroaniline						
Butylbenzylphthalate								
Bis(2-ethylhexyl) phthalate								
Di-n-octylphthalate								

Fluorene-d ₁₀ (DMC-13)	4,6-Dinitro-2-methylphenol-d ₂ (DMC-14)	Anthracene-d ₁₀ (DMC-15)
Dibenzofuran *Fluorene 4-Chlorophenyl-phenylether 4-Bromophenyl-phenylether Carbazole	4,6-Dinitro-2-methylphenol	Hexachlorobenzene Atrazine *Phenanthrene *Anthracene
Pyrene-d ₁₀ (DMC-16)	Benzo(a)pyrene-d ₁₂ (DMC-17)	
*Fluoranthene	3,3'-Dichlorobenzidine	
*Pyrene	*Benzo(b)fluoranthene	
*Benzo(a)anthracene	*Benzo(k)fluoranthene	
*Chrysene	*Benzo(a)pyrene	
	*Indeno(1,2,3-cd)pyrene	
	*Dibenzo(a,h)anthracene	
	*Benzo(g,h,i)perylene	

^{*}Included in optional Target Analyte List (TAL) of PAHs and PCP only.

Table 9. Semivolatile SIM DMCs and the Associated Target Analytes

Fluoranthene-d10 (DMC-1)	2-Methylnaphthalene-d10 (DMC-2)
Fluoranthene	Naphthalene
Pyrene	2-Methylnaphthalene
Benzo(a)anthracene	Acenaphthylene
Chrysene	Acenaphthene
Benzo(b)fluoranthene	Fluorene
Benzo(k)fluoranthene	Pentachlorophenol
Benzo(a)pyrene	Phenanthrene
Indeno(1,2,3-cd)pyrene	Anthracene
Dibenzo(a,h)anthracene	
Benzo(g,h,i)perylene	

All criteria were met	
Criteria were not met	
and/or see below	Х

VII. A MATRIX SPIKE/MATRIX SPIKE DUPLICATE (MS/MSD)

This data is generated to determine long term precision and accuracy in the analytical method for various matrices. This data alone cannot be used to evaluate the precision and accuracy of individual samples. If any % R in the MS or MSD falls outside the designated range, the reviewer should determine if there are matrix effects, i.e. LCS data are within the QC limits but MS/MSD data are outside QC limit.

1. MS/MSD Recoveries and Precision Criteria

The laboratory should use one MS and a duplicate analysis of an unspiked field sample if target analytes are expected in the sample. If target analytes are not expected, MS/MSD should be analyzed.

NOTES:

Data for MS and MSDs will not be present unless requested by the Region. Notify the Contract Laboratory COR if a field or trip blank was used for the MS and MSD.

For a Matrix Spike that does not meet criteria, apply the action to only the field sample used to prepare the Matrix Spike sample. If it is clearly stated in the data validation materials that the samples were taken through incremental sampling or some other method guaranteeing the homogeneity of the sample group, then the entire sample group may be qualified.

List the %Rs, RPD of the compounds which do not meet the criteria.

The QC reported here applies to the following samples:	Method: SW846 8270D BY SIM
Sample ID:JC27318-3_(SIM)	Matrix/Level:Groundwater
Sample ID:JC27289-6_(SIM)	Matrix/Level: Groundwater
Sample ID:JC27318-2	Matrix/Level:Groundwater
Sample ID:JC27318-1	Matrix/Level:Groundwater

The QC reported here applies to the following samples: JC27318-1

	JC27318-1		Spike	MS	MS	Spike	MSD	MSD		Limits
Compound	ug/l	Q	ug/l	ug/l	%	ug/l	ug/l	%	RPD	Rec/RPD
1,4-Dioxane	1330		105	1790	418a	105	1340	0	29	10-119/31

⁽a) Outside control limits due to high level in sample relative to spike amount.

The QC reported here applies to the following samples: Method: SW846 8270D BY SIM JC27318-2; JC27318-3; JC27318-4; JC27318-5; JC27318-6; JC27318-7

Compound	JC27318 ug/l	_	Spike ug/l	MS ug/l	MS %	Spike ug/l	MSD ug/l	MSD %	RPD	Limits Rec/RPD
4-Chloroaniline 1,4-Dioxane			100 100	28.0 47.1			64.3 70.5			10-110/55 10-119/31

^{* =} Outside of Control Limits.

⁽a) Analytical precision exceeds in-house control limits.

The QC reported here applies to the following samples: Method: **SW846 8270D BY SIM JC27318-2, JC27318-3, JC27318-4, JC27318-5, JC27318-6, JC27318-7**

Compound	JC2731 ug/l	18-3 Q	Spike ug/l	MS ug/l	MS %	Spike ug/l	MSD ug/l	MSD %	RPD	Limits Rec/RPD
Naphthalene 1,4-Dioxane	ND 21.1	E	2 2	1.72 39.4	86 915* ª	2 2	1.95 49.3	98 1410* ª	13 22	23-140/36 20-160/30

(a) Outside control limits due to high level in sample relative to spike amount.

Note: MS/MSD % results apply only to unspiked sample. MS/MSD % recoveries and RPD within laboratory control limits except in the cases described in this document.

No action taken on samples with MS/MSD % recoveries outside control limits due to high level in sample relative to spike amount.

No action taken on samples with RPD outside control limits, professional judgment.

- * QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.
- * If QC limits are not available, use limits of 70 130 %.

Actions:

QUALITY	%R < LL	%R > UL
Positive results	J	J
Nondetects results	R	Accept

MS/MSD criteria apply only to the unspiked sample, its dilutions, and the associated MS/MSD samples:

If the % R for the affected compounds were < LL (or 70 %), qualify positive results (J) and nondetects (UJ).

If the % R for the affected compounds were > UL (or 130 %), only qualify positive results (J). If 25 % or more of all MS/MSD %R were < LL (or 70 %) or if two or more MS/MSD %Rs were < 10%, qualify all positive results (J) and reject nondetects (R).

A separate worksheet should be used for each MS/MSD pair.

All criteria were met _X	
Criteria were not met	
and/or see below	

INTERNAL STANDARD PERFORMANCE

The assessment of the internal standard (IS) parameter is used to assist the data reviewer in determining the condition of the analytical instrumentation.

List the internal standard area of samples which do not meet the criteria.

DATE SAMPLE ID IS OUT IS AREA ACCEPTABLE ACTION RANGE

Internal area meets the required criteria of batch samples corresponding to this data package.

Action:

- If an internal standard area count for a sample or blank is greater than 213.0% of the area for the associated standard (opening CCV or mid-point standard from initial calibration) (see Table 10 below):
 - a. Qualify detects for compounds quantitated using that internal standard as estimated low (J-).
 - b. Do not qualify non-detected associated compounds.
- 2. If an internal standard area count for a sample or blank is less than 20.0% of the area for the associated standard (opening CCV or mid-point standard from initial calibration):
 - a. Qualify detects for compounds quantitated using that internal standard as estimated high (J+).
 - b. Qualify non-detected associated compounds as unusable (R).
- 3. If an internal standard area count for a sample or blank is greater than or equal to 50.0%, and less than or equal to 213% of the area for the associated standard opening CCV or mid-point standard from initial calibration, no qualification of the data is necessary.
- 4. If an internal standard RT varies by more than 10.0 seconds: Examine the chromatographic profile for that sample to determine if any false positives or negatives exist. For shifts of a large magnitude, the reviewer may consider partial or total rejection of the data for that sample fraction. Detects should not need to be qualified as unusable (R) if the mass spectral criteria are met.
- 5. If an internal standard RT varies by less than or equal to 10.0 seconds, no qualification of the data is necessary.

Note: Inform the Contract Laboratory Program Project Officer (CLP PO) if the internal standard performance criteria are grossly exceeded. Note in the Data Review Narrative potential effects on the data resulting from unacceptable internal standard performance.

State in the Data Review Narrative if the required internal standard compounds are not added to a sample or blank or if the required internal standard compound is not analyzed at the specified concentration.

Actions:

Table 10. Internal Standard Actions for Semivolatile Analysis

Criteria	Action			
Степа	Detect	Non-detect		
Area response < 20% of the opening CCV or mid-point standard CS3 from ICAL	J+ R			
20% ≤ Area response < 50% of the opening CCV or mid-point standard CS3 from ICAL	J+	UJ		
50% ≤ Area response ≤ 200% of the opening CCV or mid-point standard CS3 from ICAL	No qualification	No qualification		
Area response > 200% of the opening CCV or mid-point standard CS3 from ICAL	J-	No qualification		
RT shift between sample/blank and opening CCV or mid-point standard CS3 from ICAL > 10.0 seconds	R	R		
RT shift between sample/blank and opening CCV or mid-point standard CS3 from ICAL < 10.0 seconds	No qualification	No qualification		

		All criteria were metX Criteria were not met and/or see below
TARGET COM	MPOUND IDENTIFICATION	
Criteria:		
	e Retention Times (RRTs) of reported compoung Continuing Calibration Verification (CCV)	
List compound	ds not meeting the criteria described above:	
Sample ID	Compounds	Actions
		.
spectrum from	of the sample compound and a current labor the associated calibration standard (opening ust match according to the following criteria: All ions present in the standard mass spectromust be present in the sample spectrum. The relative intensities of these ions must again sample spectra (e.g., for an ion with an about the corresponding sample ion abundance multiple ions present at greater than 10% in the sample standard spectrum, must be evaluated by interpretation.	rum at a relative intensity greater than 10% gree within ±20% between the standard and undance of 50% in the standard spectrum, just be between 30-70%).
List compound	ds not meeting the criteria described above:	
Sample ID	Compounds	Actions
_ldentified_co	mpounds_meet_the_required_criteria	

Action:

- 1. The application of qualitative criteria for GC/MS analysis of target compounds requires professional judgment. It is up to the reviewer's discretion to obtain additional information from the laboratory. If it is determined that incorrect identifications were made, qualify all such data as unusable (R).
- 2. Use professional judgment to qualify the data if it is determined that cross-contamination has occurred.
- Note in the Data Review Narrative any changes made to the reported compounds or concerns regarding target compound identifications. Note, for Contract Laboratory COR action, the necessity for numerous or significant changes.

TENTATIVELY IDENTIFIED COMPOUNDS (TICS)

NOTE: Tentatively identified compounds should only be evaluated when requested by a party from outside of the Hazardous Waste Support Section (HWSS).

ı	iet	TI	Co
	PST.	- 2	1.5

Sample ID	Compound	Sample ID	Compound
		=======================================	

Action:

- 1. Qualify all TIC results for which there is presumptive evidence of a match (e.g. greater than or equal to 85% match) as tentatively identified (NJ), with approximated concentrations. TICs labeled "unknown" are qualified as estimated (J).
- 2. General actions related to the review of TIC results are as follows:
 - a. If it is determined that a tentative identification of a non-target compound is unacceptable, change the tentative identification to "unknown" or another appropriate identification, and qualify the result as estimated (J).
 - b. If all contractually-required peaks were not library searched and quantitated, the Region's designated representative may request these data from the laboratory.
- 3. In deciding whether a library search result for a TIC represents a reasonable identification, use professional judgment. If there is more than one possible match, report the result as "either compound X or compound Y". If there is a lack of isomer specificity, change the TIC result to a nonspecific isomer result (e.g., 1,3,5-trimethyl benzene to trimethyl benzene isomer) or to a compound class (e.g., 2-methyl, 3-ethyl benzene to a substituted aromatic compound).
- 4. The reviewer may elect to report all similar compounds as a total (e.g., all alkanes may be summarized and reported as total hydrocarbons).

- 5. Target compounds from other fractions and suspected laboratory contaminants should be marked as "non-reportable".
- 6. Other Case factors may influence TIC judgments. If a sample TIC match is poor, but other samples have a TIC with a valid library match, similar RRT, and the same ions, infer identification information from the other sample TIC results.
- 7. Note in the Data Review Narrative any changes made to the reported data or any concerns regarding TIC identifications.
- 8. Note, for Contract Laboratory COR action, failure to properly evaluate and report TICs

All criteria were metX	_
Criteria were not met	
and/or see below	

SAMPLE QUANTITATION AND REPORTED CONTRACT REQUIRED QUANTITATION LIMITS (CRQLS)

Action:

- 1. When a sample is analyzed at more than one dilution, the lower CRQL are used unless a QC exceedance dictates the use of higher CRQLs from the diluted sample. Samples reported with an "E" qualifier should be reported from the diluted sample.
- 2. If any discrepancies are found, the Region's designated representative may contact the laboratory to obtain additional information that could resolve any differences. If a discrepancy remains unresolved, the reviewer must use professional judgment to decide which value is the most accurate. Under these circumstances, the reviewer may determine that qualification of data is warranted. Note in the Data Review Narrative a description of the reasons for data qualification and the qualification that is applied to the data.
- 3. For non-aqueous samples, if the solids is less than 10.0%, use professional judgment for both detects and non-detects. If the percent solid for a soil sample is greater than or equal to 10.0% and less than 30.0%, use professional judgment to qualify detects and non-detects. If the percent solid for a soil sample is greater than or equal to 30.0%, detects and non-detects should not be qualified (see Table 11).
- 4. Note, for Contract Laboratory COR action, numerous or significant failures to accurately quantify the target compounds or to properly evaluate and adjust CRQLs.
- Results between MDL and CRQL should be qualified as estimated "J".
- 6. Results < MDL should be reported at the CRQL and qualified "U". MDLs themselves should not be reported.

Table 11. Percent Solids Actions for Semivolatile Analysis for Non-Aqueous Samples

Criteria	Ac	Action					
Criteria	Detects	Non-detects					
%Solids < 10.0%	Use professional judgment	Use professional judgment					
$10.0\% \le \%$ Solids $\le 30.0\%$	Use professional judgment	Use professional judgment					
%Solids > 30.0%	No qualification	No qualification					

SAMPLE QUANTITATION

The sample quantitation evaluation is to verify laboratory quantitation results. In the space below, please show a minimum of one sample calculation:

QUANTITATION LIMITS

A. Dilution performed

SAMPLE ID	DILUTION FACTOR	REASON FOR DILUTION
JC27318-1	50 x	1,4-dixane outside calibration range
		All and a second
5.0 6.777 9.0		The state of the s
Water Control of the		
	- 68	
	1	
45.72		

				Crite	iteria were met ria were not met or see belowN/A	_
FIELD DUPLICATE	PRECIS	SION				
Sample IDs:		-		Mat	trix:	
Field duplicates samples may be taken and analyzed as an indication of overall precision. These analyses measure both field and lab precision; therefore, the results may have more variability than laboratory duplicates which only laboratory performance. It is also expected that soil duplicate results will have a greater variance than water matrices due to difficulties associated with collecting identical field duplicate samples. The project QAPP should be reviewed for project-specific information. Suggested criteria: if large RPD (> 50 %) is observed, confirm identification of the samples and note differences. If both samples and duplicate are <5 SQL, the RPD criteria is doubled.						
COMPOUND	SQL ug/L	SAMPLE CONC.	DUPLICATE CONC.	RPD	ACTION	
	ision. RI	PD within the requi	t of this data packagi ired guidance docume			

Action:

		and/or see below
OTHER ISSUES		
A. System Perfo	ormance	
List samples qualified	based on the degradation of system	performance during simple analysis:
Sample iD	Comments	Actions
Action:		
during sample analy	ment to qualify the data if it is detern ses. Inform the Contract Laborator n performance which significantly affe	mined that system performance has degraded by Program COR any action as a result of acted the data.
B. Overall Asses	sment of Data	
List samples qualified	based on other issues:	
Sample ID	Comments	Actions
No_other_issues_th	at_required_the_need_to_qualify_the	e_dataResults_are_valid_and_can_be_used rn_below
Note:		

All criteria were met __X__ Criteria were not met

- 1. Use professional judgment to determine if there is any need to qualify data which were not qualified based on the Quality Control (QC) criteria previously discussed.
- Write a brief narrative to give the user an indication of the analytical limitations of the data. Inform the Contract Laboratory COR the action, any inconsistency of the data with the Sample Delivery Group (SDG) Narrative. If sufficient information on the intended use and required quality of the data is available, the reviewer should include their assessment of the usability of the data within the given context. This may be used as part of a formal Data Quality Assessment (DQA).

- 3. Sometimes, due to dilutions, re-analysis or SIM/Scan runs are being performed, there will be multiple results for a single analyte from a single sample. The following criteria and professional judgment are used to determine which result should be reported:
 - The analysis with the lower CRQL
 - The analysis with the better QC results
 - The analysis with the higher results

EXECUTIVE NARRATIVE

SDG No:

JC27318

Laboratory:

Accutest, New Jersey

Analysis:

SW846-8081B

Number of Samples:

6

Location:

BMSMC, Building 5 Area

Humacao, PR

SUMMARY:

Six (6) samples were analyzed for selected pesticides following method SW846-8081B. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence *Hazardous Waste Support Section SOP No. HW-36A, Revision O, June, 2015. SOM02.2. Pesticide Data Validation.* The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

Results are valid and can be used for decision making purposes.

Critical issues:

None

Major:

None

Minor:

None

Critical findings:

None

Major findings:

None

Minor findings:

- 1. Initial and initial calibration verification within the guidance document performance criteria. Continuing calibration % differences meet the performance criteria in at least one of the two columns. Final calibration verification not included in data package. No action taken, professional judgment.
- 2. Surrogate recoveries within laboratory control limits in the two columns except in the cases described in the data review worksheet. Samples were not analyzed. No action taken; surrogates recoveries were high and target analytes not detected in affected samples.
- **3.** MS/MSD % recoveries and RPD outside the laboratory control limits. No action taken, spike sample for this batch was from another project.

COMMENTS:

Results are valid and can be used for decision making purposes.

Reviewers Name:

Rafael Infante

Rafuel Infant

Chemist License 1888

Signature:

Date:

September 30, 2016

SAMPLE ORGANIC DATA SAMPLE SUMMARY

Sample ID: JC27318-1

Sample location: BMSMC Building 5 Area

Sampling date: 6-Sep-16

Matrix: Groundwater

***************************************	J. 00010					
Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.010	ug/l	1	-	U	Yes
alpha-BHC	0.010	ug/l	1	-	Ų	Yes
beta-BHC	0.010	ug/l	1	-	Ų	Yes
delta-BHC	0.010	ug/l	1	-	U	Yes
gamma-BHC (Lindane)	0.010	ug/l	1	-	U	Yes
alpha-Chlordane	0.010	ug/l	1	-	U	Yes
gamma-Chlordane	0.010	ug/l	1	-	U	Yes
Dieldrin	0.010	ug/l	1	-	U	Yes
4,4'-DDĐ	0.010	ug/l	1	-	U	Yes
4,4'-DDE	0.010	ug/l	1	-	U	Yes
4,4'-DDT	0.010	ug/l	1	-	U	Yes
Endrin	0.010	ug/l	1	-	U	Yes
Endosulfan sulfate	0.010	ug/i	1	-	U	Yes
Endrin aldehyde	0.010	ug/l	1	-	U	Yes
Endrin ketone	0.010	ug/l	1	-	U	Yes
Endosulfan-I	0.010	ug/l	1	-	U	Yes
Endosulfan-il	0.010	ug/l	1	-	U	Yes
Heptachlor	0.010	ug/l	1	-	U	Yes
Heptachlor epoxide	0.010	ug/l	1	-	U	Yes
Methoxychlor	0.020	ug/l	1	-	U	Yes
Toxaphene	0.25	ug/l	1	-	U	Yes

Sample location: BMSMC Building 5 Area

Sampling date: 7-Sep-16 Matrix: Groundwater

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.010	ug/l	1	-	U	Yes
alpha-BHC	0.010	ug/l	1	-	U	Yes
beta-BHC	0.010	ug/l	1	-	U	Yes
delta-BHC	0.010	ug/l	1	-	U	Yes
gamma-BHC (Lindane)	0.010	ug/l	1	-	U	Yes
alpha-Chlordane	0.010	ug/l	1	-	U	Yes
gamma-Chlordane	0.010	ug/l	1	-	U	Yes
Dieldrin	0.010	ug/l	1	-	U	Yes
4,4'-DDD	0.010	ug/l	1	-	U	Yes
4,4'-DDE	0.010	ug/i	1	-	U	Yes
4,4'-DDT	0.010	ug/l	1	-	U	Yes
Endrin	0.010	ug/l	1	-	U	Yes
Endosulfan sulfate	0.010	ug/l	1	-	U	Yes
Endrin aldehyde	0.010	ug/l	1	-	U	Yes
Endrin ketone	0.010	ug/l	1	-	U	Yes
Endosulfan-I	0.010	ug/l	1	-	U	Yes
Endosulfan-II	0.010	ug/l	1	-	U	Yes
Heptachlor	0.010	ug/l	1	-	U	Yes
Heptachlor epoxide	0.010	ug/l	1	-	U	Yes
Methoxychlor	0.020	ug/l	1	-	U	Yes
Toxaphene	0.25	ug/l	1	-	U	Yes

Sample location: BMSMC Building 5 Area

Sampling date: 7-Sep-16 Matrix: Groundwater

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.010	ug/l	1	-	U	Yes
alpha-BHC	0.010	ug/l	1	-	U	Yes
beta-BHC	0.010	ug/l	1	-	U	Yes
delta-BHC	0.010	ug/l	1	-	U	Yes
gamma-BHC (Lindane)	0.010	ug/l	1	-	U	Yes
alpha-Chlordane	0.010	ug/l	1	-	U	Yes
gamma-Chlordane	0.010	ug/l	1	-	U	Yes
Dieldrin	0.010	ug/l	1	-	U	Yes
4,4'-DDD	0.010	ug/l	1	-	Ü	Yes
4,4'-DDE	0.010	ug/l	1	-	U	Yes
4,4'-DDT	0.010	ug/l	1	-	U	Yes
Endrin	0.010	ug/l	1	-	U	Yes
Endosulfan sulfate	0.010	ug/l	1	-	U	Yes
Endrin aldehyde	0.010	ug/l	1	-	U	Yes
Endrin ketone	0.010	ug/l	1	-	U	Yes
Endosulfan-I	0.010	ug/l	1	-	U	Yes
Endosulfan-II	0.010	ug/l	1	-	U	Yes
Heptachlor	0.010	ug/l	1	-	U	Yes
Heptachlor epoxide	0.010	ug/l	1	-	U	Yes
Methoxychlor	0.020	ug/l	1	-	U	Yes
Toxaphene	0.25	ug/l	1	-	U	Yes

Sample location: BMSMC Building 5 Area

Sampling date: 7-Sep-16 Matrix: Groundwater

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.010	ug/i	1	-	U	Yes
alpha-BHC	0.010	ug/l	1	-	U	Yes
beta-BHC	0.010	ug/l	1	-	U	Yes
delta-BHC	0.010	ug/l	1	-	U	Yes
gamma-BHC (Lindane)	0.010	ug/l	1	-	U	Yes
alpha-Chlordane	0.010	ug/l	1	-	U	Yes
gamma-Chlordane	0.010	ug/l	1	-	บ	Yes
Dieldrin	0.010	ug/l	1	-	U	Yes
4,4'-DDD	0.010	ug/l	1	-	U	Yes
4,4'-DDE	0.010	ug/l	1	-	U	Yes
4,4'-DDT	0.010	ug/l	1	-	U	Yes
Endrin	0.010	ug/l	1	-	U	Yes
Endosulfan sulfate	0.010	ug/l	1	-	U	Yes
Endrin aldehyde	0.010	ug/l	1	-	U	Yes
Endrin ketone	0.010	ug/l	1	-	U	Yes
Endosulfan-l	0.010	ug/l	1	-	U	Yes
Endosulfan-li	0.010	ug/l	1	-	U	Yes
Heptachlor	0.010	ug/l	1	-	U	Yes
Heptachlor epoxide	0.010	ug/l	1	-	U	Yes
Methoxychlor	0.020	ug/l	1	-	U	Yes
Toxaphene	0.25	ug/l	1	-	U	Yes

Sample location: BMSMC Building 5 Area

Sampling date: 8-Sep-16 Matrix: Groundwater

Result	Units	Dilution Factor	Lab Flag	Validation	Danamakia
		onderon racco.	ran i tag	valluation	Reportable
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	IJ	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.020	ug/l	1	-	U	Yes
0.25	ug/l	1	-	U	Yes
0.010	ug/l	1	-	U	Yes
0.010	ug/l	1	-	ប	Yes
0.010	ug/l	1	-	U	Yes
0.020	ug/l	1	-	ប	Yes
0.25	ug/l	1	-	U	Yes
	0.010 0.020 0.25	0.010 ug/l	0.010 ug/l 1 0.020 ug/l 1 0.020 ug/l 1 0.010 ug/l 1	0.010 ug/l 1 - 0.020 ug/l 1 - 0.020 ug/l 1 - 0.010 ug/l 1 - 0.010 ug/l 1 - 0.010 ug/l 1 - 0.010 ug/l 1 -	0.010 ug/l 1 - U 0.020 ug/l 1 - U 0.020 ug/l 1 - U 0.010 ug/l 1 - U 0.020 ug/l 1 - U

. . .

Sample location: BMSMC Building 5 Area

Sampling date: 8-Sep-16 Matrix: Groundwater

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.010	ug/l	1		U	Yes
alpha-BHC	0.010	ug/l	1	-	Ü	Yes
beta-BHC	0.010	ug/l	1	_	U	Yes
delta-BHC	0.010	ug/l	1	-	U	Yes
gamma-BHC (Lindane)	0.010	ug/l	1	-	U	Yes
alpha-Chlordane	0.010	ug/l	1	-	U	Yes
gamma-Chlordane	0.010	ug/i	1	-	U	Yes
Dieldrin	0.010	ug/l	1	-	U	Yes
4,4'-DDD	0.010	ug/l	1	-	U	Yes
4,4'-DDE	0.010	ug/l	1	-	U	Yes
4,4'-DDT	0.010	ug/l	1	-	U	Yes
Endrin	0.010	ug/l	1	-	U	Yes
Endosulfan sulfate	0.010	ug/l	1	-	U	Yes
Endrin aldehyde	0.010	ug/i	1	-	U	Yes
Endrin ketone	0.010	ug/l	1	-	U	Yes
Endosulfan-I	0.010	ug/l	1	-	U	Yes
Endosulfan-II	0.010	ug/l	1	-	U	Yes
Heptachlor	0.010	ug/l	1	-	U	Yes
Heptachlor epoxide	0.010	ug/l	1	-	U	Yes
Methoxychlor	0.020	ug/l	1	-	U	Yes
Toxaphene	0.25	ug/l	1	-	U	Yes
Endosulfan-II	0.010	ug/l	1	-	U	Yes
Heptachlor	0.010	ug/l	1	-	U	Yes
Heptachlor epoxide	0.010	ug/l	1	-	U	Yes
Methoxychlor	0.020	ug/l	1	-	U	Yes
Toxaphene	0.25	ug/l	1	-	U	Yes

	Sampling Date:09/06-08/2016
	Shipping Date:09/08/2016
	EPA Region No.:2_
REVIEW OF PESTICIDE ORGA	NIC PACKAGE
The following guidelines for evaluating volatile of required validation actions. This document will assigned judgment to make more informed decision and in users. The sample results were assessed according documents in the following order of precedence Haz HW-36A, Revision 0, June, 2015. SOM02.2. Pesticide data validation actions listed on the data review guidance document, unless otherwise noted.	ist the reviewer in using professional better serving the needs of the data good to USEPA data validation guidance ardous Waste Support Section SOP Note Data Validation. The QC criteria and worksheets are from the primary
The hardcopied (laboratory name) _Accutest_ reviewed and the quality control and performance data summar	data package received has been rized. The data review for VOCs included:
Lab. Project/SDG No.:JC27318 No. of Samples:6	Sample matrix:Groundwater
Trip blank No.:	
Field blank No.:	
Equipment blank No.:	
Field duplicate No.:	
Field spikes No.:	
QC audit samples:	
X Data CompletenessX Holding TimesN/A GC/MS Tuning	X Laboratory Control SpikesX Field DuplicatesX CalibrationsX Compound IdentificationsX Compound QuantitationX Quantitation Limits
Definition of Qualifiers:	
J- Estimated results	
U- Compound not detected	
R- Rejected data ^	
UJ- Estimated nongetect /	
1/0 W 1 1	
Reviewer: Www www	
Date:September_30,_2016	

Project/Case Number:____JC27318___

DATA COMPLETENESS

MISSING INFORMATION	DATE LAB. CONTACTED	DATE RECEIVED
0		
- 10		
	45	
	*	-
	36	
<u> </u>		
		A2 01788
	<u> </u>	
	1	_
		
		1/4
		5
*		
		\
-11		

All criteria were met _X
Criteria were not met
and/or see below

HOLDING TIMES

The objective of this parameter is to ascertain the validity of the results based on the holding time of the sample from time of collection to the time of analysis.

Complete table for all samples and note the analysis and/or preservation not within criteria

SAMPLE ID	DATE SAMPLED	DATE EXTRACTED/ANALYZED	ACTION
Samples properly p	preserved.		

Preservatives:	_All_samples_extracted_and_analyzed_within_the_required_criteria	

<u>Criteria</u>

Aqueous samples - seven (7) days from sample collection for extraction; 40 days from sample collection for analysis.

Non-aqueous samples – fourteen (14) days from sample collection for extraction; 40 days from sample collection for analysis.

Cooler temperature (Criteria: 4 ± 2 °C): 4.2°C - OK

Actions

Qualify aqueous sample results using preservation and technical holding time information as follows:

- a. If there is no evidence that the samples were properly preserved ($T = 4^{\circ}C \pm 2^{\circ}C$), and the samples were extracted or analyzed within the technical holding times, qualify detects as estimated (J) and non-detects as estimated (UJ).
- b. If there is no evidence that the samples were properly preserved (T = 4° C \pm 2° C), and the samples were extracted or analyzed outside the technical holding times, qualify detects as estimated (J) and non-detects as estimated (UJ).
- c. If the samples were properly preserved, and were extracted and analyzed within the technical holding times, no qualification of the data is necessary.
- d. If the samples were properly preserved, and were extracted or analyzed outside the technical holding times, qualify detects as estimated (J) and non-detects as estimated (UJ). Note in the Data Review Narrative that holding times were exceeded and the effect of exceeding the holding time on the resulting data.

- e. Use professional judgment to qualify samples whose temperature upon receipt at the laboratory is either below 2 degrees centigrade or above 6 degrees centigrade.
- f. If technical holding times are grossly exceeded, use professional judgment to qualify the data.

Qualify non-aqueous sample results using preservation and technical holding time information as follows:

- a. If there is no evidence that the samples were properly preserved ($T = 4^{\circ}C \pm 2^{\circ}C$), and the samples were extracted or analyzed within the technical holding time, qualify detects as estimated (J) and non-detects as estimated (UJ).
- b. If there is no evidence that the samples were properly preserved ($T = 4^{\circ}C \pm 2^{\circ}C$), and the samples were extracted or analyzed outside the technical holding time, qualify detects as estimated (J) and non-detects as estimated (UJ).
- c. If the samples were properly preserved, and were extracted and analyzed within the technical holding time, no qualification of the data is necessary.
- d. If the samples were properly preserved, and were extracted or analyzed outside the technical holding time, qualify detects as estimated (J) and non-detects as estimated (UJ). Note in the Data Review Narrative that holding times were exceeded and the effect of exceeding the holding time on the resulting data.
- e. Use professional judgment to qualify samples whose temperature upon receipt at the laboratory is either below 2 degrees centigrade or above 6 degrees centigrade.
- f. If technical holding times are grossly exceeded, use professional judgment to qualify the data.

	All criteria were met	X
Cntena	were not met see be	elow

GAS CHROMATOGRAPH WITH ELECTRON CAPTURE DETECTOR (GC/ECD) INSTRUMENT PERFORMANCE CHECK (SECTIONS 1 TO 5)

1. Resolution Check Mixture

Criteria

Is the resolution between two adjacent peaks in the Resolution Check Mixture C greater than or equal to 80.0% for all analytes for the primary column and greater than or equal to 50.0% for the confirmation column? Yes? or No?

Is the resolution between two adjacent peaks in the Resolution Check Mixture (A and B) greater than or equal to 60.0%? Yes? or No?

Note: If resolution criteria are not met, the quantitative results may not be accurate due to inadequate resolution. Qualitative identifications may also be questionable if coelution exists.

Action

- a. Qualify detects for target compounds that were not adequately resolved as tentatively identified
- b. Qualify non-detected compounds as unusable (R).

2. Performance Evaluation Mixture (PEM) Resolution Criteria

Criteria

Is PEM analysis performed at the required frequency (at the end of each pesticide initial calibration) sequence and every 12 hours)? Yes? or No?

Action

a. If PEM is not performed at the required frequency, qualify all associated sample and blank results as unusable (R).

Criteria

Is PEM % Resolution < 90%?

Yes? or No?

Action

- a. a. Qualify detects for target compounds that were not adequately resolved as tentatively identified (NJ).
- b. Qualify non-detected compounds as unusable (R).

	All criteria were met	_X
Criteria	were not met see below	

3. PEM 4,4'-DDT Breakdown

Criteria

Is the PEM 4.4'-DDT % Breakdown >20.0% and 4.4'-DDT is detected?

Yes? or No?

Action

a. Qualify detects for 4,4'-DDT; detects for 4,4'-DDD; and detects for 4,4'-DDE as estimated (J)

Criteria

Is the PEM 4,4'-DDT % Breakdown >20.0% and 4,4'-DDT is not detected

Yes? or No?

Action

- a. Qualify non-detects for 4,4'- DDT as unusable (R)
- b. Qualify detects for 4,4'-DDD as tentatively identified (NJ)
- c. Qualify detects for 4,4'-DDE as tentatively identified (NJ)

4. PEM Endrin Breakdown

Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is detected?

Yes? or No?

Action

a. Qualify detects for Endrin; detects for Endrin aldehyde; and detects for Endrin ketone as estimated (J)

Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is not detected

Yes? or No?

Action

- a. Qualify non-detects for Endrin as unusable (R)
- b. Qualify detects for Endrin aldehyde as tentatively identified (NJ)
- c. Qualify detects for Endrin ketone as tentatively identified (NJ)

	All criteria were metX	
Criteria	were not met see below	

5. Mid-point Individual Standard Mixture Resolution -

Criteria

Is the resolution between two adjacent peaks in the Resolution Check Mixture C greater than or equal to 80.0% for all analytes for the primary column and greater than or equal to 50.0% for the confirmation column?

Yes? or No?

Is the resolution between two adjacent peaks in the Resolution Check Mixture (A and B) greater than or equal to 90.0%?

Yes? or No?

Note: If resolution criteria are not met, the quantitative results may not be accurate due to inadequate resolution. Qualitative identifications may also be questionable if coelution exists.

Action

- a. Qualify detects for target compounds that were not adequately resolved as tentatively identified (NJ).
- b. Qualify non-detected compounds as unusable (R).

Criteria

Is mid-point individual standard mixture analysis performed at the required frequency (every 12 hours)?

Yes? or No?

Action

a. If the mid-point individual standard mixture analysis is not performed at the required frequency, qualify all associated sample and blank results as unusable (R).

All criteria were metX
Criteria were not met
and/or see below

CALIBRATION VERIFICATION

Compliance requirement	s for satisfactor	y instrument	calibration	are established	to ensure	that the
instrument is capable of	producing and n	naintaining a	cceptable qu	uantitative data.		

*	•	producing and maintaining		tive data.
		Date of initial calibration:	8/29/16 8/29/16	
		Dates of initial calibration	n verification: 0	8/29/16
		Dates of continuing calib	oration: 09/15/16	: 09/19/16: 09/20/16
		Dates of final calibration		GC1G
		Instrument ID numbers:	(GC1G
	1	Matrix/Level:	Ague	eous/low
DATE	LAB FILE ID#	CRITERIA OUT RFs, %RSD, %D, r	COMPOUND	SAMPLES AFFECTED
	1	T	I	
		<u> </u>		
Contin	uing calibration	n verification not include	performance criteria i	nt performance criteria. in at least one of the two action taken, professional
	<u> </u>		<u> </u>	
Criteria				
	point calibratio Revision 0, Jun		concentration levels as	s shown in Table 3 of SOP <u>Yes</u> ? or No?
Actions				
f the stand effect on th		ons listed in Table 3 are	not used, use profession	onal judgment to evaluate the
Criteria				
Are RT Wi	ndows calculat	ed correctly?		Yes? or No?

All criteria were met __X__ Criteria were not met and/or see below_____

Action

Recalculate the windows and use the corrected values for all evaluations.

Criteria

Are the Percent Relative Standard Deviation (%RSD) of the CFs for each of the single component target compounds less than or equal to 20.0%, except for alpha-BHC and delta-BHC?

Yes? or No?

Are the %RSD of the CFs for alpha-BHC and delta-BHC less than or equal to 25.0%. Yes? or No?

Is the %RSD of the CFs for each of the Toxaphene peaks must be < 30% when 5-point ICAL is performed?

Yes? or No?

Is the %RSD of the CFs for the two surrogates (tetrachloro-m-xylene and decachlorobiphenyl) less than or equal to 30.0%.

Yes? or No?

Action

- a. If the %RSD criteria are not met, qualify detects as estimated (J) and use professional judgment to qualify non-detected target compounds.
- b. If the %RSD criteria are within allowable limits, no qualification of the data is necessary

Continuing Calibration Checks

Criteria

Is the continuing calibration standard analyzed at the acceptable time intervals? Yes? or No?

Action

- a. If more than 14 hours has elapsed from the injection of the instrument blank that begins an analytical sequence (opening CCV) and the injection of either a PEM or mid-point concentration of the Individual Standard Mixtures (A and B) or (C), qualify all data as unusable (R).
- b. If more than 12 hours has elapsed from the injection of the instrument blank that begins an analytical sequence (opening CCV) and the injection of the last sample or blank that is part of the same analytical sequence, qualify all data as unusable (R).
- c. If more than 72 hours has elapsed from the injection of the sample with a Toxaphene detection and the Toxaphene Calibration Verification Standard (CS3), qualify all data as unusable (R).

Criteria

Is the Percent Difference (%D) within ±25.0% for the PEM sample?

Yes? or No?

Action

a. Qualify associated detects as estimated (UJ) and non-detects as estimated (UJ).

Criteria

For the Calibration Verification Standard (CS3); is the Percent Difference (%D) within ± 25.0%? Yes? or No?

Action

Qualify associated detects as estimated (J) and non-detects as estimated (UJ).

Criteria

Is the PEM 4,4'-DDT % Breakdown >20.0% and 4,4'-DDT is detected?

Yes? or No?

Action

- a. Qualify detects for 4,4'-DDT; detects for 4,4'-DDD; and detects for 4,4'-DDE as estimated (J)
- b. Non-detected associated compounds are not qualified

Criteria

Is the PEM 4,4'-DDT % Breakdown >20.0% and 4,4'-DDT is not detected

Yes? or No?

Action

- a. Qualify non-detects for 4,4'- DDT as unusable (R)
- b. Qualify detects for 4.4'-DDD as tentatively identified (NJ)
- c. Qualify detects for 4,4'-DDE as tentatively identified (NJ)

Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is detected?

Yes? or No?

Action

- a. Qualify detects for Endrin; detects for Endrin aldehyde; and detects for Endrin ketone as estimated (J)
- b. Non-detected associated compounds are not qualified

Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is not detected

Yes? or No?

Action

- a. Qualify non-detects for Endrin as unusable (R)
- b. Qualify detects for Endrin aldehyde as tentatively identified (NJ)
- c. Qualify detects for Endrin ketone as tentatively identified (NJ)

A separate worksheet should be filled for each initial curve

All criteria were met _X
Criteria were not met
and/or see below

BLANK ANALYSIS RESULTS (Sections 1 & 2)

The assessment of the blank analysis results is to determine the existence and magnitude of contamination problems. The criteria for evaluation of blanks apply only to blanks associated with the samples, including trip, equipment, and laboratory blanks. If problems with any blanks exist, all data associated with the case must be carefully evaluated to determine whether or not there is an inherent variability in the data for the case, or if the problem is an isolated occurrence not affecting other data.

List the contami	nation in the bla	anks below. Hig	gh and low levels blanks	must be treated separately.
CRQL concentra	ationN	/A		
Laboratory blan	ks			
DATE Analyzed	LAB ID	LEVEL/ MATRIX	COMPOUND	CONCENTRATION UNITS
_ug/L				nit_of_0.01,_0.02,_and_0.25_
Field/Equipment	t/Trip blank			
DATE ANALYZED	LAB ID	LEVEL/ MATRIX	COMPOUND	CONCENTRATION UNITS
			V	

All criteria were met _X	
Criteria were not met	
and/or see below	

BLANK ANALYSIS RESULTS (Section 3)

Blank Actions

Action Levels (ALs) should be based upon the highest concentration of contaminant determined in any blank. Do not qualify any blank with another blank. The ALs for samples which have been diluted should be corrected for the sample dilution factor and/or % moisture, where applicable. No positive sample results should be reported unless the concentration of the compound in the samples exceeds the ALs:

The concentration of non-target compounds in all blanks must be less than or equal to 10 μ g/L. The concentration of each target compound found in the method or field blanks must be less than its CRQL listed in the method.

Data concerning the field blanks are not evaluated as part of the CCS process. If field blanks are present, the data reviewer should evaluate this data in a similar fashion as the method blanks.

Specific actions are as follows:

Blank Actions for Pesticide Analyses

Blank Type	Blank Result	Sample Result	Action for Samples	
	Detects	Not detected	No qualification required	
	< CRQL	< CRQL	Report CRQL value with a U	
		≥ CRQL	No qualification required	
Method, Sulfur		< CRQL	Report CRQL value with a U	
Cleanup, Instrument, Field, TCLP/SPLP	> CRQL	≥ CRQL and ≤ blank concentration	Report blank value for sample concentration with a U	
		≥ CRQL and > blank concentration	No qualification required	
	= CRQL	≤CRQL	Report CRQL value with a U	
		> CRQL	No qualification required	
	Gross contamination	Detects	Report blank value for sample concentration with a U	

All criteria were melX
Criteria were not met
and/or see below

CONTAMINATION SOURCE/LEVEL	COMPOUND	CONC/UNITS	AL/UNITS	SQL	AFFECTED SAMPLES

All criteria were met	
Criteria were not met	
and/or see belowX	

SURROGATE SPIKE RECOVERIES

Laboratory performance of individual samples is established by evaluation of surrogate spike recoveries. All samples are spiked with surrogate compounds prior to sample analysis. The accuracy of the analysis is measured by the surrogate percent recovery. Since the effects of the sample matrix are frequently outside the control of the laboratory and may present relatively unique problems, the validation of data is frequently subjective and demands analytical experience and professional judgment.

List the percent recoveries (%Rs) which do not meet the criteria for surrogate recovery.

Matrix:_Aqueou	IS				
Lab Sample ID	Lab File ID	S1 a	S1 b	S2 a	S2 b
JC27318-1 JC27318-2 JC27318-3 JC27318-5 JC27318-6 JC27318-7 OP96986-BS1 OP96986-MB1 OP96986-MS OP96986-MSD	1G127356.D 1G127357.D 1G127358.D 1G127359.D 1G127360.D 1G127361.D 1G127225.D 1G127224.D 1G127232.D 1G127233.D	200* c 157* c 146* c		130* c 86 112 167* c 80 82 70 94	219* c 98 71 102 153* c 63 75 61 92 152* d
Surrogate Compounds Recovery Limits S1 = Tetrachloro-m-xylene 26-132% S2 = Decachlorobiphenyl 10-118%					
(a) Recovery from GC signal #1 (b) Recovery from GC signal #2 (c) High percent recoveries and no positive found in the sample. (d) Outside the QC limits.					

Note: Surrogate recoveries within laboratory control limits in the two columns except in the cases described in this document. No action taken, surrogate recoveries were high and no target analytes not detected in affected samples.

Actions:

- a. For any surrogate recovery greater than 150%, qualify detected target compounds as biased high (J+).
- b. Do not qualify non-detected target compounds for surrogate recovery > 150 %.
- c. If both surrogate recoveries are greater than or equal to 30% and less than or equal to 150%, no qualification of the data is necessary.
- d. For any surrogate recovery greater than or equal to 10% and less than 30%, qualify detected target compounds as biased low (J-).

DATA REVIEW WORKSHEETS

- e. For any surrogate recovery greater than or equal to 10% and less than 30%, qualify non-detected target compounds as approximated (UJ).
- f. If low surrogate recoveries are from sample dilution, professional judgment should be used to determine if the resulting data should be qualified. If sample dilution is not a factor:
 - i. Qualify detected target compounds as biased low (J-).
 - ii. Qualify non-detected target compounds as unusable (R).
- g. If surrogate RTs in PEMs, Individual Standard Mixtures, samples, and blanks are outside of the RT Windows, the reviewer must use professional judgment to qualify data.
- h. If surrogate RTs are within RT windows, no qualification of the data is necessary.
- i. If the two surrogates were not added to all samples, MS/MSDs, standards, LCSs, and blanks, use professional judgment in qualifying data as missing surrogate analyte may not directly apply to target analytes.

Summary Surrogate Actions for Pesticide Analyses

	Action*		
Criteria	Detected Target	Non-detected Target	
	Compounds	Compounds	
%R > 150%	J+	No qualification	
30% < %R < 150%	No qualification		
10% < %R < 30%	J-	UJ	
%R < 10% (sample dilution not a factor)	J-	R	
%R < 10% (sample dilution is a factor)	Use professional judgment		
RT out of RT window	Use professional judgment		
RT within RT window	No qualification		

* Use professional judgment in qualifying data, as surrogate recovery problems may not directly apply to target analytes.

All criteria were met
Criteria were not met
and/or see belowX

Limite

MATRIX SPIKE/MATRIX SPIKE DUPLICATE (MS/MSD)

This data is generated to determine long term precision and accuracy in the analytical method for various matrices. This data alone cannot be used to evaluate the precision and accuracy of individual samples. If any % R in the MS or MSD falls outside the designated range, the reviewer should determine if there are matrix effects, i.e. LCS data are within the QC limits but MS/MSD data are outside QC limit.

MS/MSD Recoveries and Precision Criteria

Data for MS and MSDs will not be present unless requested by the Region.

Notify the Contract Laboratory Program Project Officer (CLP PO) if a field blank was used for the MS and MSD, unless designated as such by the Region.

NOTE: For a Matrix Spike that does not meet criteria, apply the action to only the field sample used to prepare the Matrix Spike sample. If it is clearly stated in the data validation materials that the samples were taken through incremental sampling or some other method guaranteeing the homogeneity of the sample group, then the entire sample group may be qualified.

Snike MSD MSD

List the %Rs, RPD of the compounds which do not meet the criteria.

IC27206-1 Snike MS

Sample ID: ____JC27206-1MS/MSD____ Matrix/Level: __Groundwater___

The QC reported here applies to the following samples: Method: SW846 8081B JC27318-1, JC27318-2, JC27318-3, JC27318-5, JC27318-6, JC27318-7

MS

	JUZIZU	0-1	Shike	IVIO	INIO	Spike	MOD	MOD		Limits
Compound	ug/l	Q	ug/l	ug/l	%	ug/l	ug/l	%	RPD	Rec/RPD
Aldrin	ND		0.5	0.57	114	0.5	1.0	200* a	55* a	37-159/40
alpha-BHC	ND		0.5	0.59	118	0.5	1.1	220* a	60* a	37-164/37
beta-BHC	ND		0.5	0.57	114	0.5	0.97	194* a	52* a	46-151/36
delta-BHC	ND		0.5	0.61	122	0.5	1.1	220* a	57* a	32-168/36
gamma-BHC										
(Lindane)	ND		0.5	0.60	120	0.5	1.1	220* a	59* a	44-160/37
α-Chlordane	ND		0.5	0.54	108	0.5	0.94	188* a	54* a	38-160/35
γ-Chlordane	ND		0.5	0.57	114	0.5	0.98	188* a	53* a	39-157/37
Dieldrin	ND		0.5	0.59	118	0.5	1.0	200* a	52* a	42-161/36
4,4'-DDD	ND		0.5	0.53	106	0.5	0.95	190* a	57* a	40-161/36
4,4'-DDE	ND		0.5	0.55	110	0.5	1.0	200* a	58* a	34-158/36
4,4'-DDT	ND		0.5	0.63	126	0.5	1.1	220* a	54* a	41-173/33
Endrin	ND		0.5	0.60	120	0.5	1.1	220* a	59* a	44-166/35
Endosulfan sulfate	ND		0.5	0.58	116	0.5	0.95	190* a	48* a	46-161/36
Endrin aldehyde	ND		0.5	0.60	120	0.5	1.0	200* a	50* a	34-149/36

The QC reported here applies to the following samples: Method: SW846 8081B JC27318-1, JC27318-2, JC27318-3, JC27318-5, JC27318-6, JC27318-7

	JC272	06-1	Spike	MS	MS	Spike	MSD	MSD		Limits
Compound	ug/l	Q	ug/l	ug/l	%	ug/l	ug/l	%	RPD	Rec/RPD
Endrin ketone	ND		0.5	0.57	114	0.5	0.96	192* a	51* a	44-157/36
Endosulfan-l	ND		0.5	0.54	108	0.5	0.93	186* a	53* a	43-154/35
Endosulfan-II	ND		0.5	0.59	118	0.5	0.99	198* a	51* a	40-162/35
Heptachlor	ND		0.5	0.56	112	0.5	1.0	200* a	56* a	33-153/37
Heptachlor										
epoxide	ND		0.5	0.57	114	0.5	0.95	190* a	50* a	45-154/37
Methoxychlor	ND		0.5	0.61	122	0.5	1.0	200* a	48* a	48-169/32
Toxaphene	ND		ND			ND			nc	50-150/30

⁽a) Outside the QC limits.

Note: MS/MSD sample analyzed with this data package. % recoveries and RPD outside laboratory control limits. No action taken, spiked sample from another project.

Action

No qualification of the data is necessary on MS and MSD data alone. However, using professional judgment, the validator may use the MS and MSD results in conjunction with other QC criteria and determine the need for some qualification of the data.

A separate worksheet should be used for each MS/MSD pair.

^{* =} Outside of Control Limits.

All criteria were met_	_X	
Criteria were not met		
and/or see below		

LABORATORY CONTROL SAMPLE (LCS) ANALYSIS

This data is generated to determine accuracy of the analytical method for various matrices.

1. LCS Recoveries Criteria

LCS Spike Compound	Recovery Limits (%)
gamma-BHC	50 – 120
Heptachlor epoxide	50 – 150
Dieldrin	30 – 130
4,4'-DDE	50 – 150
Endrin	50 – 120
Endosulfan sulfate	50 – 120
trans-Chlordane	30 – 130
Tetrachloro-m-xylene (surrogate)	30 – 150
Decachlorobiphenyl (surrogate)	30 – 150

LC	S concentrations	:0.25_ug/l;		
List the %R	R of compounds v	hich do not meet the criteria		
	LCS ID	COMPOUND	% R	QC LIMIT
	<u> </u>	<u> </u>		
			_	

Action

The following guidance is suggested for qualifying sample data for which the associated LCS does not meet the required criteria.

- a. If the LCS recovery exceeds the upper acceptance limit, qualify detected target compounds as estimated (J). Do not qualify non-detected target compounds.
- b. If the LCS recovery is less than the lower acceptance limit, qualify detected target compounds as estimated (J) and non-detects as unusable (R).
- c. Use professional judgment to qualify data for compounds other than those compounds that are included in the LCS.
- d. Use professional judgment to qualify non-LCS compounds. Take into account the compound class, compound recovery efficiency, analytical problems associated with each compound, and comparability in the performance of the LCS compound to the non-LCS compound.
- e. If the LCS recovery is within allowable limits, no qualification of the data is necessary.

2. Frequency Criteria:

Where LCS analyzed at the required frequency and for each matrix? <u>Yes</u> or No. If no, the data may be affected. Use professional judgment to determine the severity of the effect and qualify data accordingly. Discuss any actions below and list the samples affected.

Note: Blank spike analyzed for aqueous matrix. % recoveries within laboratory control limits. Recovery for gamma-chlordane obtained from second column, first column used for confirmation only.

All criteria were met
Criteria were not met
and/or see belowN/A

FLORISIL CARTRIDGE PERFORMANCE CHECK

NOTE: Florisil cartridge cleanup is mandatory for all extracts.

Criteria

Is the Florisil cartridge performance check conducted at least once on each lot of cartridges used for sample cleanup or every 6 months, whichever is most frequent?

Yes? or No?

N/A

Criteria

Are the results for the Florisil Cartridge Performance Check solution included with the data package?

Yes? or No?

N/A

Note: If % criteria are not met, examine the raw data for the presence of polar interferences and use professional judgment in qualifying the data as follows:

Action:

- a. If the Percent Recovery is greater than 120% for any of the pesticide target compounds in the Florisil Cartridge Performance Check, qualify detected compounds as estimated (J). Do not qualify non-detected target compounds.
- b. If the Percent Recovery is greater than or equal to 80% and less than or equal to 120% for all the pesticide target compounds, no qualification of the data is necessary.
- c. If the Percent Recovery is greater than or equal to 10% and less than 80% for any of the pesticide target compounds in the Florisil Cartridge Performance Check, qualify detected target compounds as estimated (J) and non-detected target compounds as approximated (UJ).
- d. If the Percent Recovery is less than 10% for any of the pesticide target compounds in the Florisil Cartridge Performance Check, qualify detected compounds as estimated (J) and qualify non-detected target compounds as unusable (R).
- e. If the Percent Recovery of 2,4,5-trichlorophenol in the Florisil Cartridge Performance Check is greater than or equal to 5%, use professional judgment to qualify detected and non-detected target compounds, considering interference on the sample chromatogram.

Note: State in the Data Review Narrative potential effects on the sample data resulting from the Florisil Cartridge Performance Check analysis not yielding acceptable results.

Note: No information for florisil cartridge performance check included in data package. There is evidence tahtFlorisil cartridge was used for sample extraction/clean-up. No qualification of the data performed, professional judgment.

All criteria were met	.N/A
Criteria were not met	
and/or see below	

GEL PERMEATION CHROMATOGRAPHY (GPC) PERFORMANCE CHECK

NOTE: GPC cleanup is mandatory for all soil samples.

If GPC criteria are not met, examine the raw data for the presence of high molecular weight contaminants; examine subsequent sample data for unusual peaks; and use professional judgment in qualifying the data. Notify the Contract Laboratory Program Project Officer (CLP PO) if the laboratory chooses to analyze samples under unacceptable GPC criteria.

Action:

- a. If the Percent Recovery is less than 10% for the pesticide compounds and surrogates during the GPC calibration check, the non-detected target compounds may be suspect, qualify detected compounds as estimated (J).
- b. If the Percent Recovery is less than 10% for the pesticide compounds and surrogates during the GPC calibration check, qualify all non-detected target compounds as unusable (R).
- c. If the Percent Recovery is greater than or equal to 10% and is less than 80% for any of the pesticide target compounds in the GPC calibration, qualify detected target compounds as estimated (J) and non-detected target compounds as approximated (UJ).
- d. If the Percent Recovery is greater than or equal to 80% and less than or equal to 120% for all the pesticide target compounds, no qualification of the data is necessary.
- e. If high recoveries (i.e., greater than 120%) were obtained for the pesticides and surrogates during the GPC calibration check, qualify detected compounds as estimated (J). Do not qualify non-detected target compounds.

Note: State in the Data Review Narrative potential effects on the sample data resulting from the GPC cleanup analyses not yielding acceptable results.

Note: No information for performance of GPC cleanup included in data package. No qualification of the data performed, professional judgment.

All criteria were metX	
Criteria were not met	
and/or see below	_

TARGET COMPOUND IDENTIFICATION

Criteria:

- 1. Is Retention Times (RTs) of both of the surrogates and reported target compounds in each sample within the calculated RT Windows on both columns?

 Yes? or No?
- 2. Is the Tetrachloro-m-xylene (TCX) RT ± 0.05 minutes of the Mean RT (RT) determined from the initial calibration and Decachlorobiphenyl (DCB) within ± 0.10 minutes of the RT determined from the initial calibration? Yes? or No?
- 3. Is the Percent Difference (%D) for the detected mean concentrations of a pesticide target compound between the two Gas Chromatograph (GC) columns within the inclusive range of \pm 25.0 %?

 Yes? or No?
- 4. When no analytes are identified in a sample; are the chromatograms from the analyses of the sample extract and the low-point standard of the initial calibration associated with those analyses on the same scaling factor?

 Yes? or No?
- 5. Does the chromatograms display the Single Component Pesticides (SCPs) detected in the sample and the largest peak of any multi-component analyte detected in the sample at less than full scale.

 Yes? or No?
- 6. If an extract is diluted; does the chromatogram display SCPs peaks between 10-100% of full scale, and multi-component analytes between 25-100% of full scale? Yes? or No? N/A
- 7. For any sample; does the baseline of the chromatogram return to below 50% of full scale before the elution time of alpha-BHC, and also return to below 25% of full scale after the elution time of alpha-BHC and before the elution time of DCB?

 Yes? or No?
- 8. If a chromatogram is replotted electronically to meet these requirements; is the scaling factor used displayed on the chromatogram, and both the initial chromatogram and the replotted chromatogram submitted in the data package.

 Yes? or No?

Action:

- a. If the qualitative criteria for both columns were not met, all target compounds that are reported as detected should be considered non-detected.
- b. Use professional judgment to assign an appropriate quantitation limit using the following guidance:
 - If the detected target compound peak was sufficiently outside the pesticide RT Window, the reported values may be a false positive and should be replaced with the sample Contract Required Quantitation Limits (CRQL) value.

DATA REVIEW WORKSHEETS

- ii. If the detected target compound peak poses an interference with potential detection of another target peak, the reported value should be considered and qualified as unusable (R).
- c. If the data reviewer identifies a peak in both GC column analyses that falls within the appropriate RT Windows, but was reported as a non-detect, the compound may be a false negative. Use professional judgment to decide if the compound should be included.

Note: State in the Data Review Narrative all conclusions made regarding target compound identification.

- d. If the Toxaphene peak RT windows determined from the calibration overlap with SCPs or chromatographic interferences, use professional judgment to qualify the data.
- e. If target compounds were detected on both GC columns, and the Percent Difference between the two results is greater than 25.0%, consider the potential for coelution and use professional judgment to decide whether a much larger concentration obtained on one column versus the other indicates the presence of an interfering compound. If an interfering compound is indicated, use professional judgment to determine how best to report, and if necessary, qualify the data according to these guidelines.
- f. If Toxaphene exhibits a marginal pattern-matching quality, use professional judgment to establish whether the differences are due to environmental "weathering" (i.e., degradation of the earlier eluting peaks relative to the later eluting peaks). If the presence of Toxaphene is strongly suggested, report results as presumptively present (N).

GAS CHROMATOGRAPH/MASS SPECTROMETER (GC/MS) CONFIRMATION

NOTE: This confirmation is not usually provided by the laboratory. In cases where it is provided, use professional judgment to determine if data qualified with "C" can be salvaged if it was previously qualified as unusable (R).

Action:

- a. If the quantitative criteria for both columns were met (≥ 5.0 ng/µL for SCPs and ≥ 125 ng/µL for Toxaphene), determine whether GC/MS confirmation was performed. If it was performed, qualify the data using the following guidance:
 - i. If GC/MS confirmation was not required because the quantitative criteria for both columns was not met, but it was still performed, use professional judgment when evaluating the data to decide whether the detect should be qualified with "C".
 - ii. If GC/MS confirmation was performed, but unsuccessful for a target compound detected by GC/ECD analysis, qualify those detects as "X".

All criteria were met	_X
Criteria were not met	
and/or see below	

COMPOUND QUANTITATION AND REPORTED CONTRACT REQUIRED QUANTITATION LIMITS (CRQLS)

The sample quantitation evaluation is to verify laboratory quantitation results. In the space below, please show a minimum of one sample calculation:

JC27318-1

Tetrachloro-m-xylene

RF = 0.802

[] =

(329.7 x 10⁶)(50)/(163.5 X 10⁶)(0.802)

= 125.7 ppb

b Ok

Action:

- a. If sample quantitation is different from the reported value, qualify result as unusable (R).
- b. When a sample is analyzed at more than one dilution, the lowest CRQLs are used unless a QC exceedance dictates the use of the higher CRQLs from the diluted sample.
- c. Replace concentrations that exceed the calibration range in the original analysis by crossing out the "E" and its corresponding value on the original reporting form and substituting the data from the diluted sample.
- d. Results between the MDL and CRQL should be qualified as estimated (J).
- e. Results less than the MDL should be reported at the CRQL and qualified (U). MDLs themselves are not reported.
- f. For non-aqueous samples, if the percent moisture is less than 70.0%, no qualification of the data is necessary. If the percent moisture is greater than or equal to 70.0% and less than 90.0%, qualify detects as estimated (J) and non-detects as approximated (UJ). If the percent moisture is greater than or equal to 90.0%, qualify detects as estimated (J) and non-detects as unusable (R) (see Table).

Percent Moisture Actions for Pesticide Analysis for Non-Aqueous Samples

Criteria		Action		
	Detected Associated Compounds	Non-detected Associated Compounds		
% Moisture < 70.0	No qualification			
70.0 < % Moisture < 90.0	J	UJ		
% Moisture > 90.0	J	R		

DATA REVIEW WORKSHEETS

List sample	es which have <u><</u>	50 % solids			
·-·					
-	<u></u>			-	
_			 		
_	<u>.</u>				
_					

Note: If any discrepancies are found, the Region's designated representative may contact the laboratory to obtain additional information that could resolve any differences. If a discrepancy remains unresolved, the reviewer must use professional judgment to decide which value is the most accurate. Under these circumstances, the reviewer may determine that qualification of data is warranted. Note in the Data Review Narrative a description of the reasons for data qualification and the qualification that is applied to the data.

Dilution performed

SAMPLE ID	DILUTION FACTOR	REASON FOR DILUTION
	- Carlotte	P
_		

All criteria were metNA	
Criteria were not met	
and/or see below	

FIELD DUPLICATE PRECISION

NOTE: In the absence of QAPP guidance for validating data from field duplicates, the following action will be taken.

Field duplicates samples may be taken and analyzed as an indication of overall precision. These analyses measure both field and lab precision; therefore, the results may have more variability than laboratory duplicates which only laboratory performance. It is also expected that soil duplicate results will have a greater variance than water matrices due to difficulties associated with collecting identical field duplicate samples. Identify which samples within the data package are field duplicates. Estimate the relative percent difference (RPD) between the values for each compound. If large RPDs (> 50%) is observed, confirm identification of samples and note difference in the executive summary.

Sample IDs:	:	-	Ma	trix:	-		
COMPOUND	SQL ug/L	SAMPLE CONC.	DUPLICATE CONC.	RPD	ACTION		
No field/laboratory duplicate analyzed with this data package. MS/MSD % recoveries RPD used to assess precision. RPD within the required criteria of < 50 % except in the cases described in this document. No action taken based on RPD results.							
					i		

Actions:

- a. Qualify as estimated positive results (J) and nondetects (UJ) for the compound that exceeded the above criteria. For organics, only the sample and duplicate will be qualified.
- b. If an RPD cannot be calculated because one or both of the sample results is not detected, the following actions apply:
 - i. If one sample result is not detected and the other is greater than 5x the SQL qualify (J/UJ).
 - ii. If one sample value is not detected and the other is greater than 5x the SQL and the SQLs for the sample and duplicate are significantly different, use professional judgment to determine if qualification is appropriate.
 - iii. If one sample value is not detected and the other is less than 5x, use professional judgment to determine if qualification is appropriate.
 - iv. If both sample and duplicate results are not detected, no action is needed.

OVERALL ASSESSMENT OF DATA

Action:

- 1. Use professional judgment to determine if there is any need to qualify data which were not qualified based on the Quality Control (QC) criteria previously discussed.
- 2. Write a brief narrative to give the user an indication of the analytical limitations of the data.

Note: The Contract Laboratory Program Project Officer (CLP PO) must be informed if any inconsistency of the data with the Sample Delivery Group (SDG) Narrative. If sufficient information on the intended use and required quality of the data is available, the reviewer should include their assessment of the usability of the data within the given context. This may be used as part of a formal Data Quality Assessment (DQA).

Overall assessment of the data:

Results are valid; the data can be used for decision making purposes.

Sample JC27318-4 was not analyzed; no explanation given.

EXECUTIVE NARRATIVE

SDG No:

JC27318

Laboratory:

Accutest, Florida

Analysis:

SW846-8015C

Number of Samples:

7

Location:

BMSMC, Building 5 Area

Humacao, PR

SUMMARY:

Seven (7) samples were analyzed for the low molecular weight alcohols (LMWAs) list following method SW846-8015C. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: "Test Methods for Evaluating Solid Waste, Physical/Chemical Methods SW-846 (Final Update III, December 1996)," specifically for Methods 8000/8015C are utilized. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

Results are valid and can be used for decision making purposes.

Critical issues:

None

Major:

None

Minor:

None

Critical findings:

None

Major findings:

None

Minor findings:

- 1. All samples analyzed within the recommended method holding time except in the cases described in this document. The following samples were run outside of holding time: JC27318-1, JC27318-2, JC27318-3, JC27318-4, JC27318-5 No action taken, samples originally analyzed within the holding time.
- 2. Surrogate recoveries outside laboratory control limits in sample JC27318-5. No action taken, surrogate recoveries were high and no target analyte detected in affected sample.
- 3. Blank spike % recovery outside laboratory control limits but within generally acceptable control limits for sec-butyl alcohol. No action taken.

COMMENTS:

Results are valid and can be used for decision making purposes.

Reviewers Name:

Rafael Infante

Chemist License 1888

Signature:

September 30, 2016

Date:

SAMPLE ORGANIC DATA SAMPLE SUMMARY

Sample ID: JC27318-1

Sample location: BMSMC Building 5 Area

Sampling date: 9/6/2016 Matrix: Groundwater

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/l	1.0	-	U	Yes
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Propyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	~	Ų	Yes
sec-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
Methanol	200	ug/l	1.0	-	U	Yes

Sample ID: JC27318-2

Sample location: BMSMC Building 5 Area

Sampling date: 9/7/2016 Matrix: Groundwater

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/l	1.0	-	U	Yes
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Propyl Alcohol	100	ug/i	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
sec-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
Methanol	200	ug/l	1.0	-	U	Yes

Sample ID: JC27318-3

Sample location: BMSMC Building 5 Area

Sampling date: 9/7/2016 Matrix: Groundwater

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/i	1.0	-	U	Yes
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Propyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
sec-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
Methanol	200	ug/l	1.0	-	U	Yes

Sample ID: JC27318-4

Sample location: BMSMC Building 5 Area

Sampling date: 9/7/2016

Matrix: Groundwater

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/l	1.0	_	U	Yes
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0	-	υ	Yes
n-Propyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
sec-Butyl Alcohol	100	ug/l	1.0	•	U	Yes
Methanol	200	ug/l	1.0	-	U	Yes

Sample ID: JC27318-5

Sample location: BMSMC Building 5 Area

Sampling date: 9/7/2016 Matrix: Groundwater

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/l	1.0	-	U	Yes
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0		U	Yes
n-Propyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
sec-Butyl Alcohol	100	ug/i	1.0	-	U	Yes
Methanol	200	ug/l	1.0	-	U	Yes

Sample ID: JC27318-6

Sample location: BMSMC Building 5 Area

Sampling date: 9/8/2016 Matrix: Groundwater

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/l	1.0	-	U	Yes
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0	-	υ	Yes
n-Propyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
sec-Butyl Alcohol	100	ug/i	1.0	-	U	Yes
Methanol	200	ug/l	1.0	-	U	Yes

Sample ID: JC27318-7

Sample location: BMSMC Building 5 Area

Sampling date: 9/8/2016 Matrix: Groundwater

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/l	1.0	-	U	Yes
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Propyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
sec-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
Methanol	200	ug/l	1.0	-	U	Yes

	Project Number:JC27318
	Date:09/06-08/2016
	Shipping Date:09/08/2016
	EPA Region:2
REVIEW OF VOLATILE OF The following guidelines for evaluating volatile organics were document will assist the reviewer in using professional judgeserving the needs of the data users. The sample results guidance documents in the following order of precede Physical/Chemical Methods SW-846 (Final Update III, Decentilized. The QC criteria and data validation actions listed guidance document, unless otherwise noted. The hardcopied (laboratory name) _Accutest_ and the quality control and performance data summarized. The Lab. Project/SDG No.:JC27318	PRGANIC PACKAGE e created to delineate required validation actions. This gment to make more informed decision and in better were assessed according to USEPA data validation ence: "Test Methods for Evaluating Solid Waste, mber 1996)," specifically for Methods 8000/8015C are on the data review worksheets are from the primary data package received has been reviewed the modified data review for VOCs included: Sample matrix:Groundwater
Trip blank No.:	
Field blank No.:	
Equipment blank No.:	
Field duplicate No.:	
X Data CompletenessX Holding TimesN/A_ GC/MS TuningN/A_ Internal Standard PerformanceX BlanksX Surrogate RecoveriesX Matrix Spike/Matrix Spike Duplicate	X Laboratory Control SpikesX Field DuplicatesX CalibrationsX Compound IdentificationsX Compound QuantitationX Quantitation Limits
Overall Comments:_Low_molecular_weight_alco	phols_by_SW-846_8015C
Definition of Qualifiers: J- Estimated results U- Compound not detected R- Rejected data UJ- Estimated nondetect Reviewer: Date: Sontember 30, 2016	
Date:Septembet_30,_2016	

DATA REVIEW WORKSHEETS

DATA COMPLETENESS

MISSING INFORMATION	DATE LAB. CONTACTED	DATE RECEIVED
1		
- 4		
*		
1		
	<u> </u>	
	<u> </u>	
	<u> </u>	
	*	
<u> </u>		
		No.
		<u> </u>
		The state of the s

All criteria were met	
Criteria were not mel	
and/or see belowX_	

HOLDING TIMES

The objective of this parameter is to ascertain the validity of the results based on the holding time of the sample from time of collection to the time of analysis.

Complete table for all samples and note the analysis and/or preservation not within criteria

SAMPLE ID	DATE SAMPLED	DATE ANALYZED	pН	ACTION
	<u> </u>	<u></u>		
All samples analy	zed within the recomn	nended method holding	time exc	ept in the cases described
				e: JC27318-1, JC27318-2,
JC27318-3, JC27	318-4, JC27318-5 Sa	mple originally analyzed	within th	e holding time. All samples
properly preserve	d			.
		· · · · · · · · · · · · · · · · · · ·	1	

<u>Criteria</u>

Aqueous samples – 14 days from sample collection for preserved samples (pH \leq 2, 4°C), no air bubbles. Aqueous samples – 7 days from sample collection for unpreserved samples, 4°C, no air bubbles. Soil samples- 7 days from sample collection. Cooler temperature (Criteria: 4 ± 2 °C): 4.2°C

Actions

If the VOCs vial(s) have air bubbles, estimate positive results (J) and reject nondetects (R).

If the % solids of soil samples is 10-50%, estimates positive results (J) and nondetects (UJ)

If the % solid of soil samples is < 10%, estimate positive results (J) and reject nondetects (R).

If holding times are exceeded but < 14 days beyond criteria, estimate positive results (J) and nondetects (UJ).

If holding times are exceeded but < 28 days beyond criteria, estimate positive results (J) and reject nondetects (R).

If holding times are grossly exceeded (> 28 days beyond criteria), reject all results (R).

If samples were not iced or if the ice were melted (> 10°C), estimate positive results (J) and nondetects (UJ).

	All criteria were met _	N/A_
Criteria	were not met see below	

GC/MS TUNING

The assessment of the tuning results is to determine if the sample instrumentation is within the standard tuning QC limits
N/A_ The BFB performance results were reviewed and found to be within the specified criteria.
N/A_ BFB tuning was performed for every 12 hours of sample analysis.
If no, use professional judgment to determine whether the associated data should be accepted, qualified or rejected.
List the samples affected:
If mass calibration is in error, all associated data are rejected.

All criteria were met	X
Criteria were not met	
and/or see below	_

CALIBRATION VERIFICATION

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data.

	Dat	e of initial calibration:_	09/19/16;	_09/21/16	
	Dat	es of continuing calibra	tion:09/19/16	5;_09/21/16;_09/22/16	
	Date	es of final calibration ve	erification:09/19/16	6;_09/21/16;_09/22/16	
	Inst	rument ID number:	GCGH_		
	Mat	rix/Level:	Aqueous/low		
			•		
DATE	LAB FILE ID#	CRITERIA OUT	COMPOUND	SAMPLES	
		RFs, %RSD, %D, r		AFFECTED	
				in promise appropri	
					\neg

Note: Initial, continuing, and final calibration verifications meets method specific criteria in the two columns.

Criteria

All RFs must be > 0.05 regardless of method requirements for SPCC.

All %RSD must be \leq 15 % regardless of method requirements for CCC.

All %Ds must be \leq 20% regardless of method requirements for CCC.

It should be noted that Region 2 SOP HW-24 does not specify criterion for the curve correlation coefficient (r). A limit for r of > 0.995 has therefore been utilized as professional judgment.

Actions

If any compound has an initial RF or a continuing RF of < 0.05, estimate positive results (J) and reject nondetects (R), regardless of method requirements.

If any compound has a %RSD > 15%, estimate positive results (J) and use professional judgment to qualify nondetects.

If any compound has a %RSD > 90%, estimate positive results (J) and reject nondetects (R).

If any compound has a % D > 20%, estimate positive results (J) and reject nondetects (R).

If any compound has a % D > 20%, estimate positive results (J) and nondetects (UJ).

If any compound has a % D > 90%, estimate positive results (J) and reject nondetects (R).

If any compound has r < 0.995, estimate positive results and nondetects.

A separate worksheet should be filled for each initial curve

All criteria were met _	_X
Criteria were not met	
and/or see below	

V A. BLANK ANALYSIS RESULTS (Sections 1 & 2)

The assessment of the blank analysis results is to determine the existence and magnitude of contamination problems. The criteria for evaluation of blanks apply only to blanks associated with the samples, including trip, equipment, and laboratory blanks. If problems with any blanks exist, all data associated with the case must be carefully evaluated to determine whether or not there is an inherent variability in the data for the case, or if the problem is an isolated occurrence not affecting other data.

List the contamination in the blanks below. High and low levels blanks must be treated separately.

Laboratory blanks

DATE ANALYZED	LAB ID	LEVEL/ MATRIX	COMPOUND	CONCENTRATION UNITS
	_			
Field/Equipmen				
DATE ANALYZED	LAB ID	LEVEL/ MATRIX	COMPOUND	CONCENTRATION UNITS
			<u> </u>	

All criteria were met)	
Criteria were not met	
and/or see below	

VB. BLANK ANALYSIS RESULTS (Section 3)

Blank Actions

Action Levels (ALs) should be based upon the highest concentration of contaminant determined in any blank. Do not qualify any blank with another blank. The ALs for samples which have been diluted should be corrected for the sample dilution factor and/or % moisture, where applicable. No positive sample results should be reported unless the concentration of the compound in the samples exceeds the ALs:

ALs = 10x the amount of common contaminants (methylene chloride, acetone, 2-butanone, and toluene) ALs = 5x for any other compounds

Specific actions are as follows:

If the concentration is < sample quantitation limit (SQL) and \le AL, report the compound as not detected (U) at the SQL.

If the concentration is \geq SQL but \leq AL, report the compound as not detected (U) at the reported concentration.

If the concentration is ≥ SQL and > AL, report the concentration unqualified.

Notes:

High and low level blanks must be treated separately

Compounds qualified "U" for blank contamination are still considered "hits" when qualifying for calibration criteria.

CONTAMINATION SOURCE/LEVEL	COMPOUND	CONC/UNITS	AL/UNITS	SQL	AFFECTED SAMPLES
					100
					policil.
				1000	
			g.		
		459	200		
		and the same of th			
		200	-		
-	42				
127			-		
					<u> </u>

All criteria were metX	
Criteria were not met	
and/or see below	

SURROGATE SPIKE RECOVERIES

Laboratory performance of individual samples is established by evaluation of surrogate spike recoveries. All samples are spiked with surrogate compounds prior to sample analysis. The accuracy of the analysis is measured by the surrogate percent recovery. Since the effects of the sample matrix are frequently outside the control of the laboratory and may present relatively unique problems, the validation of data is frequently subjective and demands analytical experience and professional judgment. List the percent recoveries (%Rs) which do not meet the criteria for surrogate recovery.

Matrix: solid/aqueous

SAMPLE ID		SURROGATE COMPOUND ACTION				
	Hexanol	DBFM	TOL-d8	BFB		
_All_surrogate	_recoveries_within_	laboratory contro	ol limits except t	for the foli	owina:	
JC27318-5	176	, <u></u>		N	o_action	
_JC27318-5	224/227				lo_action	
Note:	No action taken, affected sample.	surrogate recov	veries were high	and no ta	arget analyte de	tected in
QC Limits* (Aqu LL_to_L QC Limits* (Sol	JL56_to_14	5to	to	to		
LL_to_l	JLto	to	to	to		
QC Limits* (Soi						
LL_to_l	JL to	to	to	to		
	Dichloromethane-d4 nofluoromethane	1	TOL-d8 = 7 BFB = Broa			
* QC limi * If QC lii samples.	ts are laboratory in- mits are not availabl	house performar e, use limits of 8	nce criteria, LL = 1 0 – 120 % for aqu	ower limit, Jeous and	UL = upper limit. 70 – 130 % for	solid
Actions:						
						_
QUALI		%R < 10%	%R = 10%		6R > UL	_
	e results	J	J	J		
Nonde	tects results	R	l UJ	I A	ccent	1

Surrogate action should be applied:

If one or more surrogate in the VOC fraction is out of specification, but has a recovery of > 10%. If any one surrogate in a fraction shows < 10 % recovery.

All criteria were metX
Criteria were not met
and/or see below

VII. A MATRIX SPIKE/MATRIX SPIKE DUPLICATE (MS/MSD)

This data is generated to determine long term precision and accuracy in the analytical method for various matrices. This data alone cannot be used to evaluate the precision and accuracy of individual samples. If any % R in the MS or MSD falls outside the designated range, the reviewer should determine if there are matrix effects, i.e. LCS data are within the QC limits but MS/MSD data are outside QC limit.

1. MS/MSD Recoveries and Precision Criteria

The laboratory should use one MS and a duplicate analysis of an unspiked field sample if target analytes are expected in the sample. If target analytes are not expected, MS/MSD should be analyzed.

List the %Rs, RPD of the compounds which do not meet the criteria.

Sample ID:JC27688-1MS/-MSD				Matrix/Level:Groundwater/low		
MS OR MSD	COMPOUND	% R	RPD	QC LIMITS	ACTION	
MS/MSD%_re	ecoveries_and_RPD_	within_lab	oratory_	control_limits		

Actions:

QUALITY	%R < LL	%R > UL
Positive results	J	J
Nondetects results	R	Accept

^{*} QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.

^{*} If QC limits are not available, use limits of 70 – 130 %.

All criteria were met _X_	
Criteria were not met	
and/or see below	

MS/MSD criteria apply only to the unspiked sample, its dilutions, and the associated MS/MSD samples:

If the % R for the affected compounds were < LL (or 70 %), qualify positive results (J) and nondetects (UJ).

If the % R for the affected compounds were > UL (or 130 %), only qualify positive results (J). If 25 % or more of all MS/MSD %R were < LL (or 70 %) or if two or more MS/MSD %Rs were < 10%, qualify all positive results (J) and reject nondetects (R).

VII. B MATRIX SPIKE/MATRIX SPIKE DUPLICATE

MS/MSD – Unspiked Compounds

It should be noted that Region 2 SOP HW-24 does not specify a MS/MSD criteria for the unspiked compounds in the sample. A %RSD of < 50% has therefore been utilized as professional judgment.

If all target analytes were spiked in the MS/MSD, this review element is not applicable.

List the %RSD of the compounds which do not meet the criteria.

Sample ID:			Matrix/Le	vei/Unit:		
COMPOUND	SAMPLE CONC.	MS CONC.	MSD CONC.	% RSD	ACTION	
					L MARKET	
				22.2		
				300.	-	
Target St.	THE R. LEWIS					
gi						

Actions:

Canada ID.

A separate worksheet should be used for each MS/MSD pair.

^{*} If the % RSD > 50, qualify the positive result in the unspiked samples as estimated (J).

^{*} If the % RSD is not calculated (NC) due to nondetected value, use professional judgment to qualify the data.

All criteria were metX
Criteria were not met
and/or see below

VIII. LABORATORY CONTROL SAMPLE (LCS) ANALYSIS

This data is generated to determine accuracy of the analytical method for various matrices.

1. LCS Recoveries Criteria

Where LCS spiked with the same analyte at the same concentrations as the MS/MSD? Yes or No. If no make note in data review memo.

List the %R of compounds which do not meet the criteria

LCS ID COMPOUND % R QC LIMIT

___Recoveries_within_laboratory_control_limits_except_for_the_following
______GGH5498-BS____sec-Butyl_Alcohol______122_%____74_-_118______

Note: % recovery outside laboratory control limits but within generally acceptable control limits. No action taken.

- * QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.
- * If QC limits are not available, use limits of 70 130 %.

Actions:

QUALITY	%R < LL	%R > UL
Positive results	J	J
Nondetects results	R	Accept

All analytes in the associated sample results are qualified for the following criteria.

If 25 % of the LCS recoveries were < LL (or 70 %), qualify all positive results (j) and reject nondetects (R).

If two or more LCS were below 10 %, qualify all positive results as (J) and reject nondetects (R).

2. Frequency Criteria:

Where LCS analyzed at the required frequency and for each matrix? <u>Yes</u> or No. If no, the data may be affected. Use professional judgment to determine the severity of the effect and qualify data accordingly. Discuss any actions below and list the samples affected.

		All criteria were met Criteria were not met and/or see belowN/A
IX.	FIELD/LABORATORY DUPLICATE PRECISION	
	Sample IDs:	Matrix:

Field/laboratory duplicates samples may be taken and analyzed as an indication of overall precision. These analyses measure both field and lab precision; therefore, the results may have more variability than laboratory duplicates which only laboratory performance. It is also expected that soil duplicate results will have a greater variance than water matrices due to difficulties associated with collecting identical field duplicate samples.

The project QAPP should be reviewed for project-specific information.

Suggested criteria: RPD \pm 30% for aqueous samples, RPD \pm 50 % for solid samples. If both samples and duplicate are <5 SQL, the RPD criteria is doubled.

COMPOUND	SQL	SAMPLE CONC.	DUPLICATE CONC.	RPD	ACTION
No laborator precision. R	l ry/field d PD with	in laboratory, genera	l with this data package. I ally acceptable and guid eria control limits.	I MS/MSD lance do	RPD used to assess cument performance

Actions:

Qualify as estimated positive results (J) and nondetects (UJ) for the compound that exceeded the above criteria. For organics, only the sample and duplicate will be qualified.

If an RPD cannot be calculated because one or both of the sample results is not detected, the following actions apply:

If one sample result is not detected and the other is greater than 5x the SQL qualify (J/UJ).

If one sample value is not detected and the other is greater than 5x the SQL and the SQLs for the sample and duplicate are significantly different, use professional judgment to determine if qualification is appropriate.

If one sample value is not detected and the other is less than 5x, use professional judgment to determine if qualification is appropriate.

If both sample and duplicate results are not detected, no action is needed.

All criteria were metN/A
Criteria were not met
and/or see below

X. INTERNAL STANDARD PERFORMANCE

The assessment of the internal standard (IS) parameter is used to assist the data reviewer in determining the condition of the analytical instrumentation.

List the internal standard area of samples which do not meet the criteria.

- * Area of +100% or -50% of the IS area in the associated calibration standard.
- * Retention time (RT) within 30 seconds of the IS area in the associated calibration standard.

DATE	SAMPLE ID	IS OUT	IS AREA	ACCEPTABLE RANGE	ACTION	
						g/s.
				12 - 10		
		11559				2 -s

Actions:

1. IS actions should be applied to the compound quantitated with the out-of-control ISs

QUALITY	IS AREA < -25%	IS AREA = -25 % TO - 50%	IS AREA > + 100%
Positive results	J	J	J
Nondetected results	R	UJ	ACCEPT

2. If a IS retention time varies more than 30 seconds, the chromatographic profile for that sample must be examined to determine if any false positive or negative exists. For shifts of a large magnitude, the reviewer may consider partial or total rejection of the data for the sample fraction.

All criteria were met_	Χ_	_
Criteria were not met		17.
and/or see below		

XII. SAMPLE QUANTITATION

The sample quantitation evaluation is to verify laboratory quantitation results. In the space below, please show a minimum of one sample calculation:

JC27318-1

Hexanol

RF = 64.25

[] = (383711)/(64.25)

= 5,972 ppm OK

All criteria were metX
Criteria were not met
and/or see below

XII.	QUAN	JTIT	'ATI	\cap N	1 18	MIT	2
/XIII.	WO'NI	*	α	VIV.		VIII	u

A. Dilution performed

SAMPLE ID	DILUTION FACTOR	REASON FOR DILUTION
		1000
		Na Pil
		555-07
	restriction of the second	
455		
1000		
. 100		

Percen	Solids								
List san	nples whic	h have ≤	50 % solid	ds					
	-		-						
			-			ecretia.	Section 1	(四月)日本	27
					W-1277		- Janes	. (gg/ 6%	pt.

Actions:

If the % solids of a soil sample is 10-50%, estimate positive results (J) and nondetects (UJ)

If the % solids of a soil sample is < 10%, estimate positive results (J) and reject nondetects (R)