

Validation Qualifiers
in database

checked by *HR*
2/3/17

- HR

CERTIFICATION

SDG No: JC33384 Laboratory: Accutest, New Jersey
Site: BMS, Building 5 Area, PR Matrix: Groundwater
Humacao, PR

SUMMARY: Groundwater samples (Table 1) were collected on the BMSMC facility – Building 5 Area. The BMSMC facility is located in Humacao, PR. Samples were taken December 6-7, 2016 and were analyzed in Accutest Laboratory of Dayton, New Jersey for the parameters shown in Table 1. The results were reported under SDG No.: JC33384. Results were validated using the latest validation guidelines (July, 2015) of the EPA Hazardous Waste Support Section. Individual data review worksheets are enclosed for each target analyte group. The data sample summary form shows for analytes results that were qualified.

In summary the results are valid and can be used for decision taking purposes.

Table 1. Samples analyzed and analysis performed

SAMPLE ID	SAMPLE DESCRIPTION	MATRIX	ANALYSIS PERFORMED
JC33384-1	EB120616	AQ- Equipment Blank	1,3-Butadiene; SVOCs: PAHs + 1,4-Dioxane (SIM); Pesticides; LMWA
JC33384-2	UP-2	Groundwater	1,3-Butadiene; SVOCs: PAHs + 1,4-Dioxane (SIM); Pesticides; LMWA; Inorganics; Methane
JC33384-3	FB120616	AQ – Field Blank Water	1,3-Butadiene; SVOCs: PAHs + 1,4-Dioxane (SIM); Pesticides; LMWA
JC33384-4	EB120716	AQ – Equipment Blank	1,3-Butadiene; SVOCs: PAHs + 1,4-Dioxane (SIM); Pesticides; LMWA
JC33384-5	S-40D	Groundwater	SVOCs: PAHs + 1,4-Dioxane (SIM); Pesticides; LMWA
JC33384-6	S-41D	Groundwater	1,3-Butadiene; SVOCs: PAHs + 1,4-Dioxane (SIM); Pesticides; LMWA
JC33384-6D	S-41D MSD	Groundwater	1,3-Butadiene; SVOCs: PAHs + 1,4-Dioxane (SIM); Pesticides; LMWA
JC33384-6S	S-41D MS	Groundwater	1,3-Butadiene; SVOCs: PAHs + 1,4-Dioxane (SIM); Pesticides; LMWA
JC33384-7	S-40S	Groundwater	1,3-Butadiene; SVOCs: PAHs + 1,4-Dioxane (SIM); Pesticides; LMWA; Inorganics; Methane
JC33384-8	S-41S	Groundwater	1,3-Butadiene; SVOCs: PAHs + 1,4-Dioxane (SIM); Pesticides; LMWA; Inorganics; Methane
JC33384-9	FB120716	AQ – Field Blank Water	1,3-Butadiene; SVOCs: PAHs + 1,4-Dioxane (SIM); Pesticides; LMWA

Reviewer Name: Rafael Infante
Chemist License 1888

Signature:
Date:

Rafael Infante
January 13, 2017



SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	EB120616	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-1	Date Received:	12/09/16
Matrix:	AQ - Equipment Blank	Percent Solids:	n/a
Method:	SW846 8260C		
Project:	BMSMC, Building 5 Area, PR		

	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	4B67478.D	1	12/18/16	HT	n/a	n/a	V4B2775
Run #2							

	Purge Volume
Run #1	5.0 ml
Run #2	

CAS No.	Compound	Result	RL	MDL	Units	Q
106-99-0	1,3-Butadiene	ND	5.0	0.17	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
1868-53-7	Dibromofluoromethane	104%		76-120%
17060-07-0	1,2-Dichloroethane-D4	110%		73-122%
2037-26-5	Toluene-D8	99%		84-119%
460-00-4	4-Bromofluorobenzene	111%		78-117%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 3

Client Sample ID:	EB120616	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-1	Date Received:	12/09/16
Matrix:	AQ - Equipment Blank	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1 ^a	6P33025.D	1	12/15/16	CS	12/13/16	OP99167	E6P1523
Run #2 ^b	M130081.D	1	12/17/16	JJ	12/15/16	OP99254	EM5555

	Initial Volume	Final Volume
Run #1	950 ml	1.0 ml
Run #2	950 ml	1.0 ml

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
95-57-8	2-Chlorophenol	ND	5.3	0.86	ug/l	
59-50-7	4-Chloro-3-methyl phenol	ND	5.3	0.94	ug/l	
120-83-2	2,4-Dichlorophenol	ND	2.1	1.3	ug/l	
105-67-9	2,4-Dimethylphenol	ND	5.3	2.6	ug/l	
51-28-5	2,4-Dinitrophenol	ND	11	1.6	ug/l	
534-52-1	4,6-Dinitro-o-cresol ^c	ND	5.3	1.4	ug/l	
95-48-7	2-Methylphenol	ND	2.1	0.93	ug/l	
	3&4-Methylphenol	ND	2.1	0.93	ug/l	
88-75-5	2-Nitrophenol	ND	5.3	1.0	ug/l	
100-02-7	4-Nitrophenol	ND	11	1.2	ug/l	
87-86-5	Pentachlorophenol	ND	4.2	1.5	ug/l	
108-95-2	Phenol	ND	2.1	0.41	ug/l	
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.3	1.5	ug/l	
95-95-4	2,4,5-Trichlorophenol	ND	5.3	1.4	ug/l	
88-06-2	2,4,6-Trichlorophenol	ND	5.3	0.97	ug/l	
83-32-9	Acenaphthene	ND	1.1	0.20	ug/l	
208-96-8	Acenaphthylene	ND	1.1	0.14	ug/l	
98-86-2	Acetophenone	ND	2.1	0.22	ug/l	
120-12-7	Anthracene	ND	1.1	0.22	ug/l	
1912-24-9	Atrazine	ND	2.1	0.47	ug/l	
100-52-7	Benzaldehyde	ND	5.3	0.30	ug/l	
56-55-3	Benzo(a)anthracene	ND	1.1	0.21	ug/l	
50-32-8	Benzo(a)pyrene	ND	1.1	0.22	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	1.1	0.22	ug/l	
191-24-2	Benzo(g,h,i)perylene	ND	1.1	0.36	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	1.1	0.22	ug/l	
101-55-3	4-Bromophenyl phenyl ether	ND	2.1	0.43	ug/l	
85-68-7	Butyl benzyl phthalate	ND	2.1	0.48	ug/l	
92-52-4	1,1'-Biphenyl	ND	1.1	0.22	ug/l	
91-58-7	2-Chloronaphthalene	ND	2.1	0.25	ug/l	
106-47-8	4-Chloroaniline	ND	5.3	0.36	ug/l	
86-74-8	Carbazole	ND	1.1	0.24	ug/l	



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

Report of Analysis

Client Sample ID:	EB120616	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-1	Date Received:	12/09/16
Matrix:	AQ - Equipment Blank	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	2.1	0.68	ug/l	
218-01-9	Chrysene	ND	1.1	0.19	ug/l	
111-91-1	bis(2-Chloroethoxy)methane	ND	2.1	0.29	ug/l	
111-44-4	bis(2-Chloroethyl)ether	ND	2.1	0.26	ug/l	
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.1	0.42	ug/l	
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.1	0.39	ug/l	
121-14-2	2,4-Dinitrotoluene	ND	1.1	0.58	ug/l	
606-20-2	2,6-Dinitrotoluene	ND	1.1	0.50	ug/l	
91-94-1	3,3'-Dichlorobenzidine	ND	2.1	0.53	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	1.1	0.35	ug/l	
132-64-9	Dibenzofuran	ND	5.3	0.23	ug/l	
84-74-2	Di-n-butyl phthalate	ND	2.1	0.52	ug/l	
117-84-0	Di-n-octyl phthalate	ND	2.1	0.25	ug/l	
84-66-2	Diethyl phthalate	ND	2.1	0.28	ug/l	
131-11-3	Dimethyl phthalate	ND	2.1	0.23	ug/l	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.1	1.7	ug/l	
206-44-0	Fluoranthene	ND	1.1	0.18	ug/l	
86-73-7	Fluorene	ND	1.1	0.18	ug/l	
118-74-1	Hexachlorobenzene	ND	1.1	0.34	ug/l	
87-68-3	Hexachlorobutadiene	ND	1.1	0.52	ug/l	
77-47-4	Hexachlorocyclopentadiene	ND	11	2.9	ug/l	
67-72-1	Hexachloroethane	ND	2.1	0.41	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.1	0.35	ug/l	
78-59-1	Isophorone	ND	2.1	0.29	ug/l	
91-57-6	2-Methylnaphthalene	ND	1.1	0.22	ug/l	
88-74-4	2-Nitroaniline	ND	5.3	0.29	ug/l	
99-09-2	3-Nitroaniline	ND	5.3	0.41	ug/l	
100-01-6	4-Nitroaniline	ND	5.3	0.46	ug/l	
98-95-3	Nitrobenzene	ND	2.1	0.68	ug/l	
621-64-7	N-Nitroso-di-n-propylamine	ND	2.1	0.51	ug/l	
86-30-6	N-Nitrosodiphenylamine	ND	5.3	0.23	ug/l	
85-01-8	Phenanthrene	ND	1.1	0.18	ug/l	
129-00-0	Pyrene	ND	1.1	0.23	ug/l	
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.1	0.39	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
367-12-4	2-Fluorophenol	52%	55%	14-88%
4165-62-2	Phenol-d5	35%	37%	10-110%
118-79-6	2,4,6-Tribromophenol	103%	100%	39-149%

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID:	EB120616	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-1	Date Received:	12/09/16
Matrix:	AQ - Equipment Blank	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-60-0	Nitrobenzene-d5	108%	85%	32-128%
321-60-8	2-Fluorobiphenyl	87%	82%	35-119%
1718-51-0	Terphenyl-d14	88%	83%	10-126%

- (a) There is compound in BS was outside in house QC limits. The results confirmed by reextraction outside the holding time.
- (b) Confirmation run.
- (c) This compound in BS is outside in house QC limits bias low.



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	EB120616	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-1	Date Received:	12/09/16
Matrix:	AQ - Equipment Blank	Percent Solids:	n/a
Method:	SW846 8270D BY SIM SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	3P57224.D	1	12/14/16	SG	12/13/16	OP99167A	E3P2653
Run #2							

Run #	Initial Volume	Final Volume
Run #1	950 ml	1.0 ml
Run #2		

CAS No.	Compound	Result	RL	MDL	Units	Q
56-55-3	Benzo(a)anthracene	ND	0.053	0.024	ug/l	
50-32-8	Benzo(a)pyrene	ND	0.053	0.035	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	0.11	0.046	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	0.11	0.035	ug/l	
218-01-9	Chrysene	ND	0.11	0.027	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	0.11	0.038	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	0.11	0.040	ug/l	
91-20-3	Naphthalene	ND	0.11	0.031	ug/l	
123-91-1	1,4-Dioxane	ND	0.11	0.051	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-60-0	Nitrobenzene-d5	73%		24-125%
321-60-8	2-Fluorobiphenyl	76%		19-127%
1718-51-0	Terphenyl-d14	82%		10-119%



ND = Not detected MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID: EB120616
Lab Sample ID: JC33384-1
Matrix: AQ - Equipment Blank
Method: SW846-8015C (DA1)
Project: BSMC, Building 5 Area, PR

Date Sampled: 12/06/16
Date Received: 12/09/16
Percent Solids: n/a

	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	GH107754.D	1	12/14/16	XPL	n/a	n/a	GGH5588
Run #2							

Low Molecular Alcohol List

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5	Ethanol	ND	200	55	ug/l	
78-83-1	Isobutyl Alcohol	ND	100	36	ug/l	
67-63-0	Isopropyl Alcohol	ND	100	68	ug/l	
71-23-8	n-Propyl Alcohol	ND	100	43	ug/l	
71-36-3	n-Butyl Alcohol	ND	100	87	ug/l	
78-92-2	sec-Butyl Alcohol	ND	100	66	ug/l	
67-56-1	Methanol	ND	200	71	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
111-27-3	Hexanol	121%		56-145%
111-27-3	Hexanol	120%		56-145%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	EB120616	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-1	Date Received:	12/09/16
Matrix:	AQ - Equipment Blank	Percent Solids:	n/a
Method:	SW846 8081B SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	1G130507.D	1	12/14/16	KD	12/13/16	OP99172	GIG4171
Run #2							

Run #	Initial Volume	Final Volume
Run #1	910 ml	10.0 ml
Run #2		

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units	Q
309-00-2	Aldrin	ND	0.011	0.0066	ug/l	
319-84-6	alpha-BHC	ND	0.011	0.0066	ug/l	
319-85-7	beta-BHC	ND	0.011	0.0063	ug/l	
319-86-8	delta-BHC	ND	0.011	0.0050	ug/l	
58-89-9	gamma-BHC (Lindane)	ND	0.011	0.0031	ug/l	
5103-71-9	alpha-Chlordane	ND	0.011	0.0051	ug/l	
5103-74-2	gamma-Chlordane	ND	0.011	0.0050	ug/l	
60-57-1	Dieldrin	ND	0.011	0.0040	ug/l	
72-54-8	4,4'-DDD	ND	0.011	0.0042	ug/l	
72-55-9	4,4'-DDE	ND	0.011	0.0068	ug/l	
50-29-3	4,4'-DDT	ND	0.011	0.0054	ug/l	
72-20-8	Endrin	ND	0.011	0.0055	ug/l	
1031-07-8	Endosulfan sulfate	ND	0.011	0.0058	ug/l	
7421-93-4	Endrin aldehyde	ND	0.011	0.0056	ug/l	
53494-70-5	Endrin ketone	ND	0.011	0.0056	ug/l	
959-98-8	Endosulfan-I	ND	0.011	0.0055	ug/l	
33213-65-9	Endosulfan-II	ND	0.011	0.0047	ug/l	
76-44-8	Heptachlor	ND	0.011	0.0042	ug/l	
1024-57-3	Heptachlor epoxide	ND	0.011	0.0072	ug/l	
72-43-5	Methoxychlor	ND	0.022	0.0062	ug/l	
8001-35-2	Toxaphene	ND	0.27	0.20	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
877-09-8	Tetrachloro-m-xylene	98%		26-132%
877-09-8	Tetrachloro-m-xylene	97%		26-132%
2051-24-3	Decachlorobiphenyl	65%		10-118%
2051-24-3	Decachlorobiphenyl	70%		10-118%

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	UP-2	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-2	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8260C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	4B67468.D	1	12/18/16	HT	n/a	n/a	V4B2775
Run #2							

Run #	Purge Volume
Run #1	5.0 ml
Run #2	

CAS No.	Compound	Result	RL	MDL	Units	Q
106-99-0	1,3-Butadiene	ND	5.0	0.17	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
1868-53-7	Dibromofluoromethane	104%		76-120%
17060-07-0	1,2-Dichloroethane-D4	110%		73-122%
2037-26-5	Toluene-D8	99%		84-119%
460-00-4	4-Bromofluorobenzene	108%		78-117%



ND = Not detected MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 3

Client Sample ID: UP-2
 Lab Sample ID: JC33384-2
 Matrix: AQ - Ground Water
 Method: SW846 8270D SW846 3510C
 Project: BSMSC, Building 5 Area, PR

Date Sampled: 12/06/16
 Date Received: 12/09/16
 Percent Solids: n/a

	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1 ^a	6P33026.D	1	12/15/16	CS	12/13/16	OP99167	E6P1523
Run #2	3E89389.D	20	12/15/16	AN	12/13/16	OP99167	E3E3956

	Initial Volume	Final Volume
Run #1	900 ml	1.0 ml
Run #2	900 ml	1.0 ml

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
95-57-8	2-Chlorophenol	ND	5.6	0.91	ug/l	
59-50-7	4-Chloro-3-methyl phenol	ND	5.6	0.99	ug/l	
120-83-2	2,4-Dichlorophenol	ND	2.2	1.4	ug/l	
105-67-9	2,4-Dimethylphenol	ND	5.6	2.7	ug/l	
51-28-5	2,4-Dinitrophenol	ND	11	1.7	ug/l	
534-52-1	4,6-Dinitro-o-cresol ^b	ND	5.6	1.4	ug/l	
95-48-7	2-Methylphenol	ND	2.2	0.99	ug/l	
	3&4-Methylphenol	ND	2.2	0.98	ug/l	
88-75-5	2-Nitrophenol	ND	5.6	1.1	ug/l	
100-02-7	4-Nitrophenol	ND	11	1.3	ug/l	
87-86-5	Pentachlorophenol	ND	4.4	1.5	ug/l	
108-95-2	Phenol	ND	2.2	0.44	ug/l	
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.6	1.6	ug/l	
95-95-4	2,4,5-Trichlorophenol	ND	5.6	1.5	ug/l	
88-06-2	2,4,6-Trichlorophenol	ND	5.6	1.0	ug/l	
83-32-9	Acenaphthene	ND	1.1	0.21	ug/l	
208-96-8	Acenaphthylene	ND	1.1	0.15	ug/l	
98-86-2	Acetophenone	ND	2.2	0.23	ug/l	
120-12-7	Anthracene	ND	1.1	0.23	ug/l	
1912-24-9	Atrazine	ND	2.2	0.50	ug/l	
100-52-7	Benzaldehyde	ND	5.6	0.32	ug/l	
56-55-3	Benzo(a)anthracene	ND	1.1	0.23	ug/l	
50-32-8	Benzo(a)pyrene	ND	1.1	0.24	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	1.1	0.23	ug/l	
191-24-2	Benzo(g,h,i)perylene	ND	1.1	0.38	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	1.1	0.23	ug/l	
101-55-3	4-Bromophenyl phenyl ether	ND	2.2	0.45	ug/l	
85-68-7	Butyl benzyl phthalate	ND	2.2	0.51	ug/l	
92-52-4	1,1'-Biphenyl	ND	1.1	0.24	ug/l	
91-58-7	2-Chloronaphthalene	ND	2.2	0.26	ug/l	
106-47-8	4-Chloroaniline	ND	5.6	0.38	ug/l	
86-74-8	Carbazole	ND	1.1	0.25	ug/l	

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID:	UP-2	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-2	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	2.2	0.72	ug/l	
218-01-9	Chrysene	ND	1.1	0.20	ug/l	
111-91-1	bis(2-Chloroethoxy)methane	ND	2.2	0.31	ug/l	
111-44-4	bis(2-Chloroethyl)ether	ND	2.2	0.28	ug/l	
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.2	0.45	ug/l	
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.2	0.41	ug/l	
121-14-2	2,4-Dinitrotoluene	ND	1.1	0.61	ug/l	
606-20-2	2,6-Dinitrotoluene	ND	1.1	0.53	ug/l	
91-94-1	3,3'-Dichlorobenzidine	ND	2.2	0.56	ug/l	
123-91-1	1,4-Dioxane	324 ^c	22	15	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	1.1	0.37	ug/l	
132-64-9	Dibenzofuran	ND	5.6	0.24	ug/l	
84-74-2	Di-n-butyl phthalate	ND	2.2	0.55	ug/l	
117-84-0	Di-n-octyl phthalate	ND	2.2	0.26	ug/l	
84-66-2	Diethyl phthalate	ND	2.2	0.29	ug/l	
131-11-3	Dimethyl phthalate	ND	2.2	0.24	ug/l	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.2	1.8	ug/l	
206-44-0	Fluoranthene	ND	1.1	0.19	ug/l	
86-73-7	Fluorene	ND	1.1	0.19	ug/l	
118-74-1	Hexachlorobenzene	ND	1.1	0.36	ug/l	
87-68-3	Hexachlorobutadiene	ND	1.1	0.55	ug/l	
77-47-4	Hexachlorocyclopentadiene	ND	11	3.1	ug/l	
67-72-1	Hexachloroethane	ND	2.2	0.43	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.1	0.37	ug/l	
78-59-1	Isophorone	ND	2.2	0.31	ug/l	
90-12-0	1-Methylnaphthalene	ND	1.1	0.29	ug/l	
91-57-6	2-Methylnaphthalene	ND	1.1	0.23	ug/l	
88-74-4	2-Nitroaniline	ND	5.6	0.31	ug/l	
99-09-2	3-Nitroaniline	ND	5.6	0.43	ug/l	
100-01-6	4-Nitroaniline	ND	5.6	0.49	ug/l	
98-95-3	Nitrobenzene	ND	2.2	0.71	ug/l	
621-64-7	N-Nitroso-di-n-propylamine	ND	2.2	0.53	ug/l	
86-30-6	N-Nitrosodiphenylamine	ND	5.6	0.25	ug/l	
85-01-8	Phenanthrene	ND	1.1	0.19	ug/l	
129-00-0	Pyrene	ND	1.1	0.24	ug/l	
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.2	0.41	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
367-12-4	2-Fluorophenol	58%	36%	14-88%

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID:	UP-2	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-2	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-62-2	Phenol-d5	42%	26%	10-110%
118-79-6	2,4,6-Tribromophenol	110%	82%	39-149%
4165-60-0	Nitrobenzene-d5	105%	60%	32-128%
321-60-8	2-Fluorobiphenyl	86%	69%	35-119%
1718-51-0	Terphenyl-d14	64%	56%	10-126%

- (a) There are compounds in BS were outside in house QC limits. There's no sample left to re-extract.
(b) This compound outside control limits biased low in the associated BS. There's no sample left to re-extract.
(c) Result is from Run# 2



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	UP-2	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-2	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D BY SIM SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	3P57225.D	1	12/14/16	SG	12/13/16	OP99167A	E3P2653
Run #2							

Run #	Initial Volume	Final Volume
Run #1	900 ml	1.0 ml
Run #2		

CAS No.	Compound	Result	RL	MDL	Units	Q
56-55-3	Benzo(a)anthracene	ND	0.056	0.025	ug/l	
50-32-8	Benzo(a)pyrene	ND	0.056	0.037	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	0.11	0.048	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	0.11	0.037	ug/l	
218-01-9	Chrysene	ND	0.11	0.029	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	0.11	0.040	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	0.11	0.042	ug/l	
91-20-3	Naphthalene	ND	0.11	0.033	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-60-0	Nitrobenzene-d5	74%		24-125%
321-60-8	2-Fluorobiphenyl	77%		19-127%
1718-51-0	Terphenyl-d14	67%		10-119%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	UP-2	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-2	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846-8015C (DAI)		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	GH107755.D	1	12/14/16	XPL	n/a	n/a	GGH5588
Run #2							

Low Molecular Alcohol List

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5	Ethanol	ND	200	55	ug/l	
78-83-1	Isobutyl Alcohol	ND	100	36	ug/l	
67-63-0	Isopropyl Alcohol	ND	100	68	ug/l	
71-23-8	n-Propyl Alcohol	ND	100	43	ug/l	
71-36-3	n-Butyl Alcohol	ND	100	87	ug/l	
78-92-2	sec-Butyl Alcohol	ND	100	66	ug/l	
67-56-1	Methanol	ND	200	71	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
111-27-3	Hexanol	125%		56-145%
111-27-3	Hexanol	120%		56-145%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID: UP-2
Lab Sample ID: JC33384-2
Matrix: AQ - Ground Water
Method: RSK-175
Project: BMSMC, Building 5 Area, PR

Date Sampled: 12/06/16
Date Received: 12/09/16
Percent Solids: n/a

	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	AA56403.D	20	12/16/16	LM	n/a	n/a	GAA1095
Run #2							

CAS No.	Compound	Result	RL	MDL	Units	Q
74-82-8	Methane	1710	2.2	0.71	ug/l	



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	UP-2	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-2	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8081B SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	1G130508.D	1	12/14/16	KD	12/13/16	OP99172	G1G4171
Run #2							

Run #	Initial Volume	Final Volume
Run #1	970 ml	10.0 ml
Run #2		

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units	Q
309-00-2	Aldrin	ND	0.010	0.0062	ug/l	
319-84-6	alpha-BHC	ND	0.010	0.0062	ug/l	
319-85-7	beta-BHC	ND	0.010	0.0059	ug/l	
319-86-8	delta-BHC	ND	0.010	0.0047	ug/l	
58-89-9	gamma-BHC (Lindane)	ND	0.010	0.0029	ug/l	
5103-71-9	alpha-Chlordane	ND	0.010	0.0048	ug/l	
5103-74-2	gamma-Chlordane	ND	0.010	0.0047	ug/l	
60-57-1	Dieldrin	ND	0.010	0.0037	ug/l	
72-54-8	4,4'-DDD	ND	0.010	0.0039	ug/l	
72-55-9	4,4'-DDE	ND	0.010	0.0064	ug/l	
50-29-3	4,4'-DDT	ND	0.010	0.0051	ug/l	
72-20-8	Endrin	ND	0.010	0.0052	ug/l	
1031-07-8	Endosulfan sulfate	ND	0.010	0.0054	ug/l	
7421-93-4	Endrin aldehyde	ND	0.010	0.0053	ug/l	
53494-70-5	Endrin ketone	ND	0.010	0.0052	ug/l	
959-98-8	Endosulfan-I	ND	0.010	0.0051	ug/l	
33213-65-9	Endosulfan-II	ND	0.010	0.0044	ug/l	
76-44-8	Heptachlor	ND	0.010	0.0039	ug/l	
1024-57-3	Heptachlor epoxide	ND	0.010	0.0067	ug/l	
72-43-5	Methoxychlor	ND	0.021	0.0059	ug/l	
8001-35-2	Toxaphene	ND	0.26	0.19	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
877-09-8	Tetrachloro-m-xylene	78%		26-132%
877-09-8	Tetrachloro-m-xylene	76%		26-132%
2051-24-3	Decachlorobiphenyl	49%		10-118%
2051-24-3	Decachlorobiphenyl	53%		10-118%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

Report of Analysis

Page 1 of 1

Client Sample ID: UP-2	Date Sampled: 12/06/16
Lab Sample ID: JC33384-2	Date Received: 12/09/16
Matrix: AQ - Ground Water	Percent Solids: n/a
Project: BSMC, Building 5 Area, PR	

Total Metals Analysis

Analyte	Result	RL	MDL	Units	DF	Prep	Analyzed By	Method	Prep Method
Iron	10200	100	12	ug/l	1	12/14/16	12/16/16 ND	SW846 6010C ¹	SW846 3010A ²
Manganese	822	15	0.39	ug/l	1	12/14/16	12/16/16 ND	SW846 6010C ¹	SW846 3010A ²

(1) Instrument QC Batch: MA40977

(2) Prep QC Batch: MP97634



RL = Reporting Limit
MDL = Method Detection Limit

U = Indicates a result < MDL
B = Indicates a result > = MDL but < RL

Report of Analysis

Client Sample ID:	UP-2	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-2	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Project:	BMSMC, Building 5 Area, PR		

General Chemistry

Analyte	Result	RL	Units	DF	Analyzed	By	Method
Alkalinity, Total as CaCO ₃	235	5.0	mg/l	1	12/15/16 23:25	CB	SM2320 B-11
Iron, Ferric ^a	10.1	0.30	mg/l	1	12/16/16 19:53	ND	SM3500FE B-11
Iron, Ferrous ^b	< 0.20	0.20	mg/l	1	12/10/16 13:35	YR	SM3500FE B-11
Nitrogen, Nitrate ^c	< 0.11	0.11	mg/l	1	12/21/16 13:37	YZ	EPA353.2/SM4500NO2B
Nitrogen, Nitrate + Nitrite	< 0.10	0.10	mg/l	1	12/21/16 13:37	YZ	EPA 353.2/LACHAT
Nitrogen, Nitrite ^d	< 0.010	0.010	mg/l	1	12/09/16 22:48	CB	SM4500NO2 B-11
Sulfate	< 10	10	mg/l	1	12/19/16 23:32	JN	EPA 300/SW846 9056A
Sulfide	< 2.0	2.0	mg/l	1	12/13/16 14:53	JA	SM4500S2- F-11

(a) Calculated as: (Iron) - (Iron, Ferrous)

(b) Field analysis required. Received out of hold time and analyzed by request.

(c) Calculated as: (Nitrogen, Nitrate + Nitrite) - (Nitrogen, Nitrite) Nitrogen, Nitrite analysis done past holding time.

(d) Sample received outside the holding time.



RL = Reporting Limit

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID: FB120616
Lab Sample ID: JC33384-3
Matrix: AQ - Field Blank Water
Method: SW846 8260C
Project: BMSMC, Building 5 Area, PR

Date Sampled: 12/06/16
Date Received: 12/09/16
Percent Solids: n/a

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	4B67477.D	1	12/18/16	HT	n/a	n/a	V4B2775
Run #2							

Run #	Purge Volume
Run #1	5.0 ml
Run #2	

CAS No.	Compound	Result	RL	MDL	Units	Q
106-99-0	1,3-Butadiene	ND	5.0	0.17	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
1868-53-7	Dibromofluoromethane	104%		76-120%
17060-07-0	1,2-Dichloroethane-D4	111%		73-122%
2037-26-5	Toluene-D8	99%		84-119%
460-00-4	4-Bromofluorobenzene	110%		78-117%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 3

Client Sample ID:	FB120616	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-3	Date Received:	12/09/16
Matrix:	AQ - Field Blank Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1 ^a	6P33027.D	1	12/15/16	CS	12/13/16	OP99167	E6P1523
Run #2 ^b	M130082.D	1	12/17/16	JJ	12/15/16	OP99254	EM5555

Run #	Initial Volume	Final Volume
Run #1	990 ml	1.0 ml
Run #2	1000 ml	1.0 ml

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
95-57-8	2-Chlorophenol	ND	5.1	0.83	ug/l	
59-50-7	4-Chloro-3-methyl phenol	ND	5.1	0.90	ug/l	
120-83-2	2,4-Dichlorophenol	ND	2.0	1.3	ug/l	
105-67-9	2,4-Dimethylphenol	ND	5.1	2.5	ug/l	
51-28-5	2,4-Dinitrophenol	ND	10	1.6	ug/l	
534-52-1	4,6-Dinitro-o-cresol ^c	ND	5.1	1.3	ug/l	
95-48-7	2-Methylphenol	ND	2.0	0.90	ug/l	
	3&4-Methylphenol	ND	2.0	0.89	ug/l	
88-75-5	2-Nitrophenol	ND	5.1	0.97	ug/l	
100-02-7	4-Nitrophenol	ND	10	1.2	ug/l	
87-86-5	Pentachlorophenol	ND	4.0	1.4	ug/l	
108-95-2	Phenol	ND	2.0	0.40	ug/l	
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.1	1.5	ug/l	
95-95-4	2,4,5-Trichlorophenol	ND	5.1	1.3	ug/l	
88-06-2	2,4,6-Trichlorophenol	ND	5.1	0.93	ug/l	
83-32-9	Acenaphthene	ND	1.0	0.19	ug/l	
208-96-8	Acenaphthylene	ND	1.0	0.14	ug/l	
98-86-2	Acetophenone	ND	2.0	0.21	ug/l	
120-12-7	Anthracene	ND	1.0	0.21	ug/l	
1912-24-9	Atrazine	ND	2.0	0.45	ug/l	
100-52-7	Benzaldehyde	ND	5.1	0.29	ug/l	
56-55-3	Benzo(a)anthracene	ND	1.0	0.21	ug/l	
50-32-8	Benzo(a)pyrene	ND	1.0	0.22	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	1.0	0.21	ug/l	
191-24-2	Benzo(g,h,i)perylene	ND	1.0	0.34	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	1.0	0.21	ug/l	
101-55-3	4-Bromophenyl phenyl ether	ND	2.0	0.41	ug/l	
85-68-7	Butyl benzyl phthalate	ND	2.0	0.46	ug/l	
92-52-4	1,1'-Biphenyl	ND	1.0	0.21	ug/l	
91-58-7	2-Chloronaphthalene	ND	2.0	0.24	ug/l	
106-47-8	4-Chloroaniline	ND	5.1	0.34	ug/l	
86-74-8	Carbazole	ND	1.0	0.23	ug/l	

ND = Not detected MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID:	FB120616	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-3	Date Received:	12/09/16
Matrix:	AQ - Field Blank Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	2.0	0.66	ug/l	
218-01-9	Chrysene	ND	1.0	0.18	ug/l	
111-91-1	bis(2-Chloroethoxy)methane	ND	2.0	0.28	ug/l	
111-44-4	bis(2-Chloroethyl)ether	ND	2.0	0.25	ug/l	
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.0	0.41	ug/l	
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.0	0.37	ug/l	
121-14-2	2,4-Dinitrotoluene	ND	1.0	0.56	ug/l	
606-20-2	2,6-Dinitrotoluene	ND	1.0	0.48	ug/l	
91-94-1	3,3'-Dichlorobenzidine	ND	2.0	0.51	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	1.0	0.33	ug/l	
132-64-9	Dibenzofuran	ND	5.1	0.22	ug/l	
84-74-2	Di-n-butyl phthalate	ND	2.0	0.50	ug/l	
117-84-0	Di-n-octyl phthalate	ND	2.0	0.24	ug/l	
84-66-2	Diethyl phthalate	ND	2.0	0.26	ug/l	
131-11-3	Dimethyl phthalate	ND	2.0	0.22	ug/l	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.0	1.7	ug/l	
206-44-0	Fluoranthene	ND	1.0	0.17	ug/l	
86-73-7	Fluorene	ND	1.0	0.17	ug/l	
118-74-1	Hexachlorobenzene	ND	1.0	0.33	ug/l	
87-68-3	Hexachlorobutadiene	ND	1.0	0.50	ug/l	
77-47-4	Hexachlorocyclopentadiene	ND	10	2.8	ug/l	
67-72-1	Hexachloroethane	ND	2.0	0.39	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.0	0.34	ug/l	
78-59-1	Isophorone	ND	2.0	0.28	ug/l	
91-57-6	2-Methylnaphthalene	ND	1.0	0.21	ug/l	
88-74-4	2-Nitroaniline	ND	5.1	0.28	ug/l	
99-09-2	3-Nitroaniline	ND	5.1	0.39	ug/l	
100-01-6	4-Nitroaniline	ND	5.1	0.44	ug/l	
98-95-3	Nitrobenzene	ND	2.0	0.65	ug/l	
621-64-7	N-Nitroso-di-n-propylamine	ND	2.0	0.49	ug/l	
86-30-6	N-Nitrosodiphenylamine	ND	5.1	0.22	ug/l	
85-01-8	Phenanthrene	ND	1.0	0.18	ug/l	
129-00-0	Pyrene	ND	1.0	0.22	ug/l	
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.0	0.37	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
367-12-4	2-Fluorophenol	46%	55%	14-88%
4165-62-2	Phenol-d5	30%	36%	10-110%
118-79-6	2,4,6-Tribromophenol	94%	94%	39-149%

ND = Not detected MDL = Method Detection Limit

RL = Reporting Limit

E = Indicates value exceeds calibration range

J = Indicates an estimated value

B = Indicates analyte found in associated method blank

N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID:	FB120616	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-3	Date Received:	12/09/16
Matrix:	AQ - Field Blank Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-60-0	Nitrobenzene-d5	97%	85%	32-128%
321-60-8	2-Fluorobiphenyl	83%	82%	35-119%
1718-51-0	Terphenyl-d14	88%	99%	10-126%

- (a) There is compound in BS was outside in house QC limits. The results confirmed by reextraction outside the holding time.
- (b) Confirmation run.
- (c) This compound in BS is outside in house QC limits bias low.



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	FB120616	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-3	Date Received:	12/09/16
Matrix:	AQ - Field Blank Water	Percent Solids:	n/a
Method:	SW846 8270D BY SIM SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	3P57226.D	1	12/14/16	SG	12/13/16	OP99167A	E3P2653
Run #2							

Run #	Initial Volume	Final Volume
Run #1	990 ml	1.0 ml
Run #2		

CAS No.	Compound	Result	RL	MDL	Units	Q
56-55-3	Benzo(a)anthracene	ND	0.051	0.023	ug/l	
50-32-8	Benzo(a)pyrene	ND	0.051	0.034	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	0.10	0.044	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	0.10	0.033	ug/l	
218-01-9	Chrysene	ND	0.10	0.026	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	0.10	0.037	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	0.10	0.038	ug/l	
91-20-3	Naphthalene	ND	0.10	0.030	ug/l	
123-91-1	1,4-Dioxane	ND	0.10	0.049	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-60-0	Nitrobenzene-d5	71%		24-125%
321-60-8	2-Fluorobiphenyl	80%		19-127%
1718-51-0	Terphenyl-d14	89%		10-119%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	FB120616	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-3	Date Received:	12/09/16
Matrix:	AQ - Field Blank Water	Percent Solids:	n/a
Method:	SW846-8015C (DAI)		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	GH107756.D	1	12/14/16	XPL	n/a	n/a	GGH5588
Run #2							

Low Molecular Alcohol List

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5	Ethanol	ND	200	55	ug/l	
78-83-1	Isobutyl Alcohol	ND	100	36	ug/l	
67-63-0	Isopropyl Alcohol	ND	100	68	ug/l	
71-23-8	n-Propyl Alcohol	ND	100	43	ug/l	
71-36-3	n-Butyl Alcohol	ND	100	87	ug/l	
78-92-2	sec-Butyl Alcohol	ND	100	66	ug/l	
67-56-1	Methanol	ND	200	71	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
111-27-3	Hexanol	118%		56-145%
111-27-3	Hexanol	117%		56-145%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	FB120616	Date Sampled:	12/06/16
Lab Sample ID:	JC33384-3	Date Received:	12/09/16
Matrix:	AQ - Field Blank Water	Percent Solids:	n/a
Method:	SW846 8081B SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	1G130509.D	1	12/14/16	KD	12/13/16	OP99172	G1G4171
Run #2							

Run #	Initial Volume	Final Volume
Run #1	1000 ml	10.0 ml
Run #2		

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units	Q
309-00-2	Aldrin	ND	0.010	0.0060	ug/l	
319-84-6	alpha-BHC	ND	0.010	0.0060	ug/l	
319-85-7	beta-BHC	ND	0.010	0.0057	ug/l	
319-86-8	delta-BHC	ND	0.010	0.0046	ug/l	
58-89-9	gamma-BHC (Lindane)	ND	0.010	0.0028	ug/l	
5103-71-9	alpha-Chlordane	ND	0.010	0.0046	ug/l	
5103-74-2	gamma-Chlordane	ND	0.010	0.0046	ug/l	
60-57-1	Dieldrin	ND	0.010	0.0036	ug/l	
72-54-8	4,4'-DDD	ND	0.010	0.0038	ug/l	
72-55-9	4,4'-DDE	ND	0.010	0.0062	ug/l	
50-29-3	4,4'-DDT	ND	0.010	0.0050	ug/l	
72-20-8	Endrin	ND	0.010	0.0050	ug/l	
1031-07-8	Endosulfan sulfate	ND	0.010	0.0053	ug/l	
7421-93-4	Endrin aldehyde	ND	0.010	0.0051	ug/l	
53494-70-5	Endrin ketone	ND	0.010	0.0051	ug/l	
959-98-8	Endosulfan-I	ND	0.010	0.0050	ug/l	
33213-65-9	Endosulfan-II	ND	0.010	0.0043	ug/l	
76-44-8	Heptachlor	ND	0.010	0.0038	ug/l	
1024-57-3	Heptachlor epoxide	ND	0.010	0.0065	ug/l	
72-43-5	Methoxychlor	ND	0.020	0.0057	ug/l	
8001-35-2	Toxaphene	ND	0.25	0.18	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
877-09-8	Tetrachloro-m-xylene	86%		26-132%
877-09-8	Tetrachloro-m-xylene	85%		26-132%
2051-24-3	Decachlorobiphenyl	54%		10-118%
2051-24-3	Decachlorobiphenyl	61%		10-118%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	EB120716	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-4	Date Received:	12/09/16
Matrix:	AQ - Equipment Blank	Percent Solids:	n/a
Method:	SW846 8260C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	4B67476.D	1	12/18/16	HT	n/a	n/a	V4B2775
Run #2							

Run #	Purge Volume
Run #1	5.0 ml
Run #2	

CAS No.	Compound	Result	RL	MDL	Units	Q
106-99-0	1,3-Butadiene	ND	5.0	0.17	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
1868-53-7	Dibromofluoromethane	102%		76-120%
17060-07-0	1,2-Dichloroethane-D4	110%		73-122%
2037-26-5	Toluene-D8	100%		84-119%
460-00-4	4-Bromofluorobenzene	110%		78-117%

ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 3

Client Sample ID:	EB120716	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-4	Date Received:	12/09/16
Matrix:	AQ - Equipment Blank	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	M130028.D	1	12/15/16	KM	12/14/16	OP99210	EM5553
Run #2							

Run #	Initial Volume	Final Volume
Run #1	960 ml	1.0 ml
Run #2		

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
95-57-8	2-Chlorophenol	ND	5.2	0.85	ug/l	
59-50-7	4-Chloro-3-methyl phenol	ND	5.2	0.93	ug/l	
120-83-2	2,4-Dichlorophenol	ND	2.1	1.3	ug/l	
105-67-9	2,4-Dimethylphenol	ND	5.2	2.5	ug/l	
51-28-5	2,4-Dinitrophenol	ND	10	1.6	ug/l	
534-52-1	4,6-Dinitro-o-cresol	ND	5.2	1.4	ug/l	
95-48-7	2-Methylphenol	ND	2.1	0.93	ug/l	
	3&4-Methylphenol	ND	2.1	0.92	ug/l	
88-75-5	2-Nitrophenol	ND	5.2	1.0	ug/l	
100-02-7	4-Nitrophenol	ND	10	1.2	ug/l	
87-86-5	Pentachlorophenol	ND	4.2	1.4	ug/l	
108-95-2	Phenol	ND	2.1	0.41	ug/l	
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.2	1.5	ug/l	
95-95-4	2,4,5-Trichlorophenol	ND	5.2	1.4	ug/l	
88-06-2	2,4,6-Trichlorophenol	ND	5.2	0.96	ug/l	
83-32-9	Acenaphthene	ND	1.0	0.20	ug/l	
208-96-8	Acenaphthylene	ND	1.0	0.14	ug/l	
98-86-2	Acetophenone	ND	2.1	0.22	ug/l	
120-12-7	Anthracene	ND	1.0	0.22	ug/l	
1912-24-9	Atrazine	ND	2.1	0.47	ug/l	
100-52-7	Benzaldehyde	ND	5.2	0.30	ug/l	
56-55-3	Benzo(a)anthracene	ND	1.0	0.21	ug/l	
50-32-8	Benzo(a)pyrene	ND	1.0	0.22	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	1.0	0.21	ug/l	
191-24-2	Benzo(g,h,i)perylene	ND	1.0	0.36	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	1.0	0.21	ug/l	
101-55-3	4-Bromophenyl phenyl ether	ND	2.1	0.42	ug/l	
85-68-7	Butyl benzyl phthalate	ND	2.1	0.48	ug/l	
92-52-4	1,1'-Biphenyl	ND	1.0	0.22	ug/l	
91-58-7	2-Chloronaphthalene	ND	2.1	0.25	ug/l	
106-47-8	4-Chloroaniline	ND	5.2	0.35	ug/l	
86-74-8	Carbazole	ND	1.0	0.24	ug/l	



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

Report of Analysis

Client Sample ID: EB120716
Lab Sample ID: JC33384-4
Matrix: AQ - Equipment Blank
Method: SW846 8270D SW846 3510C
Project: BSMC, Building 5 Area, PR

Date Sampled: 12/07/16
Date Received: 12/09/16
Percent Solids: n/a

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	2.1	0.68	ug/l	
218-01-9	Chrysene	ND	1.0	0.18	ug/l	
111-91-1	bis(2-Chloroethoxy)methane	ND	2.1	0.29	ug/l	
111-44-4	bis(2-Chloroethyl)ether	ND	2.1	0.26	ug/l	
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.1	0.42	ug/l	
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.1	0.38	ug/l	
121-14-2	2,4-Dinitrotoluene	ND	1.0	0.58	ug/l	
606-20-2	2,6-Dinitrotoluene	ND	1.0	0.50	ug/l	
91-94-1	3,3'-Dichlorobenzidine	ND	2.1	0.53	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	1.0	0.34	ug/l	
132-64-9	Dibenzofuran	ND	5.2	0.23	ug/l	
84-74-2	Di-n-butyl phthalate	ND	2.1	0.52	ug/l	
117-84-0	Di-n-octyl phthalate	ND	2.1	0.24	ug/l	
84-66-2	Diethyl phthalate	ND	2.1	0.27	ug/l	
131-11-3	Dimethyl phthalate	ND	2.1	0.23	ug/l	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.1	1.7	ug/l	
206-44-0	Fluoranthene	ND	1.0	0.18	ug/l	
86-73-7	Fluorene	ND	1.0	0.18	ug/l	
118-74-1	Hexachlorobenzene	ND	1.0	0.34	ug/l	
87-68-3	Hexachlorobutadiene	ND	1.0	0.51	ug/l	
77-47-4	Hexachlorocyclopentadiene	ND	10	2.9	ug/l	
67-72-1	Hexachloroethane	ND	2.1	0.41	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.0	0.35	ug/l	
78-59-1	Isophorone	ND	2.1	0.29	ug/l	
90-12-0	1-Methylnaphthalene	ND	1.0	0.27	ug/l	
91-57-6	2-Methylnaphthalene	ND	1.0	0.22	ug/l	
88-74-4	2-Nitroaniline	ND	5.2	0.29	ug/l	
99-09-2	3-Nitroaniline	ND	5.2	0.40	ug/l	
100-01-6	4-Nitroaniline	ND	5.2	0.46	ug/l	
98-95-3	Nitrobenzene	ND	2.1	0.67	ug/l	
621-64-7	N-Nitroso-di-n-propylamine	ND	2.1	0.50	ug/l	
86-30-6	N-Nitrosodiphenylamine	ND	5.2	0.23	ug/l	
85-01-8	Phenanthrene	ND	1.0	0.18	ug/l	
129-00-0	Pyrene	ND	1.0	0.23	ug/l	
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.1	0.39	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
367-12-4	2-Fluorophenol	43%		14-88%
4165-62-2	Phenol-d5	29%		10-110%

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID: EB120716
Lab Sample ID: JC33384-4
Matrix: AQ - Equipment Blank
Method: SW846 8270D SW846 3510C
Project: BMSMC, Building 5 Area, PR

Date Sampled: 12/07/16
Date Received: 12/09/16
Percent Solids: n/a

4.4
4

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
118-79-6	2,4,6-Tribromophenol	96%		39-149%
4165-60-0	Nitrobenzene-d5	84%		32-128%
321-60-8	2-Fluorobiphenyl	81%		35-119%
1718-51-0	Terphenyl-d14	96%		10-126%



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	EB120716	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-4	Date Received:	12/09/16
Matrix:	AQ - Equipment Blank	Percent Solids:	n/a
Method:	SW846 8270D BY SIM SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	3P57331.D	1	12/18/16	SG	12/14/16	OP99210A	E3P2659
Run #2							

Run #	Initial Volume	Final Volume
Run #1	960 ml	1.0 ml
Run #2		

CAS No.	Compound	Result	RL	MDL	Units	Q
56-55-3	Benzo(a)anthracene	ND	0.052	0.024	ug/l	
50-32-8	Benzo(a)pyrene	ND	0.052	0.035	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	0.10	0.045	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	0.10	0.034	ug/l	
218-01-9	Chrysene	ND	0.10	0.027	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	0.10	0.038	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	0.10	0.040	ug/l	
91-20-3	Naphthalene	ND	0.10	0.031	ug/l	
123-91-1	1,4-Dioxane	ND	0.10	0.051	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-60-0	Nitrobenzene-d5	64%		24-125%
321-60-8	2-Fluorobiphenyl	55%		19-127%
1718-51-0	Terphenyl-d14	70%		10-119%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID: EB120716
 Lab Sample ID: JC33384-4
 Matrix: AQ - Equipment Blank
 Method: SW846-8015C (DA1)
 Project: BMSMC, Building 5 Area, PR

Date Sampled: 12/07/16
 Date Received: 12/09/16
 Percent Solids: n/a

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	GH107757.D	1	12/14/16	XPL	n/a	n/a	GGH5588
Run #2							

Low Molecular Alcohol List

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5	Ethanol	ND	200	55	ug/l	
78-83-1	Isobutyl Alcohol	ND	100	36	ug/l	
67-63-0	Isopropyl Alcohol	ND	100	68	ug/l	
71-23-8	n-Propyl Alcohol	ND	100	43	ug/l	
71-36-3	n-Butyl Alcohol	ND	100	87	ug/l	
78-92-2	sec-Butyl Alcohol	ND	100	66	ug/l	
67-56-1	Methanol	ND	200	71	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
111-27-3	Hexanol	119%		56-145%
111-27-3	Hexanol	121%		56-145%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	EB120716	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-4	Date Received:	12/09/16
Matrix:	AQ - Equipment Blank	Percent Solids:	n/a
Method:	SW846 8081B SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	8G1178.D	1	12/15/16	CP	12/13/16	OP99184	G8G42
Run #2							

Run #	Initial Volume	Final Volume
Run #1	980 ml	10.0 ml
Run #2		

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units	Q
309-00-2	Aldrin	ND	0.010	0.0062	ug/l	
319-84-6	alpha-BHC	ND	0.010	0.0061	ug/l	
319-85-7	beta-BHC	ND	0.010	0.0058	ug/l	
319-86-8	delta-BHC	ND	0.010	0.0047	ug/l	
58-89-9	gamma-BHC (Lindane)	ND	0.010	0.0028	ug/l	
5103-71-9	alpha-Chlordane	ND	0.010	0.0047	ug/l	
5103-74-2	gamma-Chlordane	ND	0.010	0.0047	ug/l	
60-57-1	Dieldrin	ND	0.010	0.0037	ug/l	
72-54-8	4,4'-DDD	ND	0.010	0.0039	ug/l	
72-55-9	4,4'-DDE	ND	0.010	0.0063	ug/l	
50-29-3	4,4'-DDT	ND	0.010	0.0051	ug/l	
72-20-8	Endrin	ND	0.010	0.0051	ug/l	
1031-07-8	Endosulfan sulfate	ND	0.010	0.0054	ug/l	
7421-93-4	Endrin aldehyde	ND	0.010	0.0052	ug/l	
53494-70-5	Endrin ketone	ND	0.010	0.0052	ug/l	
959-98-8	Endosulfan-I	ND	0.010	0.0051	ug/l	
33213-65-9	Endosulfan-II	ND	0.010	0.0044	ug/l	
76-44-8	Heptachlor	ND	0.010	0.0039	ug/l	
1024-57-3	Heptachlor epoxide	ND	0.010	0.0067	ug/l	
72-43-5	Methoxychlor	ND	0.020	0.0058	ug/l	
8001-35-2	Toxaphene	ND	0.26	0.19	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
877-09-8	Tetrachloro-m-xylene	93%		26-132%
877-09-8	Tetrachloro-m-xylene	95%		26-132%
2051-24-3	Decachlorobiphenyl	88%		10-118%
2051-24-3	Decachlorobiphenyl	88%		10-118%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 3

Client Sample ID:	S-40D	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-5	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	M130034.D	1	12/15/16	KM	12/14/16	OP99210	EM5553
Run #2							

Run #	Initial Volume	Final Volume
Run #1	1000 ml	1.0 ml
Run #2		

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
95-57-8	2-Chlorophenol	ND	5.0	0.82	ug/l	
59-50-7	4-Chloro-3-methyl phenol	ND	5.0	0.89	ug/l	
120-83-2	2,4-Dichlorophenol	ND	2.0	1.3	ug/l	
105-67-9	2,4-Dimethylphenol	ND	5.0	2.4	ug/l	
51-28-5	2,4-Dinitrophenol	ND	10	1.6	ug/l	
534-52-1	4,6-Dinitro-o-cresol	ND	5.0	1.3	ug/l	
95-48-7	2-Methylphenol	ND	2.0	0.89	ug/l	
	3&4-Methylphenol	ND	2.0	0.88	ug/l	
88-75-5	2-Nitrophenol	ND	5.0	0.96	ug/l	
100-02-7	4-Nitrophenol	ND	10	1.2	ug/l	
87-86-5	Pentachlorophenol	ND	4.0	1.4	ug/l	
108-95-2	Phenol	ND	2.0	0.39	ug/l	
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.0	1.5	ug/l	
95-95-4	2,4,5-Trichlorophenol	ND	5.0	1.3	ug/l	
88-06-2	2,4,6-Trichlorophenol	ND	5.0	0.92	ug/l	
83-32-9	Acenaphthene	ND	1.0	0.19	ug/l	
208-96-8	Acenaphthylene	ND	1.0	0.14	ug/l	
98-86-2	Acetophenone	ND	2.0	0.21	ug/l	
120-12-7	Anthracene	ND	1.0	0.21	ug/l	
1912-24-9	Atrazine	ND	2.0	0.45	ug/l	
100-52-7	Benzaldehyde	ND	5.0	0.29	ug/l	
56-55-3	Benzo(a)anthracene	ND	1.0	0.20	ug/l	
50-32-8	Benzo(a)pyrene	ND	1.0	0.21	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	1.0	0.21	ug/l	
191-24-2	Benzo(g,h,i)perylene	ND	1.0	0.34	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	1.0	0.21	ug/l	
101-55-3	4-Bromophenyl phenyl ether	ND	2.0	0.40	ug/l	
85-68-7	Butyl benzyl phthalate	ND	2.0	0.46	ug/l	
92-52-4	1,1'-Biphenyl	ND	1.0	0.21	ug/l	
91-58-7	2-Chloronaphthalene	ND	2.0	0.24	ug/l	
106-47-8	4-Chloroaniline	ND	5.0	0.34	ug/l	
86-74-8	Carbazole	ND	1.0	0.23	ug/l	



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

Report of Analysis

Client Sample ID: S-40D
 Lab Sample ID: JC33384-5
 Matrix: AQ - Ground Water
 Method: SW846 8270D SW846 3510C
 Project: BMSMC, Building 5 Area, PR

Date Sampled: 12/07/16
 Date Received: 12/09/16
 Percent Solids: n/a

4.5
4

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	2.0	0.65	ug/l	
218-01-9	Chrysene	ND	1.0	0.18	ug/l	
111-91-1	bis(2-Chloroethoxy)methane	ND	2.0	0.28	ug/l	
111-44-4	bis(2-Chloroethyl)ether	ND	2.0	0.25	ug/l	
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.0	0.40	ug/l	
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.0	0.37	ug/l	
121-14-2	2,4-Dinitrotoluene	ND	1.0	0.55	ug/l	
606-20-2	2,6-Dinitrotoluene	ND	1.0	0.48	ug/l	
91-94-1	3,3'-Dichlorobenzidine	ND	2.0	0.51	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	1.0	0.33	ug/l	
132-64-9	Dibenzofuran	ND	5.0	0.22	ug/l	
84-74-2	Di-n-butyl phthalate	ND	2.0	0.50	ug/l	
117-84-0	Di-n-octyl phthalate	ND	2.0	0.23	ug/l	
84-66-2	Diethyl phthalate	ND	2.0	0.26	ug/l	
131-11-3	Dimethyl phthalate	ND	2.0	0.22	ug/l	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.0	1.7	ug/l	
206-44-0	Fluoranthene	ND	1.0	0.17	ug/l	
86-73-7	Fluorene	ND	1.0	0.17	ug/l	
118-74-1	Hexachlorobenzene	ND	1.0	0.33	ug/l	
87-68-3	Hexachlorobutadiene	ND	1.0	0.49	ug/l	
77-47-4	Hexachlorocyclopentadiene	ND	10	2.8	ug/l	
67-72-1	Hexachloroethane	ND	2.0	0.39	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.0	0.33	ug/l	
78-59-1	Isophorone	ND	2.0	0.28	ug/l	
90-12-0	1-Methylnaphthalene	ND	1.0	0.26	ug/l	
91-57-6	2-Methylnaphthalene	ND	1.0	0.21	ug/l	
88-74-4	2-Nitroaniline	ND	5.0	0.28	ug/l	
99-09-2	3-Nitroaniline	ND	5.0	0.39	ug/l	
100-01-6	4-Nitroaniline	ND	5.0	0.44	ug/l	
98-95-3	Nitrobenzene	ND	2.0	0.64	ug/l	
621-64-7	N-Nitroso-di-n-propylamine	ND	2.0	0.48	ug/l	
86-30-6	N-Nitrosodiphenylamine	ND	5.0	0.22	ug/l	
85-01-8	Phenanthrene	ND	1.0	0.18	ug/l	
129-00-0	Pyrene	ND	1.0	0.22	ug/l	
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.0	0.37	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
367-12-4	2-Fluorophenol	52%		14-88%
4165-62-2	Phenol-d5	34%		10-110%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

Report of Analysis

Client Sample ID: S-40D
Lab Sample ID: JC33384-5
Matrix: AQ - Ground Water
Method: SW846 8270D SW846 3510C
Project: BSMC, Building 5 Area, PR

Date Sampled: 12/07/16
Date Received: 12/09/16
Percent Solids: n/a

4.5
4

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
118-79-6	2,4,6-Tribromophenol	94%		39-149%
4165-60-0	Nitrobenzene-d5	85%		32-128%
321-60-8	2-Fluorobiphenyl	82%		35-119%
1718-51-0	Terphenyl-d14	70%		10-126%



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID: S-40D
Lab Sample ID: JC33384-5
Matrix: AQ - Ground Water
Method: SW846 8270D BY SIM SW846 3510C
Project: BSMC, Building 5 Area, PR

Date Sampled: 12/07/16
Date Received: 12/09/16
Percent Solids: n/a

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	3P57332.D	1	12/18/16	SG	12/14/16	OP99210A	E3P2659
Run #2							

Run #	Initial Volume	Final Volume
Run #1	1000 ml	1.0 ml
Run #2		

CAS No.	Compound	Result	RL	MDL	Units	Q
56-55-3	Benzo(a)anthracene	ND	0.050	0.023	ug/l	
50-32-8	Benzo(a)pyrene	ND	0.050	0.033	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	0.10	0.043	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	0.10	0.033	ug/l	
218-01-9	Chrysene	ND	0.10	0.026	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	0.10	0.036	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	0.10	0.038	ug/l	
91-20-3	Naphthalene	ND	0.10	0.029	ug/l	
123-91-1	1,4-Dioxane	3.27	0.10	0.049	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-60-0	Nitrobenzene-d5	64%		24-125%
321-60-8	2-Fluorobiphenyl	56%		19-127%
1718-51-0	Terphenyl-d14	57%		10-119%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID: S-40D
 Lab Sample ID: JC33384-5
 Matrix: AQ - Ground Water
 Method: SW846-8015C (DA1)
 Project: BMSMC, Building 5 Area, PR

Date Sampled: 12/07/16
 Date Received: 12/09/16
 Percent Solids: n/a

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	GH107760.D	1	12/14/16	XPL	n/a	n/a	GGH5588
Run #2							

Low Molecular Alcohol List

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5	Ethanol	ND	200	55	ug/l	
78-83-1	Isobutyl Alcohol	ND	100	36	ug/l	
67-63-0	Isopropyl Alcohol	ND	100	68	ug/l	
71-23-8	n-Propyl Alcohol	ND	100	43	ug/l	
71-36-3	n-Butyl Alcohol	ND	100	87	ug/l	
78-92-2	sec-Butyl Alcohol	ND	100	66	ug/l	
67-56-1	Methanol	ND	200	71	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
111-27-3	Hexanol	120%		56-145%
111-27-3	Hexanol	113%		56-145%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	S-40D	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-5	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8081B SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	8G1179.D	1	12/15/16	CP	12/13/16	OP99184	G8G42
Run #2							

Run #	Initial Volume	Final Volume
Run #1	990 ml	10.0 ml
Run #2		

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units	Q
309-00-2	Aldrin	ND	0.010	0.0061	ug/l	
319-84-6	alpha-BHC	ND	0.010	0.0061	ug/l	
319-85-7	beta-BHC	ND	0.010	0.0057	ug/l	
319-86-8	delta-BHC	ND	0.010	0.0046	ug/l	
58-89-9	gamma-BHC (Lindane)	ND	0.010	0.0028	ug/l	
5103-71-9	alpha-Chlordane	ND	0.010	0.0047	ug/l	
5103-74-2	gamma-Chlordane	ND	0.010	0.0046	ug/l	
60-57-1	Dieldrin	ND	0.010	0.0036	ug/l	
72-54-8	4,4'-DDD	ND	0.010	0.0038	ug/l	
72-55-9	4,4'-DDE	ND	0.010	0.0062	ug/l	
50-29-3	4,4'-DDT	ND	0.010	0.0050	ug/l	
72-20-8	Endrin	ND	0.010	0.0051	ug/l	
1031-07-8	Endosulfan sulfate	ND	0.010	0.0053	ug/l	
7421-93-4	Endrin aldehyde	ND	0.010	0.0052	ug/l	
53494-70-5	Endrin ketone	ND	0.010	0.0051	ug/l	
959-98-8	Endosulfan-I	ND	0.010	0.0050	ug/l	
33213-65-9	Endosulfan-II	ND	0.010	0.0043	ug/l	
76-44-8	Heptachlor	ND	0.010	0.0038	ug/l	
1024-57-3	Heptachlor epoxide	ND	0.010	0.0066	ug/l	
72-43-5	Methoxychlor	ND	0.020	0.0057	ug/l	
8001-35-2	Toxaphene	ND	0.25	0.19	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
877-09-8	Tetrachloro-m-xylene	85%		26-132%
877-09-8	Tetrachloro-m-xylene	88%		26-132%
2051-24-3	Decachlorobiphenyl	88%		10-118%
2051-24-3	Decachlorobiphenyl	90%		10-118%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	S-41D	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-6	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8260C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	4B67442.D	1	12/17/16	HT	n/a	n/a	V4B2774
Run #2							

Run #	Purge Volume
Run #1	5.0 ml
Run #2	

CAS No.	Compound	Result	RL	MDL	Units	Q
106-99-0	1,3-Butadiene	ND	5.0	0.17	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
1868-53-7	Dibromofluoromethane	100%		76-120%
17060-07-0	1,2-Dichloroethane-D4	107%		73-122%
2037-26-5	Toluene-D8	100%		84-119%
460-00-4	4-Bromofluorobenzene	107%		78-117%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 3

Client Sample ID:	S-41D	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-6	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	M130035.D	1	12/16/16	KM	12/14/16	OP99210	EM5553
Run #2							

Run #	Initial Volume	Final Volume
Run #1	970 ml	1.0 ml
Run #2		

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
95-57-8	2-Chlorophenol	ND	5.2	0.85	ug/l	
59-50-7	4-Chloro-3-methyl phenol	ND	5.2	0.92	ug/l	
120-83-2	2,4-Dichlorophenol	ND	2.1	1.3	ug/l	
105-67-9	2,4-Dimethylphenol	ND	5.2	2.5	ug/l	
51-28-5	2,4-Dinitrophenol	ND	10	1.6	ug/l	
534-52-1	4,6-Dinitro-o-cresol	ND	5.2	1.3	ug/l	
95-48-7	2-Methylphenol	ND	2.1	0.92	ug/l	
	3&4-Methylphenol	ND	2.1	0.91	ug/l	
88-75-5	2-Nitrophenol	ND	5.2	0.99	ug/l	
100-02-7	4-Nitrophenol	ND	10	1.2	ug/l	
87-86-5	Pentachlorophenol	ND	4.1	1.4	ug/l	
108-95-2	Phenol	ND	2.1	0.40	ug/l	
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.2	1.5	ug/l	
95-95-4	2,4,5-Trichlorophenol	ND	5.2	1.4	ug/l	
88-06-2	2,4,6-Trichlorophenol	ND	5.2	0.95	ug/l	
83-32-9	Acenaphthene	ND	1.0	0.20	ug/l	
208-96-8	Acenaphthylene	ND	1.0	0.14	ug/l	
98-86-2	Acetophenone	ND	2.1	0.21	ug/l	
120-12-7	Anthracene	ND	1.0	0.22	ug/l	
1912-24-9	Atrazine	ND	2.1	0.46	ug/l	
100-52-7	Benzaldehyde	ND	5.2	0.30	ug/l	
56-55-3	Benzo(a)anthracene	ND	1.0	0.21	ug/l	
50-32-8	Benzo(a)pyrene	ND	1.0	0.22	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	1.0	0.21	ug/l	
191-24-2	Benzo(g,h,i)perylene	ND	1.0	0.35	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	1.0	0.21	ug/l	
101-55-3	4-Bromophenyl phenyl ether	ND	2.1	0.42	ug/l	
85-68-7	Butyl benzyl phthalate	ND	2.1	0.47	ug/l	
92-52-4	1,1'-Biphenyl	ND	1.0	0.22	ug/l	
91-58-7	2-Chloronaphthalene	ND	2.1	0.24	ug/l	
106-47-8	4-Chloroaniline	ND	5.2	0.35	ug/l	
86-74-8	Carbazole	ND	1.0	0.24	ug/l	



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

Report of Analysis

Client Sample ID: S-41D
Lab Sample ID: JC33384-6
Matrix: AQ - Ground Water
Method: SW846 8270D SW846 3510C
Project: BSMC, Building 5 Area, PR

Date Sampled: 12/07/16
Date Received: 12/09/16
Percent Solids: n/a

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	2.1	0.67	ug/l	
218-01-9	Chrysene	ND	1.0	0.18	ug/l	
111-91-1	bis(2-Chloroethoxy)methane	ND	2.1	0.29	ug/l	
111-44-4	bis(2-Chloroethyl)ether	ND	2.1	0.26	ug/l	
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.1	0.42	ug/l	
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.1	0.38	ug/l	
121-14-2	2,4-Dinitrotoluene	ND	1.0	0.57	ug/l	
606-20-2	2,6-Dinitrotoluene	ND	1.0	0.49	ug/l	
91-94-1	3,3'-Dichlorobenzidine	ND	2.1	0.52	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	1.0	0.34	ug/l	
132-64-9	Dibenzofuran	ND	5.2	0.23	ug/l	
84-74-2	Di-n-butyl phthalate	ND	2.1	0.51	ug/l	
117-84-0	Di-n-octyl phthalate	ND	2.1	0.24	ug/l	
84-66-2	Diethyl phthalate	ND	2.1	0.27	ug/l	
131-11-3	Dimethyl phthalate	ND	2.1	0.22	ug/l	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.1	1.7	ug/l	
206-44-0	Fluoranthene	ND	1.0	0.18	ug/l	
86-73-7	Fluorene	ND	1.0	0.18	ug/l	
118-74-1	Hexachlorobenzene	ND	1.0	0.34	ug/l	
87-68-3	Hexachlorobutadiene	ND	1.0	0.51	ug/l	
77-47-4	Hexachlorocyclopentadiene	ND	10	2.9	ug/l	
67-72-1	Hexachloroethane	ND	2.1	0.40	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.0	0.34	ug/l	
78-59-1	Isophorone	ND	2.1	0.29	ug/l	
90-12-0	1-Methylnaphthalene	ND	1.0	0.27	ug/l	
91-57-6	2-Methylnaphthalene	ND	1.0	0.22	ug/l	
88-74-4	2-Nitroaniline	ND	5.2	0.29	ug/l	
99-09-2	3-Nitroaniline	ND	5.2	0.40	ug/l	
100-01-6	4-Nitroaniline	ND	5.2	0.45	ug/l	
98-95-3	Nitrobenzene	ND	2.1	0.66	ug/l	
621-64-7	N-Nitroso-di-n-propylamine	ND	2.1	0.50	ug/l	
86-30-6	N-Nitrosodiphenylamine	ND	5.2	0.23	ug/l	
85-01-8	Phenanthrene	ND	1.0	0.18	ug/l	
129-00-0	Pyrene	ND	1.0	0.23	ug/l	
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.1	0.38	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
367-12-4	2-Fluorophenol	52%		14-88%
4165-62-2	Phenol-d5	36%		10-110%

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID:	S-41D	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-6	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
118-79-6	2,4,6-Tribromophenol	92%		39-149%
4165-60-0	Nitrobenzene-d5	86%		32-128%
321-60-8	2-Fluorobiphenyl	83%		35-119%
1718-51-0	Terphenyl-d14	67%		10-126%



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	S-41D	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-6	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D BY SIM SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	4P20218.D	1	12/16/16	JJ	12/14/16	OP99210A	E4P1098
Run #2							

Run #	Initial Volume	Final Volume
Run #1	970 ml	1.0 ml
Run #2		

CAS No.	Compound	Result	RL	MDL	Units	Q
56-55-3	Benzo(a)anthracene	ND	0.052	0.024	ug/l	
50-32-8	Benzo(a)pyrene	ND	0.052	0.034	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	0.10	0.045	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	0.10	0.034	ug/l	
218-01-9	Chrysene	ND	0.10	0.027	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	0.10	0.037	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	0.10	0.039	ug/l	
91-20-3	Naphthalene	ND	0.10	0.030	ug/l	
123-91-1	1,4-Dioxane	0.746	0.10	0.050	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-60-0	Nitrobenzene-d5	86%		24-125%
321-60-8	2-Fluorobiphenyl	60%		19-127%
1718-51-0	Terphenyl-d14	76%		10-119%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID: S-41D
Lab Sample ID: JC33384-6
Matrix: AQ - Ground Water
Method: SW846-8015C (DAI)
Project: BMSMC, Building 5 Area, PR

Date Sampled: 12/07/16
Date Received: 12/09/16
Percent Solids: n/a

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	GH107751.D	1	12/14/16	XPL	n/a	n/a	GGH5588
Run #2							

Low Molecular Alcohol List

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5	Ethanol	ND	200	55	ug/l	
78-83-1	Isobutyl Alcohol	ND	100	36	ug/l	
67-63-0	Isopropyl Alcohol	ND	100	68	ug/l	
71-23-8	n-Propyl Alcohol	ND	100	43	ug/l	
71-36-3	n-Butyl Alcohol	ND	100	87	ug/l	
78-92-2	sec-Butyl Alcohol	ND	100	66	ug/l	
67-56-1	Methanol	ND	200	71	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
111-27-3	Hexanol	90%		56-145%
111-27-3	Hexanol	88%		56-145%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	S-41D	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-6	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8081B SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	8G1180.D	1	12/15/16	CP	12/13/16	OP99184	G8G42
Run #2							

Run #	Initial Volume	Final Volume
Run #1	990 ml	10.0 ml
Run #2		

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units	Q
309-00-2	Aldrin	ND	0.010	0.0061	ug/l	
319-84-6	alpha-BHC	ND	0.010	0.0061	ug/l	
319-85-7	beta-BHC	ND	0.010	0.0057	ug/l	
319-86-8	delta-BHC	ND	0.010	0.0046	ug/l	
58-89-9	gamma-BHC (Lindane)	ND	0.010	0.0028	ug/l	
5103-71-9	alpha-Chlordane	ND	0.010	0.0047	ug/l	
5103-74-2	gamma-Chlordane	ND	0.010	0.0046	ug/l	
60-57-1	Dieldrin	ND	0.010	0.0036	ug/l	
72-54-8	4,4'-DDD	ND	0.010	0.0038	ug/l	
72-55-9	4,4'-DDE	ND	0.010	0.0062	ug/l	
50-29-3	4,4'-DDT	ND	0.010	0.0050	ug/l	
72-20-8	Endrin	ND	0.010	0.0051	ug/l	
1031-07-8	Endosulfan sulfate	ND	0.010	0.0053	ug/l	
7421-93-4	Endrin aldehyde	ND	0.010	0.0052	ug/l	
53494-70-5	Endrin ketone	ND	0.010	0.0051	ug/l	
959-98-8	Endosulfan-I	ND	0.010	0.0050	ug/l	
33213-65-9	Endosulfan-II	ND	0.010	0.0043	ug/l	
76-44-8	Heptachlor	ND	0.010	0.0038	ug/l	
1024-57-3	Heptachlor epoxide	ND	0.010	0.0066	ug/l	
72-43-5	Methoxychlor	ND	0.020	0.0057	ug/l	
8001-35-2	Toxaphene	ND	0.25	0.19	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
877-09-8	Tetrachloro-m-xylene	81%		26-132%
877-09-8	Tetrachloro-m-xylene	85%		26-132%
2051-24-3	Decachlorobiphenyl	95%		10-118%
2051-24-3	Decachlorobiphenyl	96%		10-118%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID: S-40S
Lab Sample ID: JC33384-7
Matrix: AQ - Ground Water
Method: SW846 8260C
Project: BSMC, Building 5 Area, PR

Date Sampled: 12/07/16
Date Received: 12/09/16
Percent Solids: n/a

	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	4B67473.D	1	12/18/16	HT	n/a	n/a	V4B2775
Run #2							

	Purge Volume
Run #1	5.0 ml
Run #2	

CAS No.	Compound	Result	RL	MDL	Units	Q
106-99-0	1,3-Butadiene	ND	5.0	0.17	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
1868-53-7	Dibromofluoromethane	103%		76-120%
17060-07-0	1,2-Dichloroethane-D4	110%		73-122%
2037-26-5	Toluene-D8	98%		84-119%
460-00-4	4-Bromofluorobenzene	109%		78-117%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 3

Client Sample ID:	S-40S	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-7	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	M130036.D	1	12/16/16	KM	12/14/16	OP99210	EM5553
Run #2							

Run #	Initial Volume	Final Volume
Run #1	980 ml	1.0 ml
Run #2		

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
95-57-8	2-Chlorophenol	ND	5.1	0.84	ug/l	
59-50-7	4-Chloro-3-methyl phenol	ND	5.1	0.91	ug/l	
120-83-2	2,4-Dichlorophenol	ND	2.0	1.3	ug/l	
105-67-9	2,4-Dimethylphenol	ND	5.1	2.5	ug/l	
51-28-5	2,4-Dinitrophenol	ND	10	1.6	ug/l	
534-52-1	4,6-Dinitro-o-cresol	ND	5.1	1.3	ug/l	
95-48-7	2-Methylphenol	ND	2.0	0.91	ug/l	
	3&4-Methylphenol	ND	2.0	0.90	ug/l	
88-75-5	2-Nitrophenol	ND	5.1	0.98	ug/l	
100-02-7	4-Nitrophenol	ND	10	1.2	ug/l	
87-86-5	Pentachlorophenol	ND	4.1	1.4	ug/l	
108-95-2	Phenol	ND	2.0	0.40	ug/l	
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.1	1.5	ug/l	
95-95-4	2,4,5-Trichlorophenol	ND	5.1	1.4	ug/l	
88-06-2	2,4,6-Trichlorophenol	ND	5.1	0.94	ug/l	
83-32-9	Acenaphthene	ND	1.0	0.19	ug/l	
208-96-8	Acenaphthylene	ND	1.0	0.14	ug/l	
98-86-2	Acetophenone	ND	2.0	0.21	ug/l	
120-12-7	Anthracene	ND	1.0	0.22	ug/l	
1912-24-9	Atrazine	ND	2.0	0.46	ug/l	
100-52-7	Benzaldehyde	ND	5.1	0.29	ug/l	
56-55-3	Benzo(a)anthracene	ND	1.0	0.21	ug/l	
50-32-8	Benzo(a)pyrene	ND	1.0	0.22	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	1.0	0.21	ug/l	
191-24-2	Benzo(g,h,i)perylene	ND	1.0	0.35	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	1.0	0.21	ug/l	
101-55-3	4-Bromophenyl phenyl ether	ND	2.0	0.41	ug/l	
85-68-7	Butyl benzyl phthalate	ND	2.0	0.47	ug/l	
92-52-4	1,1'-Biphenyl	ND	1.0	0.22	ug/l	
91-58-7	2-Chloronaphthalene	ND	2.0	0.24	ug/l	
106-47-8	4-Chloroaniline	ND	5.1	0.35	ug/l	
86-74-8	Carbazole	ND	1.0	0.23	ug/l	

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID: S-40S
Lab Sample ID: JC33384-7
Matrix: AQ - Ground Water
Method: SW846 8270D SW846 3510C
Project: BSMC, Building 5 Area, PR

Date Sampled: 12/07/16
Date Received: 12/09/16
Percent Solids: n/a

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	2.0	0.66	ug/l	
218-01-9	Chrysene	ND	1.0	0.18	ug/l	
111-91-1	bis(2-Chloroethoxy)methane	ND	2.0	0.28	ug/l	
111-44-4	bis(2-Chloroethyl)ether	ND	2.0	0.25	ug/l	
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.0	0.41	ug/l	
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.0	0.37	ug/l	
121-14-2	2,4-Dinitrotoluene	ND	1.0	0.56	ug/l	
606-20-2	2,6-Dinitrotoluene	ND	1.0	0.49	ug/l	
91-94-1	3,3'-Dichlorobenzidine	ND	2.0	0.52	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	1.0	0.34	ug/l	
132-64-9	Dibenzofuran	ND	5.1	0.22	ug/l	
84-74-2	Di-n-butyl phthalate	ND	2.0	0.51	ug/l	
117-84-0	Di-n-octyl phthalate	ND	2.0	0.24	ug/l	
84-66-2	Diethyl phthalate	ND	2.0	0.27	ug/l	
131-11-3	Dimethyl phthalate	ND	2.0	0.22	ug/l	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.0	1.7	ug/l	
206-44-0	Fluoranthene	ND	1.0	0.17	ug/l	
86-73-7	Fluorene	ND	1.0	0.17	ug/l	
118-74-1	Hexachlorobenzene	ND	1.0	0.33	ug/l	
87-68-3	Hexachlorobutadiene	ND	1.0	0.50	ug/l	
77-47-4	Hexachlorocyclopentadiene	ND	10	2.8	ug/l	
67-72-1	Hexachloroethane	ND	2.0	0.40	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.0	0.34	ug/l	
78-59-1	Isophorone	ND	2.0	0.28	ug/l	
90-12-0	1-Methylnaphthalene	ND	1.0	0.27	ug/l	
91-57-6	2-Methylnaphthalene	ND	1.0	0.21	ug/l	
88-74-4	2-Nitroaniline	ND	5.1	0.28	ug/l	
99-09-2	3-Nitroaniline	ND	5.1	0.39	ug/l	
100-01-6	4-Nitroaniline	ND	5.1	0.45	ug/l	
98-95-3	Nitrobenzene	ND	2.0	0.66	ug/l	
621-64-7	N-Nitroso-di-n-propylamine	ND	2.0	0.49	ug/l	
86-30-6	N-Nitrosodiphenylamine	ND	5.1	0.23	ug/l	
85-01-8	Phenanthrene	ND	1.0	0.18	ug/l	
129-00-0	Pyrene	ND	1.0	0.22	ug/l	
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.0	0.38	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
367-12-4	2-Fluorophenol	44%		14-88%
4165-62-2	Phenol-d5	29%		10-110%

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID:	S-40S	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-7	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
118-79-6	2,4,6-Tribromophenol	101%		39-149%
4165-60-0	Nitrobenzene-d5	81%		32-128%
321-60-8	2-Fluorobiphenyl	82%		35-119%
1718-51-0	Terphenyl-d14	81%		10-126%



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	S-40S	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-7	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D BY SIM SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	3P57333.D	1	12/18/16	SG	12/14/16	OP99210A	E3P2659
Run #2							

Run #	Initial Volume	Final Volume
Run #1	980 ml	1.0 ml
Run #2		

CAS No.	Compound	Result	RL	MDL	Units	Q
56-55-3	Benzo(a)anthracene	ND	0.051	0.023	ug/l	
50-32-8	Benzo(a)pyrene	ND	0.051	0.034	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	0.10	0.044	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	0.10	0.034	ug/l	
218-01-9	Chrysene	ND	0.10	0.027	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	0.10	0.037	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	0.10	0.039	ug/l	
91-20-3	Naphthalene	ND	0.10	0.030	ug/l	
123-91-1	1,4-Dioxane	0.222	0.10	0.050	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-60-0	Nitrobenzene-d5	60%		24-125%
321-60-8	2-Fluorobiphenyl	54%		19-127%
1718-51-0	Terphenyl-d14	59%		10-119%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	S-40S	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-7	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846-8015C (DAI)		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	GH107761.D	1	12/14/16	XPL	n/a	n/a	GGH5588
Run #2							

Low Molecular Alcohol List

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5	Ethanol	ND	200	55	ug/l	
78-83-1	Isobutyl Alcohol	ND	100	36	ug/l	
67-63-0	Isopropyl Alcohol	ND	100	68	ug/l	
71-23-8	n-Propyl Alcohol	ND	100	43	ug/l	
71-36-3	n-Butyl Alcohol	ND	100	87	ug/l	
78-92-2	sec-Butyl Alcohol	ND	100	66	ug/l	
67-56-1	Methanol	ND	200	71	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
111-27-3	Hexanol	112%		56-145%
111-27-3	Hexanol	108%		56-145%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID: S-40S		Date Sampled: 12/07/16	
Lab Sample ID: JC33384-7		Date Received: 12/09/16	
Matrix: AQ - Ground Water		Percent Solids: n/a	
Method: RSK-175			
Project: BSMC, Building 5 Area, PR			

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	AA56404.D	1	12/16/16	LM	n/a	n/a	GAA1095
Run #2							

CAS No.	Compound	Result	RL	MDL	Units	Q
74-82-8	Methane	26.7	0.11	0.036	ug/l	



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	S-40S	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-7	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8081B SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	8G1183.D	1	12/15/16	CP	12/13/16	OP99184	G8G42
Run #2							

Run #	Initial Volume	Final Volume
Run #1	1000 ml	10.0 ml
Run #2		

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units	Q
309-00-2	Aldrin	ND	0.010	0.0060	ug/l	
319-84-6	alpha-BHC	ND	0.010	0.0060	ug/l	
319-85-7	beta-BHC	ND	0.010	0.0057	ug/l	
319-86-8	delta-BHC	ND	0.010	0.0046	ug/l	
58-89-9	gamma-BHC (Lindane)	ND	0.010	0.0028	ug/l	
5103-71-9	alpha-Chlordane	ND	0.010	0.0046	ug/l	
5103-74-2	gamma-Chlordane	ND	0.010	0.0046	ug/l	
60-57-1	Dieldrin	ND	0.010	0.0036	ug/l	
72-54-8	4,4'-DDD	ND	0.010	0.0038	ug/l	
72-55-9	4,4'-DDE	ND	0.010	0.0062	ug/l	
50-29-3	4,4'-DDT	ND	0.010	0.0050	ug/l	
72-20-8	Endrin	ND	0.010	0.0050	ug/l	
1031-07-8	Endosulfan sulfate	ND	0.010	0.0053	ug/l	
7421-93-4	Endrin aldehyde	ND	0.010	0.0051	ug/l	
53494-70-5	Endrin ketone	ND	0.010	0.0051	ug/l	
959-98-8	Endosulfan-I	ND	0.010	0.0050	ug/l	
33213-65-9	Endosulfan-II	ND	0.010	0.0043	ug/l	
76-44-8	Heptachlor	ND	0.010	0.0038	ug/l	
1024-57-3	Heptachlor epoxide	ND	0.010	0.0065	ug/l	
72-43-5	Methoxychlor	ND	0.020	0.0057	ug/l	
8001-35-2	Toxaphene	ND	0.25	0.18	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
877-09-8	Tetrachloro-m-xylene	81%		26-132%
877-09-8	Tetrachloro-m-xylene	85%		26-132%
2051-24-3	Decachlorobiphenyl	57%		10-118%
2051-24-3	Decachlorobiphenyl	55%		10-118%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

Report of Analysis

Client Sample ID: S-40S	Date Sampled: 12/07/16
Lab Sample ID: JC33384-7	Date Received: 12/09/16
Matrix: AQ - Ground Water	Percent Solids: n/a
Project: BSMC, Building 5 Area, PR	

Total Metals Analysis

Analyte	Result	RL	MDL	Units	DF	Prep	Analyzed By	Method	Prep Method
Iron	3170	100	12	ug/l	1	12/14/16	12/16/16 ND	SW846 6010C ¹	SW846 3010A ²
Manganese	2960	15	0.39	ug/l	1	12/14/16	12/16/16 ND	SW846 6010C ¹	SW846 3010A ²

(1) Instrument QC Batch: MA40977

(2) Prep QC Batch: MP97634



RL = Reporting Limit
MDL = Method Detection Limit

U = Indicates a result < MDL
B = Indicates a result > = MDL but < RL

Report of Analysis

Client Sample ID: S-40S
 Lab Sample ID: JC33384-7
 Matrix: AQ - Ground Water
 Project: BMSMC, Building 5 Area, PR

Date Sampled: 12/07/16
 Date Received: 12/09/16
 Percent Solids: n/a

4.7
4

General Chemistry

Analyte	Result	RL	Units	DF	Analyzed	By	Method
Alkalinity, Total as CaCO ₃	624	5.0	mg/l	1	12/15/16 23:25	CB	SM2320 B-11
Iron, Ferric ^a	3.1	0.30	mg/l	1	12/16/16 19:56	ND	SM3500FE B-11
Iron, Ferrous ^b	< 0.20	0.20	mg/l	1	12/10/16 13:35	YR	SM3500FE B-11
Nitrogen, Nitrate ^c	< 0.11	0.11	mg/l	1	12/21/16 13:38	YZ	EPA353 2/SM4500NO2B
Nitrogen, Nitrate + Nitrite	< 0.10	0.10	mg/l	1	12/21/16 13:38	YZ	EPA 353 2/LACHAT
Nitrogen, Nitrite ^d	< 0.010	0.010	mg/l	1	12/09/16 22:48	CB	SM4500NO2 B-11
Sulfate	47.6	10	mg/l	1	12/19/16 23:56	JN	EPA 300/SW846 9056A
Sulfide	< 2.0	2.0	mg/l	1	12/13/16 21:45	CB	SM4500S2- F-11

(a) Calculated as: (Iron) - (Iron, Ferrous)

(b) Field analysis required. Received out of hold time and analyzed by request.

(c) Calculated as: (Nitrogen, Nitrate + Nitrite) - (Nitrogen, Nitrite) Nitrogen, Nitrite analysis done past holding time.

(d) Received and analyzed out of holding time.



RL = Reporting Limit

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID: S-41S
 Lab Sample ID: JC33384-8
 Matrix: AQ - Ground Water
 Method: SW846 8260C
 Project: BMSMC, Building 5 Area, PR

Date Sampled: 12/07/16
 Date Received: 12/09/16
 Percent Solids: n/a

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	4B67470.D	1	12/18/16	HT	n/a	n/a	V4B2775
Run #2							

Run #	Purge Volume
Run #1	5.0 ml
Run #2	

CAS No.	Compound	Result	RL	MDL	Units	Q
106-99-0	1,3-Butadiene	ND	5.0	0.17	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
1868-53-7	Dibromofluoromethane	103%		76-120%
17060-07-0	1,2-Dichloroethane-D4	110%		73-122%
2037-26-5	Toluene-D8	100%		84-119%
460-00-4	4-Bromofluorobenzene	109%		78-117%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 3

Client Sample ID:	S-41S	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-8	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	M130037.D	1	12/16/16	KM	12/14/16	OP99210	EM5553
Run #2							

Run #	Initial Volume	Final Volume
Run #1	980 ml	1.0 ml
Run #2		

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
95-57-8	2-Chlorophenol	ND	5.1	0.84	ug/l	
59-50-7	4-Chloro-3-methyl phenol	ND	5.1	0.91	ug/l	
120-83-2	2,4-Dichlorophenol	ND	2.0	1.3	ug/l	
105-67-9	2,4-Dimethylphenol	ND	5.1	2.5	ug/l	
51-28-5	2,4-Dinitrophenol	ND	10	1.6	ug/l	
534-52-1	4,6-Dinitro-o-cresol	ND	5.1	1.3	ug/l	
95-48-7	2-Methylphenol	ND	2.0	0.91	ug/l	
	3&4-Methylphenol	ND	2.0	0.90	ug/l	
88-75-5	2-Nitrophenol	ND	5.1	0.98	ug/l	
100-02-7	4-Nitrophenol	ND	10	1.2	ug/l	
87-86-5	Pentachlorophenol	ND	4.1	1.4	ug/l	
108-95-2	Phenol	ND	2.0	0.40	ug/l	
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.1	1.5	ug/l	
95-95-4	2,4,5-Trichlorophenol	ND	5.1	1.4	ug/l	
88-06-2	2,4,6-Trichlorophenol	ND	5.1	0.94	ug/l	
83-32-9	Acenaphthene	ND	1.0	0.19	ug/l	
208-96-8	Acenaphthylene	ND	1.0	0.14	ug/l	
98-86-2	Acetophenone	ND	2.0	0.21	ug/l	
120-12-7	Anthracene	ND	1.0	0.22	ug/l	
1912-24-9	Atrazine	ND	2.0	0.46	ug/l	
100-52-7	Benzaldehyde	ND	5.1	0.29	ug/l	
56-55-3	Benzo(a)anthracene	ND	1.0	0.21	ug/l	
50-32-8	Benzo(a)pyrene	ND	1.0	0.22	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	1.0	0.21	ug/l	
191-24-2	Benzo(g,h,i)perylene	ND	1.0	0.35	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	1.0	0.21	ug/l	
101-55-3	4-Bromophenyl phenyl ether	ND	2.0	0.41	ug/l	
85-68-7	Butyl benzyl phthalate	ND	2.0	0.47	ug/l	
92-52-4	1,1'-Biphenyl	ND	1.0	0.22	ug/l	
91-58-7	2-Chloronaphthalene	ND	2.0	0.24	ug/l	
106-47-8	4-Chloroaniline	ND	5.1	0.35	ug/l	
86-74-8	Carbazole	ND	1.0	0.23	ug/l	

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID: S-41S
Lab Sample ID: JC33384-8
Matrix: AQ - Ground Water
Method: SW846 8270D SW846 3510C
Project: BSMC, Building 5 Area, PR

Date Sampled: 12/07/16
Date Received: 12/09/16
Percent Solids: n/a

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	2.0	0.66	ug/l	
218-01-9	Chrysene	ND	1.0	0.18	ug/l	
111-91-1	bis(2-Chloroethoxy)methane	ND	2.0	0.28	ug/l	
111-44-4	bis(2-Chloroethyl)ether	ND	2.0	0.25	ug/l	
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.0	0.41	ug/l	
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.0	0.37	ug/l	
121-14-2	2,4-Dinitrotoluene	ND	1.0	0.56	ug/l	
606-20-2	2,6-Dinitrotoluene	ND	1.0	0.49	ug/l	
91-94-1	3,3'-Dichlorobenzidine	ND	2.0	0.52	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	1.0	0.34	ug/l	
132-64-9	Dibenzofuran	ND	5.1	0.22	ug/l	
84-74-2	Di-n-butyl phthalate	ND	2.0	0.51	ug/l	
117-84-0	Di-n-octyl phthalate	ND	2.0	0.24	ug/l	
84-66-2	Diethyl phthalate	ND	2.0	0.27	ug/l	
131-11-3	Dimethyl phthalate	ND	2.0	0.22	ug/l	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.0	1.7	ug/l	
206-44-0	Fluoranthene	ND	1.0	0.17	ug/l	
86-73-7	Fluorene	ND	1.0	0.17	ug/l	
118-74-1	Hexachlorobenzene	ND	1.0	0.33	ug/l	
87-68-3	Hexachlorobutadiene	ND	1.0	0.50	ug/l	
77-47-4	Hexachlorocyclopentadiene	ND	10	2.8	ug/l	
67-72-1	Hexachloroethane	ND	2.0	0.40	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.0	0.34	ug/l	
78-59-1	Isophorone	ND	2.0	0.28	ug/l	
90-12-0	1-Methylnaphthalene	ND	1.0	0.27	ug/l	
91-57-6	2-Methylnaphthalene	ND	1.0	0.21	ug/l	
88-74-4	2-Nitroaniline	ND	5.1	0.28	ug/l	
99-09-2	3-Nitroaniline	ND	5.1	0.39	ug/l	
100-01-6	4-Nitroaniline	ND	5.1	0.45	ug/l	
98-95-3	Nitrobenzene	ND	2.0	0.66	ug/l	
621-64-7	N-Nitroso-di-n-propylamine	ND	2.0	0.49	ug/l	
86-30-6	N-Nitrosodiphenylamine	ND	5.1	0.23	ug/l	
85-01-8	Phenanthrene	ND	1.0	0.18	ug/l	
129-00-0	Pyrene	ND	1.0	0.22	ug/l	
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.0	0.38	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
367-12-4	2-Fluorophenol	52%		14-88%
4165-62-2	Phenol-d5	37%		10-110%

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID:	S-41S	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-8	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
118-79-6	2,4,6-Tribromophenol	110%		39-149%
4165-60-0	Nitrobenzene-d5	90%		32-128%
321-60-8	2-Fluorobiphenyl	89%		35-119%
1718-51-0	Terphenyl-d14	75%		10-126%



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	S-41S	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-8	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	SW846 8270D BY SIM SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	3P57334.D	1	12/18/16	SG	12/14/16	OP99210A	E3P2659
Run #2							

Run #	Initial Volume	Final Volume
Run #1	980 ml	1.0 ml
Run #2		

CAS No.	Compound	Result	RL	MDL	Units	Q
56-55-3	Benzo(a)anthracene	ND	0.051	0.023	ug/l	
50-32-8	Benzo(a)pyrene	ND	0.051	0.034	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	0.10	0.044	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	0.10	0.034	ug/l	
218-01-9	Chrysene	ND	0.10	0.027	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	0.10	0.037	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	0.10	0.039	ug/l	
91-20-3	Naphthalene	ND	0.10	0.030	ug/l	
123-91-1	1,4-Dioxane	1.84	0.10	0.050	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-60-0	Nitrobenzene-d5	67%		24-125%
321-60-8	2-Fluorobiphenyl	60%		19-127%
1718-51-0	Terphenyl-d14	58%		10-119%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID: S-41S		Date Sampled: 12/07/16	
Lab Sample ID: JC33384-8		Date Received: 12/09/16	
Matrix: AQ - Ground Water		Percent Solids: n/a	
Method: SW846-8015C (DA1)			
Project: BMSMC, Building 5 Area, PR			

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	GH107762.D	1	12/14/16	XPL	n/a	n/a	GGH5588
Run #2							

Low Molecular Alcohol List

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5	Ethanol	ND	200	55	ug/l	
78-83-1	Isobutyl Alcohol	ND	100	36	ug/l	
67-63-0	Isopropyl Alcohol	ND	100	68	ug/l	
71-23-8	n-Propyl Alcohol	ND	100	43	ug/l	
71-36-3	n-Butyl Alcohol	ND	100	87	ug/l	
78-92-2	sec-Butyl Alcohol	ND	100	66	ug/l	
67-56-1	Methanol	ND	200	71	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
111-27-3	Hexanol	114%		56-145%
111-27-3	Hexanol	123%		56-145%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	S-41S	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-8	Date Received:	12/09/16
Matrix:	AQ - Ground Water	Percent Solids:	n/a
Method:	RSK-175		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	AA56406.D	10	12/16/16	LM	n/a	n/a	GAA1095
Run #2							

CAS No.	Compound	Result	RL	MDL	Units	Q
74-82-8	Methane	375	1.1	0.36	ug/l	



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID: S-41S
 Lab Sample ID: JC33384-8
 Matrix: AQ - Ground Water
 Method: SW846 8081B SW846 3510C
 Project: BSMC, Building 5 Area, PR

Date Sampled: 12/07/16
 Date Received: 12/09/16
 Percent Solids: n/a

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	8G1184.D	1	12/15/16	CP	12/13/16	OP99184	G8G42
Run #2							

Run #	Initial Volume	Final Volume
Run #1	980 ml	10.0 ml
Run #2		

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units	Q
309-00-2	Aldrin	ND	0.010	0.0062	ug/l	
319-84-6	alpha-BHC	ND	0.010	0.0061	ug/l	
319-85-7	beta-BHC	ND	0.010	0.0058	ug/l	
319-86-8	delta-BHC	ND	0.010	0.0047	ug/l	
58-89-9	gamma-BHC (Lindane)	ND	0.010	0.0028	ug/l	
5103-71-9	alpha-Chlordane	ND	0.010	0.0047	ug/l	
5103-74-2	gamma-Chlordane	ND	0.010	0.0047	ug/l	
60-57-1	Dieldrin	ND	0.010	0.0037	ug/l	
72-54-8	4,4'-DDD	ND	0.010	0.0039	ug/l	
72-55-9	4,4'-DDE	ND	0.010	0.0063	ug/l	
50-29-3	4,4'-DDT	ND	0.010	0.0051	ug/l	
72-20-8	Endrin	ND	0.010	0.0051	ug/l	
1031-07-8	Endosulfan sulfate	ND	0.010	0.0054	ug/l	
7421-93-4	Endrin aldehyde	ND	0.010	0.0052	ug/l	
53494-70-5	Endrin ketone	ND	0.010	0.0052	ug/l	
959-98-8	Endosulfan-I	ND	0.010	0.0051	ug/l	
33213-65-9	Endosulfan-II	ND	0.010	0.0044	ug/l	
76-44-8	Heptachlor	ND	0.010	0.0039	ug/l	
1024-57-3	Heptachlor epoxide	ND	0.010	0.0067	ug/l	
72-43-5	Methoxychlor	ND	0.020	0.0058	ug/l	
8001-35-2	Toxaphene	ND	0.26	0.19	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
877-09-8	Tetrachloro-m-xylene	82%		26-132%
877-09-8	Tetrachloro-m-xylene	86%		26-132%
2051-24-3	Decachlorobiphenyl	67%		10-118%
2051-24-3	Decachlorobiphenyl	70%		10-118%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

Report of Analysis

Client Sample ID: S-41S
Lab Sample ID: JC33384-8
Matrix: AQ - Ground Water
Project: BSMC, Building 5 Area, PR

Date Sampled: 12/07/16
Date Received: 12/09/16
Percent Solids: n/a

4.8

4

Total Metals Analysis

Analyte	Result	RL	MDL	Units	DF	Prep	Analyzed By	Method	Prep Method
Iron	6910	100	12	ug/l	1	12/14/16	12/16/16 ND	SW846 6010C ¹	SW846 3010A ²
Manganese	691	15	0.39	ug/l	1	12/14/16	12/16/16 ND	SW846 6010C ¹	SW846 3010A ²

(1) Instrument QC Batch: MA40977

(2) Prep QC Batch: MP97634



RL = Reporting Limit
MDL = Method Detection Limit

U = Indicates a result < MDL
B = Indicates a result > = MDL but < RL

Report of Analysis

Client Sample ID: S-41S
Lab Sample ID: JC33384-8
Matrix: AQ - Ground Water
Project: BMSMC, Building 5 Area, PR

Date Sampled: 12/07/16
Date Received: 12/09/16
Percent Solids: n/a

4.8
4

General Chemistry

Analyte	Result	RL	Units	DF	Analyzed	By	Method
Alkalinity, Total as CaCO ₃	379	5.0	mg/l	1	12/15/16 23:25	CB	SM2320 B-11
Iron, Ferric ^a	6.8	0.30	mg/l	1	12/16/16 20:00	ND	SM3500FE B-11
Iron, Ferrous ^b	< 0.20	0.20	mg/l	1	12/10/16 13:35	YR	SM3500FE B-11
Nitrogen, Nitrate ^c	< 0.11	0.11	mg/l	1	12/21/16 13:39	YZ	EPA353.2/SM4500NO2B
Nitrogen, Nitrate + Nitrite	< 0.10	0.10	mg/l	1	12/21/16 13:39	YZ	EPA 353.2/LACHAT
Nitrogen, Nitrite ^d	< 0.010	0.010	mg/l	1	12/09/16 22:48	CB	SM4500NO2 B-11
Sulfate	71.1	10	mg/l	1	12/20/16 00:20	JN	EPA 300/SW846 9056A
Sulfide	< 2.0	2.0	mg/l	1	12/13/16 21:45	CB	SM4500S2- F-11

(a) Calculated as: (Iron) - (Iron, Ferrous)

(b) Field analysis required. Received out of hold time and analyzed by request.

(c) Calculated as: (Nitrogen, Nitrate + Nitrite) - (Nitrogen, Nitrite) Nitrogen, Nitrite analysis done past holding time.

(d) Received and analyzed out of holding time.



RL = Reporting Limit

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID: FB120716
Lab Sample ID: JC33384-9
Matrix: AQ - Field Blank Water
Method: SW846 8260C
Project: BMSMC, Building 5 Area, PR

Date Sampled: 12/07/16
Date Received: 12/09/16
Percent Solids: n/a

	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	4B67475.D	1	12/18/16	HT	n/a	n/a	V4B2775
Run #2							

	Purge Volume
Run #1	5.0 ml
Run #2	

CAS No.	Compound	Result	RL	MDL	Units	Q
106-99-0	1,3-Butadiene	ND	5.0	0.17	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
1868-53-7	Dibromofluoromethane	103%		76-120%
17060-07-0	1,2-Dichloroethane-D4	111%		73-122%
2037-26-5	Toluene-D8	99%		84-119%
460-00-4	4-Bromofluorobenzene	107%		78-117%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 3

Client Sample ID: FB120716
Lab Sample ID: JC33384-9
Matrix: AQ - Field Blank Water
Method: SW846 8270D SW846 3510C
Project: BSMC, Building 5 Area, PR

Date Sampled: 12/07/16
Date Received: 12/09/16
Percent Solids: n/a

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	M130029.D	1	12/15/16	KM	12/14/16	OP99210	EM5553
Run #2							

Run #	Initial Volume	Final Volume
Run #1	930 ml	1.0 ml
Run #2		

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
95-57-8	2-Chlorophenol	ND	5.4	0.88	ug/l	
59-50-7	4-Chloro-3-methyl phenol	ND	5.4	0.96	ug/l	
120-83-2	2,4-Dichlorophenol	ND	2.2	1.4	ug/l	
105-67-9	2,4-Dimethylphenol	ND	5.4	2.6	ug/l	
51-28-5	2,4-Dinitrophenol	ND	11	1.7	ug/l	
534-52-1	4,6-Dinitro-o-cresol	ND	5.4	1.4	ug/l	
95-48-7	2-Methylphenol	ND	2.2	0.95	ug/l	
	3&4-Methylphenol	ND	2.2	0.95	ug/l	
88-75-5	2-Nitrophenol	ND	5.4	1.0	ug/l	
100-02-7	4-Nitrophenol	ND	11	1.2	ug/l	
87-86-5	Pentachlorophenol	ND	4.3	1.5	ug/l	
108-95-2	Phenol	ND	2.2	0.42	ug/l	
58-90-2	2,3,4,6-Tetrachlorophenol	ND	5.4	1.6	ug/l	
95-95-4	2,4,5-Trichlorophenol	ND	5.4	1.4	ug/l	
88-06-2	2,4,6-Trichlorophenol	ND	5.4	0.99	ug/l	
83-32-9	Acenaphthene	ND	1.1	0.21	ug/l	
208-96-8	Acenaphthylene	ND	1.1	0.15	ug/l	
98-86-2	Acetophenone	ND	2.2	0.22	ug/l	
120-12-7	Anthracene	ND	1.1	0.23	ug/l	
1912-24-9	Atrazine	ND	2.2	0.48	ug/l	
100-52-7	Benzaldehyde	ND	5.4	0.31	ug/l	
56-55-3	Benzo(a)anthracene	ND	1.1	0.22	ug/l	
50-32-8	Benzo(a)pyrene	ND	1.1	0.23	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	1.1	0.22	ug/l	
191-24-2	Benzo(g,h,i)perylene	ND	1.1	0.37	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	1.1	0.22	ug/l	
101-55-3	4-Bromophenyl phenyl ether	ND	2.2	0.43	ug/l	
85-68-7	Butyl benzyl phthalate	ND	2.2	0.49	ug/l	
92-52-4	1,1'-Biphenyl	ND	1.1	0.23	ug/l	
91-58-7	2-Chloronaphthalene	ND	2.2	0.25	ug/l	
106-47-8	4-Chloroaniline	ND	5.4	0.37	ug/l	
86-74-8	Carbazole	ND	1.1	0.25	ug/l	

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID: FB120716
 Lab Sample ID: JC33384-9
 Matrix: AQ - Field Blank Water
 Method: SW846 8270D SW846 3510C
 Project: BMSMC, Building 5 Area, PR

Date Sampled: 12/07/16
 Date Received: 12/09/16
 Percent Solids: n/a

ABN TCL Special List

CAS No.	Compound	Result	RL	MDL	Units	Q
105-60-2	Caprolactam	ND	2.2	0.70	ug/l	
218-01-9	Chrysene	ND	1.1	0.19	ug/l	
111-91-1	bis(2-Chloroethoxy)methane	ND	2.2	0.30	ug/l	
111-44-4	bis(2-Chloroethyl)ether	ND	2.2	0.27	ug/l	
108-60-1	bis(2-Chloroisopropyl)ether	ND	2.2	0.43	ug/l	
7005-72-3	4-Chlorophenyl phenyl ether	ND	2.2	0.39	ug/l	
121-14-2	2,4-Dinitrotoluene	ND	1.1	0.59	ug/l	
606-20-2	2,6-Dinitrotoluene	ND	1.1	0.51	ug/l	
91-94-1	3,3'-Dichlorobenzidine	ND	2.2	0.55	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	1.1	0.36	ug/l	
132-64-9	Dibenzofuran	ND	5.4	0.24	ug/l	
84-74-2	Di-n-butyl phthalate	ND	2.2	0.53	ug/l	
117-84-0	Di-n-octyl phthalate	ND	2.2	0.25	ug/l	
84-66-2	Diethyl phthalate	ND	2.2	0.28	ug/l	
131-11-3	Dimethyl phthalate	ND	2.2	0.23	ug/l	
117-81-7	bis(2-Ethylhexyl)phthalate	ND	2.2	1.8	ug/l	
206-44-0	Fluoranthene	ND	1.1	0.18	ug/l	
86-73-7	Fluorene	ND	1.1	0.18	ug/l	
118-74-1	Hexachlorobenzene	ND	1.1	0.35	ug/l	
87-68-3	Hexachlorobutadiene	ND	1.1	0.53	ug/l	
77-47-4	Hexachlorocyclopentadiene	ND	11	3.0	ug/l	
67-72-1	Hexachloroethane	ND	2.2	0.42	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.1	0.36	ug/l	
78-59-1	Isophorone	ND	2.2	0.30	ug/l	
90-12-0	1-Methylnaphthalene	ND	1.1	0.28	ug/l	
91-57-6	2-Methylnaphthalene	ND	1.1	0.23	ug/l	
88-74-4	2-Nitroaniline	ND	5.4	0.30	ug/l	
99-09-2	3-Nitroaniline	ND	5.4	0.42	ug/l	
100-01-6	4-Nitroaniline	ND	5.4	0.47	ug/l	
98-95-3	Nitrobenzene	ND	2.2	0.69	ug/l	
621-64-7	N-Nitroso-di-n-propylamine	ND	2.2	0.52	ug/l	
86-30-6	N-Nitrosodiphenylamine	ND	5.4	0.24	ug/l	
85-01-8	Phenanthrene	ND	1.1	0.19	ug/l	
129-00-0	Pyrene	ND	1.1	0.24	ug/l	
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	2.2	0.40	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
367-12-4	2-Fluorophenol	49%		14-88%
4165-62-2	Phenol-d5	35%		10-110%

ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound



Report of Analysis

Client Sample ID:	FB120716	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-9	Date Received:	12/09/16
Matrix:	AQ - Field Blank Water	Percent Solids:	n/a
Method:	SW846 8270D SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

ABN TCL Special List

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
118-79-6	2,4,6-Tribromophenol	92%		39-149%
4165-60-0	Nitrobenzene-d5	87%		32-128%
321-60-8	2-Fluorobiphenyl	85%		35-119%
1718-51-0	Terphenyl-d14	91%		10-126%



ND = Not detected MDL = Method Detection Limit
RL = Reporting Limit
E = Indicates value exceeds calibration range

J = Indicates an estimated value
B = Indicates analyte found in associated method blank
N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	FB120716	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-9	Date Received:	12/09/16
Matrix:	AQ - Field Blank Water	Percent Solids:	n/a
Method:	SW846 8270D BY SIM SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	3P57335.D	1	12/18/16	SG	12/14/16	OP99210A	E3P2659
Run #2							

	Initial Volume	Final Volume
Run #1	930 ml	1.0 ml
Run #2		

CAS No.	Compound	Result	RL	MDL	Units	Q
56-55-3	Benzo(a)anthracene	ND	0.054	0.025	ug/l	
50-32-8	Benzo(a)pyrene	ND	0.054	0.036	ug/l	
205-99-2	Benzo(b)fluoranthene	ND	0.11	0.047	ug/l	
207-08-9	Benzo(k)fluoranthene	ND	0.11	0.036	ug/l	
218-01-9	Chrysene	ND	0.11	0.028	ug/l	
53-70-3	Dibenzo(a,h)anthracene	ND	0.11	0.039	ug/l	
193-39-5	Indeno(1,2,3-cd)pyrene	ND	0.11	0.041	ug/l	
91-20-3	Naphthalene	ND	0.11	0.032	ug/l	
123-91-1	1,4-Dioxane	ND	0.11	0.052	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
4165-60-0	Nitrobenzene-d5	65%		24-125%
321-60-8	2-Fluorobiphenyl	56%		19-127%
1718-51-0	Terphenyl-d14	66%		10-119%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID: FB120716
Lab Sample ID: JC33384-9
Matrix: AQ - Field Blank Water
Method: SW846-8015C (DAI)
Project: BSMC, Building 5 Area, PR

Date Sampled: 12/07/16
Date Received: 12/09/16
Percent Solids: n/a

	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	GH107763.D	1	12/14/16	XPL	n/a	n/a	GGH5588
Run #2							

Low Molecular Alcohol List

CAS No.	Compound	Result	RL	MDL	Units	Q
64-17-5	Ethanol	ND	200	55	ug/l	
78-83-1	Isobutyl Alcohol	ND	100	36	ug/l	
67-63-0	Isopropyl Alcohol	ND	100	68	ug/l	
71-23-8	n-Propyl Alcohol	ND	100	43	ug/l	
71-36-3	n-Butyl Alcohol	ND	100	87	ug/l	
78-92-2	sec-Butyl Alcohol	ND	100	66	ug/l	
67-56-1	Methanol	ND	200	71	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
111-27-3	Hexanol	126%		56-145%
111-27-3	Hexanol	113%		56-145%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

SGS Accutest

Report of Analysis

Page 1 of 1

Client Sample ID:	FB120716	Date Sampled:	12/07/16
Lab Sample ID:	JC33384-9	Date Received:	12/09/16
Matrix:	AQ - Field Blank Water	Percent Solids:	n/a
Method:	SW846 8081B SW846 3510C		
Project:	BMSMC, Building 5 Area, PR		

Run #	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
Run #1	8G1185.D	1	12/15/16	CP	12/13/16	OP99184	G8G42
Run #2							

Run #	Initial Volume	Final Volume
Run #1	980 ml	10.0 ml
Run #2		

Pesticide TCL List

CAS No.	Compound	Result	RL	MDL	Units	Q
309-00-2	Aldrin	ND	0.010	0.0062	ug/l	
319-84-6	alpha-BHC	ND	0.010	0.0061	ug/l	
319-85-7	beta-BHC	ND	0.010	0.0058	ug/l	
319-86-8	delta-BHC	ND	0.010	0.0047	ug/l	
58-89-9	gamma-BHC (Lindane)	ND	0.010	0.0028	ug/l	
5103-71-9	alpha-Chlordane	ND	0.010	0.0047	ug/l	
5103-74-2	gamma-Chlordane	ND	0.010	0.0047	ug/l	
60-57-1	Dieldrin	ND	0.010	0.0037	ug/l	
72-54-8	4,4'-DDD	ND	0.010	0.0039	ug/l	
72-55-9	4,4'-DDE	ND	0.010	0.0063	ug/l	
50-29-3	4,4'-DDT	ND	0.010	0.0051	ug/l	
72-20-8	Endrin	ND	0.010	0.0051	ug/l	
1031-07-8	Endosulfan sulfate	ND	0.010	0.0054	ug/l	
7421-93-4	Endrin aldehyde	ND	0.010	0.0052	ug/l	
53494-70-5	Endrin ketone	ND	0.010	0.0052	ug/l	
959-98-8	Endosulfan-I	ND	0.010	0.0051	ug/l	
33213-65-9	Endosulfan-II	ND	0.010	0.0044	ug/l	
76-44-8	Heptachlor	ND	0.010	0.0039	ug/l	
1024-57-3	Heptachlor epoxide	ND	0.010	0.0067	ug/l	
72-43-5	Methoxychlor	ND	0.020	0.0058	ug/l	
8001-35-2	Toxaphene	ND	0.26	0.19	ug/l	

CAS No.	Surrogate Recoveries	Run# 1	Run# 2	Limits
877-09-8	Tetrachloro-m-xylene	85%		26-132%
877-09-8	Tetrachloro-m-xylene	88%		26-132%
2051-24-3	Decachlorobiphenyl	42%		10-118%
2051-24-3	Decachlorobiphenyl	44%		10-118%



ND = Not detected MDL = Method Detection Limit
 RL = Reporting Limit
 E = Indicates value exceeds calibration range

J = Indicates an estimated value
 B = Indicates analyte found in associated method blank
 N = Indicates presumptive evidence of a compound

Matrix Spike/Matrix Spike Duplicate Summary

Page 1 of 1

Job Number: JC33384

Account: AMANYWP Anderson, Mulholland & Associates

Project: BSMC, Building 5 Area, PR

Sample	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
JC33384-6MS	4B67451.D	1	12/17/16	HT	n/a	n/a	V4B2774
JC33384-6MSD	4B67452.D	1	12/17/16	HT	n/a	n/a	V4B2774
JC33384-6	4B67442.D	1	12/17/16	HT	n/a	n/a	V4B2774

The QC reported here applies to the following samples:

Method: SW846 8260C

JC33384-6

CAS No.	Compound	JC33384-6 ug/l	Spike Q	MS ug/l	MS %	Spike ug/l	MSD ug/l	MSD %	RPD	Limits Rec/RPD
106-99-0	1,3-Butadiene	ND	50	53.6	107	50	53.2	106	1	10-167/20

CAS No.	Surrogate Recoveries	MS	MSD	JC33384-6	Limits
1868-53-7	Dibromofluoromethane	104%	102%	100%	76-120%
17060-07-0	1,2-Dichloroethane-D4	106%	104%	107%	73-122%
2037-26-5	Toluene-D8	100%	100%	100%	84-119%
460-00-4	4-Bromofluorobenzene	101%	102%	107%	78-117%



* = Outside of Control Limits.

Matrix Spike/Matrix Spike Duplicate Summary

Page 1 of 3

Job Number: JC33384

Account: AMANYWP Anderson, Mulholland & Associates

Project: BSMC, Building 5 Area, PR

Sample	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
OP99210-MS	M130030.D	1	12/15/16	KM	12/14/16	OP99210	EM5553
OP99210-MSD	M130031.D	1	12/15/16	KM	12/14/16	OP99210	EM5553
JC33384-6	M130035.D	1	12/16/16	KM	12/14/16	OP99210	EM5553

The QC reported here applies to the following samples:

Method: SW846 8270D

JC33384-4, JC33384-5, JC33384-6, JC33384-7, JC33384-8, JC33384-9

CAS No.	Compound	JC33384-6 ug/l	Spike Q	MS ug/l	MS %	Spike ug/l	MSD ug/l	MSD %	RPD	Limits Rec/RPD
95-57-8	2-Chlorophenol	ND	51	33.8	66	53.2	37.6	71	11	49-110/20
59-50-7	4-Chloro-3-methyl phenol	ND	51	40.0	78	53.2	47.2	89	17	44-121/18
120-83-2	2,4-Dichlorophenol	ND	51	40.2	79	53.2	47.6	89	17	42-120/19
105-67-9	2,4-Dimethylphenol	ND	51	44.9	88	53.2	52.0	98	15	33-132/23
51-28-5	2,4-Dinitrophenol	ND	102	97.0	95	106	114	107	16	21-145/26
534-52-1	4,6-Dinitro-o-cresol	ND	51	47.5	93	53.2	56.5	106	17	25-134/27
95-48-7	2-Methylphenol	ND	51	34.4	67	53.2	36.2	68	5	47-112/18
	3&4-Methylphenol	ND	51	32.6	64	53.2	35.3	66	8	44-113/19
88-75-5	2-Nitrophenol	ND	51	39.6	78	53.2	47.0	88	17	45-118/20
100-02-7	4-Nitrophenol	ND	51	15.6	31	53.2	18.2	34	15	23-144/28
87-86-5	Pentachlorophenol	ND	51	50.4	99	53.2	59.1	111	16	25-151/25
108-95-2	Phenol	ND	51	22.4	44	53.2	24.5	46	9	22-100/22
58-90-2	2,3,4,6-Tetrachlorophenol	ND	51	45.9	90	53.2	52.8	99	14	44-122/21
95-95-4	2,4,5-Trichlorophenol	ND	51	42.4	83	53.2	49.2	92	15	51-124/20
88-06-2	2,4,6-Trichlorophenol	ND	51	45.1	88	53.2	50.5	95	11	53-120/21
83-32-9	Acenaphthene	ND	51	40.1	79	53.2	45.4	85	12	52-120/23
208-96-8	Acenaphthylene	ND	51	39.2	77	53.2	44.7	84	13	50-101/22
98-86-2	Acetophenone	ND	51	38.5	75	53.2	42.9	81	11	31-141/23
120-12-7	Anthracene	ND	51	40.3	79	53.2	49.0	92	19	54-117/22
1912-24-9	Atrazine	ND	51	52.2	102	53.2	61.5	116	16	42-152/23
100-52-7	Benzaldehyde	ND	51	31.6	62	53.2	36.5	69	14	10-164/30
56-55-3	Benzo(a)anthracene	ND	51	41.3	81	53.2	49.6	93	18	40-123/24
50-32-8	Benzo(a)pyrene	ND	51	37.7	74	53.2	45.5	86	19	41-127/25
205-99-2	Benzo(b)fluoranthene	ND	51	37.9	74	53.2	45.7	86	19	39-127/27
191-24-2	Benzo(g,h,i)perylene	ND	51	39.4	77	53.2	49.1	92	22	34-128/28
207-08-9	Benzo(k)fluoranthene	ND	51	41.1	81	53.2	48.5	91	17	39-122/26
101-55-3	4-Bromophenyl phenyl ether	ND	51	45.8	90	53.2	55.4	104	19	51-124/23
85-68-7	Butyl benzyl phthalate	ND	51	31.9	63	53.2	38.8	73	20	21-146/28
92-52-4	1,1'-Biphenyl	ND	51	40.5	79	53.2	46.3	87	13	27-142/23
91-58-7	2-Chloronaphthalene	ND	51	42.8	84	53.2	47.5	89	10	51-109/23
106-47-8	4-Chloroaniline	ND	51	23.8	47	53.2	30.2	57	24	10-110/55
86-74-8	Carbazole	ND	51	41.0	80	53.2	49.9	94	20	52-116/22
105-60-2	Caprolactam	ND	51	14.2	28	53.2	16.4	31	14	10-106/34
218-01-9	Chrysene	ND	51	41.2	81	53.2	49.4	108	18	41-128/24
111-91-1	bis(2-Chloroethoxy)methane	ND	51	51.0	100	53.2	58.5	110	18	46-120/24
111-44-4	bis(2-Chloroethyl)ether	ND	51	51.5	101	53.2	57.3	108	18	42-123/28

* = Outside of Control Limits.



SGS

279 of 2174
ACCUTEST
JC333848.3.2
8

Matrix Spike/Matrix Spike Duplicate Summary

Page 2 of 3

Job Number: JC33384

Account: AMANYWP Anderson, Mulholland & Associates

Project: BSMC, Building 5 Area, PR

Sample	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
OP99210-MS	M130030.D	1	12/15/16	KM	12/14/16	OP99210	EM5553
OP99210-MSD	M130031.D	1	12/15/16	KM	12/14/16	OP99210	EM5553
JC33384-6	M130035.D	1	12/16/16	KM	12/14/16	OP99210	EM5553

The QC reported here applies to the following samples:

Method: SW846 8270D

JC33384-4, JC33384-5, JC33384-6, JC33384-7, JC33384-8, JC33384-9

CAS No.	Compound	JC33384-6 ug/l	Spike Q	MS ug/l	MS %	Spike ug/l	MSD ug/l	MSD %	RPD	Limits Rec/RPD
108-60-1	bis(2-Chloroisopropyl)ether	ND	51	37.9	74	53.2	41.9	79	10	41-117/25
7005-72-3	4-Chlorophenyl phenyl ether	ND	51	46.4	91	53.2	52.5	99	12	48-121/21
121-14-2	2,4-Dinitrotoluene	ND	51	44.5	87	53.2	52.8	99	17	54-123/27
606-20-2	2,6-Dinitrotoluene	ND	51	44.0	86	53.2	52.9	99	18	55-125/26
91-94-1	3,3'-Dichlorobenzidine	ND	102	40.9	40	106	56.1	53	31	10-107/47
53-70-3	Dibenzo(a,h)anthracene	ND	51	40.1	79	53.2	49.8	94	22	35-130/27
132-64-9	Dibenzofuran	ND	51	41.8	82	53.2	49.0	92	16	53-112/22
84-74-2	Di-n-butyl phthalate	ND	51	36.1	71	53.2	44.0	83	20	38-129/23
117-84-0	Di-n-octyl phthalate	ND	51	32.7	64	53.2	38.2	72	16	35-145/26
84-66-2	Diethyl phthalate	ND	51	38.1	75	53.2	44.2	83	15	16-136/30
131-11-3	Dimethyl phthalate	ND	51	42.5	83	53.2	48.1	90	12	10-143/39
117-81-7	bis(2-Ethylhexyl)phthalate	ND	51	33.1	65	53.2	39.1	74	17	34-141/28
206-44-0	Fluoranthene	ND	51	44.4	87	53.2	52.6	99	17	47-123/24
86-73-7	Fluorene	ND	51	40.8	80	53.2	46.8	88	14	56-117/22
118-74-1	Hexachlorobenzene	ND	51	44.1	86	53.2	51.3	96	15	46-125/24
87-68-3	Hexachlorobutadiene	ND	51	38.1	75	53.2	43.9	83	14	26-121/24
77-47-4	Hexachlorocyclopentadiene	ND	102	46.5	46	106	55.3	52	17	10-133/31
67-72-1	Hexachloroethane	ND	51	37.0	73	53.2	42.2	79	13	35-111/26
193-39-5	Indeno(1,2,3-cd)pyrene	ND	51	39.7	78	53.2	51.0	96	25	32-130/30
78-59-1	Isophorone	ND	51	43.7	86	53.2	49.1	92	12	47-126/23
90-12-0	1-Methylnaphthalene	ND	51	38.1	75	53.2	44.2	83	15	34-124/25
91-57-6	2-Methylnaphthalene	ND	51	38.9	76	53.2	45.1	85	15	34-123/24
88-74-4	2-Nitroaniline	ND	51	43.1	84	53.2	48.5	91	12	46-137/23
99-09-2	3-Nitroaniline	ND	51	26.8	53	53.2	33.8	64	23	10-110/50
100-01-6	4-Nitroaniline	ND	51	43.3	85	53.2	47.6	89	9	38-118/25
98-95-3	Nitrobenzene	ND	51	43.6	85	53.2	47.8	90	9	35-130/25
621-64-7	N-Nitroso-di-n-propylamine	ND	51	38.2	75	53.2	42.6	80	11	45-123/22
86-30-6	N-Nitrosodiphenylamine	ND	51	38.1	75	53.2	46.1	87	19	46-123/24
85-01-8	Phenanthrene	ND	51	44.3	87	53.2	53.4	100	19	48-121/23
129-00-0	Pyrene	ND	51	40.7	80	53.2	49.0	92	19	43-124/26
95-94-3	1,2,4,5-Tetrachlorobenzene	ND	51	47.7	93	53.2	53.2	100	11	25-142/24

CAS No.	Surrogate Recoveries	MS	MSD	JC33384-6	Limits
367-12-4	2-Fluorophenol	59%	62%	52%	14-88%

* = Outside of Control Limits.



SGS

280 of 2174
ACCUTEST
JC33384

8.3.2

8

Matrix Spike/Matrix Spike Duplicate Summary

Page 3 of 3

Job Number: JC33384

Account: AMANYWP Anderson, Mulholland & Associates

Project: BSMC, Building 5 Area, PR

Sample	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
OP99210-MS	M130030.D	1	12/15/16	KM	12/14/16	OP99210	EM5553
OP99210-MSD	M130031.D	1	12/15/16	KM	12/14/16	OP99210	EM5553
JC33384-6	M130035.D	1	12/16/16	KM	12/14/16	OP99210	EM5553

The QC reported here applies to the following samples:

Method: SW846 8270D

JC33384-4, JC33384-5, JC33384-6, JC33384-7, JC33384-8, JC33384-9

CAS No.	Surrogate Recoveries	MS	MSD	JC33384-6	Limits
4165-62-2	Phenol-d5	41%	44%	36%	10-110%
118-79-6	2,4,6-Tribromophenol	91%	109%	92%	39-149%
4165-60-0	Nitrobenzene-d5	84%	95%	86%	32-128%
321-60-8	2-Fluorobiphenyl	85%	93%	83%	35-119%
1718-51-0	Terphenyl-d14	70%	82%	67%	10-126%



* = Outside of Control Limits.

Matrix Spike/Matrix Spike Duplicate Summary

Page 1 of 1

Job Number: JC33384

Account: AMANYWP Anderson, Mulholland & Associates

Project: BSMC, Building 5 Area, PR

Sample	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
OP99210A-MS	4P20205.D	1	12/15/16	JJ	12/14/16	OP99210A	E4P1098
OP99210A-MSD	4P20206.D	1	12/15/16	JJ	12/14/16	OP99210A	E4P1098
JC33384-6	4P20218.D	1	12/16/16	JJ	12/14/16	OP99210A	E4P1098

The QC reported here applies to the following samples:

Method: SW846 8270D BY SIM

JC33384-4, JC33384-5, JC33384-6, JC33384-7, JC33384-8, JC33384-9

CAS No.	Compound	JC33384-6 ug/l	Spike Q	MS ug/l	MS %	Spike ug/l	MSD ug/l	MSD %	RPD	Limits Rec/RPD
56-55-3	Benzo(a)anthracene	ND	1.05	0.924	88	1.08	1.06	99	14	25-135/33
50-32-8	Benzo(a)pyrene	ND	1.05	0.640	61	1.08	0.745	69	15	10-116/38
205-99-2	Benzo(b)fluoranthene	ND	1.05	0.840	80	1.08	0.910	85	8	10-131/40
207-08-9	Benzo(k)fluoranthene	ND	1.05	0.741	70	1.08	1.03	96	33	10-120/45
218-01-9	Chrysene	ND	1.05	0.775	74	1.08	0.901	84	15	31-125/33
53-70-3	Dibenzo(a,h)anthracene	ND	1.05	0.452	43	1.08	0.609	57	30	10-116/48
193-39-5	Indeno(1,2,3-cd)pyrene	ND	1.05	0.552	52	1.08	0.744	69	30	10-116/48
91-20-3	Naphthalene	ND	1.05	0.715	68	1.08	0.828	77	15	23-140/36
123-91-1	1,4-Dioxane	0.746	1.05	1.84	104	1.08	1.85	103	1	20-160/30

CAS No.	Surrogate Recoveries	MS	MSD	JC33384-6	Limits
367-12-4	2-Fluorophenol	44%	54%		14-81%
4165-62-2	Phenol-d5	32%	38%		11-54%
118-79-6	2,4,6-Tribromophenol	83%	90%		35-145%
4165-60-0	Nitrobenzene-d5	82%	92%	86%	24-125%
321-60-8	2-Fluorobiphenyl	51%	56%	60%	19-127%
1718-51-0	Terphenyl-d14	52%	64%	76%	10-119%



* = Outside of Control Limits.

Matrix Spike/Matrix Spike Duplicate Summary

Page 1 of 1

Job Number: JC33384

Account: AMANYWP Anderson, Mulholland & Associates

Project: BSMC, Building 5 Area, PR

Sample	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
JC33384-6MS	GH107752.D	1	12/14/16	XPL	n/a	n/a	GGH5588
JC33384-6MSD	GH107753.D	1	12/14/16	XPL	n/a	n/a	GGH5588
JC33384-6	GH107751.D	1	12/14/16	XPL	n/a	n/a	GGH5588

The QC reported here applies to the following samples:

Method: SW846-8015C (DAI)

JC33384-1, JC33384-2, JC33384-3, JC33384-4, JC33384-5, JC33384-6, JC33384-7, JC33384-8, JC33384-9

CAS No.	Compound	JC33384-6 ug/l	Spike Q	MS ug/l	MS %	Spike ug/l	MSD ug/l	MSD %	RPD	Limits Rec/RPD
64-17-5	Ethanol	ND		5000	98	5000	4960	99	1	58-145/27
78-83-1	Isobutyl Alcohol	ND		5000	110	5000	5350	107	3	69-131/25
67-63-0	Isopropyl Alcohol	ND		5000	117	5000	4450	89	27	70-133/28
71-23-8	n-Propyl Alcohol	ND		5000	108	5000	5720	114	6	66-137/29
71-36-3	n-Butyl Alcohol	ND		5000	118	5000	6080	122	3	63-131/25
78-92-2	sec-Butyl Alcohol	ND		5000	130	5000	5180	104	23	64-136/25
67-56-1	Methanol	ND		5000	85	5000	4550	91	7	48-148/34

CAS No.	Surrogate Recoveries	MS	MSD	JC33384-6	Limits
111-27-3	Hexanol	94%	106%	90%	56-145%
111-27-3	Hexanol	93%	104%	88%	56-145%



* = Outside of Control Limits.

Matrix Spike/Matrix Spike Duplicate Summary

Page 1 of 1

Job Number: JC33384

Account: AMANYWP Anderson, Mulholland & Associates

Project: BMSMC, Building 5 Area, PR

Sample	File ID	DF	Analyzed	By	Prep Date	Prep Batch	Analytical Batch
OP99184-MS	8G1181.D	1	12/15/16	CP	12/13/16	OP99184	G8G42
OP99184-MSD	8G1182.D	1	12/15/16	CP	12/13/16	OP99184	G8G42
JC33384-6	8G1180.D	1	12/15/16	CP	12/13/16	OP99184	G8G42

The QC reported here applies to the following samples:

Method: SW846 8081B

JC33384-4, JC33384-5, JC33384-6, JC33384-7, JC33384-8, JC33384-9

CAS No.	Compound	JC33384-6 ug/l	Spike Q	MS ug/l	MS %	Spike ug/l	MSD ug/l	MSD %	RPD	Limits Rec/RPD
309-00-2	Aldrin	ND	0.255	0.26	102	0.255	0.23	90	12	37-159/40
319-84-6	alpha-BHC	ND	0.255	0.27	103	0.255	0.25	98	8	37-164/37
319-85-7	beta-BHC	ND	0.255	0.28	110	0.255	0.26	102	7	46-151/36
319-86-8	delta-BHC	ND	0.255	0.29	114	0.255	0.27	106	7	32-168/36
58-89-9	gamma-BHC (Lindane)	ND	0.255	0.28	110	0.255	0.25	98	11	44-160/37
5103-71-9	alpha-Chlordane	ND	0.255	0.30	118	0.255	0.27	106	11	38-160/35
5103-74-2	gamma-Chlordane	ND	0.255	0.28	110	0.255	0.25	98	11	39-157/37
60-57-1	Dieldrin	ND	0.255	0.29	114	0.255	0.26	102	11	42-161/36
72-54-8	4,4'-DDD	ND	0.255	0.29	114	0.255	0.25	98	15	40-161/36
72-55-9	4,4'-DDE	ND	0.255	0.27	106	0.255	0.24	94	12	34-158/36
50-29-3	4,4'-DDT	ND	0.255	0.25	98	0.255	0.24	94	4	41-173/33
72-20-8	Endrin	ND	0.255	0.31	122	0.255	0.28	110	10	44-166/35
1031-07-8	Endosulfan sulfate	ND	0.255	0.28	110	0.255	0.26	102	7	46-161/36
7421-93-4	Endrin aldehyde	ND	0.255	0.32	126	0.255	0.28	110	13	34-149/36
53494-70-5	Endrin ketone	ND	0.255	0.29	114	0.255	0.26	102	11	44-157/36
959-98-8	Endosulfan-I	ND	0.255	0.29	114	0.255	0.26	102	11	43-154/35
33213-65-9	Endosulfan-II	ND	0.255	0.29	114	0.255	0.26	102	11	40-162/35
76-44-8	Heptachlor	ND	0.255	0.26	102	0.255	0.24	94	8	33-153/37
1024-57-3	Heptachlor epoxide	ND	0.255	0.28	110	0.255	0.25	98	11	45-154/37
72-43-5	Methoxychlor	ND	0.255	0.26	102	0.255	0.25	98	4	48-169/32
8001-35-2	Toxaphene	ND		ND			ND		nc	50-150/30

CAS No.	Surrogate Recoveries	MS	MSD	JC33384-6	Limits
877-09-8	Tetrachloro-m-xylene	88%	82%	81%	26-132%
877-09-8	Tetrachloro-m-xylene	91%	85%	85%	26-132%
2051-24-3	Decachlorobiphenyl	85%	80%	95%	10-118%
2051-24-3	Decachlorobiphenyl	83%	79%	96%	10-118%



* = Outside of Control Limits.

NJ

GW
EB
FB

CHAIN OF CUSTODY

2235 Route 130, Dayton, NJ 08810
TEL 732-324-0200 FAX 732-324-3499/1480
www.accutest.com

Client / Reporting Information				Project Information				Requested Analysis (see TEST CODE sheet)												Matrix Codes																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																											
Company Name Anderson Mulholland & Associates Street Address 2700 Westchester Avenue, Suite 417 City State Zip Purchase NY 10577 Project Contact Terry Taylor Phone # 914-251-0400 Sample(s) Name(s)				Project Name 4th Q 2016 Groundwater Sampling - Onsite Wells Street Billing Information (if different from Report to) Company Name Street Address City State Zip Project Manager Terry Taylor				Requested Analysis (see TEST CODE sheet) DB015LMA PB081PESITCL AB270SL DB270SM14DIOX BMS-MNAP BMS-2MNAP BSM-BANTH, BAP, BKF, CHR, DBANTH, IND, PYR, NAP (SEE NOTE BELOW) WET CHEMISTRY (SEE NOTE BELOW)												Matrix Codes DW - Drinking Water GW - Ground Water WW - Water SW - Surface Water SO - Soil SL - Sludge SED - Sediment OI - Oil LIQ - Other Liquid AIR - Air SOL - Other Solid WP - Waste FB - Field Blank t.d. Equipment Blank RB - Horse Blank TB - Trip Blank																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																											
SGS Sample #	Field ID / Point of Collection	MLCHQI Val #	Date	Time	Sampled by	Matrix	# of bottles	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	369	370	371	372	373	374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400	401	402	403	404	405	406	407	408	409	410	411	412	413	414	415	416	417	418	419	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455	456	457	458	459	460	461	462	463	464	465	466	467	468	469	470	471	472	473	474	475	476	477	478	479	480	481	482	483	484	485	486	487	488	489	490	491	492	493	494	495	496	497	498	499	500	501	502	503	504	505	506	507	508	509	510	511	512	513	514	515	516	517	518	519	520	521	522	523	524	525	526	527	528	529	530	531	532	533	534	535	536	537	538	539	540	541	542	543	544	545	546	547	548	549	550	551	552	553	554	555	556	557	558	559	560	561	562	563	564	565	566	567	568	569	570	571	572	573	574	575	576	577	578	579	580	581	582	583	584	585	586	587	588	589	590	591	592	593	594	595	596	597	598	599	600	601	602	603	604	605	606	607	608	609	610	611	612	613	614	615	616	617	618	619	620	621	622	623	624	625	626	627	628	629	630	631	632	633	634	635	636	637	638	639	640	641	642	643	644	645	646	647	648	649	650	651	652	653	654	655	656	657	658	659	660	661	662	663	664	665	666	667	668	669	670	671	672	673	674	675	676	677	678	679	680	681	682	683	684	685	686	687	688	689	690	691	692	693	694	695	696	697	698	699	700	701	702	703	704	705	706	707	708	709	710	711	712	713	714	715	716	717	718	719	720	721	722	723	724	725	726	727	728	729	730	731	732	733	734	735	736	737	738	739	740	741	742	743	744	745	746	747	748	749	750	751	752	753	754	755	756	757	758	759	760	761	762	763	764	765	766	767	768	769	770	771	772	773	774	775	776	777	778	779	780	781	782	783	784	785	786	787	788	789	790	791	792	793	794	795	796	797	798	799	800	801	802	803	804	805	806	807	808	809	810	811	812	813	814	815	816	817	818	819	820	821	822	823	824	825	826	827	828	829	830	831	832	833	834	835	836	837	838	839	840	841	842	843	844	845	846	847	848	849	850	851	852	853	854	855	856	857	858	859	860	861	862	863	864	865	866	867	868	869	870	871	872	873	874	875	876	877	878	879	880	881	882	883	884	885	886	887	888	889	890	891	892	893	894	895	896	897	898	899	900	901	902	903	904	905	906	907	908	909	910	911	912	913	914	915	916	917	918	919	920	921	922	923	924	925	926	927	928	929	930	931	932	933	934	935	936	937	938	939	940	941	942	943	944	945	946	947	948	949	950	951	952	953	954	955	956	957	958	959	960	961	962	963	964	965	966	967	968	969	970	971	972	973	974	975	976	977	978	979	980	981	982	983	984	985	986	987	988	989	990	991	992	993	994	995	996	997	998	999	1000

EXECUTIVE NARRATIVE

SDG No: **JC33384** Laboratory: **Accutest, New Jersey**
Analysis: **SW846-8260C** Number of Samples: **10**
Location: **BMSMC, Building 5 Area**
Humacao, PR

SUMMARY: Ten (10) samples were analyzed for selected VOAs of the TCL list (1,3-butadiene) by method SW846-8260C. Samples were validated following USEPA Hazardous Waste Support Section SOP No. HW-33A Revision 0 SOM02.2. Low/Medium Volatile Data Validation. July, 2015. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

Results are valid and can be used for decision making purposes.

Critical issues: **None**
Major: **None**
Minor: **None**

Critical findings: **None**
Major findings: **None**
Minor findings: **None**

COMMENTS: Results are valid and can be used for decision making purposes.

Reviewers Name: **Rafael Infante**
Chemist License 1888

Signature:

A handwritten signature in blue ink, reading "Rafael Infante", is written over a horizontal line.

Date:

January 12, 2017

SAMPLE ORGANIC DATA SAMPLE SUMMARY

Sample ID: JC33384-1

Sample location: BMSMC Building 5 Area

Sampling date: 6-Dec-16

Matrix: AQ - Equipment Blank

METHOD: 8260C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
1,3-butadiene	5.0	ug/l	1	-	U	Yes

Sample ID: JC33384-2

Sample location: BMSMC Building 5 Area

Sampling date: 6-Dec-16

Matrix: Groundwater

METHOD: 8260C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
1,3-butadiene	5.0	ug/l	1	-	U	Yes

Sample ID: JC33384-3

Sample location: BMSMC Building 5 Area

Sampling date: 6-Dec-16

Matrix: AQ - Field Blank Water

METHOD: 8260C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
1,3-butadiene	5.0	ug/l	1	-	U	Yes

Sample ID: JC33384-4

Sample location: BMSMC Building 5 Area

Sampling date: 7-Dec-16

Matrix: AQ - Equipment Blank

METHOD: 8260C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
1,3-butadiene	5.0	ug/l	1	-	U	Yes

Sample ID: JC33384-6
Sample location: BMSMC Building 5 Area
Sampling date: 7-Dec-16
Matrix: Groundwater

METHOD: 8260C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
1,3-butadiene	5.0	ug/l	1	-	U	Yes

Sample ID: JC33384-7
Sample location: BMSMC Building 5 Area
Sampling date: 7-Dec-16
Matrix: Groundwater

METHOD: 8260C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
1,3-butadiene	5.0	ug/l	1	-	U	Yes

Sample ID: JC33384-8
Sample location: BMSMC Building 5 Area
Sampling date: 7-Dec-16
Matrix: Groundwater

METHOD: 8260C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
1,3-butadiene	5.0	ug/l	1	-	U	Yes

Sample ID: JC33384-9
Sample location: BMSMC Building 5 Area
Sampling date: 7-Dec-16
Matrix: AQ - Field Blank Water

METHOD: 8260C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
1,3-butadiene	5.0	ug/l	1	-	U	Yes

Sample ID: JC33384-6MS
Sample location: BMSMC Building 5 Area
Sampling date: 7-Dec-16
Matrix: Groundwater

METHOD: 8260C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
1,3-butadiene	53.6	ug/l	1	-	U	Yes

Sample ID: JC33384-6MSD
Sample location: BMSMC Building 5 Area
Sampling date: 7-Dec-16
Matrix: Groundwater

METHOD: 8260C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
1,3-butadiene	53.2	ug/l	1	-	U	Yes

DATA REVIEW WORKSHEETS

Project Number: JC33384
 Date: December 06-07, 2016
 Shipping date: December 08, 2016
 EPA Region: 2

REVIEW OF VOLATILE ORGANIC PACKAGE Low/Medium Volatile Data Validation

The following guidelines for evaluating volatile organics were created to delineate required validation actions. This document will assist the reviewer in using professional judgment to make more informed decision and in better serving the needs of the data users. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: USEPA Hazardous Waste Support Section SOP No. HW-33A Revision 0 SOM02.2. Low/Medium Volatile Data Validation. July, 2015. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

The hardcopied (laboratory name) Accutest data package received has been reviewed and the quality control and performance data summarized. The data review for VOCs included:

Lab. Project/SDG No.: JC33384 Sample matrix: Groundwater
 No. of Samples: 10
 Trip blank No.: -
 Field blank No.: JC33384-3; JC33384-9
 Equipment blank No.: JC33384-1; JC33384-4
 Field duplicate No.: -

<input checked="" type="checkbox"/> Data Completeness	<input checked="" type="checkbox"/> Laboratory Control Spikes
<input checked="" type="checkbox"/> Holding Times	<input checked="" type="checkbox"/> Field Duplicates
<input checked="" type="checkbox"/> GC/MS Tuning	<input checked="" type="checkbox"/> Calibrations
<input checked="" type="checkbox"/> Internal Standard Performance	<input checked="" type="checkbox"/> Compound Identifications
<input checked="" type="checkbox"/> Blanks	<input checked="" type="checkbox"/> Compound Quantitation
<input checked="" type="checkbox"/> Surrogate Recoveries	<input checked="" type="checkbox"/> Quantitation Limits
<input checked="" type="checkbox"/> Matrix Spike/Matrix Spike Duplicate	

Overall Comments: Selected_VOA_(1,3-Butadiene)_from_the_TCL_list_(SW846_8260C)

Definition of Qualifiers:

J- Estimated results
 U- Compound not detected
 R- Rejected data
 UJ- Estimated nondetect

Reviewer: Rafael Infante
 Date: January 12, 2017

DATA COMPLETENESS

DATE RECEIVED

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. A dashed diagonal line runs across the page from the upper-left corner towards the lower-right corner. The paper appears to be a template for a document or a worksheet.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

HOLDING TIMES

The objective of this parameter is to ascertain the validity of the results based on the holding time of the sample from time of collection to the time of analysis.

Complete table for all samples and note the analysis and/or preservation not within criteria

SAMPLE ID	DATE SAMPLED	DATE ANALYZED	pH	ACTION
All samples analyzed within method recommended holding time. Samples properly preserved.				

Criteria

Aqueous samples – 14 days from sample collection for preserved samples ($\text{pH} \leq 2$, $4 \pm 2^\circ\text{C}$), no air bubbles.

Aqueous samples – 7 days from sample collection for unpreserved samples, 4°C , no air bubbles.

Soil samples- 14 days from sample collection.

Cooler temperature (Criteria: $4 \pm 2^\circ\text{C}$): 5.2°C - OK

Actions

Aqueous samples

- If there is no evidence that the samples were properly preserved ($\text{pH} < 2$, $T = 4^\circ\text{C} \pm 2^\circ\text{C}$), but the samples were analyzed within the technical holding time [7 days from sample collection], no qualification of the data is necessary.
- If there is no evidence that the samples were properly preserved, and the samples were analyzed outside of the technical holding time [7 days from sample collection], qualify detects for all volatile compounds as estimated (J) and non-detects as unusable (R).
- If the samples were properly preserved, and the samples were analyzed within the technical holding time [14 days from sample collection], no qualification of the data is necessary.
- If the samples were properly preserved, but were analyzed outside of the technical holding time [14 days from sample collection], qualify detects as estimated (J) and non-detects as unusable (R).
- If air bubbles were present in the sample vial used for analysis, qualify detected compounds as estimated (J-) and non-detected compounds as estimated (UJ).

Non-aqueous samples

- If there is no evidence that the samples were properly preserved ($T < -7^\circ\text{C}$ or $T = 4^\circ\text{C} \pm 2^\circ\text{C}$ and preserved with NaHSO_4), but the samples were analyzed within the technical holding time [14 days

DATA REVIEW WORKSHEETS

from sample collection], qualify detects for all volatile compounds as estimated (J) and non-detects as (UJ) or unusable (R) using professional judgment.

b. If the samples were properly preserved, and the samples were analyzed within the technical holding time [14 days from sample collection], no qualification of the data is necessary.

c. If there is no evidence that the samples were properly preserved, and the samples were analyzed outside of the technical holding time [14 days from sample collection], qualify detects for all volatile compounds as estimated (J) and non-detects as unusable (R).

d. If the samples were properly preserved, but were analyzed outside of the technical holding time [14 days from sample collection], qualify detects as estimated (J) and non-detects as unusable (R).

Qualify TCLP/SPLP samples

a. If the TCLP/SPLP ZHE procedure is performed within the extraction technical holding time of 14 days, detects and non-detects should not be qualified.

b. If the TCLP/SPLP ZHE procedure is performed outside the extraction technical holding time of 14 days, qualify detects as estimated (J) and non-detects as unusable (R).

c. If TCLP/SPLP aqueous samples and TCLP/SPLP leachate samples are analyzed within the technical holding time of 7 days, detects and non-detects should not be qualified.

d. If TCLP/SPLP aqueous samples and TCLP/SPLP leachate samples are analyzed outside of the technical holding time of 7 days, qualify detects as estimated (J) and non-detects as unusable (R).

DATA REVIEW WORKSHEETS

Table 1. Holding Time Actions for Low/Medium Volatile Analyses - Summary

Matrix	Preserved	Criteria	Action	
			Detected Associated Compounds	Non-Detected Associated Compounds
Aqueous	No	≤ 7 days	No qualification	
	No	> 7 days	J	R
	Yes	≤ 14 days	No qualification	
	Yes	> 14 days	J	R
Non-Aqueous	No	≤ 14 days	J	Professional judgment, UJ or R
	Yes	≤ 14 days	No qualification	
	Yes/No	> 14 days	J	R
TCLP/SPLP	Yes	≤ 14 days	No qualification	
TCLP/SPLP	No	> 14 days	J	R
TCLP/SPLP	ZHE performed within the 14-day technical holding time		No qualification	
TCLP/SPLP	ZHE performed outside the 14-day technical holding time		J	R
TCLP/SPLP aqueous & TCLP/SPLP leachate	Analyzed within 7 days		No qualification	
TCLP/SPLP aqueous & TCLP/SPLP leachate	Analyzed outside 7 days		J	R
Sample temperature outside 4°C ± 2°C upon receipt at the laboratory			Use professional judgment	
Holding times grossly exceeded			J	R

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met see below

GC/MS TUNING

The assessment of the tuning results is to determine if the sample instrumentation is within the standard tuning QC limits

 X The BFB performance results were reviewed and found to be within the specified criteria.

 X BFB tuning was performed for every 12 hours of sample analysis.

NOTES: All mass spectrometer instrument conditions must be identical to those used during the sample analysis. Background subtraction actions resulting in spectral distortions for the sole purpose of meeting the method specifications are contrary to the Quality Assurance (QA) objectives, and are therefore unacceptable.

NOTES: No data should be qualified based on BFB failure. Instances of this should be noted in the narrative.

All ion abundance ratios must be normalized to m/z 95, the nominal base peak, even though the ion abundance of m/z 174 may be up to 120% that of m/z 95.

Actions:

If samples are analyzed without a preceding valid instrument performance check, qualify all data in those samples as unusable (R).

If ion abundance criteria are not met, professional judgment may be applied to determine to what extent the data may be utilized. When applying professional judgment to this topic, the most important factors to consider are the empirical results that are relatively insensitive to location on the chromatographic profile and the type of instrumentation. Therefore, the critical ion abundance criteria for BFB are the m/z 95/96, 174/384, 174/176, and 176/177 ratios. The relative abundances of m/z 50 and 75 are of lower importance. This issue is more critical for Tentatively Identified Compounds (TICs) than for target analytes.

Note: State in the Data Review Narrative, decisions to use analytical data associated with BFB instrument performance checks not meeting contract requirements.

Note: Verify that that instrument instrument performance check criteria were achieved using techniques described in Low/Medium Volatiles Organic Analysis, Section II.D.5 of the SOM02.2 NFG, obtain additional information on the instrument performance checks. Make sure that background subtraction was performed from the BFB peak and not from background subtracting from the solvent front or from another region of the chromatogram.

DATA REVIEW WORKSHEETS

Use professional judgment to determine whether associated data should be qualified based on the spectrum of the mass calibration compound.

List the samples affected:

If mass calibration is in error, all associated data are rejected.

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below _____

CALIBRATION VERIFICATION

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data.

Date of initial calibration: 12/08/16
 Dates of continuing (initial) calibration: 12/08/16
 Dates of continuing calibration: 12/17/16; 12/18/16
 Dates of ending calibration: -
 Instrument ID numbers: GCMS4B
 Matrix/Level: Aqueous/low

DATE	LAB ID#	FILE	CRITERIA OUT RFs, %RSD, %D, r	COMPOUND	SAMPLES AFFECTED

Note: Initial calibration, initial calibration verification, and continuing calibration verification within the method and validation guidance document required performance criteria. Closing calibration check verification not included in data package. No action taken, professional judgment.

Criteria

The analyte calibration criteria in the following Table must be obtained. Analytes not meeting the criteria are qualified.

A separate worksheet should be filled for each initial curve

DATA REVIEW WORKSHEETS

Initial Calibration - Table 2. RRF, %RSD, and %D Acceptance Criteria for Initial Calibration and CCV for Low/Medium Volatile Analysis

Analyte	Minimum RRF	Maximum %RSD	Opening Maximum %D ¹	Closing Maximum %D
Dichlorodifluoromethane	0.010	25.0	±40.0	±50.0
Chloromethane	0.010	20.0	±30.0	±50.0
Vinyl chloride	0.010	20.0	±25.0	±50.0
Bromomethane	0.010	40.0	±30.0	±50.0
Chloroethane	0.010	40.0	±25.0	±50.0
Trichlorofluoromethane	0.010	40.0	±30.0	±50.0
1,1-Dichloroethene	0.060	20.0	±20.0	±25.0
1,1,2-Trichloro-1,2,2-trifluoroethane	0.050	25.0	±25.0	±50.0
Acetone	0.010	40.0	±40.0	±50.0
Carbon disulfide	0.100	20.0	±25.0	±25.0
Methyl acetate	0.010	40.0	±40.0	±50.0
Methylene chloride	0.010	40.0	±30.0	±50.0
trans-1,2-Dichloroethene	0.100	20.0	±20.0	±25.0
Methyl tert-butyl ether	0.100	40.0	±25.0	±50.0
1,1-Dichloroethane	0.300	20.0	±20.0	±25.0
cis-1,2-Dichloroethene	0.200	20.0	±20.0	±25.0
2-Butanone	0.010	40.0	±40.0	±50.0
Bromochloromethane	0.100	20.0	±20.0	±25.0
Chloroform	0.300	20.0	±20.0	±25.0
1,1,1-Trichloroethane	0.050	20.0	±25.0	±25.0
Cyclohexane	0.010	40.0	±25.0	±50.0
Carbon tetrachloride	0.100	20.0	±25.0	±25.0
Benzene	0.200	20.0	±20.0	±25.0
1,2-Dichloroethane	0.070	20.0	±20.0	±25.0
Trichloroethene	0.200	20.0	±20.0	±25.0
Methylcyclohexane	0.050	40.0	±25.0	±50.0
1,2-Dichloropropane	0.200	20.0	±20.0	±25.0
Bromodichloromethane	0.300	20.0	±20.0	±25.0
cis-1,3-Dichloropropene	0.300	20.0	±20.0	±25.0
4-Methyl-2-pentanone	0.030	25.0	±30.0	±50.0
Toluene	0.300	20.0	±20.0	±25.0
trans-1,3-Dichloropropene	0.200	20.0	±20.0	±25.0
1,1,2-Trichloroethane	0.200	20.0	±20.0	±25.0
Tetrachloroethene	0.100	20.0	±20.0	±25.0
2-Hexanone	0.010	40.0	±40.0	±50.0
Dibromochloromethane	0.200	20.0	±20.0	±25.0
1,2-Dibromoethane	0.200	20.0	±20.0	±25.0
Chlorobenzene	0.400	20.0	±20.0	±25.0
Ethylbenzene	0.400	20.0	±20.0	±25.0

DATA REVIEW WORKSHEETS

Analyte	Minimum RRF	Maximum %RSD	Opening Maximum %D ¹	Closing Maximum
m,p-Xylene	0.200	20.0	±20.0	±25.0
o-Xylene	0.200	20.0	±20.0	±25.0
Styrene	0.200	20.0	±20.0	±25.0
Bromoform	0.100	20.0	±25.0	±50.0
Isopropylbenzene	0.400	20.0	±25.0	±25.0
1,1,2,2-Tetrachloroethane	0.200	20.0	±25.0	±25.0
1,3-Dichlorobenzene	0.500	20.0	±20.0	±25.0
1,4-Dichlorobenzene	0.600	20.0	±20.0	±25.0
1,2-Dichlorobenzene	0.600	20.0	±20.0	±25.0
1,2-Dibromo-3-chloropropane	0.010	25.0	±30.0	±50.0
1,2,4-Trichlorobenzene	0.400	20.0	±30.0	±50.0
1,2,3-Trichlorobenzene	0.400	25.0	±30.0	±50.0
Deuterated Monitoring Compound				
Vinyl chloride-d ₃	0.010	20.0	±30.0	±50.0
Chloroethane-d ₃	0.010	40.0	±30.0	±50.0
1,1-Dichloroethene-d ₂	0.050	20.0	±25.0	±25.0
2-Butanone-d ₅	0.010	40.0	±40.0	±50.0
Chloroform-d	0.300	20.0	±20.0	±25.0
1,2-Dichloroethane-d ₄	0.060	20.0	±25.0	±25.0
Benzene-d ₆	0.300	20.0	±20.0	±25.0
1,2-Dichloropropane-d ₆	0.200	20.0	±20.0	±25.0
Toluene-d ₈	0.300	20.0	±20.0	±25.0
trans-1,3-Dichloropropene-d ₄	0.200	20.0	±20.0	±25.0
2-Hexanone-d ₅	0.010	40.0	±40.0	±50.0
1,1,2,2-Tetrachloroethane-d ₂	0.200	20.0	±25.0	±25.0
1,2-Dichlorobenzene-d ₄	0.400	20.0	±20.0	±25.0

- ¹ If a closing CCV is acting as an opening CCV, all target analytes and DMCs must meet the requirements for an opening CCV.

Actions:

1. If any volatile target compound has an RRF value less than the minimum in the table, use professional judgment for detects, based on mass spectral identification, to qualify the data as estimated (J+ or R).
 - a. If any volatile target compound has an RRF value less than the minimum criterion, qualify non-detected compounds as unusable (R).
 - b. If any of the volatile target compounds listed in the Table has %RSD greater than the criteria, qualify detects as estimated (J), and non-detected compounds using professional judgment.
 - c. If the volatile target compounds meet the acceptance criteria for RRF and the %RSD, no qualification of the data is necessary.

DATA REVIEW WORKSHEETS

- d. No qualification of the data is necessary on the DMC RRF and %RSD data alone. Use professional judgment and follow the guidelines in Action 2 to evaluate the DMC RRF and %RSD data in conjunction with the DMC recoveries to determine the need for qualification of data.
2. At the reviewer's discretion, and based on the project-specific Data Quality Objectives (DQOs), a more in-depth review may be considered using the following guidelines:
 - a. If any volatile target compound has a %RSD greater than the maximum criterion in the Table, and if eliminating either the high or the low-point of the curve does not restore the %RSD to less than or equal to the required maximum:
 - i. Qualify detects for that compound(s) as estimated (J).
 - ii. Qualify non-detected volatile target compounds using professional judgment.
 - b. If the high-point of the curve is outside of the linearity criteria (e.g., due to saturation):
 - i. Qualify detects outside of the linear portion of the curve as estimated (J).
 - ii. No qualifiers are required for detects in the linear portion of the curve.
 - iii. No qualifiers are required for volatile target compounds that were not detected.
 - c. If the low-point of the curve is outside of the linearity criteria:
 - i. Qualify low-level detects in the area of non-linearity as estimated (J).
 - ii. No qualifiers are required for detects in the linear portion of the curve.
 - iii. For non-detected volatile compounds, use the lowest point of the linear portion of the curve to determine the new quantitation limit.

Note: If the laboratory has failed to provide adequate calibration information, inform the Region's designated representative to contact the laboratory and request the necessary information. If the information is not available, the reviewer must use professional judgment to assess the data.

State in the Data Review Narrative, if possible, the potential effects on the data due to calibration criteria exceedance.

Note, for the Laboratory COR action, if calibration criteria are grossly exceeded.

Table. Initial Calibration Actions for Low/Medium Volatile Analysis – Summary

Criteria	Action	
	Detect	Non-detect
Initial Calibration not performed at specified frequency and sequence	Use professional judgment R	Use professional judgment R
Initial Calibration not performed at the specified concentrations	J	UJ
RRF < Minimum RRF in Table for target analyte	Use professional judgment J+ or R	R
RRF > Minimum RRF in Table for target analyte	No qualification	No qualification
%RSD > Maximum %RSD in Table for target analyte	J	Use professional judgment
%RSD ≤ Maximum %RSD in Table for target analyte	No qualification	No qualification

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

Continuing Calibration Verification (CCV)

NOTE: Verify that the CCV was run at the required frequency (an opening and closing CCV must be run within 12-hour period) and the CCV was compared to the correct initial calibration. If the mid-point standard from the initial calibration is used as an opening CCV, verify that the result (RRF) of the mid-point standard was compared to the average RRF from the correct initial calibration.

The closing CCV used to bracket the end of a 12-hour analytical sequence may be used as the opening CCV for the new 12-hour analytical sequence, provided that all the technical acceptance criteria are met for an opening CCV (see criteria show before in the Table) . If the closing CCV does not meet the technical acceptance criteria for an opening CCV, then a BFB tune followed by an opening CCV is required and the next 12-hour time period begins with the BFB tune.

All DMCs must meet RRF criteria. No qualification of the data is necessary on the DMCs RRF and %RSD/%D data alone. However, use professional judgment to evaluate the DMC and %RSD/%D data in conjunction with the DMC recoveries to determine the need of qualification the data.

Action:

1. If a CCV (opening and closing) was not run at the appropriate frequency, qualify data using professional judgment.
2. Qualify all volatile target compounds in Table shown before using the following criteria:
 - a. For an opening CCV, if any volatile target compound has an RRF value less than the minimum criterion, use professional judgment for detects, based on mass spectral identification, to qualify the data as estimated (J) and qualify non-detected compounds as unusable (R).
 - b. For a closing CCV, if any volatile target compound has an RRF value less than the criteria, use professional judgment for detects based on mass spectral identification to qualify the data as estimated (J), and qualify non-detected compounds as unusable (R).
 - c. For an opening CCV, if the Percent Difference value for any of the volatile target compounds is outside the limits in calibration criteria Table shown before, qualify detects as estimated (J) and non-detected compounds as estimated (UJ).
 - d. For a closing CCV, if the Percent Difference value for any volatile target compound is outside the limits in calibration criteria table, qualify detects as estimated (J) and non-detected compounds as estimated (UJ).
 - e. If the volatile target compounds meet the acceptable criteria for RRF and the Percent Difference, no qualification of the data is necessary.

DATA REVIEW WORKSHEETS

- f. No qualification of the data is necessary on the DMC RRF and the Percent Difference data alone. Use professional judgment to evaluate the DMC RRF and Percent Difference data in conjunction with the DMC recoveries to determine the need for qualification of data.

Notes: If the laboratory has failed to provide adequate calibration information, inform the Region's designated representative to contact the laboratory and request the necessary information. If the information is not available, the reviewer must use professional judgment to assess the data.

State in the Data Review Narrative, if possible, the potential effects on the data due to calibration criteria exceedance.

Note, for Contract Laboratory COR action, if calibration criteria are grossly exceeded.

Table. Continuing Calibration Actions for Low/Medium Volatile Analysis – Summary

Criteria for Opening CCV	Criteria for Closing CCV	Action	
		Detect	Non-detect
CCV not performed at required frequency	CCV not performed at required frequency	Use professional judgment R	Use professional judgment R
CCV not performed at specified concentration	CCV not performed at specified concentration	Use professional judgment	Use professional judgment
RRF < Minimum RRF in Table 2 for target analyte	RRF < Minimum RRF in Table for target analyte	Use professional judgment J or R	R
RRF ≥ Minimum RRF in Table 2 for target analyte	RRF ≥ Minimum RRF in Table for target analyte	No qualification	No qualification
%D outside the Opening Maximum %D limits in Table 2 for target analyte	%D outside the Closing Maximum %D limits in Table for target analyte	J	UJ
%D within the inclusive Opening Maximum %D limits in Table 2 for target analyte	%D within the inclusive Closing Maximum %D limits in Table for target analyte	No qualification	No qualification

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

BLANK ANALYSIS RESULTS (Sections 1 & 2)

The assessment of the blank analysis results is to determine the existence and magnitude of contamination problems. The criteria for evaluation of blanks apply only to blanks associated with the samples, including trip, equipment, and laboratory blanks. If problems with any blanks exist, all data associated with the case must be carefully evaluated to determine whether or not there is an inherent variability in the data for the case, or if the problem is an isolated occurrence not affecting other data.

List the contamination in the blanks below. High and low levels blanks must be treated separately.

The concentration of a target analyte in any blank must not exceed its Contract Required Quantitation Limit (CRQL) (2x CRQLs for Methylene chloride, Acetone, and 2-Butanone). TIC concentration in any blanks must be $\leq 5.0 \mu\text{g/L}$ for water (0.0050 mg/L for TCLP leachate) and $\leq 5.0 \mu\text{g/kg}$ for soil matrices.

Laboratory blanks

The method blank, like any other sample in the SDG, must meet the technical acceptance criteria for sample analysis.

DATE ANALYZED	LAB ID	LEVEL/ MATRIX	COMPOUND	CONCENTRATION UNITS
_No_target_analyte_detected_in_method_blanks._				

Field/Equipment/Trip blank

If field or trip blanks are present, the data reviewer should evaluate this data in a similar fashion as the method blanks.

DATE ANALYZED	LAB ID	LEVEL/ MATRIX	COMPOUND	CONCENTRATION UNITS
_No_trip_blank_analyzed_with_this_data_package.No_target_analytes_detected_in_the_field/ equipment_blanks_analyzed.				

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

BLANK ANALYSIS RESULTS (Section 3)

Blank Actions

Note: All fields blank results associated with a particular group of samples (may exceed one per case) must be used to qualify data. Trip blanks are used to qualify only those samples with which they were shipped. Blanks may not be qualified because of contamination in another blank. Field blanks and trip blanks must be qualified for system monitoring compounds, instrument performance criteria, and spectral or calibration QC problems.

Samples taken from a drinking water tap do not have associated field blanks.

When applied as described in the Table below, the contaminant concentration in the blank is multiplied by the sample dilution factor.

Table. Blank and TCLP/SPLP LEB Actions for Low/Medium Volatile Analysis

Blank Type	Blank Result	Sample Result	Action for Samples
Method, Storage, Field, Trip, TCLP/SPLP LEB. Instrument**	Detects	Not detected	No qualification required
	< CRQL *	< CRQL*	Report CRQL value with a U
		≥ CRQL*	No qualification required
	> CRQL *	< CRQL*	Report CRQL value with a U
		≥ CRQL* and ≤ blank concentration	Report blank value for sample concentration with a U
		≥ CRQL* and > blank concentration	No qualification required
	= CRQL*	≤ CRQL*	Report CRQL value with a U
		> CRQL*	No qualification required
	Gross contamination	Detects	Report blank value for sample concentration with a U

* 2x the CRQL for methylene chloride, 2-butanone and acetone.

** Qualifications based on instrument blank results affect only the sample analyzed immediately after the sample that has target compounds that exceed the calibration range or non-target compounds that exceed 100 µg/L.

Action Levels (ALs) should be based upon the highest concentration of contaminant determined in any blank. Do not qualify any blank with another blank. The ALs for samples which have been diluted should be corrected for the sample dilution factor and/or % moisture, where applicable. No positive sample results should be reported unless the concentration of the compound in the samples exceeds the ALs:

DATA REVIEW WORKSHEETS

Notes:

High and low level blanks must be treated separately

Compounds qualified "U" for blank contamination are still considered "hits" when qualifying for calibration criteria.

CONTAMINATION SOURCE/LEVEL	COMPOUND	CONC/UNITS	AL/UNITS	SQL	AFFECTED SAMPLES

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

DEUTERATED MONITORING COMPOUNDS (DMCs)

Laboratory performance of individual samples is established by evaluation of surrogate spike (DMCs) recoveries. All samples are spiked with surrogate compounds prior to sample analysis. The accuracy of the analysis is measured by the surrogate percent recovery. Since the effects of the sample matrix are frequently outside the control of the laboratory and may present relatively unique problems, the validation of data is frequently subjective and demands analytical experience and professional judgment.

Table. Volatile Deuterated Monitoring Compounds (DMCs) and Recovery Limits

DMC	%R for Water Sample	%R for Soil Sample
Vinyl chloride-d3	60-135	30-150
Chloroethane-d5	70-130	30-150
1,1-Dichloroethene-d2	60-125	45-110
2-Butanone-d5	40-130	20-135
Chloroform-d	70-125	40-150
1,2-Dichloroethane-d4	70-125	70-130
Benzene-d6	70-125	20-135
1,2-Dichloropropane-d6	70-120	70-120
Toluene-d8	80-120	30-130
trans-1,3-Dichloropropene-d4	60-125	30-135
2-Hexanone-d5	45-130	20-135
1,1,2,2-Tetrachloroethane-d2	65-120	45-120
1,2-Dichlorobenzene-d4	80-120	75-120

NOTE: The recovery limits for any of the compounds listed in the above Table may be expanded at any time during the period of performance if the United States Environmental Protection Agency (EPA) determines that the limits are too restrictive.

Action:

Are recoveries for DMCs in volatile samples and blanks must be within the limits specified in the Table above. Yes? or No?

NOTE: The recovery limits for any of the compounds listed in the Table above may be expanded at any time during the period of performance if USEPA determines that the limits are too restrictive.

DATA REVIEW WORKSHEETS

List the DMCs that may fail to meet the recovery limits

Sample ID	Date	DMCs	% Recovery	Action
-----------	------	------	------------	--------

Note: DMCs recoveries within the required limits and within the guidance document performance criteria (80 – 120. Other non-deuterated surrogates added to the samples within laboratory control limits.

Note: Any sample which has more than 3 DMCs outside the limits must be reanalyzed.

Action:

- For any recovery greater than the upper acceptance limit:
 - Qualify detected associated volatile target compounds as estimated high (J+).
 - Do not qualify non-detected associated volatile target compounds.
- For any recovery greater than or equal to 10%, and less than the lower acceptance limit:
 - Qualify detected associated volatile target compounds as estimated low (J-).
 - Qualify non-detected associated volatile target compounds as estimated (UJ).
- For any recovery less than 10%:
 - Qualify detected associated volatile target compounds as estimated low (J-).
 - Qualify non-detected associated volatile target compounds as unusable (R).
- For any recovery within acceptance limits, no qualification of the data is necessary.
- In the special case of a blank analysis having DMCs out of specification, the reviewer must give special consideration to the validity of associated sample data. The basic concern is whether the blank problems represent an isolated problem with the blank alone, or whether there is a fundamental problem with the analytical process. For example, if one or more samples in the batch show acceptable DMC recoveries, the reviewer may choose to consider the blank problem to be an isolated occurrence. However, even if this judgment allows some use of the affected data, note analytical problems for Contract Laboratory COR action.
- If more than three DMCs are outside of the recovery limits for Low/Medium volatiles analysis and the sample was not reanalyzed, note under Contract Problems/Non-Compliance.

Table. Deuterated Monitoring Compound (DMC) Recovery Actions for Low/Medium Volatiles Analyses – Summary

Criteria	Action	
	Detect Associated Compounds	Non-detected Associated Compounds
%R < 10%	J-	R
10% ≤ %R < Lower Acceptance Limit	J-	UJ
Lower Acceptance Limit ≤ %R ≤ Upper Acceptance Limit	No qualification	No qualification
%R > Upper Acceptance Limit	J+	No qualification

DATA REVIEW WORKSHEETS

TABLE. VOLATILE DEUTERATED MONITORING COMPOUNDS (DMCs) AND THE ASSOCIATED TARGET COMPOUNDS

Vinyl chloride-d₃ (DMC-1)	Chloroethane-d₃ (DMC-2)	1,1-Dichloroethene-d₂ (DMC-3)
Vinyl chloride	Dichlorodifluoromethane Chloromethane Bromomethane Chloroethane Carbon disulfide	trans-1,2-Dichloroethene cis-1,2-Dichloroethene 1,1-Dichloroethene
2-Butanone-d₆ (DMC-4)	Chloroform-d (DMC-5)	1,2-Dichloroethane-d₂ (DMC-6)
Acetone 2-Butanone	1,1-Dichloroethane Bromochloromethane Chloroform Dibromochloromethane Bromoform	Trichlorofluoromethane 1,1,2-Trichloro-1,2,2-trifluoroethane Methyl acetate Methylene chloride Methyl-tert-butyl ether 1,1,1-Trichloroethane Carbon tetrachloride 1,2-Dibromoethane 1,2-Dichloroethane
Benzene-d₆ (DMC-7)	1,2-Dichloropropane-d₂ (DMC-8)	Toluene-d₈ (DMC-9)
Benzene	Cyclohexane Methylcyclohexane 1,2-Dichloropropane Bromodichloromethane	Trichloroethene Toluene Tetrachloroethene Ethylbenzene o-Xylene m,p-Xylene Styrene Isopropylbenzene
trans-1,3-Dichloropropene-d₄ (DMC-10)	2-Hexanone-d₈ (DMC-11)	1,1,2,2-Tetrachloroethane-d₂ (DMC-12)
cis-1,3-Dichloropropene trans-1,3-Dichloropropene 1,1,2-Trichloroethane	4-Methyl-2-pentanone 2-Hexanone	1,1,2,2-Tetrachloroethane 1,2-Dibromo-3-chloropropane
1,2-Dichlorobenzene-d₄ (DMC-13)		
Chlorobenzene 1,3-Dichlorobenzene 1,4-Dichlorobenzene 1,2-Dichlorobenzene 1,2,4-Trichlorobenzene 1,2,3-Trichlorobenzene		

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

MATRIX SPIKE/MATRIX SPIKE DUPLICATE (MS/MSD)

This data is generated to determine long term precision and accuracy in the analytical method for various matrices. This data alone cannot be used to evaluate the precision and accuracy of individual samples. If any % R in the MS or MSD falls outside the designated range, the reviewer should determine if there are matrix effects, i.e. LCS data are within the QC limits but MS/MSD data are outside QC limit.

NOTES: Data for MS and MSDs will not be present unless requested by the Region. Notify the Contract Laboratory COR if a field or trip blank was used for the MS and MSD.

For a Matrix Spike that does not meet criteria, apply the action to only the field sample used to prepare the Matrix Spike sample. If it is clearly stated in the data validation materials that the samples were taken through incremental sampling or some other method guaranteeing the homogeneity of the sample group, then the entire sample group may be qualified.

1. MS/MSD Recoveries and Precision Criteria

The laboratory should use one MS and a duplicate analysis of an unspiked field sample if target analytes are expected in the sample. If target analytes are not expected, MS/MSD should be analyzed.

List the %Rs, RPD of the compounds which do not meet the criteria.

Sample ID: JC33384-2MS
Sample ID: JC33384-6MS/-6MSD

Matrix/Level: _____ Groundwater _____
Matrix/Level: _____ Groundwater _____

Note: MS/MSD % recoveries and RPD within laboratory control limits.

Note:

- * QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.
- * If QC limits are not available, use limits of 70 – 130 %.

Actions:

1. No qualification of the data is necessary on MS and MSD data alone. However, using professional judgment, the validator may use the MS and MSD results in conjunction with other QC criteria and determine the need for some qualification of the data.

DATA REVIEW WORKSHEETS

QUALITY	%R < LL	%R > UL
Positive results	J	J
Nondetects results	R	Accept

MS/MSD criteria apply only to the unspiked sample, its dilutions, and the associated MS/MSD samples:

If the % R for the affected compounds were < LL (or 70 %), qualify positive results (J) and nondetects (UJ).

If the % R for the affected compounds were > UL (or 130 %), only qualify positive results (J).

If 25 % or more of all MS/MSD %R were < LL (or 70 %) or if two or more MS/MSD %Rs were < 10%, qualify all positive results (J) and reject nondetects (R).

A separate worksheet should be used for each MS/MSD pair.

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

LABORATORY CONTROL SAMPLE (LCS) ANALYSIS

This data is generated to determine accuracy of the analytical method for various matrices.

1. LCS Recoveries Criteria

Where LCS spiked with the same analyte at the same concentrations as the MS/MSD?
 Yes or No. If no make note in data review memo.

List the %R of compounds which do not meet the criteria

LCS ID	COMPOUND	% R	QC LIMIT
Recoveries (blank spike) within laboratory control limits. _____			

Note:

- * QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.
- * If QC limits are not available, use limits of 70 – 130 %.

Actions:

QUALITY	%R < LL	%R > UL
Positive results	J	J
Nondetects results	R	Accept

All analytes in the associated sample results are qualified for the following criteria.

If 25 % of the LCS recoveries were < LL (or 70 %), qualify all positive results (j) and reject nondetects (R).

If two or more LCS were below 10 %, qualify all positive results as (J) and reject nondetects (R).

2. Frequency Criteria:

Where LCS analyzed at the required frequency and for each matrix? Yes or No.

If no, the data may be affected. Use professional judgment to determine the severity of the effect and qualify data accordingly. Discuss any actions below and list the samples affected.

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below _____

IX. FIELD/LABORATORY DUPLICATE PRECISION

Sample IDs: JC33384-7/-7_DUP.

Matrix: Groundwater

Field/laboratory duplicates samples may be taken and analyzed as an indication of overall precision. These analyses measure both field and lab precision; therefore, the results may have more variability than laboratory duplicates which only laboratory performance. It is also expected that soil duplicate results will have a greater variance than water matrices due to difficulties associated with collecting identical field duplicate samples.

The project QAPP should be reviewed for project-specific information.

NOTE: In the absence of QAPP guidance for validating data from field duplicates, the following action will be taken.

Identify which samples within the data package are field duplicates. Estimate the relative percent difference (RPD) between the values for each compound. Use professional judgment to note large RPDs (> 50%) in the narrative.

COMPOUND	SQL	SAMPLE CONC.	DUPLICATE CONC.	RPD	ACTION
Laboratory duplicate analyzed with this data package. PRD within required criteria, ≤ 50 % for target analytes detected at concentration > 5x the SQL.					

Actions:

Qualify as estimated positive results (J) and nondetects (UJ) for the compound that exceeded the above criteria. For organics, only the sample and duplicate will be qualified.

If an RPD cannot be calculated because one or both of the sample results is not detected, the following actions are suggested based on professional judgment:

If one sample result is not detected and the other is greater than 5x the SQL qualify (J/UJ).

If one sample value is not detected and the other is greater than 5x the SQL and the SQLs for the sample and duplicate are significantly different, use professional judgment to determine if qualification is appropriate.

If one sample value is not detected and the other is less than 5x, use professional judgment to determine if qualification is appropriate.

If both sample and duplicate results are not detected, no action is needed.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

X. INTERNAL STANDARD PERFORMANCE

The assessment of the internal standard (IS) parameter is used to assist the data reviewer in determining the condition of the analytical instrumentation.

DATE	SAMPLE ID	IS OUT	IS AREA	ACCEPTABLE RANGE	ACTION
Internal standard area counts within the required criteria for all samples.					

Action:

1. If an internal standard area count for a sample or blank is greater than 200.0% of the area for the associated standard (opening CCV or mid-point standard from initial calibration) (see Table below):
 - a. Qualify detects for compounds quantitated using that internal standard as estimated low (J-).
 - b. Do not qualify non-detected associated compounds.
2. If an internal standard area count for a sample or blank is less than 20.0% of the area for the associated standard (opening CCV or mid-point standard from initial calibration):
 - a. Qualify detects for compounds quantitated using that internal standard as estimated high (J+).
 - b. Qualify non-detected associated compounds as unusable (R).
3. If an internal standard area count for a sample or blank is greater than or equal to 20.0%, and less than or equal to 200% of the area for the associated standard opening CCV or mid-point standard from initial calibration, no qualification of the data is necessary.
4. If an internal standard RT varies by more than 30.0 seconds: Examine the chromatographic profile for that sample to determine if any false positives or negatives exist. For shifts of a large magnitude, the reviewer may consider partial or total rejection of the data for that sample fraction. Detects should not need to be qualified as unusable (R) if the mass spectral criteria are met.
5. If an internal standard RT varies by less than or equal to 30.0 seconds, no qualification of the data is necessary.

Note: Inform the Contract Laboratory Program Project Officer (CLP PO) if the internal standard performance criteria are grossly exceeded. Note in the Data Review Narrative potential effects on the data resulting from unacceptable internal standard performance.

DATA REVIEW WORKSHEETS

6. If required internal standard compounds are not added to a sample or blank, qualify detects and non-detects as unusable (R).
7. If the required internal standard compound is not analyzed at the specified concentration in a sample or blank, use professional judgment to qualify detects and non-detects.

Table. Internal Standard Actions for Low/Medium Volatiles Analyses - Summary

Criteria	Action	
	Detected Associated Compounds*	Non-detected Associated Compounds*
Area counts > 200% of 12-hour standard (opening CCV or mid-point standard from initial calibration)	J-	No qualification
Area counts < 20% of 12-hour standard (opening CCV or mid-point standard from initial calibration)	J+	R
Area counts \geq 50% but \leq 200% of 12-hour standard (opening CCV or mid-point standard from initial calibration)	No qualification	
RT difference > 30.0 seconds between samples and 12-hour standard (opening CCV or mid-point standard from initial calibration)	R **	R
RT difference \leq 30.0 seconds between samples and 12-hour standard (opening CCV or mid-point standard from initial calibration)	No qualification	

* For volatile compounds associated to each internal standard, see TABLE - VOLATILE TARGET ANALYTES, DEUTERATED MONITORING COMPOUNDS WITH ASSOCIATED INTERNAL STANDARDS FOR QUANTITATION in SOM02.2, Exhibit D, available at: <http://www.epa.gov/superfund/programs/clp/download/som/som22d.pdf>

** Detects should not need to be qualified as unusable (R) if the mass spectral criteria are met.

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

TARGET COMPOUND IDENTIFICATION

Criteria:

Is the Relative Retention Times (RRTs) of reported compounds within ± 0.06 RRT units of the standard RRT [opening Continuing Calibration Verification (CCV) or mid-point standard from the initial calibration]. Yes? or No?

List compounds not meeting the criteria described above:

Sample ID	Compounds	Actions
=====	=====	=====
_____	_____	_____
_____	_____	_____
_____	_____	_____
_____	_____	_____

Mass spectra of the sample compound and a current laboratory-generated standard [i.e., the mass spectrum from the associated calibration standard (opening CCV or mid-point standard from initial calibration)] must match according to the following criteria:

- All ions present in the standard mass spectrum at a relative intensity greater than 10% must be present in the sample spectrum.
- The relative intensities of these ions must agree within $\pm 20\%$ between the standard and sample spectra (e.g., for an ion with an abundance of 50% in the standard spectrum, the corresponding sample ion abundance must be between 30-70%).
- Ions present at greater than 10% in the sample mass spectrum, but not present in the standard spectrum, must be evaluated by a reviewer experienced in mass spectral interpretation.

List compounds not meeting the criteria described above:

Sample ID	Compounds	Actions
=====	=====	=====
_____	_____	_____
_____	_____	_____
_____	_____	_____
_____	_____	_____

DATA REVIEW WORKSHEETS

Action:

1. The application of qualitative criteria for GC/MS analysis of target compounds requires professional judgment. It is up to the reviewer's discretion to obtain additional information from the laboratory. If it is determined that incorrect identifications were made, qualify all such data as unusable (R).
2. Use professional judgment to qualify the data if it is determined that cross-contamination has occurred.
3. Note in the Data Review Narrative any changes made to the reported compounds or concerns regarding target compound identifications. Note, for Contract Laboratory COR action, the necessity for numerous or significant changes.

TENTATIVELY IDENTIFIED COMPOUNDS (TICS)

NOTE: Tentatively identified compounds should only be evaluated when requested by a party from outside of the Hazardous Waste Support Section (HWSS).

List TICs

Sample ID	Compound	Sample ID	Compound
=====			

Action:

1. Qualify all TIC results for which there is presumptive evidence of a match (e.g. greater than or equal to 85% match) as tentatively identified (NJ), with approximated concentrations. TICs labeled "unknown" are qualified as estimated (J).
2. General actions related to the review of TIC results are as follows:
 - a. If it is determined that a tentative identification of a non-target compound is unacceptable, change the tentative identification to "unknown" or another appropriate identification, and qualify the result as estimated (J).
 - b. If all contractually-required peaks were not library searched and quantitated, the Region's designated representative may request these data from the laboratory.
3. In deciding whether a library search result for a TIC represents a reasonable identification, use professional judgment. If there is more than one possible match, report the result as "either compound X or compound Y". If there is a lack of isomer specificity, change the TIC result to a nonspecific isomer result (e.g., 1,3,5-trimethyl benzene to trimethyl benzene).

DATA REVIEW WORKSHEETS

- isomer) or to a compound class (e.g., 2-methyl, 3-ethyl benzene to a substituted aromatic compound).
4. The reviewer may elect to report all similar compounds as a total (e.g., all alkanes may be summarized and reported as total hydrocarbons).
 5. Target compounds from other fractions and suspected laboratory contaminants should be marked as "non-reportable".
 6. Other Case factors may influence TIC judgments. If a sample TIC match is poor, but other samples have a TIC with a valid library match, similar RRT, and the same ions, infer identification information from the other sample TIC results.
 7. Note in the Data Review Narrative any changes made to the reported data or any concerns regarding TIC identifications.
 8. Note, for Contract Laboratory COR action, failure to properly evaluate and report TICs

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

SAMPLE QUANTITATION AND REPORTED CONTRACT REQUIRED QUANTITATION LIMITS (CRQLS)

Action:

1. If any discrepancies are found, the Region's designated representative may contact the laboratory to obtain additional information that could resolve any differences. If a discrepancy remains unresolved, the reviewer must use professional judgment to decide which value is the most accurate. Under these circumstances, the reviewer may determine that qualification of data is warranted. Note in the Data Review Narrative a description of the reasons for data qualification and the qualification that is applied to the data.
2. For non-aqueous samples, in the percent moisture is less than 70.0%, no qualification of the data is necessary. If the percent moisture is greater than or equal to 70.0% and less than 90.0%, qualify detects as estimated (J) and non-detects as approximated (UJ). If the percent moisture is greater than or equal to 90.0%, qualify detects as estimated (J) and non-detects as unusable (R) (see Table below).
3. Note, for Contract Laboratory COR action, numerous or significant failures to accurately quantify the target compounds or to properly evaluate and adjust CRQLs.
4. Results between MDL and CRQL should be qualified as estimated "J".
5. Results < MDL should be reported at the CRQL and qualified "U". MDLs themselves are not reported.

Table. Percent Moisture Actions for Low/Medium Volatiles Analysis for Non-Aqueous Samples

Criteria	Action	
	Detected Associated Compounds	Non-detected Associated Compounds
% Moisture < 70.0	No qualification	
70.0 < % Moisture < 90.0	J	UJ
% Moisture > 90.0	J	R

The sample quantitation evaluation is to verify laboratory quantitation results. In the space below, please show a minimum of one sample calculation:

Sample ID

JC33384-6 MS

1,3-butadiene

RF = 0.619

$$[] = (167031)(50)/(0.619)(251778) = 53.6 \text{ ppb} \quad \text{Ok}$$

B. Percent Solids

List samples which have $\geq 70\%$ solids

[illegible]

A. Dilution performed

[illegible]

30

DATA REVIEW WORKSHEETS

Criteria were not met
and/or see below _____

OTHER ISSUES

A. System Performance

List samples qualified based on the degradation of system performance during sample analysis:

Sample ID	Comments	Actions
=====	=====	=====
_____	_____	_____
_____	_____	_____
_____	_____	_____

Action:

Use professional judgment to qualify the data if it is determined that system performance has degraded during sample analyses. Inform the Contract Laboratory Program COR any action as a result of degradation of system performance which significantly affected the data.

B. Overall Assessment of Data

List samples qualified based on other issues:

Sample ID	Comments	Actions
=====	=====	=====
_____	_____	_____
_____	_____	_____
_____	_____	_____

Action:

1. Use professional judgment to determine if there is any need to qualify data which were not qualified based on the Quality Control (QC) criteria previously discussed.
2. Write a brief narrative to give the user an indication of the analytical limitations of the data. Inform the Contract Laboratory COR the action, any inconsistency of the data with the Sample Delivery Group (SDG) Narrative. If sufficient information on the intended use and required quality of the data is available, the reviewer should include their assessment of the usability of the data within the given context. This may be used as part of a formal Data Quality Assessment (DQA).

EXECUTIVE NARRATIVE

SDG No: JC33384 Laboratory: Accutest, New Jersey
Analysis: SW846-8270D Number of Samples: 11
Location: BMSMC, Building 5 Area
Humacao, PR

SUMMARY: Eleven (11) samples were analyzed for SVOCs TCL special list following method SW846-8270D; Selected PAHs and 1,4-Dioxane were also analyzed by SW846-8270D using the selective ion monitoring (SIM) technique. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: EPA Hazardous Waste Support Section, SOP HW-35A, July 2015 –Revision 0. Semivolatile Data Validation. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

Results are valid and can be used for decision making purposes.

Critical issues: None
Major: None
Minor: None

Critical findings: None
Major findings: None
Minor findings:

1. Initial and continuing calibration verifications meet the method and guidance document required performance criteria except for the cases described in the Data Review Worksheet. Results qualified as estimated (J or UJ) in affected samples.

* % difference outside was method performance criteria but within the guidance document performance criteria. No action taken.

No action taken for QC samples.

No closing calibration verification included in data package. No action taken, professional judgment.

COMMENTS: Results are valid and can be used for decision making purposes.

Reviewers Name: Rafael Infante
Chemist License 1888

Signature:

Date:



January 13, 2017

SAMPLE ORGANIC DATA SAMPLE SUMMARY

Sample ID: JC33384-1
Sample location: BMSMC Building 5 Area
Sampling date: 12/6/2016
Matrix: AQ - Equipment Blank

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	5.3	ug/l	1	-	U	Yes
4-Chloro-3-methyl phenol	5.3	ug/l	1	-	U	Yes
2,4-Dichlorophenol	2.1	ug/l	1	-	U	Yes
2,4-Dimethylphenol	5.3	ug/l	1	-	U	Yes
2,4-Dinitrophenol	11	ug/l	1	-	U	Yes
4,6-Dinitro-o-cresol	5.3	ug/l	1	-	U	Yes
2-Methylphenol	2.1	ug/l	1	-	U	Yes
3&4-Methylphenol	2.1	ug/l	1	-	U	Yes
2-Nitrophenol	5.3	ug/l	1	-	U	Yes
4-Nitrophenol	11	ug/l	1	-	UJ	Yes
Pentachlorophenol	5.3	ug/l	1	-	U	Yes
Phenol	2.1	ug/l	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	5.3	ug/l	1	-	U	Yes
2,4,5-Trichlorophenol	5.3	ug/l	1	-	U	Yes
2,4,6-Trichlorophenol	5.3	ug/l	1	-	U	Yes
Acenaphthene	1.1	ug/l	1	-	U	Yes
Acenaphthylene	1.1	ug/l	1	-	U	Yes
Acetophenone	2.1	ug/l	1	-	U	Yes
Anthracene	1.1	ug/l	1	-	U	Yes
Atrazine	2.1	ug/l	1	-	U	Yes
Benzaldehyde	5.3	ug/l	1	-	U	Yes
Benzo(a)anthracene	1.1	ug/l	1	-	U	Yes
Benzo(a)pyrene	1.1	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	1.1	ug/l	1	-	U	Yes
Benzo(g,h,i)perylene	1.1	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	1.1	ug/l	1	-	U	Yes
4-Bromophenyl phenyl ether	1.1	ug/l	1	-	U	Yes
Butyl benzyl phthalate	2.1	ug/l	1	-	U	Yes
1,1'-Biphenyl	1.1	ug/l	1	-	U	Yes
2-Chloronaphthalene	2.1	ug/l	1	-	U	Yes
4-Chloroaniline	5.3	ug/l	1	-	U	Yes
Carbazole	1.1	ug/l	1	-	U	Yes
Caprolactam	2.1	ug/l	1	-	U	Yes
Chrysene	1.1	ug/l	1	-	U	Yes
bis(2-Chloroethoxy)methane	2.1	ug/l	1	-	U	Yes

bis(2-Chloroethyl)ether	2.1	ug/l	1	-	U	Yes
bis(2-Chloroisopropyl)ether	2.1	ug/l	1	-	U	Yes
4-Chlorophenyl phenyl ether	2.1	ug/l	1	-	U	Yes
2,4-Dinitrotoluene	1.1	ug/l	1	-	U	Yes
2,6-Dinitrotoluene	1.1	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.1	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	1.1	ug/l	1	-	U	Yes
Dibenzofuran	5.3	ug/l	1	-	U	Yes
Di-n-butyl phthalate	2.1	ug/l	1	-	U	Yes
Di-n-octyl phthalate	2.1	ug/l	1	-	U	Yes
Diethyl phthalate	2.1	ug/l	1	-	U	Yes
Dimethyl phthalate	2.1	ug/l	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	2.1	ug/l	1	-	U	Yes
Fluoranthene	1.1	ug/l	1	-	U	Yes
Fluorene	1.1	ug/l	1	-	U	Yes
Hexachlorobenzene	1.1	ug/l	1	-	U	Yes
Hexachlorobutadiene	1.1	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	11	ug/l	1	-	U	Yes
Hexachloroethane	2.1	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.1	ug/l	1	-	U	Yes
Isophorone	2.1	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.1	ug/l	1	-	U	Yes
2-Nitroaniline	5.3	ug/l	1	-	U	Yes
3-Nitroaniline	5.3	ug/l	1	-	U	Yes
4-Nitroaniline	5.3	ug/l	1	-	U	Yes
Nitrobenzene	2.1	ug/l	1	-	U	Yes
N-Nitroso-di-n-propylamine	2.1	ug/l	1	-	U	Yes
Nitrosodiphenylamine	5.3	ug/l	1	-	U	Yes
Phenanthrene	1.1	ug/l	1	-	U	Yes
Pyrene	1.1	ug/l	1	-	U	Yes
1,2,4,5-Tetrachlorobenzene	2.1	ug/l	1	-	U	Yes

METHOD: 8270D (SIM)

Benzo(a)anthracene	0.053	ug/l	1	-	U	Yes
Benzo(a)pyrene	0.053	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	0.11	ug/l	1	-	UJ	Yes ✓ /
Benzo(k)fluoranthene	0.11	ug/l	1	-	U	Yes
Chrysene	0.11	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	0.11	ug/l	1	-	UJ	Yes ✓ /
Indeno(1,2,3-cd)pyrene	0.11	ug/l	1	-	U	Yes
Naphthalene	0.11	ug/l	1	-	U	Yes
1,4-Dioxane	0.11	ug/l	1	-	U	Yes

Sample ID: JC33384-2
Sample location: BMSMC Building 5 Area
Sampling date: 12/6/2016
Matrix: Groundwater

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	5.6	ug/l	1	-	U	Yes
4-Chloro-3-methyl phenol	5.6	ug/l	1	-	U	Yes
2,4-Dichlorophenol	2.2	ug/l	1	-	U	Yes
2,4-Dimethylphenol	5.6	ug/l	1	-	U	Yes
2,4-Dinitrophenol	11	ug/l	1	-	U	Yes
4,6-Dinitro-o-cresol	5.6	ug/l	1	-	U	Yes
2-Methylphenol	2.2	ug/l	1	-	U	Yes
3&4-Methylphenol	2.2	ug/l	1	-	U	Yes
2-Nitrophenol	5.6	ug/l	1	-	U	Yes
4-Nitrophenol	11	ug/l	1	-	UJ	Yes ✓
Pentachlorophenol	4.4	ug/l	1	-	U	Yes
Phenol	2.2	ug/l	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	5.6	ug/l	1	-	U	Yes
2,4,5-Trichlorophenol	5.6	ug/l	1	-	U	Yes
2,4,6-Trichlorophenol	5.6	ug/l	1	-	U	Yes
Acenaphthene	1.1	ug/l	1	-	U	Yes
Acenaphthylene	1.1	ug/l	1	-	U	Yes
Acetophenone	2.2	ug/l	1	-	U	Yes
Anthracene	1.1	ug/l	1	-	U	Yes
Atrazine	2.2	ug/l	1	-	U	Yes
Benzaldehyde	5.6	ug/l	1	-	U	Yes
Benzo(a)anthracene	1.1	ug/l	1	-	U	Yes
Benzo(a)pyrene	1.1	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	1.1	ug/l	1	-	U	Yes
Benzo(g,h,i)perylene	1.1	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	1.1	ug/l	1	-	U	Yes
4-Bromophenyl phenyl ether	1.1	ug/l	1	-	U	Yes
Butyl benzyl phthalate	2.2	ug/l	1	-	U	Yes
1,1'-Biphenyl	1.1	ug/l	1	-	U	Yes
2-Chloronaphthalene	2.2	ug/l	1	-	U	Yes
4-Chloroaniline	5.6	ug/l	1	-	U	Yes
Carbazole	1.1	ug/l	1	-	U	Yes
Caprolactam	2.2	ug/l	1	-	U	Yes
Chrysene	1.1	ug/l	1	-	U	Yes
bis(2-Chloroethoxy)methane	2.2	ug/l	1	-	U	Yes
bis(2-Chloroethyl)ether	2.2	ug/l	1	-	U	Yes

bis(2-Chloroisopropyl)ether	2.2	ug/l	1	-	U	Yes
4-Chlorophenyl phenyl ether	2.2	ug/l	1	-	U	Yes
2,4-Dinitrotoluene	1.1	ug/l	1	-	U	Yes
2,6-Dinitrotoluene	1.1	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.2	ug/l	1	-	U	Yes
1,4-Dioxane	324	ug/l	1	-	-	Yes
Dibenzo(a,h)anthracene	1.1	ug/l	1	-	U	Yes
Dibenzofuran	5.6	ug/l	1	-	U	Yes
Di-n-butyl phthalate	2.2	ug/l	1	-	U	Yes
Di-n-octyl phthalate	2.2	ug/l	1	-	U	Yes
Diethyl phthalate	2.2	ug/l	1	-	U	Yes
Dimethyl phthalate	2.2	ug/l	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	2.2	ug/l	1	-	U	Yes
Fluoranthene	1.1	ug/l	1	-	U	Yes
Fluorene	1.1	ug/l	1	-	U	Yes
Hexachlorobenzene	1.1	ug/l	1	-	U	Yes
Hexachlorobutadiene	1.1	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	11	ug/l	1	-	U	Yes
Hexachloroethane	2.2	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.1	ug/l	1	-	U	Yes
Isophorone	2.2	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.1	ug/l	1	-	U	Yes
2-Nitroaniline	5.6	ug/l	1	-	U	Yes
3-Nitroaniline	5.6	ug/l	1	-	U	Yes
4-Nitroaniline	5.6	ug/l	1	-	U	Yes
Nitrobenzene	2.2	ug/l	1	-	U	Yes
N-Nitroso-di-n-propylamine	2.2	ug/l	1	-	U	Yes
Nitrosodiphenylamine	5.6	ug/l	1	-	U	Yes
Phenanthrene	1.1	ug/l	1	-	U	Yes
Pyrene	1.1	ug/l	1	-	U	Yes
1,2,4,5-Tetrachlorobenzene	2.2	ug/l	1	-	U	Yes

METHOD: 8270D (SIM)

Benzo(a)anthracene	0.056	ug/l	1	-	U	Yes
Benzo(a)pyrene	0.056	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	0.11	ug/l	1	-	UJ	Yes ✓
Benzo(k)fluoranthene	0.11	ug/l	1	-	U	Yes
Chrysene	0.11	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	0.11	ug/l	1	-	UJ	Yes ✓
Indeno(1,2,3-cd)pyrene	0.11	ug/l	1	-	U	Yes
Naphthalene	0.11	ug/l	1	-	U	Yes

Sample ID: JC33384-3

Sample location: BSMC Building 5 Area

Sampling date: 12/6/2016

Matrix: AQ - Field Blank Water

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	5.1	ug/l	1	-	U	Yes
4-Chloro-3-methyl phenol	5.1	ug/l	1	-	U	Yes
2,4-Dichlorophenol	2.0	ug/l	1	-	U	Yes
2,4-Dimethylphenol	5.1	ug/l	1	-	U	Yes
2,4-Dinitrophenol	10	ug/l	1	-	U	Yes
4,6-Dinitro-o-cresol	5.1	ug/l	1	-	U	Yes
2-Methylphenol	2.0	ug/l	1	-	U	Yes
3&4-Methylphenol	2.0	ug/l	1	-	U	Yes
2-Nitrophenol	5.1	ug/l	1	-	U	Yes
4-Nitrophenol	10	ug/l	1	-	U	Yes
Pentachlorophenol	4.0	ug/l	1	-	U	Yes
Phenol	2.0	ug/l	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	5.1	ug/l	1	-	U	Yes
2,4,5-Trichlorophenol	5.1	ug/l	1	-	U	Yes
2,4,6-Trichlorophenol	5.1	ug/l	1	-	U	Yes
Acenaphthene	1.0	ug/l	1	-	U	Yes
Acenaphthylene	1.0	ug/l	1	-	U	Yes
Acetophenone	2.0	ug/l	1	-	U	Yes
Anthracene	1.0	ug/l	1	-	U	Yes
Atrazine	2.0	ug/l	1	-	U	Yes
Benzaldehyde	5.1	ug/l	1	-	U	Yes
Benzo(a)anthracene	1.0	ug/l	1	-	U	Yes
Benzo(a)pyrene	1.0	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	1.0	ug/l	1	-	U	Yes
Benzo(g,h,i)perylene	1.0	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	1.0	ug/l	1	-	U	Yes
4-Bromophenyl phenyl ether	1.0	ug/l	1	-	U	Yes
Butyl benzyl phthalate	2.0	ug/l	1	-	U	Yes
1,1'-Biphenyl	1.0	ug/l	1	-	U	Yes
2-Chloronaphthalene	2.0	ug/l	1	-	U	Yes
4-Chloroaniline	5.1	ug/l	1	-	U	Yes
Carbazole	1.0	ug/l	1	-	U	Yes
Caprolactam	2.0	ug/l	1	-	U	Yes
Chrysene	1.0	ug/l	1	-	U	Yes
bis(2-Chloroethoxy)methane	2.0	ug/l	1	-	U	Yes
bis(2-Chloroethyl)ether	2.0	ug/l	1	-	U	Yes
bis(2-Chloroisopropyl)ether	2.0	ug/l	1	-	U	Yes

4-Chlorophenyl phenyl ether	2.0	ug/l	1	-	U	Yes
2,4-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
2,6-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.0	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	1.0	ug/l	1	-	U	Yes
Dibenzofuran	5.1	ug/l	1	-	U	Yes
Di-n-butyl phthalate	2.0	ug/l	1	-	U	Yes
Di-n-octyl phthalate	2.0	ug/l	1	-	U	Yes
Diethyl phthalate	2.0	ug/l	1	-	U	Yes
Dimethyl phthalate	2.0	ug/l	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	2.0	ug/l	1	-	U	Yes
Fluoranthene	1.0	ug/l	1	-	U	Yes
Fluorene	1.0	ug/l	1	-	U	Yes
Hexachlorobenzene	1.0	ug/l	1	-	U	Yes
Hexachlorobutadiene	1.0	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	10	ug/l	1	-	U	Yes
Hexachloroethane	2.0	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.0	ug/l	1	-	U	Yes
Isophorone	2.0	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Nitroaniline	5.1	ug/l	1	-	U	Yes
3-Nitroaniline	5.1	ug/l	1	-	U	Yes
4-Nitroaniline	5.1	ug/l	1	-	U	Yes
Nitrobenzene	2.0	ug/l	1	-	U	Yes
N-Nitroso-di-n-propylamine	2.0	ug/l	1	-	U	Yes
Nitrosodiphenylamine	5.1	ug/l	1	-	U	Yes
Phenanthrene	1.0	ug/l	1	-	U	Yes
Pyrene	1.0	ug/l	1	-	U	Yes
1,2,4,5-Tetrachlorobenzene	2.0	ug/l	1	-	U	Yes

METHOD: 8270D (SIM)

Benzo(a)anthracene	0.051	ug/l	1	-	U	Yes
Benzo(a)pyrene	0.051	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	0.10	ug/l	1	-	UJ	Yes ✓
Benzo(k)fluoranthene	0.10	ug/l	1	-	U	Yes
Chrysene	0.10	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	0.10	ug/l	1	-	UJ	Yes ✓
Indeno(1,2,3-cd)pyrene	0.10	ug/l	1	-	U	Yes
Naphthalene	0.10	ug/l	1	-	U	Yes
1,4-Dioxane	0.10	ug/l	1	-	U	Yes

Sample ID: JC33384-4
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: AQ - Equipment Blank

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	5.2	ug/l	1	-	U	Yes
4-Chloro-3-methyl phenol	5.2	ug/l	1	-	U	Yes
2,4-Dichlorophenol	2.1	ug/l	1	-	U	Yes
2,4-Dimethylphenol	5.2	ug/l	1	-	U	Yes
2,4-Dinitrophenol	10	ug/l	1	-	U	Yes
4,6-Dinitro-o-cresol	5.2	ug/l	1	-	U	Yes
2-Methylphenol	2.1	ug/l	1	-	U	Yes
3&4-Methylphenol	2.1	ug/l	1	-	U	Yes
2-Nitrophenol	5.2	ug/l	1	-	U	Yes
4-Nitrophenol	10	ug/l	1	-	U	Yes
Pentachlorophenol	4.2	ug/l	1	-	U	Yes
Phenol	2.1	ug/l	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	5.2	ug/l	1	-	UJ	Yes ✓
2,4,5-Trichlorophenol	5.2	ug/l	1	-	U	Yes
2,4,6-Trichlorophenol	5.2	ug/l	1	-	U	Yes
Acenaphthene	1.0	ug/l	1	-	U	Yes
Acenaphthylene	1.0	ug/l	1	-	U	Yes
Acetophenone	2.1	ug/l	1	-	U	Yes
Anthracene	1.0	ug/l	1	-	U	Yes
Atrazine	2.1	ug/l	1	-	U	Yes
Benzaldehyde	5.2	ug/l	1	-	U	Yes
Benzo(a)anthracene	1.0	ug/l	1	-	U	Yes
Benzo(a)pyrene	1.0	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	1.0	ug/l	1	-	U	Yes
Benzo(g,h,i)perylene	1.0	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	1.0	ug/l	1	-	U	Yes
4-Bromophenyl phenyl ether	1.0	ug/l	1	-	U	Yes
Butyl benzyl phthalate	2.1	ug/l	1	-	U	Yes
1,1'-Biphenyl	1.0	ug/l	1	-	U	Yes
2-Chloronaphthalene	2.1	ug/l	1	-	U	Yes
4-Chloroaniline	5.2	ug/l	1	-	U	Yes
Carbazole	1.0	ug/l	1	-	U	Yes
Caprolactam	2.1	ug/l	1	-	U	Yes
Chrysene	1.0	ug/l	1	-	U	Yes
bis(2-Chloroethoxy)methane	2.1	ug/l	1	-	U	Yes
bis(2-Chloroethyl)ether	2.1	ug/l	1	-	U	Yes
bis(2-Chloroisopropyl)ether	2.1	ug/l	1	-	U	Yes

4-Chlorophenyl phenyl ether	2.1	ug/l	1	-	U	Yes
2,4-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
2,6-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.1	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	1.0	ug/l	1	-	U	Yes
Dibenzofuran	5.2	ug/l	1	-	U	Yes
Di-n-butyl phthalate	2.1	ug/l	1	-	U	Yes
Di-n-octyl phthalate	2.1	ug/l	1	-	U	Yes
Diethyl phthalate	2.1	ug/l	1	-	U	Yes
Dimethyl phthalate	2.1	ug/l	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	2.1	ug/l	1	-	U	Yes
Fluoranthene	1.0	ug/l	1	-	U	Yes
Fluorene	1.0	ug/l	1	-	U	Yes
Hexachlorobenzene	1.0	ug/l	1	-	U	Yes
Hexachlorobutadiene	1.0	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	10	ug/l	1	-	U	Yes
Hexachloroethane	2.1	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.0	ug/l	1	-	U	Yes
Isophorone	2.1	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Nitroaniline	5.2	ug/l	1	-	U	Yes
3-Nitroaniline	5.2	ug/l	1	-	U	Yes
4-Nitroaniline	5.2	ug/l	1	-	U	Yes
Nitrobenzene	2.1	ug/l	1	-	U	Yes
N-Nitroso-di-n-propylamine	2.1	ug/l	1	-	U	Yes
Nitrosodiphenylamine	5.2	ug/l	1	-	U	Yes
Phenanthrene	1.0	ug/l	1	-	U	Yes
Pyrene	1.0	ug/l	1	-	U	Yes
1,2,4,5-Tetrachlorobenzene	2.1	ug/l	1	-	U	Yes

METHOD: 8270D (SIM)

Benzo(a)anthracene	0.052	ug/l	1	-	U	Yes
Benzo(a)pyrene	0.052	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	0.10	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	0.10	ug/l	1	-	U	Yes
Chrysene	0.10	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	0.10	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	0.10	ug/l	1	-	U	Yes
Naphthalene	0.10	ug/l	1	-	U	Yes
1,4-Dioxane	0.10	ug/l	1	-	U	Yes

Sample ID: JC33384-5
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: Groundwater

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	5.0	ug/l	1	-	U	Yes
4-Chloro-3-methyl phenol	5.0	ug/l	1	-	U	Yes
2,4-Dichlorophenol	2.0	ug/l	1	-	U	Yes
2,4-Dimethylphenol	5.0	ug/l	1	-	U	Yes
2,4-Dinitrophenol	10	ug/l	1	-	U	Yes
4,6-Dinitro-o-cresol	5.0	ug/l	1	-	U	Yes
2-Methylphenol	2.0	ug/l	1	-	U	Yes
3&4-Methylphenol	2.0	ug/l	1	-	U	Yes
2-Nitrophenol	5.0	ug/l	1	-	U	Yes
4-Nitrophenol	10	ug/l	1	-	U	Yes
Pentachlorophenol	4.0	ug/l	1	-	U	Yes
Phenol	2.0	ug/l	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	5.0	ug/l	1	-	UJ	Yes ✓
2,4,5-Trichlorophenol	5.0	ug/l	1	-	U	Yes
2,4,6-Trichlorophenol	5.0	ug/l	1	-	U	Yes
Acenaphthene	1.0	ug/l	1	-	U	Yes
Acenaphthylene	1.0	ug/l	1	-	U	Yes
Acetophenone	2.0	ug/l	1	-	U	Yes
Anthracene	1.0	ug/l	1	-	U	Yes
Atrazine	2.0	ug/l	1	-	U	Yes
Benzaldehyde	5.0	ug/l	1	-	U	Yes
Benzo(a)anthracene	1.0	ug/l	1	-	U	Yes
Benzo(a)pyrene	1.0	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	1.0	ug/l	1	-	U	Yes
Benzo(g,h,i)perylene	1.0	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	1.0	ug/l	1	-	U	Yes
4-Bromophenyl phenyl ether	1.0	ug/l	1	-	U	Yes
Butyl benzyl phthalate	2.0	ug/l	1	-	U	Yes
1,1'-Biphenyl	1.0	ug/l	1	-	U	Yes
2-Chloronaphthalene	2.0	ug/l	1	-	U	Yes
4-Chloroaniline	5.0	ug/l	1	-	U	Yes
Carbazole	1.0	ug/l	1	-	U	Yes
Caprolactam	2.0	ug/l	1	-	U	Yes
Chrysene	1.0	ug/l	1	-	U	Yes
bis(2-Chloroethoxy)methane	2.0	ug/l	1	-	U	Yes
bis(2-Chloroethyl)ether	2.0	ug/l	1	-	U	Yes
bis(2-Chloroisopropyl)ether	2.0	ug/l	1	-	U	Yes

4-Chlorophenyl phenyl ether	2.0	ug/l	1	-	U	Yes
2,4-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
2,6-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.0	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	1.0	ug/l	1	-	U	Yes
Dibenzofuran	5.0	ug/l	1	-	U	Yes
Di-n-butyl phthalate	2.0	ug/l	1	-	U	Yes
Di-n-octyl phthalate	2.0	ug/l	1	-	U	Yes
Diethyl phthalate	2.0	ug/l	1	-	U	Yes
Dimethyl phthalate	2.0	ug/l	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	2.0	ug/l	1	-	U	Yes
Fluoranthene	1.0	ug/l	1	-	U	Yes
Fluorene	1.0	ug/l	1	-	U	Yes
Hexachlorobenzene	1.0	ug/l	1	-	U	Yes
Hexachlorobutadiene	1.0	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	10	ug/l	1	-	U	Yes
Hexachloroethane	2.0	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.0	ug/l	1	-	U	Yes
Isophorone	2.0	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Nitroaniline	5.0	ug/l	1	-	U	Yes
3-Nitroaniline	5.0	ug/l	1	-	U	Yes
4-Nitroaniline	5.0	ug/l	1	-	U	Yes
Nitrobenzene	2.0	ug/l	1	-	U	Yes
N-Nitroso-di-n-propylamine	2.0	ug/l	1	-	U	Yes
Nitrosodiphenylamine	5.0	ug/l	1	-	U	Yes
Phenanthrene	1.0	ug/l	1	-	U	Yes
Pyrene	1.0	ug/l	1	-	U	Yes
1,2,4,5-Tetrachlorobenzene	2.0	ug/l	1	-	U	Yes

METHOD: 8270D (SIM)

Benzo(a)anthracene	0.050	ug/l	1	-	U	Yes
Benzo(a)pyrene	0.050	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	0.10	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	0.10	ug/l	1	-	U	Yes
Chrysene	0.10	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	0.10	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	0.10	ug/l	1	-	U	Yes
Naphthalene	0.10	ug/l	1	-	U	Yes
1,4-Dioxane	3.27	ug/l	1	-	-	Yes

Sample ID: JC33384-6
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: Groundwater

METHOD: 8270D

Analyte Name	Result	Units	Dilution	Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	5.2	ug/l	1		-	U	Yes
4-Chloro-3-methyl phenol	5.2	ug/l	1		-	U	Yes
2,4-Dichlorophenol	2.1	ug/l	1		-	U	Yes
2,4-Dimethylphenol	5.2	ug/l	1		-	U	Yes
2,4-Dinitrophenol	10	ug/l	1		-	U	Yes
4,6-Dinitro-o-cresol	5.2	ug/l	1		-	U	Yes
2-Methylphenol	2.1	ug/l	1		-	U	Yes
3&4-Methylphenol	2.1	ug/l	1		-	U	Yes
2-Nitrophenol	5.2	ug/l	1		-	U	Yes
4-Nitrophenol	10	ug/l	1		-	U	Yes
Pentachlorophenol	4.1	ug/l	1		-	U	Yes
Phenol	2.1	ug/l	1		-	U	Yes
2,3,4,6-Tetrachlorophenol	5.2	ug/l	1		-	UJ	Yes ✓
2,4,5-Trichlorophenol	5.2	ug/l	1		-	U	Yes
2,4,6-Trichlorophenol	5.2	ug/l	1		-	U	Yes
Acenaphthene	1.0	ug/l	1		-	U	Yes
Acenaphthylene	1.0	ug/l	1		-	U	Yes
Acetophenone	2.1	ug/l	1		-	U	Yes
Anthracene	1.0	ug/l	1		-	U	Yes
Atrazine	2.1	ug/l	1		-	U	Yes
Benzaldehyde	5.2	ug/l	1		-	U	Yes
Benzo(a)anthracene	1.0	ug/l	1		-	U	Yes
Benzo(a)pyrene	1.0	ug/l	1		-	U	Yes
Benzo(b)fluoranthene	1.0	ug/l	1		-	U	Yes
Benzo(g,h,i)perylene	1.0	ug/l	1		-	U	Yes
Benzo(k)fluoranthene	1.0	ug/l	1		-	U	Yes
4-Bromophenyl phenyl ether	1.0	ug/l	1		-	U	Yes
Butyl benzyl phthalate	2.1	ug/l	1		-	U	Yes
1,1'-Biphenyl	1.0	ug/l	1		-	U	Yes
2-Chloronaphthalene	2.1	ug/l	1		-	U	Yes
4-Chloroaniline	5.2	ug/l	1		-	U	Yes
Carbazole	1.0	ug/l	1		-	U	Yes
Caprolactam	2.1	ug/l	1		-	U	Yes
Chrysene	1.0	ug/l	1		-	U	Yes
bis(2-Chloroethoxy)methane	2.1	ug/l	1		-	U	Yes
bis(2-Chloroethyl)ether	2.1	ug/l	1		-	U	Yes
bis(2-Chloroisopropyl)ether	2.1	ug/l	1		-	U	Yes

4-Chlorophenyl phenyl ether	2.1	ug/l	1	-	U	Yes
2,4-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
2,6-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.1	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	1.0	ug/l	1	-	U	Yes
Dibenzofuran	5.2	ug/l	1	-	U	Yes
Di-n-butyl phthalate	2.1	ug/l	1	-	U	Yes
Di-n-octyl phthalate	2.1	ug/l	1	-	U	Yes
Diethyl phthalate	2.1	ug/l	1	-	U	Yes
Dimethyl phthalate	2.1	ug/l	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	2.1	ug/l	1	-	U	Yes
Fluoranthene	1.0	ug/l	1	-	U	Yes
Fluorene	1.0	ug/l	1	-	U	Yes
Hexachlorobenzene	1.0	ug/l	1	-	U	Yes
Hexachlorobutadiene	1.0	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	10	ug/l	1	-	U	Yes
Hexachloroethane	2.1	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.0	ug/l	1	-	U	Yes
Isophorone	2.1	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Nitroaniline	5.2	ug/l	1	-	U	Yes
3-Nitroaniline	5.2	ug/l	1	-	U	Yes
4-Nitroaniline	5.2	ug/l	1	-	U	Yes
Nitrobenzene	2.1	ug/l	1	-	U	Yes
N-Nitroso-di-n-propylamine	2.1	ug/l	1	-	U	Yes
Nitrosodiphenylamine	5.2	ug/l	1	-	U	Yes
Phenanthrene	1.0	ug/l	1	-	U	Yes
Pyrene	1.0	ug/l	1	-	U	Yes
1,2,4,5-Tetrachlorobenzene	2.1	ug/l	1	-	U	Yes

METHOD: 8270D (SIM)

Benzo(a)anthracene	0.052	ug/l	1	-	U	Yes
Benzo(a)pyrene	0.052	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	0.10	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	0.10	ug/l	1	-	U	Yes
Chrysene	0.10	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	0.10	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	0.10	ug/l	1	-	U	Yes
Naphthalene	0.10	ug/l	1	-	U	Yes
1,4-Dioxane	0.746	ug/l	1	-	U	Yes

Sample ID: JC33384-7
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: Groundwater

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	5.1	ug/l	1	-	U	Yes
4-Chloro-3-methyl phenol	5.1	ug/l	1	-	U	Yes
2,4-Dichlorophenol	2.0	ug/l	1	-	U	Yes
2,4-Dimethylphenol	5.1	ug/l	1	-	U	Yes
2,4-Dinitrophenol	10	ug/l	1	-	U	Yes
4,6-Dinitro-o-cresol	5.1	ug/l	1	-	U	Yes
2-Methylphenol	2.0	ug/l	1	-	U	Yes
3&4-Methylphenol	2.0	ug/l	1	-	U	Yes
2-Nitrophenol	5.1	ug/l	1	-	U	Yes
4-Nitrophenol	10	ug/l	1	-	U	Yes
Pentachlorophenol	4.1	ug/l	1	-	U	Yes
Phenol	2.0	ug/l	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	5.1	ug/l	1	-	UJ	Yes
2,4,5-Trichlorophenol	5.1	ug/l	1	-	U	Yes
2,4,6-Trichlorophenol	5.1	ug/l	1	-	U	Yes
Acenaphthene	1.0	ug/l	1	-	U	Yes
Acenaphthylene	1.0	ug/l	1	-	U	Yes
Acetophenone	2.0	ug/l	1	-	U	Yes
Anthracene	1.0	ug/l	1	-	U	Yes
Atrazine	2.0	ug/l	1	-	U	Yes
Benzaldehyde	5.1	ug/l	1	-	U	Yes
Benzo(a)anthracene	1.0	ug/l	1	-	U	Yes
Benzo(a)pyrene	1.0	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	1.0	ug/l	1	-	U	Yes
Benzo(g,h,i)perylene	1.0	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	1.0	ug/l	1	-	U	Yes
4-Bromophenyl phenyl ether	1.0	ug/l	1	-	U	Yes
Butyl benzyl phthalate	2.0	ug/l	1	-	U	Yes
1,1'-Biphenyl	1.0	ug/l	1	-	U	Yes
2-Chloronaphthalene	2.0	ug/l	1	-	U	Yes
4-Chloroaniline	5.1	ug/l	1	-	U	Yes
Carbazole	1.0	ug/l	1	-	U	Yes
Caprolactam	2.0	ug/l	1	-	U	Yes
Chrysene	1.0	ug/l	1	-	U	Yes
bis(2-Chloroethoxy)methane	2.0	ug/l	1	-	U	Yes
bis(2-Chloroethyl)ether	2.0	ug/l	1	-	U	Yes
bis(2-Chloroisopropyl)ether	2.0	ug/l	1	-	U	Yes

4-Chlorophenyl phenyl ether	2.0	ug/l	1	-	U	Yes
2,4-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
2,6-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.0	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	1.0	ug/l	1	-	U	Yes
Dibenzofuran	5.1	ug/l	1	-	U	Yes
Di-n-butyl phthalate	2.0	ug/l	1	-	U	Yes
Di-n-octyl phthalate	2.0	ug/l	1	-	U	Yes
Diethyl phthalate	2.0	ug/l	1	-	U	Yes
Dimethyl phthalate	2.0	ug/l	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	2.0	ug/l	1	-	U	Yes
Fluoranthene	1.0	ug/l	1	-	U	Yes
Fluorene	1.0	ug/l	1	-	U	Yes
Hexachlorobenzene	1.0	ug/l	1	-	U	Yes
Hexachlorobutadiene	1.0	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	10	ug/l	1	-	U	Yes
Hexachloroethane	2.0	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.0	ug/l	1	-	U	Yes
Isophorone	2.0	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Nitroaniline	5.1	ug/l	1	-	U	Yes
3-Nitroaniline	5.1	ug/l	1	-	U	Yes
4-Nitroaniline	5.1	ug/l	1	-	U	Yes
Nitrobenzene	2.0	ug/l	1	-	U	Yes
N-Nitroso-di-n-propylamine	2.0	ug/l	1	-	U	Yes
Nitrosodiphenylamine	5.1	ug/l	1	-	U	Yes
Phenanthrene	1.0	ug/l	1	-	U	Yes
Pyrene	1.0	ug/l	1	-	U	Yes
1,2,4,5-Tetrachlorobenzene	2.0	ug/l	1	-	U	Yes

METHOD: 8270D (SIM)

Benzo(a)anthracene	0.051	ug/l	1	-	U	Yes
Benzo(a)pyrene	0.051	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	0.10	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	0.10	ug/l	1	-	U	Yes
Chrysene	0.10	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	0.10	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	0.10	ug/l	1	-	U	Yes
Naphthalene	0.10	ug/l	1	-	U	Yes
1,4-Dioxane	0.222	ug/l	1	-	U	Yes

Sample ID: JC33384-8
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: Groundwater

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	5.1	ug/l	1	-	U	Yes
4-Chloro-3-methyl phenol	5.1	ug/l	1	-	U	Yes
2,4-Dichlorophenol	2.0	ug/l	1	-	U	Yes
2,4-Dimethylphenol	5.1	ug/l	1	-	U	Yes
2,4-Dinitrophenol	10	ug/l	1	-	U	Yes
4,6-Dinitro-o-cresol	5.1	ug/l	1	-	U	Yes
2-Methylphenol	2.0	ug/l	1	-	U	Yes
3&4-Methylphenol	2.0	ug/l	1	-	U	Yes
2-Nitrophenol	5.1	ug/l	1	-	U	Yes
4-Nitrophenol	10	ug/l	1	-	U	Yes
Pentachlorophenol	4.1	ug/l	1	-	U	Yes
Phenol	2.0	ug/l	1	-	U	Yes
2,3,4,6-Tetrachlorophenol	5.1	ug/l	1	-	UJ	Yes ✓
2,4,5-Trichlorophenol	5.1	ug/l	1	-	U	Yes
2,4,6-Trichlorophenol	5.1	ug/l	1	-	U	Yes
Acenaphthene	1.0	ug/l	1	-	U	Yes
Acenaphthylene	1.0	ug/l	1	-	U	Yes
Acetophenone	2.0	ug/l	1	-	U	Yes
Anthracene	1.0	ug/l	1	-	U	Yes
Atrazine	2.0	ug/l	1	-	U	Yes
Benzaldehyde	5.1	ug/l	1	-	U	Yes
Benzo(a)anthracene	1.0	ug/l	1	-	U	Yes
Benzo(a)pyrene	1.0	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	1.0	ug/l	1	-	U	Yes
Benzo(g,h,i)perylene	1.0	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	1.0	ug/l	1	-	U	Yes
4-Bromophenyl phenyl ether	1.0	ug/l	1	-	U	Yes
Butyl benzyl phthalate	2.0	ug/l	1	-	U	Yes
1,1'-Biphenyl	1.0	ug/l	1	-	U	Yes
2-Chloronaphthalene	2.0	ug/l	1	-	U	Yes
4-Chloroaniline	5.1	ug/l	1	-	U	Yes
Carbazole	1.0	ug/l	1	-	U	Yes
Caprolactam	2.0	ug/l	1	-	U	Yes
Chrysene	1.0	ug/l	1	-	U	Yes
bis(2-Chloroethoxy)methane	2.0	ug/l	1	-	U	Yes
bis(2-Chloroethyl)ether	2.0	ug/l	1	-	U	Yes
bis(2-Chloroisopropyl)ether	2.0	ug/l	1	-	U	Yes

4-Chlorophenyl phenyl ether	2.0	ug/l	1	-	U	Yes
2,4-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
2,6-Dinitrotoluene	1.0	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.0	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	1.0	ug/l	1	-	U	Yes
Dibenzofuran	5.1	ug/l	1	-	U	Yes
Di-n-butyl phthalate	2.0	ug/l	1	-	U	Yes
Di-n-octyl phthalate	2.0	ug/l	1	-	U	Yes
Diethyl phthalate	2.0	ug/l	1	-	U	Yes
Dimethyl phthalate	2.0	ug/l	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	2.0	ug/l	1	-	U	Yes
Fluoranthene	1.0	ug/l	1	-	U	Yes
Fluorene	1.0	ug/l	1	-	U	Yes
Hexachlorobenzene	1.0	ug/l	1	-	U	Yes
Hexachlorobutadiene	1.0	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	10	ug/l	1	-	U	Yes
Hexachloroethane	2.0	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.0	ug/l	1	-	U	Yes
Isophorone	2.0	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.0	ug/l	1	-	U	Yes
2-Nitroaniline	5.1	ug/l	1	-	U	Yes
3-Nitroaniline	5.1	ug/l	1	-	U	Yes
4-Nitroaniline	5.1	ug/l	1	-	U	Yes
Nitrobenzene	2.0	ug/l	1	-	U	Yes
N-Nitroso-di-n-propylamine	2.0	ug/l	1	-	U	Yes
Nitrosodiphenylamine	5.1	ug/l	1	-	U	Yes
Phenanthrene	1.0	ug/l	1	-	U	Yes
Pyrene	1.0	ug/l	1	-	U	Yes
1,2,4,5-Tetrachlorobenzene	2.0	ug/l	1	-	U	Yes

METHOD: 8270D (SIM)

Benzo(a)anthracene	0.051	ug/l	1	-	U	Yes
Benzo(a)pyrene	0.051	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	0.10	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	0.10	ug/l	1	-	U	Yes
Chrysene	0.10	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	0.10	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	0.10	ug/l	1	-	U	Yes
Naphthalene	0.10	ug/l	1	-	U	Yes
1,4-Dioxane	1.84	ug/l	1	-	U	Yes

Sample ID: JC33384-9
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: AQ - Field Blank Water

METHOD: 8270D

Analyte Name	Result	Units	Dilution	Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	5.4	ug/l	1		-	U	Yes
4-Chloro-3-methyl phenol	5.4	ug/l	1		-	U	Yes
2,4-Dichlorophenol	2.2	ug/l	1		-	U	Yes
2,4-Dimethylphenol	5.4	ug/l	1		-	U	Yes
2,4-Dinitrophenol	11	ug/l	1		-	U	Yes
4,6-Dinitro-o-cresol	5.4	ug/l	1		-	U	Yes
2-Methylphenol	2.2	ug/l	1		-	U	Yes
3&4-Methylphenol	2.2	ug/l	1		-	U	Yes
2-Nitrophenol	5.4	ug/l	1		-	U	Yes
4-Nitrophenol	11	ug/l	1		-	U	Yes
Pentachlorophenol	4.3	ug/l	1		-	U	Yes
Phenol	2.2	ug/l	1		-	U	Yes
2,3,4,6-Tetrachlorophenol	5.4	ug/l	1		-	UJ	Yes
2,4,5-Trichlorophenol	5.4	ug/l	1		-	U	Yes
2,4,6-Trichlorophenol	5.4	ug/l	1		-	U	Yes
Acenaphthene	1.1	ug/l	1		-	U	Yes
Acenaphthylene	1.1	ug/l	1		-	U	Yes
Acetophenone	2.2	ug/l	1		-	U	Yes
Anthracene	1.1	ug/l	1		-	U	Yes
Atrazine	2.2	ug/l	1		-	U	Yes
Benzaldehyde	5.4	ug/l	1		-	U	Yes
Benzo(a)anthracene	1.1	ug/l	1		-	U	Yes
Benzo(a)pyrene	1.1	ug/l	1		-	U	Yes
Benzo(b)fluoranthene	1.1	ug/l	1		-	U	Yes
Benzo(g,h,i)perylene	1.1	ug/l	1		-	U	Yes
Benzo(k)fluoranthene	1.1	ug/l	1		-	U	Yes
4-Bromophenyl phenyl ether	1.1	ug/l	1		-	U	Yes
Butyl benzyl phthalate	2.2	ug/l	1		-	U	Yes
1,1'-Biphenyl	1.1	ug/l	1		-	U	Yes
2-Chloronaphthalene	2.2	ug/l	1		-	U	Yes
4-Chloroaniline	5.4	ug/l	1		-	U	Yes
Carbazole	1.1	ug/l	1		-	U	Yes
Caprolactam	2.2	ug/l	1		-	U	Yes
Chrysene	1.1	ug/l	1		-	U	Yes
bis(2-Chloroethoxy)methane	2.2	ug/l	1		-	U	Yes
bis(2-Chloroethyl)ether	2.2	ug/l	1		-	U	Yes
bis(2-Chloroisopropyl)ether	2.2	ug/l	1		-	U	Yes

4-Chlorophenyl phenyl ether	2.2	ug/l	1	-	U	Yes
2,4-Dinitrotoluene	1.1	ug/l	1	-	U	Yes
2,6-Dinitrotoluene	1.1	ug/l	1	-	U	Yes
3,3'-Dichlorobenzidine	2.2	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	1.1	ug/l	1	-	U	Yes
Dibenzofuran	5.4	ug/l	1	-	U	Yes
Di-n-butyl phthalate	2.2	ug/l	1	-	U	Yes
Di-n-octyl phthalate	2.2	ug/l	1	-	U	Yes
Diethyl phthalate	2.2	ug/l	1	-	U	Yes
Dimethyl phthalate	2.2	ug/l	1	-	U	Yes
bis(2-Ethylhexyl)phthalate	2.2	ug/l	1	-	U	Yes
Fluoranthene	1.1	ug/l	1	-	U	Yes
Fluorene	1.1	ug/l	1	-	U	Yes
Hexachlorobenzene	1.1	ug/l	1	-	U	Yes
Hexachlorobutadiene	1.1	ug/l	1	-	U	Yes
Hexachlorocyclopentadiene	11	ug/l	1	-	U	Yes
Hexachloroethane	2.2	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	1.1	ug/l	1	-	U	Yes
Isophorone	2.2	ug/l	1	-	U	Yes
2-Methylnaphthalene	1.1	ug/l	1	-	U	Yes
2-Nitroaniline	5.4	ug/l	1	-	U	Yes
3-Nitroaniline	5.4	ug/l	1	-	U	Yes
4-Nitroaniline	5.4	ug/l	1	-	U	Yes
Nitrobenzene	2.2	ug/l	1	-	U	Yes
N-Nitroso-di-n-propylamine	2.2	ug/l	1	-	U	Yes
Nitrosodiphenylamine	5.4	ug/l	1	-	U	Yes
Phenanthrene	1.1	ug/l	1	-	U	Yes
Pyrene	1.1	ug/l	1	-	U	Yes
1,2,4,5-Tetrachlorobenzene	2.2	ug/l	1	-	U	Yes

METHOD: 8270D (SIM)

Benzo(a)anthracene	0.054	ug/l	1	-	U	Yes
Benzo(a)pyrene	0.054	ug/l	1	-	U	Yes
Benzo(b)fluoranthene	0.11	ug/l	1	-	U	Yes
Benzo(k)fluoranthene	0.11	ug/l	1	-	U	Yes
Chrysene	0.11	ug/l	1	-	U	Yes
Dibenzo(a,h)anthracene	0.11	ug/l	1	-	U	Yes
Indeno(1,2,3-cd)pyrene	0.11	ug/l	1	-	U	Yes
Naphthalene	0.11	ug/l	1	-	U	Yes
1,4-Dioxane	0.11	ug/l	1	-	U	Yes

Sample ID: JC33384-6MS
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: Groundwater

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	33.8	ug/l	1	-	-	Yes
4-Chloro-3-methyl phenol	40.0	ug/l	1	-	-	Yes
2,4-Dichlorophenol	40.2	ug/l	1	-	-	Yes
2,4-Dimethylphenol	44.9	ug/l	1	-	-	Yes
2,4-Dinitrophenol	97	ug/l	1	-	-	Yes
4,6-Dinitro-o-cresol	47.5	ug/l	1	-	-	Yes
2-Methylphenol	34.4	ug/l	1	-	-	Yes
3&4-Methylphenol	32.6	ug/l	1	-	-	Yes
2-Nitrophenol	39.6	ug/l	1	-	-	Yes
4-Nitrophenol	15.6	ug/l	1	-	-	Yes
Pentachlorophenol	50.4	ug/l	1	-	-	Yes
Phenol	22.4	ug/l	1	-	-	Yes
2,3,4,6-Tetrachlorophenol	45.9	ug/l	1	-	-	Yes
2,4,5-Trichlorophenol	42.4	ug/l	1	-	-	Yes
2,4,6-Trichlorophenol	45.1	ug/l	1	-	-	Yes
Acenaphthene	40.1	ug/l	1	-	-	Yes
Acenaphthylene	39.2	ug/l	1	-	-	Yes
Acetophenone	38.5	ug/l	1	-	-	Yes
Anthracene	40.3	ug/l	1	-	-	Yes
Atrazine	52.2	ug/l	1	-	-	Yes
Benzaldehyde	31.6	ug/l	1	-	-	Yes
Benzo(a)anthracene	41.3	ug/l	1	-	-	Yes
Benzo(a)pyrene	37.7	ug/l	1	-	-	Yes
Benzo(b)fluoranthene	37.9	ug/l	1	-	-	Yes
Benzo(g,h,i)perylene	39.4	ug/l	1	-	-	Yes
Benzo(k)fluoranthene	41.1	ug/l	1	-	-	Yes
4-Bromophenyl phenyl ether	45.8	ug/l	1	-	-	Yes
Butyl benzyl phthalate	31.9	ug/l	1	-	-	Yes
1,1'-Biphenyl	40.5	ug/l	1	-	-	Yes
2-Chloronaphthalene	42.8	ug/l	1	-	-	Yes
4-Chloroaniline	23.8	ug/l	1	-	-	Yes
Carbazole	41.0	ug/l	1	-	-	Yes
Caprolactam	14.2	ug/l	1	-	-	Yes
Chrysene	41.2	ug/l	1	-	-	Yes
bis(2-Chloroethoxy)methane	51.0	ug/l	1	-	-	Yes
bis(2-Chloroethyl)ether	51.5	ug/l	1	-	-	Yes
bis(2-Chloroisopropyl)ether	37.9	ug/l	1	-	-	Yes

4-Chlorophenyl phenyl ether	46.4	ug/l	1	-	-	Yes
2,4-Dinitrotoluene	44.5	ug/l	1	-	-	Yes
2,6-Dinitrotoluene	44.0	ug/l	1	-	-	Yes
3,3'-Dichlorobenzidine	40.9	ug/l	1	-	-	Yes
Dibenzo(a,h)anthracene	40.1	ug/l	1	-	-	Yes
Dibenzofuran	41.8	ug/l	1	-	-	Yes
Di-n-butyl phthalate	36.1	ug/l	1	-	-	Yes
Di-n-octyl phthalate	32.7	ug/l	1	-	-	Yes
Diethyl phthalate	38.1	ug/l	1	-	-	Yes
Dimethyl phthalate	42.5	ug/l	1	-	-	Yes
bis(2-Ethylhexyl)phthalate	33.1	ug/l	1	-	-	Yes
Fluoranthene	44.4	ug/l	1	-	-	Yes
Fluorene	40.8	ug/l	1	-	-	Yes
Hexachlorobenzene	44.1	ug/l	1	-	-	Yes
Hexachlorobutadiene	38.1	ug/l	1	-	-	Yes
Hexachlorocyclopentadiene	46.5	ug/l	1	-	-	Yes
Hexachloroethane	37.0	ug/l	1	-	-	Yes
Indeno(1,2,3-cd)pyrene	39.7	ug/l	1	-	-	Yes
Isophorone	43.7	ug/l	1	-	-	Yes
1-Methylnaphthalene	38.1	ug/l	1	-	-	Yes
2-Methylnaphthalene	38.9	ug/l	1	-	-	Yes
2-Nitroaniline	43.1	ug/l	1	-	-	Yes
3-Nitroaniline	26.8	ug/l	1	-	-	Yes
4-Nitroaniline	43.3	ug/l	1	-	-	Yes
Nitrobenzene	43.6	ug/l	1	-	-	Yes
N-Nitroso-di-n-propylamine	38.2	ug/l	1	-	-	Yes
Nitrosodiphenylamine	38.1	ug/l	1	-	-	Yes
Phenanthrene	44.3	ug/l	1	-	-	Yes
Pyrene	40.7	ug/l	1	-	-	Yes
1,2,4,5-Tetrachlorobenzene	47.7	ug/l	1	-	-	Yes

METHOD: 8270D (SIM)

Benzo(a)anthracene	0.924	ug/l	1	-	-	Yes
Benzo(a)pyrene	0.640	ug/l	1	-	-	Yes
Benzo(b)fluoranthene	0.840	ug/l	1	-	-	Yes
Benzo(k)fluoranthene	0.741	ug/l	1	-	-	Yes
Chrysene	0.775	ug/l	1	-	-	Yes
Dibenzo(a,h)anthracene	0.452	ug/l	1	-	-	Yes
Indeno(1,2,3-cd)pyrene	0.552	ug/l	1	-	-	Yes
Naphthalene	0.715	ug/l	1	-	-	Yes
1,4-Dioxane	1.84	ug/l	1	-	-	Yes

Sample ID: JC33384-6MSD
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: Groundwater

METHOD: 8270D

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
2-Chlorophenol	37.6	ug/l	1	-	-	Yes
4-Chloro-3-methyl phenol	47.2	ug/l	1	-	-	Yes
2,4-Dichlorophenol	47.6	ug/l	1	-	-	Yes
2,4-Dimethylphenol	52.0	ug/l	1	-	-	Yes
2,4-Dinitrophenol	114	ug/l	1	-	-	Yes
4,6-Dinitro-o-cresol	56.5	ug/l	1	-	-	Yes
2-Methylphenol	36.2	ug/l	1	-	-	Yes
3&4-Methylphenol	35.3	ug/l	1	-	-	Yes
2-Nitrophenol	47.0	ug/l	1	-	-	Yes
4-Nitrophenol	18.2	ug/l	1	-	-	Yes
Pentachlorophenol	59.1	ug/l	1	-	-	Yes
Phenol	24.5	ug/l	1	-	-	Yes
2,3,4,6-Tetrachlorophenol	52.8	ug/l	1	-	-	Yes
2,4,5-Trichlorophenol	49.2	ug/l	1	-	-	Yes
2,4,6-Trichlorophenol	50.5	ug/l	1	-	-	Yes
Acenaphthene	45.4	ug/l	1	-	-	Yes
Acenaphthylene	44.7	ug/l	1	-	-	Yes
Acetophenone	42.9	ug/l	1	-	-	Yes
Anthracene	49.0	ug/l	1	-	-	Yes
Atrazine	61.5	ug/l	1	-	-	Yes
Benzaldehyde	36.5	ug/l	1	-	-	Yes
Benzo(a)anthracene	49.6	ug/l	1	-	-	Yes
Benzo(a)pyrene	45.5	ug/l	1	-	-	Yes
Benzo(b)fluoranthene	45.7	ug/l	1	-	-	Yes
Benzo(g,h,i)perylene	49.1	ug/l	1	-	-	Yes
Benzo(k)fluoranthene	48.5	ug/l	1	-	-	Yes
4-Bromophenyl phenyl ether	55.4	ug/l	1	-	-	Yes
Butyl benzyl phthalate	38.8	ug/l	1	-	-	Yes
1,1'-Biphenyl	46.3	ug/l	1	-	-	Yes
2-Chloronaphthalene	47.5	ug/l	1	-	-	Yes
4-Chloroaniline	30.2	ug/l	1	-	-	Yes
Carbazole	49.9	ug/l	1	-	-	Yes
Caprolactam	16.4	ug/l	1	-	-	Yes
Chrysene	49.4	ug/l	1	-	-	Yes
bis(2-Chloroethoxy)methane	58.3	ug/l	1	-	-	Yes
bis(2-Chloroethyl)ether	57.3	ug/l	1	-	-	Yes

bis(2-Chloroisopropyl)ether	41.9	ug/l	1	-	-	Yes
4-Chlorophenyl phenyl ether	52.5	ug/l	1	-	-	Yes
2,4-Dinitrotoluene	52.8	ug/l	1	-	-	Yes
2,6-Dinitrotoluene	52.9	ug/l	1	-	-	Yes
3,3'-Dichlorobenzidine	56	ug/l	1	-	-	Yes
Dibenzo(a,h)anthracene	49.8	ug/l	1	-	-	Yes
Dibenzofuran	49.0	ug/l	1	-	-	Yes
Di-n-butyl phthalate	44.0	ug/l	1	-	-	Yes
Di-n-octyl phthalate	38.2	ug/l	1	-	-	Yes
Diethyl phthalate	44.2	ug/l	1	-	-	Yes
Dimethyl phthalate	48.1	ug/l	1	-	-	Yes
bis(2-Ethylhexyl)phthalate	39.1	ug/l	1	-	-	Yes
Fluoranthene	52.6	ug/l	1	-	-	Yes
Fluorene	46.8	ug/l	1	-	-	Yes
Hexachlorobenzene	51.3	ug/l	1	-	-	Yes
Hexachlorobutadiene	43.9	ug/l	1	-	-	Yes
Hexachlorocyclopentadiene	55.3	ug/l	1	-	-	Yes
Hexachloroethane	42.2	ug/l	1	-	-	Yes
Indeno(1,2,3-cd)pyrene	51.0	ug/l	1	-	-	Yes
Isophorone	49.1	ug/l	1	-	-	Yes
1-Methylnaphthalene	44.2	ug/l	1	-	-	Yes
2-Methylnaphthalene	45.1	ug/l	1	-	-	Yes
2-Nitroaniline	48.5	ug/l	1	-	-	Yes
3-Nitroaniline	33.8	ug/l	1	-	-	Yes
4-Nitroaniline	47.6	ug/l	1	-	-	Yes
Nitrobenzene	47.8	ug/l	1	-	-	Yes
N-Nitroso-di-n-propylamine	42.6	ug/l	1	-	-	Yes
Nitrosodiphenylamine	46.1	ug/l	1	-	-	Yes
Phenanthrene	53.4	ug/l	1	-	-	Yes
Pyrene	49.0	ug/l	1	-	-	Yes
1,2,4,5-Tetrachlorobenzene	53.2	ug/l	1	-	-	Yes

METHOD: 8270D (SIM)

Benzo(a)anthracene	1.06	ug/l	1	-	-	Yes
Benzo(a)pyrene	0.745	ug/l	1	-	-	Yes
Benzo(b)fluoranthene	0.910	ug/l	1	-	-	Yes
Benzo(k)fluoranthene	1.03	ug/l	1	-	-	Yes
Chrysene	0.901	ug/l	1	-	-	Yes
Dibenzo(a,h)anthracene	0.609	ug/l	1	-	-	Yes
Indeno(1,2,3-cd)pyrene	0.744	ug/l	1	-	-	Yes
Naphthalene	0.828	ug/l	1	-	-	Yes
1,4-Dioxane	1.85	ug/l	1	-	-	Yes

DATA REVIEW WORKSHEETS

Project Number: JC33384

Date: December 6-7, 2016

Shipping Date: December 8, 2016

EPA Region: 2

REVIEW OF SEMIVOLATILE ORGANIC PACKAGE

The following guidelines for evaluating volatile organics were created to delineate required validation actions. This document will assist the reviewer in using professional judgment to make more informed decision and in better serving the needs of the data users. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: EPA Hazardous Waste Support Section, SOP HW-35A, July 2015 –Revision 0. *Semivolatile Data Validation*. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

The hardcopied (laboratory name) Accutest data package received has been reviewed and the quality control and performance data summarized. The data review for SVOCs included:

Lab. Project/SDG No.: JC33384

Sample matrix: Groundwater

No. of Samples: 11 SIM/11 SCAN

Trip blank No.: -

Field blank No.: JC33384-3; JC33384-9

Equipment blank No.: JC33384-1; JC33384-4

Field duplicate No.: -

<input checked="" type="checkbox"/> Data Completeness	<input checked="" type="checkbox"/> Laboratory Control Spikes
<input checked="" type="checkbox"/> Holding Times	<input checked="" type="checkbox"/> Field Duplicates
<input checked="" type="checkbox"/> GC/MS Tuning	<input checked="" type="checkbox"/> Calibrations
<input checked="" type="checkbox"/> Internal Standard Performance	<input checked="" type="checkbox"/> Compound Identifications
<input checked="" type="checkbox"/> Blanks	<input checked="" type="checkbox"/> Compound Quantitation
<input checked="" type="checkbox"/> Surrogate Recoveries	<input checked="" type="checkbox"/> Quantitation Limits
<input checked="" type="checkbox"/> Matrix Spike/Matrix Spike Duplicate	

Overall Comments: SVOCs TCL special list analyzed by method SW846-8270D; Selected PAHs and 1,4-Dioxane analyzed by method SW846-8270D (SIM)

Definition of Qualifiers:

J- Estimated results
U- Compound not detected
R- Rejected data
UJ- Estimated nondetect

Reviewer: Rafael Infante

Date: January 13, 2017

DATA COMPLETENESS

DATE RECEIVED

[illegible]

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below _____

HOLDING TIMES

The objective of this parameter is to ascertain the validity of the results based on the holding time of the sample from time of collection to the time of analysis.

Complete table for all samples and note the analysis and/or preservation not within criteria

SAMPLE ID	DATE SAMPLED	DATE EXTRACTED/ANALYZED	pH	ACTION
JC33384-1	12/6/16	12/15/16	-	No action
JC33384-3	12/6/16	12/15/16	-	No action
All samples extracted and analyzed within method recommended holding time except for the samples described in this document. The following samples were extracted outside of holding time for method SW846 8270D: JC33384-1, JC33384-3. No action taken, confirmation run.				

Cooler temperature (Criteria: 4 ± 2 °C): 5.2°C

Actions

Results will be qualified based on the criteria of the following Table:

Table 1. Holding Time Actions for Semivolatile Analyses

Matrix	Preserved	Criteria	Action	
			Detected Associated Compounds	Non-Detected Associated Compounds
Aqueous	No	≤ 7 days (for extraction) ≤ 40 days (for analysis)	Use professional judgment	
	No	> 7 days (for extraction) > 40 days (for analysis)	J	Use professional judgment
	Yes	≤ 7 days (for extraction) ≤ 40 days (for analysis)	No qualification	
	Yes	> 7 days (for extraction) > 40 days (for analysis)	J	UJ
	Yes/No	Grossly Exceeded	J	UJ or R
Non-Aqueous	No	≤ 14 days (for extraction) ≤ 40 days (for analysis)	Use professional judgment	
	No	> 14 days (for extraction) > 40 days (for analysis)	J	Use professional judgment
	Yes	≤ 14 days (for extraction) ≤ 40 days (for analysis)	No qualification	
	Yes	> 14 days (for extraction) > 40 days (for analysis)	J	UJ
	Yes/No	Grossly Exceeded	J	UJ or R

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met see below

GC/MS TUNING

The assessment of the tuning results is to determine if the sample instrumentation is within the standard tuning QC limits

 X The DFTPP performance results were reviewed and found to be within the specified criteria.

 X DFTPP tuning was performed for every 12 hours of sample analysis.

If no, use professional judgment to determine whether the associated data should be accepted, qualified or rejected.

Notes: These requirements do not apply when samples are analyzed by the Selected Ion Monitoring (SIM) technique.

All mass spectrometer conditions must be identical to those used during the sample analysis. Background subtraction actions resulting in spectral distortion are unacceptable

Notes: No data should be qualified based of DFTPP failure.

The requirement to analyze the instrument performance check solution is optional when analysis of PAHs/pentachlorophenol is to be performed by the SIM technique.

List	the	samples	affected:

Actions:

1. If sample are analyzed without a preceding valid instrument performance check or are analyzed 12 hours after the Instrument Performance Check, qualify all data in those samples as unusable (R).
2. If ion abundance criteria are not met, use professional judgment to determine to what extent the data may be utilized.
3. State in the Data Review Narrative, decisions to use analytical data associated with DFTPP instrument performance checks not meeting the contract requirements.
4. Use professional judgment to determine if associated data should be qualified based on the spectrum of the mass calibration compounds.

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

INITIAL CALIBRATION VERIFICATION

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data.

Date of initial calibration: <u> 10/18/16 </u> (SIM)	<u> 11/21/16 </u> (SIM)
Instrument ID numbers: <u> GCMS3P </u>	<u> GCMS4P </u>
Matrix/Level: <u> Aqueous/low </u>	<u> Aqueous/low </u>
Date of initial calibration: <u> 12/08/16 </u> (SCAN)	<u> 11/18/16 </u> (SCAN)
Instrument ID numbers: <u> GCMS3E </u>	<u> GCMS6P </u>
Matrix/Level: <u> Aqueous/low </u>	<u> Aqueous/low </u>
Date of initial calibration: <u> 11/28-29/16 </u> (SCAN)	<u> 11/22/16 </u> (SCAN)
Instrument ID numbers: <u> GCMSP </u>	<u> GCMSM </u>
Matrix/Level: <u> Aqueous/low </u>	<u> Aqueous/low </u>

DATE	LAB ID#	FILE	CRITERIA OUT RFs, %RSD, %D, r	COMPOUND	SAMPLES AFFECTED
Initial and initial calibration verification meets the method and guidance validation document performance criteria.					

Note:

Actions:

DATA REVIEW WORKSHEETS

Qualify the initial calibration analytes listed in Table 2 using the following criteria:

Table 3. Initial Calibration Actions for Semivolatile Analysis

Criteria	Action	
	Detect	Non-detect
Initial Calibration not performed at specified frequency and sequence	Use professional judgment R	Use professional judgment R
Initial Calibration not performed at the specified concentrations	J	UJ
RRF < Minimum RRF in Table 2 for target analyte	Use professional judgment J+ or R	R
RRF \geq Minimum RRF in Table 2 for target analyte	No qualification	No qualification
%RSD > Maximum %RSD in Table 2 for target analyte	J	Use professional judgment
%RSD \leq Maximum %RSD in Table 2 for target analyte	No qualification	No qualification

DATA REVIEW WORKSHEETS

Initial Calibration

Table 2. RRF, %RSD, and %D Acceptance Criteria in Initial Calibration and CCV for Semivolatile Analysis

Analyte	Minimum RRF	Maximum %RSD	Opening Maximum %D ¹	Opening Maximum %D ¹
1,4-Dioxane	0.010	40.0	± 40.0	± 50.0
Benzaldehyde	0.100	40.0	± 40.0	± 50.0
Phenol	0.080	20.0	± 20.0	± 25.0
Bis(2-chloroethyl)ether	0.100	20.0	± 20.0	± 25.0
2-Chlorophenol	0.200	20.0	± 20.0	± 25.0
2-Methylphenol	0.010	20.0	± 20.0	± 25.0
3-Methylphenol	0.010	20.0	± 20.0	± 25.0
2,2'-Oxybis-(1-chloropropane)	0.010	20.0	± 25.0	± 50.0
Acetophenone	0.060	20.0	± 20.0	± 25.0
4-Methylphenol	0.010	20.0	± 20.0	± 25.0
N-Nitroso-di-n-propylamine	0.080	20.0	± 25.0	± 25.0
1-Hexachloroethane	0.100	20.0	± 20.0	± 25.0
Nitrobenzene	0.090	20.0	± 20.0	± 25.0
Isophorone	0.100	20.0	± 20.0	± 25.0
2-Nitrophenol	0.060	20.0	± 20.0	± 25.0
2,4-Dimethylphenol	0.050	20.0	± 25.0	± 50.0
Bis(2-chloroethoxy)methane	0.080	20.0	± 20.0	± 25.0
2,4-Dichlorophenol	0.060	20.0	± 20.0	± 25.0
Naphthalene	0.200	20.0	± 20.0	± 25.0
4-Chloroaniline	0.010	40.0	± 40.0	± 50.0
1-Hexachlorobutadiene	0.040	20.0	± 20.0	± 25.0
Caprolactam	0.010	40.0	± 30.0	± 50.0
4-Chloro-3-methylphenol	0.040	20.0	± 20.0	± 25.0
2-Methylnaphthalene	0.100	20.0	± 20.0	± 25.0
1-Hexachlorocyclopentadiene	0.010	40.0	± 40.0	± 50.0
2,4,6-Trichlorophenol	0.090	20.0	± 20.0	± 25.0
2,4,5-Trichlorophenol	0.100	20.0	± 20.0	± 25.0
1,1'-Biphenyl	0.200	20.0	± 20.0	± 25.0

DATA REVIEW WORKSHEETS

Analyte	Minimum RRF	Maximum %RSD	Opening Maximum %D ¹	Opening Maximum %D ¹
2-Chloronaphthalene	0.300	20.0	± 20.0	± 25.0
2-Nitroaniline	0.060	20.0	± 25.0	± 25.0
Dimethylphthalate	0.300	20.0	± 25.0	± 25.0
2,6-Dinitrotoluene	0.080	20.0	± 20.0	± 25.0
Acenaphthylene	0.400	20.0	± 20.0	± 25.0
3-Nitroaniline	0.010	20.0	± 25.0	± 50.0
Acenaphthene	0.200	20.0	± 20.0	± 25.0
2,4-Dinitrophenol	0.010	40.0	± 50.0	± 50.0
4-Nitrophenol	0.010	40.0	± 40.0	± 50.0
Dibenzofuran	0.300	20.0	± 20.0	± 25.0
2,4-Dinitrotoluene	0.070	20.0	± 20.0	± 25.0
Diethylphthalate	0.300	20.0	± 20.0	± 25.0
1,2,4,5-Tetrachlorobenzene	0.100	20.0	± 20.0	± 25.0
4-Chlorophenyl-phenylether	0.100	20.0	± 20.0	± 25.0
Fluorene	0.200	20.0	± 20.0	± 25.0
4-Nitroaniline	0.010	40.0	± 40.0	± 50.0
4,6-Dinitro-2-methylphenol	0.010	40.0	± 30.0	± 50.0
4-Bromophenyl-phenyl ether	0.070	20.0	± 20.0	± 25.0
N-Nitrosodiphenylamine	0.100	20.0	± 20.0	± 25.0
Hexachlorobenzene	0.050	20.0	± 20.0	± 25.0
Atrazine	0.010	40.0	± 25.0	± 50.0
Pentachlorophenol	0.010	40.0	± 40.0	± 50.0
Phenanthrene	0.200	20.0	± 20.0	± 25.0
Anthracene	0.200	20.0	± 20.0	± 25.0
Carbazole	0.050	20.0	± 20.0	± 25.0
Di-n-butylphthalate	0.500	20.0	± 20.0	± 25.0
Fluoranthene	0.100	20.0	± 20.0	± 25.0
Pyrene	0.400	20.0	± 25.0	± 50.0
Butylbenzylphthalate	0.100	20.0	± 25.0	± 50.0

DATA REVIEW WORKSHEETS

Analyte	Minimum RRF	Maximum %RSD	Opening Maximum %D ¹	Opening Maximum %D ¹
3,3'-Dichlorobenzidine	0.010	40.0	± 40.0	± 50.0
Benzo(a)anthracene	0.300	20.0	± 20.0	± 25.0
Chrysene	0.200	20.0	± 20.0	± 50.0
Bis(2-ethylhexyl) phthalate	0.200	20.0	± 25.0	± 50.0
Di-n-octylphthalate	0.010	40.0	± 40.0	± 50.0
Benzo(b)fluoranthene	0.010	20.0	± 25.0	± 50.0
Benzo(k)fluoranthene	0.010	20.0	± 25.0	± 50.0
Benzo(a)pyrene	0.010	20.0	± 20.0	± 50.0
Indeno(1,2,3-cd)pyrene	0.010	20.0	± 25.0	± 50.0
Dibenzo(a,h)anthracene	0.010	20.0	± 25.0	± 50.0
Benzo(g,h,i)perylene	0.010	20.0	± 30.0	± 50.0
2,3,4,6-Tetrachlorophenol	0.040	20.0	± 20.0	± 50.0
Naphthalene	0.600	20.0	± 25.0	± 25.0
2-Methylnaphthalene	0.300	20.0	± 20.0	± 25.0
Acenaphthylene	0.900	20.0	± 20.0	± 25.0
Acenaphthene	0.500	20.0	± 20.0	± 25.0
Fluorene	0.700	20.0	± 25.0	± 50.0
Phenanthrene	0.300	20.0	± 25.0	± 50.0
Anthracene	0.400	20.0	± 25.0	± 50.0
Fluoranthene	0.400	20.0	± 25.0	± 50.0
Pyrene	0.500	20.0	± 30.0	± 50.0
Benzo(a)anthracene	0.400	20.0	± 25.0	± 50.0
Chrysene	0.400	20.0	± 25.0	± 50.0
Benzo(b)fluoranthene	0.100	20.0	± 30.0	± 50.0
Benzo(k)fluoranthene	0.100	20.0	± 30.0	± 50.0
Benzo(a)pyrene	0.100	20.0	± 25.0	± 50.0
Indeno(1,2,3-cd)pyrene	0.100	20.0	± 40.0	± 50.0
Dibenzo(a,h)anthracene	0.010	25.0	± 40.0	± 50.0
Benzo(g,h,i)perylene	0.020	25.0	± 40.0	± 50.0

DATA REVIEW WORKSHEETS

Pentachlorophenol	0.010	40.0	± 50.0	± 50.0
Deuterated Monitoring Compounds				
Analyte	Minimum RRF	Maximum %RSD	Opening Maximum %D ¹	Closing Maximum %D
1,4-Dioxane-d ₈	0.010	20.0	± 25.0	± 50.0
Phenol-d ₅	0.010	20.0	± 25.0	± 25.0
Bis-(2-chloroethyl)ether-d ₈	0.100	20.0	± 20.0	± 25.0
2-Chlorophenol-d ₄	0.200	20.0	± 20.0	± 25.0
4-Methylphenol-d ₈	0.010	20.0	± 20.0	± 25.0
4-Chloroaniline-d ₄	0.010	40.0	± 40.0	± 50.0
Nitrobenzene-d ₅	0.050	20.0	± 20.0	± 25.0
2-Nitrophenol-d ₄	0.050	20.0	± 20.0	± 25.0
2,4-Dichlorophenol-d ₃	0.060	20.0	± 20.0	± 25.0
Dimethylphthalate-d ₆	0.300	20.0	± 20.0	± 25.0
Acenaphthylene-d ₈	0.400	20.0	± 20.0	± 25.0
4-Nitrophenol-d ₄	0.010	40.0	± 40.0	± 50.0
Fluorene-d ₁₀	0.100	20.0	± 20.0	± 25.0
4,6-Dinitro-2-methylphenol-d ₂	0.010	40.0	± 30.0	± 50.0
Anthracene-d ₁₀	0.300	20.0	± 20.0	± 25.0
Pyrene-d ₁₀	0.300	20.0	± 25.0	± 50.0
Benzo(a)pyrene-d ₁₂	0.010	20.0	± 20.0	± 50.0
Fluoranthene-d ₁₀ (SIM)	0.400	20.0	± 25.0	± 50.0
2-Methylnaphthalene-d ₁₀ (SIM)	0.300	20.0	± 20.0	± 25.0

¹ If a closing CCV is acting as an opening CCV, all target analytes must meet the requirements for an opening CCV.

Note: If analysis by SIM technique is requested for PAH/pentachlorophenols, calibration standards analyzed at 0.10, 0.20, 0.40, 0.80, and 1.0 ng/uL for each target compound of interest and the associated DMCs. Pentachlorophenol will require only a four point initial calibration at 0.20, 0.40, 0.80, and 1.0 ng/uL.

DATA REVIEW WORKSHEETS

All criteria were met _____
 Criteria were not met _____
 and/or see below _____X_____

CONTINUING CALIBRATION VERIFICATION

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data.

Date of initial calibration: _____ 10/18/16_(SIM) _____ 11/21/16_(SIM) _____
 Date of initial calibration verification (ICV): _____ 10/19/16 _____ 11/21-22/16 _____
 Date of continuing calibration verification (CCV): _____ 12/14/16; 12/17/16 _____ 12/15/16; 12/21/16 _____
 Date of closing CCV: _____ - _____ - _____
 Instrument ID numbers: _____ GCMS3P _____ GCMS4P _____
 Matrix/Level: _____ Aqueous/low _____ Aqueous/low _____

Date of initial calibration: _____ 11/28-29/16_(Scan) _____ 11/18/16_(Scan) _____
 Date of initial calibration verification (ICV): _____ 11/29/306 _____ 11/18/16; 11/21/16 _____
 Date of continuing calibration verification (CCV): _____ 12/14/16; 12/23/16 _____ 12/14/16 _____
 Date of closing CCV: _____ - _____ - _____
 Instrument ID numbers: _____ GCMSP _____ GCMS6P _____
 Matrix/Level: _____ Aqueous/low _____ Aqueous/low _____

Date of initial calibration: _____ 12/08/16_(Scan) _____ 11/22/16_(Scan) _____
 Date of initial calibration verification (ICV): _____ 12/08-09/16 _____ 11/22/16; 11/28/16 _____
 Date of continuing calibration verification (CCV): _____ 12/15/16 _____ 12/15/16; 12/16/16 _____
 Date of closing CCV: _____ - _____ - _____
 Instrument ID numbers: _____ GCM3E _____ GCM5M _____
 Matrix/Level: _____ Aqueous/low _____ Aqueous/low _____

DATE	LAB FILE ID#	CRITERIA OUT RFs, %RSD, %D, r	COMPOUND	SAMPLES AFFECTED
GCMS3E				
12/15/16	cc3946-25	-20.8 ✓	2, 4-dinitrophenol*	JC33384-2
		-20.3 ✓	Pyrene*	
12/15/16	cc3946-50	-21.9 ✓	Indeno(1,2,3-cd)pyrene*	
		-22.3 ✓	Debenzo(a,h)anthracene*	
		-23.7 ✓	Benzo(g,h,i)perylene*	
GCMS3P				
12/14/16	cc2579-0.5	-42.3 ✓	Dibenzo(a,h)anthracene	JC33384-1; to -3
		-36.0 ✓	Benzo(b)fluoranthene	
12/17/16	cc2579-1.0	-20.1 ✓	Benzo(a)anthracene*	JC33384-4; -5; -7; -8; -9
		-26.4 ✓	Benzo(b)fluoranthene*	
		-22.8 ✓	Indeno(1,2,3-cd)pyrene*	
		-26.6 ✓	Dibenzo(a,h)anthracene*	
GCMS4P				
12/15/16	cc1064-0.5	-21.1 ✓	Didenzo(a,h)anthracene*	QC sample
12/15/16	cc1064-1.0	-21.7 ✓	Benzo(b)fluoranthene*	JC33384-6

DATA REVIEW WORKSHEETS

DATE	LAB FILE ID#	CRITERIA OUT RfS, %RSD, %D, r	COMPOUND	SAMPLES AFFECTED
GCMS6P				
12/14/16	cc1488-50	-20.1 ✓	Hexachlorocyclopentadiene*	JC33384-1; -2; -3
		-23.0 ✓	2-nitroaniline*	
		-40.6 ✓	4-nitrophenol	
12/14/16	cc1489-50	23.0 ✓	Benzaldehyde*	JC33384-1; -2; -3
GCMSM				
12/15/16	cc5525-50	26.5 ✓	Hexachlorocyclopentadiene*	JC33384-4 to -9
		26.7 ✓	4-nitrophenol*	
		-22.1	2,3,4,6-tetrachlorophenol	
		21.6 ✓	bis(2-ethylhexyl)phthalate*	

Note: Initial and continuing calibration verifications meet the method and guidance document required performance criteria except for the cases described in this document. Results qualified as estimated (J or UJ) in affected samples.

* % difference outside was method performance criteria but within the guidance document performance criteria. No action taken.

No action taken for QC samples.

No closing calibration verification included in data package. No action taken, professional judgment.

Actions:

Notes: Verify that the CCV is run at the required frequency (an opening and closing CCV must be run within 12-hour period).

All DMCs must meet the RRF values given in Table 2. No qualification of the data is necessary on DMCs RRF and %RSD/%D alone. Use professional judgment to evaluate DMCs and %RSD/%D data in conjunction with DMCs recoveries to determine the need for qualification of the data.

Qualify the initial calibration analytes listed in Table 2 using the following criteria in the CCVs:

Table 4. CCV Actions for Semivolatile Analysis

Criteria for Opening CCV	Criteria for Closing CCV	Action	
		Detect	Non-detect
CCV not performed at required frequency and sequence	CCV not performed at required frequency	Use professional judgment R	Use professional judgment R
CCV not performed at specified concentration	CCV not performed at specified concentration	Use professional judgment	Use professional judgment
RRF < Minimum RRF in Table 2 for target analyte	RRF < Minimum RRF in Table 2 for target analyte	Use professional judgment J or R	R
RRF ≥ Minimum RRF in Table 2 for target analyte	RRF ≥ Minimum RRF in Table 2 for target analyte	No qualification	No qualification
%D outside the Opening Maximum %D limits in Table 2 for target analyte	%D outside the Closing Maximum %D limits in Table 2 for target analyte	J	UJ
%D within the inclusive Opening Maximum %D limits in Table 2 for target analyte	%D within the inclusive Closing Maximum %D limits in Table 2 for target analyte	No qualification	No qualification

DATA REVIEW WORKSHEETS

All criteria were met _____
 Criteria were not met _____
 and/or see below _____X_____

BLANK ANALYSIS RESULTS (Sections 1 & 2)

The assessment of the blank analysis results is to determine the existence and magnitude of contamination problems. The criteria for evaluation of blanks apply only to blanks associated with the samples, including trip, equipment, and laboratory blanks. If problems with any blanks exist, all data associated with the case must be carefully evaluated to determine whether or not there is an inherent variability in the data for the case, or if the problem is an isolated occurrence not affecting other data.

List the contamination in the blanks below. High and low levels blanks must be treated separately.

Notes: The concentration of non-target compounds in all blanks must be less than or equal to 10 ug/L.

The concentration of target compounds in all blanks must be less than its CRQL listed in the method.

Samples taken from a drinking water tap do not have an associated field blank.

Laboratory blanks

DATE ANALYZED	LAB ID	LEVEL/ MATRIX	COMPOUND	CONCENTRATION UNITS
No target analytes detected in method blanks except in the cases described in this document.				
12/14/16	OP99167-MB1	Aq./low	bis(2-ethylhexyl)phthalate	4.2 ug/L
12/15/16	OP99167-MB1	Aq./low	bis(2-ethylhexyl)phthalate	4.7 ug/L

Note: No action taken, bis(2-ethylhexyl)phthalate is a common laboratory contaminant and the analyte was not detected in sample batch.

Field/Equipment/Trip blank

DATE ANALYZED	LAB ID	LEVEL/ MATRIX	COMPOUND	CONCENTRATION UNITS
No target analytes detected in the field/equipment blanks analyzed with this data package.				

Note:

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

BLANK ANALYSIS RESULTS (Section 3)

Blank Actions

Qualify samples based on the criteria summarized in Table 5:

Table 5. Blank and TCLP/SPLP LEB Actions for Semivolatile Analysis

Blank Type	Blank Result	Sample Result	Action
Method, TCLP/SPLP LEB, Field	Detect	Non-detect	No qualification
	< CRQL	< CRQL	Report at CRQL and qualify as non-detect (U)
		≥ CRQL	Use professional judgment
	≥ CRQL	< CRQL	Report at CRQL and qualify as non-detect (U)
		≥ CRQL but < Blank Result	Report at sample results and qualify as non-detect (U) or as unusable (R)
		≥ CRQL and ≥ Blank Result	Use professional judgment
	Grossly high	Detect	Report at sample results and qualify as unusable (R)
	TIC > 5.0 ug/L (water) or 0.0050 mg/L (TCLP leachate) or TIC > 170 ug/Kg (soil)	Detect	Use professional judgment

List samples qualified

CONTAMINATION SOURCE/LEVEL	COMPOUND	CONC/UNITS	AL/UNITS	SQL	AFFECTED SAMPLES

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

SURROGATE SPIKE RECOVERIES – DEUTERATED MONITORING COMPOUNDS (DMCs)

Laboratory performance of individual samples is established by evaluation of surrogate spike recoveries – deuterated monitoring compounds. All samples are spiked with surrogate compounds prior to sample analysis. The accuracy of the analysis is measured by the surrogate percent recovery. Since the effects of the sample matrix are frequently outside the control of the laboratory and may present relatively unique problems, the validation of data is frequently subjective and demands analytical experience and professional judgment.

Notes: Recoveries for DMCs in samples and blanks must be within the limits specified in Table 6.

The recovery limits for any of the compounds listed in Table 6 may be expanded at any time during the period of performance if USEPA determines that the limits are too restrictive.

If a DMC is not added in the samples and blanks or the concentrations of DMCs in the samples and blank not the specified, use professional judgment in qualifying the data.

Table 7. DMC Actions for Semivolatile Analysis

Criteria	Action	
	Detect	Non-detect
%R < 10% (excluding DMCs with 10% as a lower acceptance limit)	J-	R
10% ≤ %R (excluding DMCs with 10% as a lower acceptance limit) < Lower Acceptance Limit	J-	UJ
Lower Acceptance limit ≤ %R ≤ Upper Acceptance Limit	No qualification	No qualification
%R > Upper Acceptance Limit	J+	No qualification

List the percent recoveries (%Rs) which do not meet the criteria for DMCs (surrogate) recovery.

Matrix: Groundwater

SAMPLE ID

SURROGATE COMPOUND

ACTION

 DMCs meet the required criteria in all samples analyzed. Non- deuterated surrogates
 added to the samples and were within laboratory recovery limits.

(a) Outside control limits due to matrix interference.

(b) Outside in house control limits biased low. The results confirmed by re-extraction outside the holding time.

Note:

DATA REVIEW WORKSHEETS

Table 8. Semivolatile DMCs and the Associated Target Analytes

1,4-Dioxane-d₈ (DMC-1)	Phenol-d₅ (DMC-2)	Bis(2-Chloroethyl) ether-d₈ (DMC-3)
1,4-Dioxane	Benzaldehyde Phenol	Bis(2-chloroethyl)ether 2,2'-Oxybis(1-chloropropane) Bis(2-chloroethoxy)methane
2-Chlorophenol-d₄ (DMC-4)	4-Methylphenol-d₅ (DMC-5)	4-Chloroaniline-d₄ (DMC-6)
2-Chlorophenol	2-Methylphenol 3-Methylphenol 4-Methylphenol 2,4-Dimethylphenol	4-Chloroaniline Hexachlorocyclopentadiene Dichlorobenzidine
Nitrobenzene-d₅ (DMC-7)	2-Nitrophenol-d₄ (DMC-8)	2,4-Dichlorophenol-d₃ (DMC-9)
Acetophenone N-Nitroso-di-n-propylamine Hexachloroethane Nitrobenzene 2,6-Dinitrotoluene 2,4-Dinitrotoluene N-Nitrosodiphenylamine	Isophorone 2-Nitrophenol	2,4-Dichlorophenol Hexachlorobutadiene Hexachlorocyclopentadiene 4-Chloro-3-methylphenol 2,4,6-Trichlorophenol 2,4,5-Trichlorophenol 1,2,4,5-Tetrachlorobenzene *Pentachlorophenol 2,3,4,6-Tetrachlorophenol
Dimethylphthalate-d₆ (DMC-10)	Acenaphthylene-d₈ (DMC-11)	4-Nitrophenol-d₄ (DMC-12)
Caprolactam 1,1'-Biphenyl Dimethylphthalate Diethylphthalate Di-n-butylphthalate Butylbenzylphthalate Bis(2-ethylhexyl) phthalate Di-n-octylphthalate	*Naphthalene *2-Methylnaphthalene 2-Chloronaphthalene *Acenaphthylene *Acenaphthene	2-Nitroaniline 3-Nitroaniline 2,4-Dinitrophenol 4-Nitrophenol 4-Nitroaniline

DATA REVIEW WORKSHEETS

Fluorene-d₁₀ (DMC-13)	4,6-Dinitro-2-methylphenol-d₂ (DMC-14)	Anthracene-d₁₀ (DMC-15)
Dibenzofuran *Fluorene 4-Chlorophenyl-phenylether 4-Bromophenyl-phenylether Carbazole	4,6-Dinitro-2-methylphenol	Hexachlorobenzene Atrazine *Phenanthrene *Anthracene
Pyrene-d₁₀ (DMC-16)	Benzo(a)pyrene-d₁₂ (DMC-17)	
*Fluoranthene *Pyrene *Benzo(a)anthracene *Chrysene	3,3'-Dichlorobenzidine *Benzo(b)fluoranthene *Benzo(k)fluoranthene *Benzo(a)pyrene *Indeno(1,2,3-cd)pyrene *Dibenzo(a,h)anthracene *Benzo(g,h,i)perylene	

*Included in optional Target Analyte List (TAL) of PAHs and PCP only.

Table 9. Semivolatile SIM DMCs and the Associated Target Analytes

Fluoranthene-d₁₀ (DMC-1)	2-Methylnaphthalene-d₁₀ (DMC-2)
Fluoranthene	Naphthalene
Pyrene	2-Methylnaphthalene
Benzo(a)anthracene	Acenaphthylene
Chrysene	Acenaphthene
Benzo(b)fluoranthene	Fluorene
Benzo(k)fluoranthene	Pentachlorophenol
Benzo(a)pyrene	Phenanthrene
Indeno(1,2,3-cd)pyrene	Anthracene
Dibenzo(a,h)anthracene	
Benzo(g,h,i)perylene	

DATA REVIEW WORKSHEETS

All criteria were met _____
 Criteria were not met _____
 and/or see below _____X_____

VII. A MATRIX SPIKE/MATRIX SPIKE DUPLICATE (MS/MSD)

This data is generated to determine long term precision and accuracy in the analytical method for various matrices. This data alone cannot be used to evaluate the precision and accuracy of individual samples. If any % R in the MS or MSD falls outside the designated range, the reviewer should determine if there are matrix effects, i.e. LCS data are within the QC limits but MS/MSD data are outside QC limit.

1. MS/MSD Recoveries and Precision Criteria

The laboratory should use one MS and a duplicate analysis of an unspiked field sample if target analytes are expected in the sample. If target analytes are not expected, MS/MSD should be analyzed.

NOTES: Data for MS and MSDs will not be present unless requested by the Region.
 Notify the Contract Laboratory COR if a field or trip blank was used for the MS and MSD.

For a Matrix Spike that does not meet criteria, apply the action to only the field sample used to prepare the Matrix Spike sample. If it is clearly stated in the data validation materials that the samples were taken through incremental sampling or some other method guaranteeing the homogeneity of the sample group, then the entire sample group may be qualified.

List the %Rs, RPD of the compounds which do not meet the criteria.

Sample ID: _____JC33175-1_____	Matrix/Level: _____Groundwater_____
Sample ID: _____JC33175-1_(SIM)_____	Matrix/Level: _____Groundwater_____
Sample ID: _____JC33384-6_____	Matrix/Level: _____Groundwater_____
Sample ID: _____JC33384-6_(SIM)_____	Matrix/Level: _____Groundwater_____

Note: MS/MSD % recoveries and RPD within laboratory control limits.

- * QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.
- * If QC limits are not available, use limits of 70 – 130 %.

Actions:

QUALITY	%R < LL	%R > UL
Positive results	J	J
Nondetects results	R	Accept

MS/MSD criteria apply only to the unspiked sample, its dilutions, and the associated MS/MSD samples:

If the % R for the affected compounds were < LL (or 70 %), qualify positive results (J) and nondetects (UJ).

If the % R for the affected compounds were > UL (or 130 %), only qualify positive results (J).

If 25 % or more of all MS/MSD %R were < LL (or 70 %) or if two or more MS/MSD %Rs were < 10%, qualify all positive results (J) and reject nondetects (R).

A separate worksheet should be used for each MS/MSD pair.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

INTERNAL STANDARD PERFORMANCE

The assessment of the internal standard (IS) parameter is used to assist the data reviewer in determining the condition of the analytical instrumentation.

List the internal standard area of samples which do not meet the criteria.

DATE	SAMPLE ID	IS OUT	IS AREA	ACCEPTABLE RANGE	ACTION
------	-----------	--------	---------	------------------	--------

Internal area meets the required criteria for batch samples corresponding to this data package.

Action:

1. If an internal standard area count for a sample or blank is greater than 213.0% of the area for the associated standard (opening CCV or mid-point standard from initial calibration) (see Table 10 below):
 - a. Qualify detects for compounds quantitated using that internal standard as estimated low (J-).
 - b. Do not qualify non-detected associated compounds.
2. If an internal standard area count for a sample or blank is less than 20.0% of the area for the associated standard (opening CCV or mid-point standard from initial calibration):
 - a. Qualify detects for compounds quantitated using that internal standard as estimated high (J+).
 - b. Qualify non-detected associated compounds as unusable (R).
3. If an internal standard area count for a sample or blank is greater than or equal to 50.0%, and less than or equal to 213% of the area for the associated standard opening CCV or mid-point standard from initial calibration, no qualification of the data is necessary.
4. If an internal standard RT varies by more than 10.0 seconds: Examine the chromatographic profile for that sample to determine if any false positives or negatives exist. For shifts of a large magnitude, the reviewer may consider partial or total rejection of the data for that sample fraction. Detects should not need to be qualified as unusable (R) if the mass spectral criteria are met.
5. If an internal standard RT varies by less than or equal to 10.0 seconds, no qualification of the data is necessary.

DATA REVIEW WORKSHEETS

Note: Inform the Contract Laboratory Program Project Officer (CLP PO) if the internal standard performance criteria are grossly exceeded. Note in the Data Review Narrative potential effects on the data resulting from unacceptable internal standard performance.

State in the Data Review Narrative if the required internal standard compounds are not added to a sample or blank or if the required internal standard compound is not analyzed at the specified concentration.

Actions:

Table 10. Internal Standard Actions for Semivolatile Analysis

Criteria	Action	
	Detect	Non-detect
Area response < 20% of the opening CCV or mid-point standard CS3 from ICAL	J+	R
20% ≤ Area response < 50% of the opening CCV or mid-point standard CS3 from ICAL	J+	UJ
50% ≤ Area response ≤ 200% of the opening CCV or mid-point standard CS3 from ICAL	No qualification	No qualification
Area response > 200% of the opening CCV or mid-point standard CS3 from ICAL	J-	No qualification
RT shift between sample/blank and opening CCV or mid-point standard CS3 from ICAL > 10.0 seconds	R	R
RT shift between sample/blank and opening CCV or mid-point standard CS3 from ICAL < 10.0 seconds	No qualification	No qualification

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

TARGET COMPOUND IDENTIFICATION

Criteria:

Is the Relative Retention Times (RRTs) of reported compounds within ± 0.06 RRT units of the standard RRT [opening Continuing Calibration Verification (CCV) or mid-point standard from the initial calibration].
Yes? or No?

List compounds not meeting the criteria described above:

Sample ID	Compounds	Actions
=====	=====	=====
_____	_____	_____
_____	_____	_____
_____	_____	_____

Mass spectra of the sample compound and a current laboratory-generated standard [i.e., the mass spectrum from the associated calibration standard (opening CCV or mid-point standard from initial calibration)] must match according to the following criteria:

- All ions present in the standard mass spectrum at a relative intensity greater than 10% must be present in the sample spectrum.
- The relative intensities of these ions must agree within $\pm 20\%$ between the standard and sample spectra (e.g., for an ion with an abundance of 50% in the standard spectrum, the corresponding sample ion abundance must be between 30-70%).
- Ions present at greater than 10% in the sample mass spectrum, but not present in the standard spectrum, must be evaluated by a reviewer experienced in mass spectral interpretation.

List compounds not meeting the criteria described above:

Sample ID	Compounds	Actions
=====	=====	=====
_____	_____	_____
Identified compounds meet the required criteria_____	_____	_____
_____	_____	_____

DATA REVIEW WORKSHEETS

Action:

1. The application of qualitative criteria for GC/MS analysis of target compounds requires professional judgment. It is up to the reviewer's discretion to obtain additional information from the laboratory. If it is determined that incorrect identifications were made, qualify all such data as unusable (R).
2. Use professional judgment to qualify the data if it is determined that cross-contamination has occurred.
3. Note in the Data Review Narrative any changes made to the reported compounds or concerns regarding target compound identifications. Note, for Contract Laboratory COR action, the necessity for numerous or significant changes.

TENTATIVELY IDENTIFIED COMPOUNDS (TICS)

NOTE: Tentatively identified compounds should only be evaluated when requested by a party from outside of the Hazardous Waste Support Section (HWSS).

List TICs

Sample ID	Compound	Sample ID	Compound
=====			
_____		_____	
_____		_____	
_____		_____	
_____		_____	

Action:

1. Qualify all TIC results for which there is presumptive evidence of a match (e.g. greater than or equal to 85% match) as tentatively identified (NJ), with approximated concentrations. TICs labeled "unknown" are qualified as estimated (J).
2. General actions related to the review of TIC results are as follows:
 - a. If it is determined that a tentative identification of a non-target compound is unacceptable, change the tentative identification to "unknown" or another appropriate identification, and qualify the result as estimated (J).
 - b. If all contractually-required peaks were not library searched and quantitated, the Region's designated representative may request these data from the laboratory.
3. In deciding whether a library search result for a TIC represents a reasonable identification, use professional judgment. If there is more than one possible match, report the result as "either compound X or compound Y". If there is a lack of isomer specificity, change the TIC result to a nonspecific isomer result (e.g., 1,3,5-trimethyl benzene to trimethyl benzene isomer) or to a compound class (e.g., 2-methyl, 3-ethyl benzene to a substituted aromatic compound).
4. The reviewer may elect to report all similar compounds as a total (e.g., all alkanes may be summarized and reported as total hydrocarbons).

DATA REVIEW WORKSHEETS

5. Target compounds from other fractions and suspected laboratory contaminants should be marked as "non-reportable".
6. Other Case factors may influence TIC judgments. If a sample TIC match is poor, but other samples have a TIC with a valid library match, similar RRT, and the same ions, infer identification information from the other sample TIC results.
7. Note in the Data Review Narrative any changes made to the reported data or any concerns regarding TIC identifications.
8. Note, for Contract Laboratory COR action, failure to properly evaluate and report TICs

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

SAMPLE QUANTITATION AND REPORTED CONTRACT REQUIRED QUANTITATION LIMITS (CRQLS)

Action:

1. When a sample is analyzed at more than one dilution, the lower CRQL are used unless a QC exceedance dictates the use of higher CRQLs from the diluted sample. Samples reported with an "E" qualifier should be reported from the diluted sample.
2. If any discrepancies are found, the Region's designated representative may contact the laboratory to obtain additional information that could resolve any differences. If a discrepancy remains unresolved, the reviewer must use professional judgment to decide which value is the most accurate. Under these circumstances, the reviewer may determine that qualification of data is warranted. Note in the Data Review Narrative a description of the reasons for data qualification and the qualification that is applied to the data.
3. For non-aqueous samples, if the solids is less than 10.0%, use professional judgment for both detects and non-detects. If the percent solid for a soil sample is greater than or equal to 10.0% and less than 30.0%, use professional judgment to qualify detects and non-detects. If the percent solid for a soil sample is greater than or equal to 30.0%, detects and non-detects should not be qualified (see Table 11).
4. Note, for Contract Laboratory COR action, numerous or significant failures to accurately quantify the target compounds or to properly evaluate and adjust CRQLs.
5. Results between MDL and CRQL should be qualified as estimated "J".
6. Results < MDL should be reported at the CRQL and qualified "U". MDLs themselves should not be reported.

Table 11. Percent Solids Actions for Semivolatile Analysis for Non-Aqueous Samples

Criteria	Action	
	Detects	Non-detects
%Solids < 10.0%	Use professional judgment	Use professional judgment
10.0% ≤ %Solids ≤ 30.0%	Use professional judgment	Use professional judgment
%Solids > 30.0%	No qualification	No qualification

SAMPLE QUANTITATION

The sample quantitation evaluation is to verify laboratory quantitation results. In the space below, please show a minimum of one sample calculation:

Sample ID: JC33384-7 (SIM) Analyte: indeno(1,2,3-cd)pyrene RF: 1.226

$$\begin{aligned}
 [] &= (8746)(4.0)/(29495)(1.226) \\
 &= 0.97 \text{ ppm} \quad \text{Ok}
 \end{aligned}$$

DATA REVIEW WORKSHEETS

QUANTITATION LIMITS

A. Dilution performed

SAMPLE ID	DILUTION FACTOR	REASON FOR DILUTION

DATA REVIEW WORKSHEETS

All criteria were met _____
 Criteria were not met _____
 and/or see below ____ N/A ____

FIELD DUPLICATE PRECISION

Sample IDs: _____ - _____

Matrix: _____ - _____

Field duplicates samples may be taken and analyzed as an indication of overall precision. These analyses measure both field and lab precision; therefore, the results may have more variability than laboratory duplicates which only laboratory performance. It is also expected that soil duplicate results will have a greater variance than water matrices due to difficulties associated with collecting identical field duplicate samples.

The project QAPP should be reviewed for project-specific information.

Suggested criteria: if large RPD (> 50 %) is observed, confirm identification of the samples and note differences. If both samples and duplicate are <5 SQL, the RPD criteria is doubled.

COMPOUND	SQL ug/L	SAMPLE CONC.	DUPLICATE CONC.	RPD	ACTION
No field/laboratory duplicate analyzed as part of this data package. MS/MSD % recoveries RPD used to assess precision. RPD within the required guidance document criteria < 50 % for detected target analytes above 5 SQL.					

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

OTHER ISSUES

A. System Performance

List samples qualified based on the degradation of system performance during sample analysis:

Sample ID	Comments	Actions
=====	=====	=====
_____	_____	_____
_____	_____	_____
_____	_____	_____
_____	_____	_____

Action:

Use professional judgment to qualify the data if it is determined that system performance has degraded during sample analyses. Inform the Contract Laboratory Program COR any action as a result of degradation of system performance which significantly affected the data.

B. Overall Assessment of Data

List samples qualified based on other issues:

Sample ID	Comments	Actions
=====	=====	=====
_____	_____	_____
No other issues that required the need to qualify the data. Results are valid and can be used for decision purposes. Other discrepancies are shown below.		
_____	_____	_____
_____	_____	_____

Note:

Action:

1. Use professional judgment to determine if there is any need to qualify data which were not qualified based on the Quality Control (QC) criteria previously discussed.
2. Write a brief narrative to give the user an indication of the analytical limitations of the data. Inform the Contract Laboratory COR the action, any inconsistency of the data with the Sample Delivery Group (SDG) Narrative. If sufficient information on the intended use and required quality of the data is available, the reviewer should include their assessment of the usability of the data within the given context. This may be used as part of a formal Data Quality Assessment (DQA).

DATA REVIEW WORKSHEETS

3. Sometimes, due to dilutions, re-analysis or SIM/Scan runs are being performed, there will be multiple results for a single analyte from a single sample. The following criteria and professional judgment are used to determine which result should be reported:
 - The analysis with the lower CRQL
 - The analysis with the better QC results
 - The analysis with the higher results

MEMORANDUM

TO: Mr. Haley Royer
Anderson, Mulholland and Associates

DATE: January 13, 2017

FROM: R. Infante

FILE: JC33384

RE: Data Validation
SDG: JC33384

SUMMARY

Full validation was performed on the data for three groundwater samples analyzed for dissolved methane by method RSK-175. The samples were collected at the Bristol Myer Squib-Building 5 Area, Humacao, PR site on December 06-07, 2016 and submitted to Accutest Laboratories of Dayton, New Jersey that analyzed and reported the results under delivery groups (SDG) JC33384. The sample results were assessed according to USEPA general data validation guidance documents.

In general the data is valid as reported and may be used for decision making purposes. The data results are acceptable for use.

SAMPLES

The samples included in the review are listed below

Client Sample ID	Lab. Sample ID	Collected Date	Matrix	Analysis
UP-2	JC33384-2	12/06/16	Groundwater	Methane
S-40S	JC33384-7	12/07/16	Groundwater	Methane
S-41S	JC33384-2	12/07/16	Groundwater	Methane

REVIEW ELEMENTS

Sample data were reviewed for the following parameters, where applicable to the method

- o Agreement of analysis conducted with chain of custody (COC) form
- o Holding time and sample preservation
- o Gas chromatography/mass spectrometry (GC/MS) tunes
- o Initial and continuing calibrations
- o Method blanks/trip blanks/field blank
- o Canister cleaning certification criteria
- o Surrogate spike recovery
- o Internal standard performance and retention times
- o Field duplicate results
- o Laboratory control sample/laboratory control sample duplicate (LCS/LCSD) results
- o Quantitation limits and sample results

DISCUSSION

Agreement of Analysis Conducted with COC Request

Sample reports corresponded to the analytical request designated on the chain-of-custody.

Holding Times and Sample Preservation

Sample preservation was acceptable.

Samples analyzed within method recommended holding time.

Initial and Continuing Calibrations

Initial and continuing calibrations meet method specific requirements. Initial calibration retention times meet method specific requirements.

Method Blank/Trip Blank/Field Blank

Target analytes were not detected in laboratory method blanks.

No trip/field/equipment blank analyzed with this data package.

Laboratory/Field Duplicate Results

Field duplicates were analyzed as part of this data set. Target analytes meet the RPD performance criteria of + 25 % for analytes 5 x SQL.

LCS/LCSD Results

LCS (blank spike) was analyzed by the laboratory associated with this data package. Recoveries and RPD within laboratory control limits.


Quantitation Limits and Sample Results

Dilutions were not performed.

Calculations were spot checked.

Summary

Samples JC33384-2; JC33384-7; and JC33384-8 were analyzed following standard procedures accepted by regulatory agencies. The quality control requirements met the methods criteria except in the occasions described in this document.

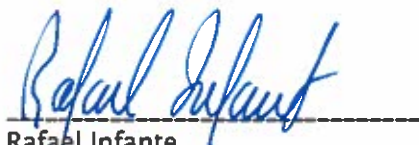

Rafael Infante
Chemist License 1888

SAMPLE METHANE DATA SAMPLE SUMMARY

Sample ID: JC33384-2

Sample location: BMSMC Building 5 Area

Sampling date: 6-Dec-16

Matrix: Groundwater

METHOD: RSK -175

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Methane	1710	ug/l	1	-	-	Yes

Sample ID: JC33384-7

Sample location: BMSMC Building 5 Area

Sampling date: 7-Dec-16

Matrix: Groundwater

METHOD: RSK-175

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Methane	26.7	ug/l	1	-	-	Yes

Sample ID: JC33384-8

Sample location: BMSMC Building 5 Area

Sampling date: 7-Dec-16

Matrix: Groundwater

METHOD: RSK-175

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Methane	375	ug/l	1	-	-	Yes

EXECUTIVE NARRATIVE

SDG No: **JC33384** Laboratory: **Accutest, New Jersey**
Analysis: **SW846-8081B** Number of Samples: **11**

Location: **BMSMC, Building 5 Area**
Humacao, PR

SUMMARY: Eleven (11) samples were analyzed for selected pesticides (Dieldrin) following method SW846-8081B. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence *Hazardous Waste Support Section SOP No. HW-36A, Revision 0, June, 2015. SOM02.2. Pesticide Data Validation*. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

Results are valid and can be used for decision making purposes.

Critical issues: **None**
Major: **None**
Minor: **None**

Critical findings: **None**
Major findings: **None**
Minor findings: 1. Initial and initial calibration verification within the guidance document performance criteria. Continuing calibration % differences meet the performance criteria in at least one of the two columns. Final calibration verification included in data package. No action taken, professional judgment.

COMMENTS: Results are valid and can be used for decision making purposes.

Reviewers Name: **Rafael Infante**
Chemist License 1888

Signature:



Date: **January 12, 2017**

SAMPLE ORGANIC DATA SAMPLE SUMMARY

Sample ID: JC33384-1

Sample location: BMSMC Building 5 Area

Sampling date: 6-Dec-16

Matrix: AQ - Equipment Blank

METHOD: 8081B

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.011	ug/l	1	-	U	Yes
alpha-BHC	0.011	ug/l	1	-	U	Yes
beta-BHC	0.011	ug/l	1	-	U	Yes
delta-BHC	0.011	ug/l	1	-	U	Yes
gamma-BHC (Lindane)	0.011	ug/l	1	-	U	Yes
alpha-Chlordane	0.011	ug/l	1	-	U	Yes
gamma-Chlordane	0.011	ug/l	1	-	U	Yes
Dieldrin	0.011	ug/l	1	-	U	Yes
4,4'-DDD	0.011	ug/l	1	-	U	Yes
4,4'-DDE	0.011	ug/l	1	-	U	Yes
4,4'-DDT	0.011	ug/l	1	-	U	Yes
Endrin	0.011	ug/l	1	-	U	Yes
Endosulfan sulfate	0.011	ug/l	1	-	U	Yes
Endrin aldehyde	0.011	ug/l	1	-	U	Yes
Endrin ketone	0.011	ug/l	1	-	U	Yes
Endosulfan-I	0.011	ug/l	1	-	U	Yes
Endosulfan-II	0.011	ug/l	1	-	U	Yes
Heptachlor	0.011	ug/l	1	-	U	Yes
Heptachlor epoxide	0.011	ug/l	1	-	U	Yes
Methoxychlor	0.022	ug/l	1	-	U	Yes
Toxaphene	0.27	ug/l	1	-	U	Yes

Sample ID: JC33384-2
Sample location: BSMC Building 5 Area
Sampling date: 6-Dec-16
Matrix: Groundwater

METHOD: 8081B

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.010	ug/l	1	-	U	Yes
alpha-BHC	0.010	ug/l	1	-	U	Yes
beta-BHC	0.010	ug/l	1	-	U	Yes
delta-BHC	0.010	ug/l	1	-	U	Yes
gamma-BHC (Lindane)	0.010	ug/l	1	-	U	Yes
alpha-Chlordane	0.010	ug/l	1	-	U	Yes
gamma-Chlordane	0.010	ug/l	1	-	U	Yes
Dieldrin	0.010	ug/l	1	-	U	Yes
4,4'-DDD	0.010	ug/l	1	-	U	Yes
4,4'-DDE	0.010	ug/l	1	-	U	Yes
4,4'-DDT	0.010	ug/l	1	-	U	Yes
Endrin	0.010	ug/l	1	-	U	Yes
Endosulfan sulfate	0.010	ug/l	1	-	U	Yes
Endrin aldehyde	0.010	ug/l	1	-	U	Yes
Endrin ketone	0.010	ug/l	1	-	U	Yes
Endosulfan-I	0.010	ug/l	1	-	U	Yes
Endosulfan-II	0.010	ug/l	1	-	U	Yes
Heptachlor	0.010	ug/l	1	-	U	Yes
Heptachlor epoxide	0.010	ug/l	1	-	U	Yes
Methoxychlor	0.021	ug/l	1	-	U	Yes
Toxaphene	0.26	ug/l	1	-	U	Yes

Sample ID: JC33384-3
Sample location: BMSMC Building 5 Area
Sampling date: 6-Dec-16
Matrix: AQ - Field Blank Water

METHOD: 8081B

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.010	ug/l	1	-	U	Yes
alpha-BHC	0.010	ug/l	1	-	U	Yes
beta-BHC	0.010	ug/l	1	-	U	Yes
delta-BHC	0.010	ug/l	1	-	U	Yes
gamma-BHC (Lindane)	0.010	ug/l	1	-	U	Yes
alpha-Chlordane	0.010	ug/l	1	-	U	Yes
gamma-Chlordane	0.010	ug/l	1	-	U	Yes
Dieldrin	0.010	ug/l	1	-	U	Yes
4,4'-DDD	0.010	ug/l	1	-	U	Yes
4,4'-DDE	0.010	ug/l	1	-	U	Yes
4,4'-DDT	0.010	ug/l	1	-	U	Yes
Endrin	0.010	ug/l	1	-	U	Yes
Endosulfan sulfate	0.010	ug/l	1	-	U	Yes
Endrin aldehyde	0.010	ug/l	1	-	U	Yes
Endrin ketone	0.010	ug/l	1	-	U	Yes
Endosulfan-I	0.010	ug/l	1	-	U	Yes
Endosulfan-II	0.010	ug/l	1	-	U	Yes
Heptachlor	0.010	ug/l	1	-	U	Yes
Heptachlor epoxide	0.010	ug/l	1	-	U	Yes
Methoxychlor	0.020	ug/l	1	-	U	Yes
Toxaphene	0.25	ug/l	1	-	U	Yes

Sample ID: JC33384-4
Sample location: BSMC Building 5 Area
Sampling date: 7-Dec-16
Matrix: AQ - Equipment Blank

METHOD: 8081B

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.010	ug/l	1	-	U	Yes
alpha-BHC	0.010	ug/l	1	-	U	Yes
beta-BHC	0.010	ug/l	1	-	U	Yes
delta-BHC	0.010	ug/l	1	-	U	Yes
gamma-BHC (Lindane)	0.010	ug/l	1	-	U	Yes
alpha-Chlordane	0.010	ug/l	1	-	U	Yes
gamma-Chlordane	0.010	ug/l	1	-	U	Yes
Dieldrin	0.010	ug/l	1	-	U	Yes
4,4'-DDD	0.010	ug/l	1	-	U	Yes
4,4'-DDE	0.010	ug/l	1	-	U	Yes
4,4'-DDT	0.010	ug/l	1	-	U	Yes
Endrin	0.010	ug/l	1	-	U	Yes
Endosulfan sulfate	0.010	ug/l	1	-	U	Yes
Endrin aldehyde	0.010	ug/l	1	-	U	Yes
Endrin ketone	0.010	ug/l	1	-	U	Yes
Endosulfan-I	0.010	ug/l	1	-	U	Yes
Endosulfan-II	0.010	ug/l	1	-	U	Yes
Heptachlor	0.010	ug/l	1	-	U	Yes
Heptachlor epoxide	0.010	ug/l	1	-	U	Yes
Methoxychlor	0.020	ug/l	1	-	U	Yes
Toxaphene	0.26	ug/l	1	-	U	Yes

Sample ID: JC33384-5
Sample location: BSMC Building 5 Area
Sampling date: 7-Dec-16
Matrix: Groundwater

METHOD: 8081B

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.010	ug/l	1	-	U	Yes
alpha-BHC	0.010	ug/l	1	-	U	Yes
beta-BHC	0.010	ug/l	1	-	U	Yes
delta-BHC	0.010	ug/l	1	-	U	Yes
gamma-BHC (Lindane)	0.010	ug/l	1	-	U	Yes
alpha-Chlordane	0.010	ug/l	1	-	U	Yes
gamma-Chlordane	0.010	ug/l	1	-	U	Yes
Dieldrin	0.010	ug/l	1	-	U	Yes
4,4'-DDD	0.010	ug/l	1	-	U	Yes
4,4'-DDE	0.010	ug/l	1	-	U	Yes
4,4'-DDT	0.010	ug/l	1	-	U	Yes
Endrin	0.010	ug/l	1	-	U	Yes
Endosulfan sulfate	0.010	ug/l	1	-	U	Yes
Endrin aldehyde	0.010	ug/l	1	-	U	Yes
Endrin ketone	0.010	ug/l	1	-	U	Yes
Endosulfan-I	0.010	ug/l	1	-	U	Yes
Endosulfan-II	0.010	ug/l	1	-	U	Yes
Heptachlor	0.010	ug/l	1	-	U	Yes
Heptachlor epoxide	0.010	ug/l	1	-	U	Yes
Methoxychlor	0.020	ug/l	1	-	U	Yes
Toxaphene	0.25	ug/l	1	-	U	Yes

Sample ID: JC33384-6
Sample location: BSMC Building 5 Area
Sampling date: 7-Dec-16
Matrix: Groundwater

METHOD: 8081B

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.010	ug/l	1	-	U	Yes
alpha-BHC	0.010	ug/l	1	-	U	Yes
beta-BHC	0.010	ug/l	1	-	U	Yes
delta-BHC	0.010	ug/l	1	-	U	Yes
gamma-BHC (Lindane)	0.010	ug/l	1	-	U	Yes
alpha-Chlordane	0.010	ug/l	1	-	U	Yes
gamma-Chlordane	0.010	ug/l	1	-	U	Yes
Dieldrin	0.010	ug/l	1	-	U	Yes
4,4'-DDD	0.010	ug/l	1	-	U	Yes
4,4'-DDE	0.010	ug/l	1	-	U	Yes
4,4'-DDT	0.010	ug/l	1	-	U	Yes
Endrin	0.010	ug/l	1	-	U	Yes
Endosulfan sulfate	0.010	ug/l	1	-	U	Yes
Endrin aldehyde	0.010	ug/l	1	-	U	Yes
Endrin ketone	0.010	ug/l	1	-	U	Yes
Endosulfan-I	0.010	ug/l	1	-	U	Yes
Endosulfan-II	0.010	ug/l	1	-	U	Yes
Heptachlor	0.010	ug/l	1	-	U	Yes
Heptachlor epoxide	0.010	ug/l	1	-	U	Yes
Methoxychlor	0.020	ug/l	1	-	U	Yes
Toxaphene	0.25	ug/l	1	-	U	Yes

Sample ID: JC33384-7
Sample location: BSMC Building 5 Area
Sampling date: 7-Dec-16
Matrix: Groundwater

METHOD: 8081B

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.010	ug/l	1	-	U	Yes
alpha-BHC	0.010	ug/l	1	-	U	Yes
beta-BHC	0.010	ug/l	1	-	U	Yes
delta-BHC	0.010	ug/l	1	-	U	Yes
gamma-BHC (Lindane)	0.010	ug/l	1	-	U	Yes
alpha-Chlordane	0.010	ug/l	1	-	U	Yes
gamma-Chlordane	0.010	ug/l	1	-	U	Yes
Dieldrin	0.010	ug/l	1	-	U	Yes
4,4'-DDD	0.010	ug/l	1	-	U	Yes
4,4'-DDE	0.010	ug/l	1	-	U	Yes
4,4'-DDT	0.010	ug/l	1	-	U	Yes
Endrin	0.010	ug/l	1	-	U	Yes
Endosulfan sulfate	0.010	ug/l	1	-	U	Yes
Endrin aldehyde	0.010	ug/l	1	-	U	Yes
Endrin ketone	0.010	ug/l	1	-	U	Yes
Endosulfan-I	0.010	ug/l	1	-	U	Yes
Endosulfan-II	0.010	ug/l	1	-	U	Yes
Heptachlor	0.010	ug/l	1	-	U	Yes
Heptachlor epoxide	0.010	ug/l	1	-	U	Yes
Methoxychlor	0.020	ug/l	1	-	U	Yes
Toxaphene	0.25	ug/l	1	-	U	Yes

Sample ID: JC33384-8
Sample location: BSMC Building 5 Area
Sampling date: 7-Dec-16
Matrix: Groundwater

METHOD: 8081B

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.010	ug/l	1	-	U	Yes
alpha-BHC	0.010	ug/l	1	-	U	Yes
beta-BHC	0.010	ug/l	1	-	U	Yes
delta-BHC	0.010	ug/l	1	-	U	Yes
gamma-BHC (Lindane)	0.010	ug/l	1	-	U	Yes
alpha-Chlordane	0.010	ug/l	1	-	U	Yes
gamma-Chlordane	0.010	ug/l	1	-	U	Yes
Dieldrin	0.010	ug/l	1	-	U	Yes
4,4'-DDD	0.010	ug/l	1	-	U	Yes
4,4'-DDE	0.010	ug/l	1	-	U	Yes
4,4'-DDT	0.010	ug/l	1	-	U	Yes
Endrin	0.010	ug/l	1	-	U	Yes
Endosulfan sulfate	0.010	ug/l	1	-	U	Yes
Endrin aldehyde	0.010	ug/l	1	-	U	Yes
Endrin ketone	0.010	ug/l	1	-	U	Yes
Endosulfan-I	0.010	ug/l	1	-	U	Yes
Endosulfan-II	0.010	ug/l	1	-	U	Yes
Heptachlor	0.010	ug/l	1	-	U	Yes
Heptachlor epoxide	0.010	ug/l	1	-	U	Yes
Methoxychlor	0.020	ug/l	1	-	U	Yes
Toxaphene	0.26	ug/l	1	-	U	Yes

Sample ID: JC33384-9
Sample location: BMSMC Building 5 Area
Sampling date: 7-Dec-16
Matrix: AQ - Field Blank Water

METHOD: 8081B

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.010	ug/l	1	-	U	Yes
alpha-BHC	0.010	ug/l	1	-	U	Yes
beta-BHC	0.010	ug/l	1	-	U	Yes
delta-BHC	0.010	ug/l	1	-	U	Yes
gamma-BHC (Lindane)	0.010	ug/l	1	-	U	Yes
alpha-Chlordane	0.010	ug/l	1	-	U	Yes
gamma-Chlordane	0.010	ug/l	1	-	U	Yes
Dieldrin	0.010	ug/l	1	-	U	Yes
4,4'-DDD	0.010	ug/l	1	-	U	Yes
4,4'-DDE	0.010	ug/l	1	-	U	Yes
4,4'-DDT	0.010	ug/l	1	-	U	Yes
Endrin	0.010	ug/l	1	-	U	Yes
Endosulfan sulfate	0.010	ug/l	1	-	U	Yes
Endrin aldehyde	0.010	ug/l	1	-	U	Yes
Endrin ketone	0.010	ug/l	1	-	U	Yes
Endosulfan-I	0.010	ug/l	1	-	U	Yes
Endosulfan-II	0.010	ug/l	1	-	U	Yes
Heptachlor	0.010	ug/l	1	-	U	Yes
Heptachlor epoxide	0.010	ug/l	1	-	U	Yes
Methoxychlor	0.020	ug/l	1	-	U	Yes
Toxaphene	0.26	ug/l	1	-	U	Yes

Sample ID: JC33384-6MS
Sample location: BSMC Building 5 Area
Sampling date: 7-Dec-16
Matrix: Groundwater

METHOD: 8081B

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.26	ug/l	1	-	-	Yes
alpha-BHC	0.27	ug/l	1	-	-	Yes
beta-BHC	0.28	ug/l	1	-	-	Yes
delta-BHC	0.29	ug/l	1	-	-	Yes
gamma-BHC (Lindane)	0.28	ug/l	1	-	-	Yes
alpha-Chlordane	0.30	ug/l	1	-	-	Yes
gamma-Chlordane	0.28	ug/l	1	-	-	Yes
Dieldrin	0.29	ug/l	1	-	-	Yes
4,4'-DDD	0.29	ug/l	1	-	-	Yes
4,4'-DDE	0.27	ug/l	1	-	-	Yes
4,4'-DDT	0.25	ug/l	1	-	-	Yes
Endrin	0.31	ug/l	1	-	-	Yes
Endosulfan sulfate	0.28	ug/l	1	-	-	Yes
Endrin aldehyde	0.32	ug/l	1	-	-	Yes
Endrin ketone	0.29	ug/l	1	-	-	Yes
Endosulfan-I	0.29	ug/l	1	-	-	Yes
Endosulfan-II	0.29	ug/l	1	-	-	Yes
Heptachlor	0.26	ug/l	1	-	-	Yes
Heptachlor epoxide	0.28	ug/l	1	-	-	Yes
Methoxychlor	0.26	ug/l	1	-	-	Yes
Toxaphene	ND	ug/l	1	-	-	Yes

Sample ID: JC33384-6MSD
Sample location: BSMC Building 5 Area
Sampling date: 7-Dec-16
Matrix: Groundwater

METHOD: 8081B

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Aldrin	0.23	ug/l	1	-	-	Yes
alpha-BHC	0.25	ug/l	1	-	-	Yes
beta-BHC	0.26	ug/l	1	-	-	Yes
delta-BHC	0.27	ug/l	1	-	-	Yes
gamma-BHC (Lindane)	0.25	ug/l	1	-	-	Yes
alpha-Chlordane	0.27	ug/l	1	-	-	Yes
gamma-Chlordane	0.25	ug/l	1	-	-	Yes
Dieldrin	0.26	ug/l	1	-	-	Yes
4,4'-DDD	0.25	ug/l	1	-	-	Yes
4,4'-DDE	0.24	ug/l	1	-	-	Yes
4,4'-DDT	0.24	ug/l	1	-	-	Yes
Endrin	0.28	ug/l	1	-	-	Yes
Endosulfan sulfate	0.26	ug/l	1	-	-	Yes
Endrin aldehyde	0.28	ug/l	1	-	-	Yes
Endrin ketone	0.26	ug/l	1	-	-	Yes
Endosulfan-I	0.26	ug/l	1	-	-	Yes
Endosulfan-II	0.26	ug/l	1	-	-	Yes
Heptachlor	0.24	ug/l	1	-	-	Yes
Heptachlor epoxide	0.25	ug/l	1	-	-	Yes
Methoxychlor	0.25	ug/l	1	-	-	Yes
Toxaphene	ND	ug/l	1	-	-	Yes

DATA REVIEW WORKSHEETS

Project/Case Number: JC33384
 Sampling Date: 12/06-07/2016
 Shipping Date: 12/08/2016
 EPA Region No.: 2

REVIEW OF PESTICIDE ORGANIC PACKAGE

The following guidelines for evaluating volatile organics were created to delineate required validation actions. This document will assist the reviewer in using professional judgment to make more informed decision and in better serving the needs of the data users. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence *Hazardous Waste Support Section SOP No. HW-36A, Revision 0, June, 2015. SOM02.2. Pesticide Data Validation*. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

The hardcopied (laboratory name) Accutest data package received has been reviewed and the quality control and performance data summarized. The data review for VOCs included:

Lab. Project/SDG No.: JC33384 Sample matrix: Groundwater
 No. of Samples: 11

Trip blank No.: -
 Field blank No.: JC33384-3; JC33384-9
 Equipment blank No.: JC33384-1; JC33384-4
 Field duplicate No.: -
 Field spikes No.: JC33384-6
 QC audit samples: -

<input checked="" type="checkbox"/> Data Completeness	<input checked="" type="checkbox"/> Laboratory Control Spikes
<input checked="" type="checkbox"/> Holding Times	<input checked="" type="checkbox"/> Field Duplicates
<input type="checkbox"/> N/A GC/MS Tuning	<input checked="" type="checkbox"/> Calibrations
<input checked="" type="checkbox"/> Internal Standard Performance	<input checked="" type="checkbox"/> Compound Identifications
<input checked="" type="checkbox"/> Blanks	<input checked="" type="checkbox"/> Compound Quantitation
<input checked="" type="checkbox"/> Surrogate Recoveries	<input checked="" type="checkbox"/> Quantitation Limits
<input checked="" type="checkbox"/> Matrix Spike/Matrix Spike Duplicate	

Overall Comments: TCL_pesticides_list_by_SW846-8081B.

Definition of Qualifiers:

J- Estimated results	U- Compound not detected
R- Rejected data	UJ- Estimated nondetect

Reviewer: Rafael Infante
 Date: January 12, 2017

DATA COMPLETENESS

DATE RECEIVED

[illegible]

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

HOLDING TIMES

The objective of this parameter is to ascertain the validity of the results based on the holding time of the sample from time of collection to the time of analysis.

Complete table for all samples and note the analysis and/or preservation not within criteria

SAMPLE ID	DATE SAMPLED	DATE EXTRACTED/ANALYZED	ACTION
Samples properly preserved. All samples extracted and analyzed within the required criteria.			

Note:

Criteria

Aqueous samples - seven (7) days from sample collection for extraction; 40 days from sample collection for analysis.

Non-aqueous samples – fourteen (14) days from sample collection for extraction; 40 days from sample collection for analysis.

Cooler temperature (Criteria: 4 ± 2 °C): 5.2°C - OK

Actions

Qualify aqueous sample results using preservation and technical holding time information as follows:

- If there is no evidence that the samples were properly preserved ($T = 4^{\circ}\text{C} \pm 2^{\circ}\text{C}$), and the samples were extracted or analyzed within the technical holding times, qualify detects as estimated (J) and non-detects as estimated (UJ).
- If there is no evidence that the samples were properly preserved ($T = 4^{\circ}\text{C} \pm 2^{\circ}\text{C}$), and the samples were extracted or analyzed outside the technical holding times, qualify detects as estimated (J) and non-detects as estimated (UJ).
- If the samples were properly preserved, and were extracted and analyzed within the technical holding times, no qualification of the data is necessary.
- If the samples were properly preserved, and were extracted or analyzed outside the technical holding times, qualify detects as estimated (J) and non-detects as estimated (UJ). Note in the Data Review Narrative that holding times were exceeded and the effect of exceeding the holding time on the resulting data.

DATA REVIEW WORKSHEETS

- e. Use professional judgment to qualify samples whose temperature upon receipt at the laboratory is either below 2 degrees centigrade or above 6 degrees centigrade.
- f. If technical holding times are grossly exceeded, use professional judgment to qualify the data.

Qualify non-aqueous sample results using preservation and technical holding time information as follows:

- a. If there is no evidence that the samples were properly preserved ($T = 4^{\circ}\text{C} \pm 2^{\circ}\text{C}$), and the samples were extracted or analyzed within the technical holding time, qualify detects as estimated (J) and non-detects as estimated (UJ).
- b. If there is no evidence that the samples were properly preserved ($T = 4^{\circ}\text{C} \pm 2^{\circ}\text{C}$), and the samples were extracted or analyzed outside the technical holding time, qualify detects as estimated (J) and non-detects as estimated (UJ).
- c. If the samples were properly preserved, and were extracted and analyzed within the technical holding time, no qualification of the data is necessary.
- d. If the samples were properly preserved, and were extracted or analyzed outside the technical holding time, qualify detects as estimated (J) and non-detects as estimated (UJ). Note in the Data Review Narrative that holding times were exceeded and the effect of exceeding the holding time on the resulting data.
- e. Use professional judgment to qualify samples whose temperature upon receipt at the laboratory is either below 2 degrees centigrade or above 6 degrees centigrade.
- f. If technical holding times are grossly exceeded, use professional judgment to qualify the data.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met see below

GAS CHROMATOGRAPH WITH ELECTRON CAPTURE DETECTOR (GC/ECD) INSTRUMENT PERFORMANCE CHECK (SECTIONS 1 TO 5)

1. Resolution Check Mixture

Criteria

Is the resolution between two adjacent peaks in the Resolution Check Mixture C greater than or equal to 80.0% for all analytes for the primary column and greater than or equal to 50.0% for the confirmation column? Yes? or No?

Is the resolution between two adjacent peaks in the Resolution Check Mixture (A and B) greater than or equal to 60.0%? Yes? or No?

Note: If resolution criteria are not met, the quantitative results may not be accurate due to inadequate resolution. Qualitative identifications may also be questionable if coelution exists.

Action

- a. Qualify detects for target compounds that were not adequately resolved as tentatively identified (NJ).
- b. Qualify non-detected compounds as unusable (R).

2. Performance Evaluation Mixture (PEM) Resolution Criteria

Criteria

Is PEM analysis performed at the required frequency (at the end of each pesticide initial calibration sequence and every 12 hours)? Yes? or No?

Action

- a. If PEM is not performed at the required frequency, qualify all associated sample and blank results as unusable (R).

Criteria

Is PEM % Resolution < 90%? Yes? or No?

Action

- a. a. Qualify detects for target compounds that were not adequately resolved as tentatively identified (NJ).
- b. Qualify non-detected compounds as unusable (R).

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met see below

3. PEM 4,4'-DDT Breakdown

Criteria

Is the PEM 4,4'-DDT % Breakdown >20.0% and 4,4'-DDT is detected? Yes? or No?

Action

a. Qualify detects for 4,4'-DDT; detects for 4,4'-DDD; and detects for 4,4'-DDE as estimated (J)

Criteria

Is the PEM 4,4'-DDT % Breakdown >20.0% and 4,4'-DDT is not detected Yes? or No?

Action

- a. Qualify non-detects for 4,4'- DDT as unusable (R)
- b. Qualify detects for 4,4'-DDD as tentatively identified (NJ)
- c. Qualify detects for 4,4'-DDE as tentatively identified (NJ)

4. PEM Endrin Breakdown

Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is detected? Yes? or No?

Action

a. Qualify detects for Endrin; detects for Endrin aldehyde; and detects for Endrin ketone as estimated (J)

Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is not detected Yes? or No?

Action

- a. Qualify non-detects for Endrin as unusable (R)
- b. Qualify detects for Endrin aldehyde as tentatively identified (NJ)
- c. Qualify detects for Endrin ketone as tentatively identified (NJ)

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met see below _____

5. Mid-point Individual Standard Mixture Resolution -

Criteria

Is the resolution between two adjacent peaks in the Resolution Check Mixture C greater than or equal to 80.0% for all analytes for the primary column and greater than or equal to 50.0% for the confirmation column? Yes? or No?

Is the resolution between two adjacent peaks in the Resolution Check Mixture (A and B) greater than or equal to 90.0%? Yes? or No?

Note: If resolution criteria are not met, the quantitative results may not be accurate due to inadequate resolution. Qualitative identifications may also be questionable if coelution exists.

Action

- a. Qualify detects for target compounds that were not adequately resolved as tentatively identified (NJ).
- b. Qualify non-detected compounds as unusable (R).

Criteria

Is mid-point individual standard mixture analysis performed at the required frequency (every 12 hours)? Yes? or No?

Action

- a. If the mid-point individual standard mixture analysis is not performed at the required frequency, qualify all associated sample and blank results as unusable (R).

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below _____

CALIBRATION VERIFICATION

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data.

Date of initial calibration: _____ 12/08/16 _____ 11/15/16 _____
 Dates of initial calibration verification: _____ 12/08/16 _____ 11/15/16 _____
 Dates of continuing calibration: _____ 12/14/16 _____ 12/15/16 _____
 Dates of final calibration _____ 12/14/16 _____ 12/15/16 _____
 Instrument ID numbers: _____ GC1G _____ GC8G _____
 Matrix/Level: _____ Aqueous/low _____ Aqueous/low _____

DATE	LAB ID#	FILE	CRITERIA OUT RFs, %RSD, %D, r	COMPOUND	SAMPLES AFFECTED
Initial and initial calibration verification within the guidance document performance criteria. Continuing calibration % differences meet the performance criteria in at least one of the two columns. Final calibration verification included in data package. No action taken, professional judgment.					

Criteria

Are a five point calibration curve delivered with concentration levels as shown in Table 3 of SOP HW-36A, Revision 0, June, 2015? Yes? or No?

Actions

If the standard concentrations listed in Table 3 are not used, use professional judgment to evaluate the effect on the data

Criteria

Are RT Windows calculated correctly? Yes? or No?

Action

Recalculate the windows and use the corrected values for all evaluations.

Criteria

Are the Percent Relative Standard Deviation (%RSD) of the CFs for each of the single component target compounds less than or equal to 20.0%, except for alpha-BHC and delta-BHC?

Yes? or No?

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below _____

Are the %RSD of the CFs for alpha-BHC and delta-BHC less than or equal to 25.0%. Yes? or No?

Is the %RSD of the CFs for each of the Toxaphene peaks must be < 30% when 5-point ICAL is performed? Yes? or No?

Is the %RSD of the CFs for the two surrogates (tetrachloro-m-xylene and decachlorobiphenyl) less than or equal to 30.0%. Yes? or No?

Action

- If the %RSD criteria are not met, qualify detects as estimated (J) and use professional judgment to qualify non-detected target compounds.
- If the %RSD criteria are within allowable limits, no qualification of the data is necessary

Continuing Calibration Checks

Criteria

Is the continuing calibration standard analyzed at the acceptable time intervals? Yes? or No?

Action

- If more than 14 hours has elapsed from the injection of the instrument blank that begins an analytical sequence (opening CCV) and the injection of either a PEM or mid-point concentration of the Individual Standard Mixtures (A and B) or (C), qualify all data as unusable (R).
- If more than 12 hours has elapsed from the injection of the instrument blank that begins an analytical sequence (opening CCV) and the injection of the last sample or blank that is part of the same analytical sequence, qualify all data as unusable (R).
- If more than 72 hours has elapsed from the injection of the sample with a Toxaphene detection and the Toxaphene Calibration Verification Standard (CS3), qualify all data as unusable (R).

Criteria

Is the Percent Difference (%D) within $\pm 25.0\%$ for the PEM sample? Yes? or No?

Action

- Qualify associated detects as estimated (J) and non-detects as estimated (UJ).

Criteria

For the Calibration Verification Standard (CS3); is the Percent Difference (%D) within $\pm 25.0\%$? Yes? or No?

Action

Qualify associated detects as estimated (J) and non-detects as estimated (UJ).

DATA REVIEW WORKSHEETS

Criteria

Is the PEM 4,4'-DDT % Breakdown >20.0% and 4,4'-DDT is detected?

Yes? or No?

Action

- a. Qualify detects for 4,4'-DDT; detects for 4,4'-DDD; and detects for 4,4'-DDE as estimated (J)
- b. Non-detected associated compounds are not qualified

Criteria

Is the PEM 4,4'-DDT % Breakdown >20.0% and 4,4'-DDT is not detected

Yes? or No?

Action

- a. Qualify non-detects for 4,4'- DDT as unusable (R)
- b. Qualify detects for 4,4'-DDD as tentatively identified (NJ)
- c. Qualify detects for 4,4'-DDE as tentatively identified (NJ)

Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is detected?

Yes? or No?

Action

- a. Qualify detects for Endrin; detects for Endrin aldehyde; and detects for Endrin ketone as estimated (J)
- b. Non-detected associated compounds are not qualified

Criteria

Is the PEM Endrin % Breakdown >20.0% and Endrin is not detected

Yes? or No?

Action

- a. Qualify non-detects for Endrin as unusable (R)
- b. Qualify detects for Endrin aldehyde as tentatively identified (NJ)
- c. Qualify detects for Endrin ketone as tentatively identified (NJ)

A separate worksheet should be filled for each initial curve

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below _____

BLANK ANALYSIS RESULTS (Sections 1 & 2)

The assessment of the blank analysis results is to determine the existence and magnitude of contamination problems. The criteria for evaluation of blanks apply only to blanks associated with the samples, including trip, equipment, and laboratory blanks. If problems with any blanks exist, all data associated with the case must be carefully evaluated to determine whether or not there is an inherent variability in the data for the case, or if the problem is an isolated occurrence not affecting other data.

List the contamination in the blanks below. High and low levels blanks must be treated separately.

CRQL concentration 0.01_uq/L

Laboratory blanks

DATE ANALYZED	LAB ID	LEVEL/ MATRIX	COMPOUND	CONCENTRATION UNITS
_No_target_analytes_detected_in_method_blanks_at_a_reporting_limit_of_0.01,_0.02,_and_0.25_ug/L				

Field/Equipment/Trip blank

[illegible]

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

BLANK ANALYSIS RESULTS (Section 3)

Blank Actions

Action Levels (ALs) should be based upon the highest concentration of contaminant determined in any blank. Do not qualify any blank with another blank. The ALs for samples which have been diluted should be corrected for the sample dilution factor and/or % moisture, where applicable. No positive sample results should be reported unless the concentration of the compound in the samples exceeds the ALs:

The concentration of non-target compounds in all blanks must be less than or equal to 10 µg/L. The concentration of each target compound found in the method or field blanks must be less than its CRQL listed in the method.

Data concerning the field blanks are not evaluated as part of the CCS process. If field blanks are present, the data reviewer should evaluate this data in a similar fashion as the method blanks.

Specific actions are as follows:

Blank Actions for Pesticide Analyses

Blank Type	Blank Result	Sample Result	Action for Samples
Method, Sulfur Cleanup, Instrument, Field, TCLP/SPLP	Detects	Not detected	No qualification required
	< CRQL	< CRQL	Report CRQL value with a U
		≥ CRQL	No qualification required
	> CRQL	< CRQL	Report CRQL value with a U
		≥ CRQL and ≤ blank concentration	Report blank value for sample concentration with a U
		≥ CRQL and > blank concentration	No qualification required
	= CRQL	≤ CRQL	Report CRQL value with a U
		> CRQL	No qualification required
	Gross contamination	Detects	Report blank value for sample concentration with a U

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

CONTAMINATION SOURCE/LEVEL	COMPOUND	CONC/UNITS	AL/UNITS	SQL	AFFECTED SAMPLES

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

SURROGATE SPIKE RECOVERIES

Laboratory performance of individual samples is established by evaluation of surrogate spike recoveries. All samples are spiked with surrogate compounds prior to sample analysis. The accuracy of the analysis is measured by the surrogate percent recovery. Since the effects of the sample matrix are frequently outside the control of the laboratory and may present relatively unique problems, the validation of data is frequently subjective and demands analytical experience and professional judgment.

List the percent recoveries (%Rs) which do not meet the criteria for surrogate recovery.

Matrix: Aqueous

Lab Sample ID	Lab File ID	S1 a	S1 b	S2 a	S2 b
JC33384-1	1G130507.D	98	97	65	70
JC33384-2	1G130508.D	78	76	49	53
JC33384-3	1G130509.D	86	85	54	61
JC33384-4	8G1178.D	93	95	88	88
JC33384-5	8G1179.D	85	88	88	90
JC33384-6	8G1180.D	81	85	95	96
JC33384-7	8G1183.D	81	85	57	55
JC33384-8	8G1184.D	82	86	67	70
JC33384-9	8G1185.D	85	88	42	44
OP99172-BS1	1G130501.D	86	85	45	45
OP99172-MB1	1G130500.D	90	91	42	42
OP99172-MS	1G130503.D	87	88	52	54
OP99172-MSD	1G130504.D	79	77	46	48
OP99184-BS1	8G1176.D	78	76	56	50
OP99184-MB1	8G1175.D	89	87	71	62
OP99184-MS	8G1181.D	88	91	85	83
OP99184-MSD	8G1182.D	82	85	80	79

Surrogate Compounds

Recovery Limits

S1 = Tetrachloro-m-xylene

26-132%

S2 = Decachlorobiphenyl

10-118%

(a) Recovery from GC signal #1

(b) Recovery from GC signal #2

Note: Surrogate recoveries within laboratory control limits.

DATA REVIEW WORKSHEETS

Actions:

- a. For any surrogate recovery greater than 150%, qualify detected target compounds as biased high (J+).
- b. Do not qualify non-detected target compounds for surrogate recovery > 150 %.
- c. If both surrogate recoveries are greater than or equal to 30% and less than or equal to 150%, no qualification of the data is necessary.
- d. For any surrogate recovery greater than or equal to 10% and less than 30%, qualify detected target compounds as biased low (J-).
- e. For any surrogate recovery greater than or equal to 10% and less than 30%, qualify non-detected target compounds as approximated (UJ).
- f. If low surrogate recoveries are from sample dilution, professional judgment should be used to determine if the resulting data should be qualified. If sample dilution is not a factor:
 - i. Qualify detected target compounds as biased low (J-).
 - ii. Qualify non-detected target compounds as unusable (R).
- g. If surrogate RTs in PEMs, Individual Standard Mixtures, samples, and blanks are outside of the RT Windows, the reviewer must use professional judgment to qualify data.
- h. If surrogate RTs are within RT windows, no qualification of the data is necessary.
- i. If the two surrogates were not added to all samples, MS/MSDs, standards, LCSs, and blanks, use professional judgment in qualifying data as missing surrogate analyte may not directly apply to target analytes.

Summary Surrogate Actions for Pesticide Analyses

Criteria	Action*	
	Detected Target Compounds	Non-detected Target Compounds
%R > 150%	J+	No qualification
30% < %R < 150%	No qualification	
10% < %R < 30%	J-	UJ
%R < 10% (sample dilution not a factor)	J-	R
%R < 10% (sample dilution is a factor)	Use professional judgment	
RT out of RT window	Use professional judgment	
RT within RT window	No qualification	

- * Use professional judgment in qualifying data, as surrogate recovery problems may not directly apply to target analytes.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

MATRIX SPIKE/MATRIX SPIKE DUPLICATE (MS/MSD)

This data is generated to determine long term precision and accuracy in the analytical method for various matrices. This data alone cannot be used to evaluate the precision and accuracy of individual samples. If any % R in the MS or MSD falls outside the designated range, the reviewer should determine if there are matrix effects, i.e. LCS data are within the QC limits but MS/MSD data are outside QC limit.

1. MS/MSD Recoveries and Precision Criteria

Data for MS and MSDs will not be present unless requested by the Region.

Notify the Contract Laboratory Program Project Officer (CLP PO) if a field blank was used for the MS and MSD, unless designated as such by the Region.

NOTE: For a Matrix Spike that does not meet criteria, apply the action to only the field sample used to prepare the Matrix Spike sample. If it is clearly stated in the data validation materials that the samples were taken through incremental sampling or some other method guaranteeing the homogeneity of the sample group, then the entire sample group may be qualified.

List the %Rs, RPD of the compounds which do not meet the criteria.

Sample ID: JC33175-1MS/MSD

Matrix/Level: Groundwater

Sample ID: JC33384-6MS/MSD

Matrix/Level: Groundwater

The QC reported here applies to the following samples:
JC33384-1 to JC33384-9

Method: SW846 8081B

Note: MS/MSD sample analyzed with this data package. % recoveries and RPD within laboratory control limits.

Action

No qualification of the data is necessary on MS and MSD data alone. However, using professional judgment, the validator may use the MS and MSD results in conjunction with other QC criteria and determine the need for some qualification of the data.

A separate worksheet should be used for each MS/MSD pair.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below _____

LABORATORY CONTROL SAMPLE (LCS) ANALYSIS

This data is generated to determine accuracy of the analytical method for various matrices.

1. LCS Recoveries Criteria

LCS Spike Compound	Recovery Limits (%)
gamma-BHC	50 – 120
Heptachlor epoxide	50 – 150
Dieldrin	30 – 130
4,4'-DDE	50 – 150
Endrin	50 – 120
Endosulfan sulfate	50 – 120
trans-Chlordane	30 – 130
Tetrachloro-m-xylene (surrogate)	30 – 150
Decachlorobiphenyl (surrogate)	30 – 150

LCS concentrations: 0.25 ug/l;

List the %R of compounds which do not meet the criteria

LCS ID	COMPOUND	% R	QC LIMIT
%_recovery_and_RPD_within_laboratory_control_limits.			

Note:

Action

The following guidance is suggested for qualifying sample data for which the associated LCS does not meet the required criteria.

- a. If the LCS recovery exceeds the upper acceptance limit, qualify detected target compounds as estimated (J). Do not qualify non-detected target compounds.
- b. If the LCS recovery is less than the lower acceptance limit, qualify detected target compounds as estimated (J) and non-detects as unusable (R).
- c. Use professional judgment to qualify data for compounds other than those compounds that are included in the LCS.
- d. Use professional judgment to qualify non-LCS compounds. Take into account the compound class, compound recovery efficiency, analytical problems associated with each compound, and comparability in the performance of the LCS compound to the non-LCS compound.

DATA REVIEW WORKSHEETS

e. If the LCS recovery is within allowable limits, no qualification of the data is necessary.

2. Frequency Criteria:

Where LCS analyzed at the required frequency and for each matrix? Yes or No.

If no, the data may be affected. Use professional judgment to determine the severity of the effect and qualify data accordingly. Discuss any actions below and list the samples affected.

DATA REVIEW WORKSHEETS

All criteria were met _____
Criteria were not met _____
and/or see below N/A

FLORISIL CARTRIDGE PERFORMANCE CHECK

NOTE: Florisil cartridge cleanup is mandatory for all extracts.

Criteria

Is the Florisil cartridge performance check conducted at least once on each lot of cartridges used for sample cleanup or every 6 months, whichever is most frequent? Yes? or No? **N/A**

Criteria

Are the results for the Florisil Cartridge Performance Check solution included with the data package? Yes? or No? **N/A**

Note: If % criteria are not met, examine the raw data for the presence of polar interferences and use professional judgment in qualifying the data as follows:

Action:

- a. If the Percent Recovery is greater than 120% for any of the pesticide target compounds in the Florisil Cartridge Performance Check, qualify detected compounds as estimated (J). Do not qualify non-detected target compounds.
- b. If the Percent Recovery is greater than or equal to 80% and less than or equal to 120% for all the pesticide target compounds, no qualification of the data is necessary.
- c. If the Percent Recovery is greater than or equal to 10% and less than 80% for any of the pesticide target compounds in the Florisil Cartridge Performance Check, qualify detected target compounds as estimated (J) and non-detected target compounds as approximated (UJ).
- d. If the Percent Recovery is less than 10% for any of the pesticide target compounds in the Florisil Cartridge Performance Check, qualify detected compounds as estimated (J) and qualify non-detected target compounds as unusable (R).
- e. If the Percent Recovery of 2,4,5-trichlorophenol in the Florisil Cartridge Performance Check is greater than or equal to 5%, use professional judgment to qualify detected and non-detected target compounds, considering interference on the sample chromatogram.

Note: State in the Data Review Narrative potential effects on the sample data resulting from the Florisil Cartridge Performance Check analysis not yielding acceptable results.

Note: No information for florisil cartridge performance check included in data package. There is evidence that Florisil cartridge was used for sample extraction/clean-up. No qualification of the data performed, professional judgment.

DATA REVIEW WORKSHEETS

All criteria were met N/A
Criteria were not met
and/or see below _____

GEL PERMEATION CHROMATOGRAPHY (GPC) PERFORMANCE CHECK

NOTE: GPC cleanup is mandatory for all soil samples.

If GPC criteria are not met, examine the raw data for the presence of high molecular weight contaminants; examine subsequent sample data for unusual peaks; and use professional judgment in qualifying the data. Notify the Contract Laboratory Program Project Officer (CLP PO) if the laboratory chooses to analyze samples under unacceptable GPC criteria.

Action:

- a. If the Percent Recovery is less than 10% for the pesticide compounds and surrogates during the GPC calibration check, the non-detected target compounds may be suspect, qualify detected compounds as estimated (J).
- b. If the Percent Recovery is less than 10% for the pesticide compounds and surrogates during the GPC calibration check, qualify all non-detected target compounds as unusable (R).
- c. If the Percent Recovery is greater than or equal to 10% and is less than 80% for any of the pesticide target compounds in the GPC calibration, qualify detected target compounds as estimated (J) and non-detected target compounds as approximated (UJ).
- d. If the Percent Recovery is greater than or equal to 80% and less than or equal to 120% for all the pesticide target compounds, no qualification of the data is necessary.
- e. If high recoveries (i.e., greater than 120%) were obtained for the pesticides and surrogates during the GPC calibration check, qualify detected compounds as estimated (J). Do not qualify non-detected target compounds.

Note: State in the Data Review Narrative potential effects on the sample data resulting from the GPC cleanup analyses not yielding acceptable results.

Note: No information for performance of GPC cleanup included in data package. No qualification of the data performed, professional judgment.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

TARGET COMPOUND IDENTIFICATION

Criteria:

1. Is Retention Times (RTs) of both of the surrogates and reported target compounds in each sample within the calculated RT Windows on both columns? Yes? or No?

2. Is the Tetrachloro-m-xylene (TCX) RT ± 0.05 minutes of the Mean RT (RT) determined from the initial calibration and Decachlorobiphenyl (DCB) within ± 0.10 minutes of the RT determined from the initial calibration? Yes? or No?

3. Is the Percent Difference (%D) for the detected mean concentrations of a pesticide target compound between the two Gas Chromatograph (GC) columns within the inclusive range of ± 25.0 %? Yes? or No?

4. When no analytes are identified in a sample; are the chromatograms from the analyses of the sample extract and the low-point standard of the initial calibration associated with those analyses on the same scaling factor? Yes? or No?

5. Does the chromatograms display the Single Component Pesticides (SCPs) detected in the sample and the largest peak of any multi-component analyte detected in the sample at less than full scale. Yes? or No?

6. If an extract is diluted; does the chromatogram display SCPs peaks between 10-100% of full scale, and multi-component analytes between 25-100% of full scale? Yes? or No? N/A

7. For any sample; does the baseline of the chromatogram return to below 50% of full scale before the elution time of alpha-BHC, and also return to below 25% of full scale after the elution time of alpha-BHC and before the elution time of DCB? Yes? or No?

8. If a chromatogram is replotted electronically to meet these requirements; is the scaling factor used displayed on the chromatogram, and both the initial chromatogram and the replotted chromatogram submitted in the data package. Yes? or No?

Action:

a. If the qualitative criteria for both columns were not met, all target compounds that are reported as detected should be considered non-detected.

b. Use professional judgment to assign an appropriate quantitation limit using the following guidance:

- i. If the detected target compound peak was sufficiently outside the pesticide RT Window, the reported values may be a false positive and should be replaced with the sample Contract Required Quantitation Limits (CRQL) value.

DATA REVIEW WORKSHEETS

- ii. If the detected target compound peak poses an interference with potential detection of another target peak, the reported value should be considered and qualified as unusable (R).

c. If the data reviewer identifies a peak in both GC column analyses that falls within the appropriate RT Windows, but was reported as a non-detect, the compound may be a false negative. Use professional judgment to decide if the compound should be included.

Note: State in the Data Review Narrative all conclusions made regarding target compound identification.

d. If the Toxaphene peak RT windows determined from the calibration overlap with SCPs or chromatographic interferences, use professional judgment to qualify the data.

e. If target compounds were detected on both GC columns, and the Percent Difference between the two results is greater than 25.0%, consider the potential for coelution and use professional judgment to decide whether a much larger concentration obtained on one column versus the other indicates the presence of an interfering compound. If an interfering compound is indicated, use professional judgment to determine how best to report, and if necessary, qualify the data according to these guidelines.

f. If Toxaphene exhibits a marginal pattern-matching quality, use professional judgment to establish whether the differences are due to environmental "weathering" (i.e., degradation of the earlier eluting peaks relative to the later eluting peaks). If the presence of Toxaphene is strongly suggested, report results as presumptively present (N).

GAS CHROMATOGRAPH/MASS SPECTROMETER (GC/MS) CONFIRMATION

NOTE: This confirmation is not usually provided by the laboratory. In cases where it is provided, use professional judgment to determine if data qualified with "C" can be salvaged if it was previously qualified as unusable (R).

Action:

a. If the quantitative criteria for both columns were met (≥ 5.0 ng/ μ L for SCPs and ≥ 125 ng/ μ L for Toxaphene), determine whether GC/MS confirmation was performed. If it was performed, qualify the data using the following guidance:

- i. If GC/MS confirmation was not required because the quantitative criteria for both columns was not met, but it was still performed, use professional judgment when evaluating the data to decide whether the detect should be qualified with "C".
- ii. If GC/MS confirmation was performed, but unsuccessful for a target compound detected by GC/ECD analysis, qualify those detects as "X".

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

COMPOUND QUANTITATION AND REPORTED CONTRACT REQUIRED QUANTITATION LIMITS (CRQLS)

The sample quantitation evaluation is to verify laboratory quantitation results. In the space below, please show a minimum of one sample calculation:

JC33384-6 Matrix Spike

Endrin

RF = 0.907

$$\begin{aligned} [] &= (120.0 \times 10^6)(50)/(236.2 \times 10^6)(0.907) \\ &= 28.0 \text{ ppb} \quad \text{Ok} \end{aligned}$$

Action:

- If sample quantitation is different from the reported value, qualify result as unusable (R).
- When a sample is analyzed at more than one dilution, the lowest CRQLs are used unless a QC exceedance dictates the use of the higher CRQLs from the diluted sample.
- Replace concentrations that exceed the calibration range in the original analysis by crossing out the "E" and its corresponding value on the original reporting form and substituting the data from the diluted sample.
- Results between the MDL and CRQL should be qualified as estimated (J).
- Results less than the MDL should be reported at the CRQL and qualified (U). MDLs themselves are not reported.
- For non-aqueous samples, if the percent moisture is less than 70.0%, no qualification of the data is necessary. If the percent moisture is greater than or equal to 70.0% and less than 90.0%, qualify detects as estimated (J) and non-detects as approximated (UJ). If the percent moisture is greater than or equal to 90.0%, qualify detects as estimated (J) and non-detects as unusable (R) (see Table).

Percent Moisture Actions for Pesticide Analysis for Non-Aqueous Samples

Criteria	Action	
	Detected Associated Compounds	Non-detected Associated Compounds
% Moisture < 70.0	No qualification	
70.0 < % Moisture < 90.0	J	UJ
% Moisture > 90.0	J	R

DATA REVIEW WORKSHEETS

List samples which have ≤ 50 % solids

Note: If any discrepancies are found, the Region's designated representative may contact the laboratory to obtain additional information that could resolve any differences. If a discrepancy remains unresolved, the reviewer must use professional judgment to decide which value is the most accurate. Under these circumstances, the reviewer may determine that qualification of data is warranted. Note in the Data Review Narrative a description of the reasons for data qualification and the qualification that is applied to the data.

Dilution performed

SAMPLE ID	DILUTION FACTOR	REASON FOR DILUTION

DATA REVIEW WORKSHEETS

All criteria were met N/A
Criteria were not met
and/or see below

FIELD DUPLICATE PRECISION

NOTE: In the absence of QAPP guidance for validating data from field duplicates, the following action will be taken.

Field duplicates samples may be taken and analyzed as an indication of overall precision. These analyses measure both field and lab precision; therefore, the results may have more variability than laboratory duplicates which only laboratory performance. It is also expected that soil duplicate results will have a greater variance than water matrices due to difficulties associated with collecting identical field duplicate samples. Identify which samples within the data package are field duplicates. Estimate the relative percent difference (RPD) between the values for each compound. If large RPDs (> 50%) is observed, confirm identification of samples and note difference in the executive summary.

Sample IDs: -

Matrix: -

COMPOUND	SQL ug/L	SAMPLE CONC.	DUPLICATE CONC.	RPD	ACTION
No field/laboratory duplicate analyzed with this data package. MS/MSD % recovery RPD used to assess precision. RPD within the required criteria of < 50 %.					

Actions:

a. Qualify as estimated positive results (J) and nondetects (UJ) for the compound that exceeded the above criteria. For organics, only the sample and duplicate will be qualified.

b. If an RPD cannot be calculated because one or both of the sample results is not detected, the following actions apply:

- i. If one sample result is not detected and the other is greater than 5x the SQL qualify (J/UJ).
- ii. If one sample value is not detected and the other is greater than 5x the SQL and the SQLs for the sample and duplicate are significantly different, use professional judgment to determine if qualification is appropriate.
- iii. If one sample value is not detected and the other is less than 5x, use professional judgment to determine if qualification is appropriate.
- iv. If both sample and duplicate results are not detected, no action is needed.

DATA REVIEW WORKSHEETS

OVERALL ASSESSMENT OF DATA

Action:

1. Use professional judgment to determine if there is any need to qualify data which were not qualified based on the Quality Control (QC) criteria previously discussed.
2. Write a brief narrative to give the user an indication of the analytical limitations of the data.

Note: The Contract Laboratory Program Project Officer (CLP PO) must be informed if any inconsistency of the data with the Sample Delivery Group (SDG) Narrative. If sufficient information on the intended use and required quality of the data is available, the reviewer should include their assessment of the usability of the data within the given context. This may be used as part of a formal Data Quality Assessment (DQA).

Overall assessment of the data: Results are valid; the data can be used for decision making purposes.

MEMORANDUM

TO: Mr. Haley Royer
Anderson, Mulholland and Associates

DATE: January 13, 2017

FROM: R. Infante
RE: Data Validation
BMSMC, Building 5 Area
Accutest Job Numbers: JC33384

FILE: JC33384

SUMMARY

Full validation was performed on the data for three groundwater samples analyzed selected inorganics (iron - ferric and ferrous; nitrate-nitrogen; nitrite-nitrogen; nitrate + nitrite - nitrogen; sulfate and sulfide). The methods employed are listed in Table 1. The samples were collected at the BMSMC, Building 5 Area, Humaco, PR site on December 6-7 2016 and submitted to Accutest Laboratories of Dayton, New Jersey that analyzed and reported the results under delivery groups (SDG) JC33384.

Table 1.

ANALYTE	METHOD	ANALYTE	METHOD
Iron, ferric ^a	SM3500FE B-11	Iron, ferrous ^b	SM3500FE B-11
Nitrogen, nitrate ^c	EPA353.2/SM4500NO2B	Nitrogen, nitrate + nitrite	EPA352.2/LACHAT
Nitrogen, nitrite	SM4500NO2 B-11	Sulfate	EPA 300/SW846-9056A
Sulfide	SM4500S2-F-11		

(a) Calculated as: (Iron) - (Iron, Ferrous)

(b) Field analysis required. Received out of hold time and analyzed by request.

(c) Calculated as: (Nitrogen, Nitrate + Nitrite) - (Nitrogen, Nitrite)

The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: *USEPA Contract Laboratory program National Functional Guidelines for Inorganic data Review (OSWER 9240.1-45, EPA 540-R-04-004, October 2004- Final)*, (noted herein as the "primary guidance document"). Also, QC criteria from "*Test Methods for Evaluating Solid Waste, Physical/Chemical Methods SW-846 (Final Update IV, December 1998)*," and the QC requirements for the methods performed following the Standard Method guidelines are utilized. The guidelines were modified to accommodate the non-CLP methodology. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

In general the data are valid as reported and may be used for decision making purposes. The data results are acceptable for use; some of the results were qualified. Results for ferrous and ferric iron were qualified as estimated (J) in samples: JC33384-2; -7; and -8.

SAMPLES

The samples included in the review are listed below

FIELD SAMPLE ID	LABORATORY ID	ANALYSIS
UP-2	JC33384-2	See Table 1
S-40S	JC33384-7	See Table 1
S-41S	JC33384-8	See Table 1

REVIEW ELEMENTS

Sample data were reviewed for the following parameters, where applicable to the method

- Agreement of analysis conducted with chain of custody (COC) form
- Holding time and sample preservation
- Initial and continuing calibrations
- Method blanks/trip blanks/field blank
- Surrogate spike recovery
- Matrix spike/matrix spike duplicate (MS/MSD) results
- Internal standard performance
- Field duplicate results
- Laboratory control sample/laboratory control sample duplicate (LCS/LCSD) results
- Quantitation limits and sample results

DISCUSSION

Agreement of Analysis Conducted with COC Request

Sample reports corresponded to the analytical request designated on the chain-of-custody form.

Holding Times and Sample Preservation

The cooler temperatures were within the QC acceptance criteria of $4^{\circ}\text{C} \pm 2^{\circ}\text{C}$.

Sample preservation was acceptable.

Samples analyzed within method recommended holding time except for the following:

- JC33384-2 for Iron, Ferrous: Field analysis required. Received out of hold time and analyzed by request.
- JC33384-7 for Iron, Ferrous: Field analysis required. Received out of hold time and analyzed by request.
- JC33384-8 for Iron, Ferrous: Field analysis required. Received out of hold time and analyzed by request.

Note: Results for ferrous and ferric iron qualified as estimated (J).

Initial and Continuing Calibrations

Initial and continuing calibration meets method performance criteria.

Method Blank/Equipment Blank/Field Blank

Target analytes were not detected in laboratory method blanks.

No field/equipment blanks analyzed as part of this data package.

MS/MSD

Matrix spike was performed. Recoveries for MS/MSD were within laboratory control limits; RPD for MS/MSD were within control limits.

Field/Laboratory Duplicate Results

Field/laboratory duplicate were analyzed as part of this data set. When no field/laboratory duplicates were analyzed, MS/MSD RPD was used to assess precision. RPD results were within laboratory/recommended control limits except for the following:

- JC33258-1/-1 DUP.: Iron, ferrous- 22.2 % RPD, outside laboratory control limit. No action taken, professional judgment. RPD within generally acceptable control limits.

LCS/LCSD Results

The laboratory analyzed one LCS (blank spike) associated with each matrix from this data set. The % recoveries of all spiked analytes were within the laboratory QC acceptance limits.

Quantitation Limits and Sample Results

Dilutions were not required with this data set.

Calculations were spot checked.

Summary

The following samples JC33384-2; JC33384-7; and JC33384-8 were analyzed following standard procedures accepted by regulatory agencies. The quality control requirements met the methods criteria except in the occasions described in this document. Some of the results were qualified, the results are valid.



Rafael Infante
Chemist License 1888

SAMPLE INORGANIC DATA SAMPLE SUMMARY

Sample ID: JC33384-2

Sample location: BMSMC Building 5 Area

Sampling date: 12/6/16

Matrix: Groundwater

Analyte Name	Method	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Fe	SW846-6010C	10200	ug/l	1.0	-	-	Yes
Mn	SW846-6010C	822	ug/l	1.0	-	-	Yes
Alkalinity, Total as CaCO3	SM2320 B-11	235	mg/l	1.0	-	-	Yes
Iron, ferric	SM3500FE B-11	10.1	mg/l	1.0	-	J	Yes ✓
Iron, ferrous	SM3500FE B-11	< 0.20	mg/l	1.0	-	UJ	Yes ✓
Nitrogen, nitrate	EPA 353.2/SM4500NO2B	< 0.11	mg/l	1.0	-	U	Yes
Nitrogen, nitrate + nitrite	EPA 353.2/LACHAT	<0.10	mg/l	1.0	-	U	Yes
Nitrogen, nitrite	SM4500NO2 B-11	< 0.010	mg/l	1.0	-	U	Yes
Sulfate	EPA 300/SW846 9056A	< 10	mg/l	1.0	-	U	Yes
Sulfide	SM4500S2- F-11	< 2.0	mg/l	1.0	-	U	Yes

Sample ID: JC33384-7
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/16
Matrix: Groundwater

Analyte Name	Method	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Fe	SW846-6010C	3170	ug/l	1.0	-	-	Yes
Mn	SW846-6010C	2960	ug/l	1.0	-	-	Yes
Alkalinity, Total as CaCO3	SM2320 B-11	624	mg/l	1.0	-	-	Yes
Iron, ferric	SM3500FE B-11	3.1	mg/l	1.0	-	J	Yes ✓
Iron, ferrous	SM3500FE B-11	< 0.20	mg/l	1.0	-	UJ	Yes ✓
Nitrogen, nitrate	EPA 353.2/SM4500NO2B	< 0.11	mg/l	1.0	-	U	Yes
Nitrogen, nitrate + nitrite	EPA 353.2/LACHAT	<0.10	mg/l	1.0	-	U	Yes
Nitrogen, nitrite	SM4500NO2 B-11	< 0.010	mg/l	1.0	-	U	Yes
Sulfate	EPA 300/SW846 9056A	47.6	mg/l	1.0	-	-	Yes
Sulfide	SM4500S2- F-11	< 2.0	mg/l	1.0	-	U	Yes

Sample ID: JC33384-8
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/16
Matrix: Groundwater

METHOD:		8015C					
Analyte Name	Method	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Fe	SW846-6010C	6910	ug/l	1.0	-	-	Yes
Mn	SW846-6010C	691	ug/l	1.0	-	-	Yes
Alkalinity, Total as CaCO3	SM2320 B-11	379	mg/l	1.0	-	-	Yes
Iron, ferric	SM3500FE B-11	6.8	mg/l	1.0	-	J	Yes ✓
Iron, ferrous	SM3500FE B-11	< 0.20	mg/l	1.0	-	UJ	Yes ✓
Nitrogen, nitrate	EPA 353.2/SM4500NO2B	< 0.11	mg/l	1.0	-	U	Yes
Nitrogen, nitrate + nitrite	EPA 353.2/LACHAT	<0.10	mg/l	1.0	-	U	Yes
Nitrogen, nitrite	SM4500NO2 B-11	< 0.010	mg/l	1.0	-	U	Yes
Sulfate	EPA 300/SW846 9056A	71.1	mg/l	1.0	-	-	Yes
Sulfide	SM4500S2- F-11	< 2.0	mg/l	1.0	-	U	Yes

DATA REVIEW WORKSHEETS

Type of validation Full: ☒ Limited: _____ EPA Region: 2 Project Number: JC33384 Date: 12/06-07/2016 Date shipped: 12/08/16

REVIEW OF INORGANIC ANALYSIS DATA PACKAGE

The following guidelines for evaluating metals analyses (6010C/6020/7000A series method) sulfide, and/or cyanide were created to delineate required validation actions. This document will assist the reviewer in using professional judgment to make more informed decision and in better serving the needs of the data users. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: *Hazardous Waste Support Section SOP NO. HW-3b Revision 0 (July 2015) ISM02 ICP-MS Data Validation; USEPA Contract Laboratory program National Functional Guidelines for Inorganic data Review (OSWER 9240.1-45, EPA 540-R-04-004, October 2004- Final). Validation of Metal for the Contract Laboratory Program (CLP) (SOP HW-2, Revision 13. Based on ILM05.3 (August 2009).* Quality control validation criteria were derived from "Test Methods for Evaluating Solid Waste, Physical/Chemical Methods SW-846 (Final Update IV, 1998)". The project QAPP is reviewed for project specific information (if available). The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

The hardcopied (laboratory name) Accutest data package received has been reviewed and the quality control and performance data summarized. The data review for inorganic included:

Lab. Project/SDG No.: JC33384 Sample matrix: Groundwater
No. of Samples: 3
Field blank No.: _____
Equipment blank No.: _____
Field duplicate No.: _____

<input checked="" type="checkbox"/> Data deliverables	<input checked="" type="checkbox"/> Laboratory Duplicates
<input checked="" type="checkbox"/> Holding Times	<input checked="" type="checkbox"/> Field Duplicates
<input checked="" type="checkbox"/> Calibrations	<input checked="" type="checkbox"/> Laboratory Control Samples
<input checked="" type="checkbox"/> Blanks	<input checked="" type="checkbox"/> ICP Serial Dilution Results
<input checked="" type="checkbox"/> ICP Interference Check Results	<input checked="" type="checkbox"/> Detection Limits Results
<input checked="" type="checkbox"/> Matrix Spike/Matrix Spike Duplicate	<input checked="" type="checkbox"/> Sample Quantitation

Overall Comments: _Fe_and_Mn_(SW846-6010C)

Definition of Qualifiers:

J- Estimated results
U- Compound not detected
R- Rejected data
UJ- Estimated non-detect
E- Laboratory qualifier

Reviewer: Rafael Infante Date: 01/13/2017

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below _____

I. DATA DELIVERABLES

A. Data Package:

MISSING INFORMATION

DATE LAB. CONTACTED

DATE RECEIVED

[illegible]

B. Other Discrepancies:

[illegible]

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

HOLDING TIMES

The objective of this parameter is to ascertain the validity of the results based on the holding time of the sample from time of collection to the time of preparation, and subsequently from the time of preparation to the time of analysis.

Complete table for all samples and circle the analysis date for samples not within criteria

SAMPLE ID	DATE SAMPLED	CYANIDE DATE ANALYSIS	Hg DATE ANALYSIS	OTHERS DATE ANALYSIS	pH	SULFIDE	ACTION
SAMPLES DIGESTED AND ANALYZED WITHIN THE METHOD RECOMMENDED HOLDING							

Criteria

Metals – 180 days from time of collection.

Mercury – 28 days from time of collection.

Hexavalent Chromium (solids)- 30/7 from day of collection; 48 hrs aqueous samples

Cyanide – 14 days from time of collection

Sulfide - 14 days from time of collection

pH measurements of aqueous samples upon receipt at the laboratory (criteria $\text{pH} \leq 2$ for metals; $\text{pH} \geq 12$ for cyanide)

Actions: Qualify positive results/nondetects as follows:

If holding times are exceeded, estimate positive results (J) and rejects nondetects (R).

If $\text{pH} > 2$ for metals or $\text{pH} < 12$ for cyanide, positive results (J) and nondetects (UJ).

Cooler Temperature (Criteria: $4^{\circ}\text{C} + 2^{\circ}\text{C}$): 5.2°C

If cooler temperature is $> 10^{\circ}\text{C}$, flag non-detects as (UJ) and detects as (J).

DATA REVIEW WORKSHEETS

All criteria were met ___N/A___
Criteria were not met
and/or see below _____

ICP-MS TUNE ANALYSIS

Is the ICP-MS tuned prior to calibration? Yes or No?

Does the % RSD exceeds 5% for any isotope in the tuning solution? Yes or No?

Action:

NOTES: For ICP-MS tunes that do not meet the technical criteria, apply the action to all samples reported from the analytical run.

1. If the ICP-MS instrument was not tuned prior to calibration, the sample data should be qualified as unusable (R).

2. If the tuning solution was not analyzed or scanned at least 5x consecutively or the tuning solution does not contain the required analytes spanning the analytical range, the reviewer should use professional judgment to determine if the associated sample data should be qualified. The reviewer may need to obtain additional information from the laboratory. The situation should be recorded in the Data Review Narrative and noted for Contract Laboratory Program Project Officer (CLP PO) action.

3. If the resolution of the mass calibration is not within 0.1 u for any isotope in the tuning solution, qualify all analyte results that are \geq Method Detection Limit (MDL) associated with that isotope as estimated (J), and all non-detects associated with that isotope as estimated (UJ). The situation should be recorded in the Data Review Narrative and noted for CLP PO action.

4. If the %RSD exceeds 5% for any isotope in the tuning solution, qualify all sample results that are \geq MDL associated with that tune as estimated (J), and all non-detects associated with that tune as estimated (UJ). The situation should be recorded in the Data Review Narrative and noted for CLP PO action.

Table 2. ICP-MS Tune Actions for ICP-MS Analysis

ICP-MS Tune Results	Action for Samples
Tune not performed	Qualify all results as unusable (R)
Tune not performed properly	Use professional judgment
Resolution of mass calibration not within 0.1u	Qualify results that are \geq MDL as estimated (J) Qualify non-detects as estimated (UJ)
% RSD > 5%	Qualify results that are \geq MDL as estimated (J) Qualify non-detects as estimated (UJ)

Note: Analytes (As) analyzed by SW846-6010 – no tuning necessary.

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

INSTRUMENT CALIBRATION (SECTION 1)

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data. Minimum of 2 calibration points for ICP-AES and ICP-MS; 5 points for Hg; and 4 points for cyanide. One initial calibration standard at the CRQL level for cyanide and Hg. If no, write in the non-compliance section of the data review narrative.

List the analytes which did not meet the percent recovery (%R) criteria for Initial or Continuing Calibration Verification standards (ICV or CCV).

<u>Acceptance Criteria</u>	<u>ICV %R</u>	<u>CCV %R</u>
Metals by 6010C/6020	100 + 10%	100 + 10%
Mercury/Metals by 7000s	100 + 10%	100 + 20%
Cyanide	100 + 15%	100 + 15%
Sulfide	100 + 15%	100 + 15%

DATE	ICV/CCV#	ANALYTE	%R	ACTION	SAMPLES AFFECTED
INITIAL AND CONTINUING CALIBRATION MEET METHOD SPECIFIC CRITERIA					

ACTIONS: If any analyte does not meet the %R criteria, follow the actions stated below. Qualify five samples on either side of the ICV/CCV out of control limit.

Estimate positive results (J) if:	ICV	CCV
Metals by 6010C/6020	111 – 125%	111 – 125%
Mercury/Metals by 7000s	111 – 125%	111 – 135%
Cyanide	116 – 130%	116 – 130%
Sulfide	116 – 130%	116 – 130%

Estimate positive results and nondetects (U/UJ) if:		
Metals by 6010C/6020	75 – 89%	75 – 89%
Mercury/Metals by 7000s	75 – 89%	65 – 79%
Cyanide	70 – 84%	70 – 84%
Sulfide	70 – 84%	70 – 84%

Reject positive results and nondetects (R) if:		
Metals by 6010C/6020	<75%, >125%	<75%, >125%
Mercury/Metals by 7000s	<75%, >125%	<65%, >135%
Cyanide	<70%, >130%	<70%, >130%
Sulfide	<70%, >130%	<70%, >130%

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

III. INSTRUMENT CALIBRATIONS (SECTIONS 2 & 3)

2. Analytical Sequence

Did the laboratory use the proper number of standards for calibration as described in the method?

Yes or No

B. Were calibrations performed at the beginning of each analysis?

Yes or No

Were calibration verification standards analyzed at the beginning of sample analysis and the proper frequency according to the method?

Yes or No

D. Where the AA correlation coefficients (r) for the calibration curves ≥ 0.995 ? If $r < 0.995$, estimate positive results and nondetects (J/UJ). It is not necessary to qualify results if the laboratory used order regression.

Yes or No

Data quality may be affected if any of the above answer are "no". Use professional judgment to determine the severity of the effect and qualify the data accordingly. Discuss any actions below and list the sample affected.

3. Other Check Standards

Laboratories may analyze an additional check standard after establishing the calibration curve. This standard may contain low level concentrations of target analytes and be analyzed and evaluated by the laboratory similar to a CLP "CRLD" standard (CRI for ICP, CRA for AA, and/or mid-range standard for CN and Sulfide). A $100 \pm 20\%$ recovery acceptance limit should be used by the validator to evaluate the standard.

ACTIONS: If any analyte does not meet the %R criteria, follow the action needed below. Qualify 50% of either side of the CRI/CRA out of control limits.

% R	%R < 50%	%R = 50-79%	%R = 121-150%	%R > 150%	Affected Range
Qualify Positive/Nondetects Results					
Metals by 6010C/6020	R/R	J/UJ	J/A	R/A	<2x CRI conc.
Hg/metals by 7000s	R/R	J/UJ	J/A	R/A	<1.5x CRI conc.
Cyanide	R/R	J/UJ	J/A	R/A	<1.5x mid std. conc.
Sulfide	R/R	J/UJ	J/A	R/A	<1.5x mid std. conc.

CRI is not required for Al, Ba, Ca, Fe, Mg, Na, and K.

NOTE: CRLD standard within laboratory and method specific criteria.

DATA REVIEW WORKSHEETS

All criteria were met N/A
 Criteria were not met
 and/or see below

Table 4. Calibration Actions for ICP-MS Analysis

Calibration Result	Action for Samples
Calibration not performed	Qualify all results as unusable (R)
Calibration incomplete	Use professional judgment Qualify results that are \geq MDL as estimated (J) Qualify non-detects as estimated (UJ)
Not at least one calibration standard at or below the CRQL for each analyte	Qualify results that are \geq MDL but $< 2x$ the CRQL as estimated (J) Qualify non-detects as estimated (UJ)
Correlation coefficient < 0.995 ; %D outside $\pm 30\%$; y-intercept \geq CRQL	Qualify results that are \geq MDL as estimated (J) Qualify non-detects as estimated (UJ)
Correlation coefficient < 0.990	Qualify results that are \geq MDL as estimated (J) Qualify non-detects as unusable (R)
ICV/CCV %R $< 75\%$	Qualify results that are \geq MDL as unusable (R) Qualify all non-detects as unusable (R)
ICV/CCV %R 75-89%	Qualify results that are \geq MDL as estimated low (J-) Qualify non-detects as estimated (UJ)
ICV/CCV %R 111-125%	Qualify results that are \geq MDL as estimated high (J+)
ICV/CCV %R $> 125\%$	Qualify results that are \geq MDL as estimated high (J+)
ICV/CCV %R $> 160\%$	Qualify results that are \geq MDL as unusable (R)

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

IV. BLANK ANALYSIS RESULTS (Sections 1 & 2)

The assessment of the blank analysis results is to determine the existence and magnitude of contamination problems. The criteria for evaluation of blanks apply only to blanks associated with the samples, including equipment, field, and laboratory blanks. If problems with any blanks exist, all data associated with the case must be carefully evaluated to determine whether or not there is an inherent variability in the data for the case, or if the problem is an isolated occurrence not affecting other data.

List the contamination in Sections 1 & 2 below. A separate worksheet page should be used for soil and water blanks.

Laboratory blanks

Matrix: Aqueous

DATE ANALYZED	ICB/CCB#	PREP BLK	ANALYTE	CONCENTRATION UNITS
---------------	----------	----------	---------	---------------------

 No analyte detected in method blanks above reporting limits.

Field/Equipment

Matrix: Aqueous

DATE ANALYZED	EQUIPMENT/FIELD BLANK	ANALYTE	CONCENTRATION UNITS
---------------	-----------------------	---------	---------------------

 No field/equipment blank analyzed as part of this data package.

Table. Field/Rinsate/Trip Blank Actions for ICP-MS Analysis

Blank Result	Sample Result	Action for Samples
> CRQL	≥ MDL but ≤ CRQL	Report CRQL value with a "U"
	> CRQL but < Blank Result	Report at level of Blank Result with a "U"
	> Blank Result but < 10x the Blank Result	Use professional judgment to qualify results as estimated (J)

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

IV. BLANK ANALYSIS RESULTS (Section 3)

Frequency requirements

Was the preparation blank analyzed for each matrix,
at the frequency of the method?

Yes or No

If no, estimate positive results < 10x IDL for which preparation blank was not analyzed.

If more than 20 samples/batch, qualification begins at the 21st sample.

B. Was an ICB analyzed?

Yes or No

C. Was a CCB analyzed at the frequency stated in the method?

Yes or No

Data quality may be affected if any of the above answer is "no". Use professional judgment to determine the severity of the effect and qualify the data accordingly. Discuss any actions below, and list the samples affected.

NOTE FOR SOIL SAMPLES

Compare raw sample value with blank results in ug/L unit, or

Convert blanks analyzed during a soil case to mg/Kg in order to compare them with the sample results.

Conc. In ug/L x [Volume diluted to (mL)]/[Weight digested] x 1L/1000mL x 1000g/1Kg x
1mg/1000ug = concentration in wet weight (mg/Kg)

Concentration, dry weight (mg/Kg) = (Wet weight concentration)/(% Solids) x 100

BLANK ANALYSIS RESULTS (Sections 4,5)

Laboratory blanks (PB, ICB/CCB) must first be used to qualify field and/or equipment blanks and samples.

Any contamination remaining in the field or equipment blank will be used to qualify the associated samples.

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

4. Initial/Continuing Calibration Blanks (ICB/CCB) Actions

Are all ICB/CCBs less than the SQL?

Yes or No

If no, qualify five samples on either side of the ICB/CCB out of control limits.
 Estimate positive results (J) \leq the ICB/CCB value.

ICB/CCB#	ANALYTE	CONC/UNITS	SAMPLES AFFECTED
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____

Are the PB less than the SQL?

Yes or No

If yes, reject all results (R) $< 10x$ the PB value.

PB	ANALYTE	CONC/UNITS	SAMPLES AFFECTED
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____

BLANK ANALYSIS RESULTS (Section 6)

6. Field/Equipment Blank (FB/EB) Actions

Are the FB/EB less than the SQL?

Yes or No

If no, was the FB/EB value already rejected due to other QC criteria? Yes or No

If no, reject (R) positive results $\leq 5x$ the FB/EB value. Reject soil data with raw digest results $< 5x$ the FB/EB value

PB	ANALYTE	CONC/UNITS	SAMPLES AFFECTED
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____

DATA REVIEW WORKSHEETS

All criteria were met N/A
 Criteria were not met
 and/or see below

Table 5. Calibration/Preparation Blank Actions for ICP-MS Analysis - Summary

Blank Type	Blank Result	Sample Result	Action for Samples
ICB/CCB	\geq MDL but \leq CRQL	Non-detect	No action
\geq MDL but \leq CRQL		Report CRQL value with a "U"	
> CRQL		Use professional judgment	
ICB/CCB	> CRQL	\geq MDL but \leq CRQL	Report CRQL value with a "U"
> CRQL but < Blank Result		Report at level of Blank Result with a "U"	
> Blank Result		Use professional judgment	
ICB/CCB	\leq (-MDL) but \geq (-CRQL)	\geq MDL, or non-detect	Use professional judgment
ICB/CCB	< (-CRQL)	< 10x the CRQL	Qualify results that are \geq CRQL as estimated low (J-) Qualify non-detects as estimated (UJ)
Preparation Blank	> CRQL	\geq MDL but \leq CRQL	Report CRQL value with a "U"
> CRQL but < 10x the Blank Result		Qualify results as estimated high (J+)	
\geq 10x the Blank Result		No action	
Preparation Blank	\geq MDL but \leq CRQL	Non-detect	No action
\geq MDL but \leq CRQL		Report CRQL value with a "U"	
> CRQL		Use professional judgment	
Preparation Blank	< (-CRQL)	< 10x the CRQL	Qualify results that are \geq CRQL as estimated low (J-) Qualify non-detects as estimated (UJ)

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

INDUCTIVELY COUPLED PLASMA (ICP) INTERFERENCE CHECK SAMPLE

The assessment of the ICP interference check sample (ICS) is to verify the laboratory's interelement and background correction factors.

1. Recovery Criteria

List any elements in the ICS AB and ICS A solutions which did not meet the %R criteria (80 – 120 %).

DATE	ELEMENT	%R	ACTION	SAMPLES AFFECTED
<u>Interference check sample within method performance criteria</u>				
_____	_____	_____	_____	_____
_____	_____	_____	_____	_____
_____	_____	_____	_____	_____
_____	_____	_____	_____	_____

ACTIONS:

If an element does not meet the %R criteria, follow the actions stated below

% R	%R < 50%	%R = 50-79%	%R = 121-150%	%R > 150%
Qualify Positive/Nondetects Results				
Metals by 6010C/6020	R/R	J/UJ	J/A	R/A

2. Frequency requirements

Were interference QC samples run at the frequency stated in the method (beginning of the analytical run)?

Yes or No

If no,

ACTIONS: Estimate positive results (J) all samples for which Al, Ca, Fe, Mg > ICS value.

The data may be affected. Use professional judgment to determine the severity of the effect and qualify the data accordingly. Discuss any actions below and list the samples affected.

DATA REVIEW WORKSHEETS

All criteria were met ___N/A___
 Criteria were not met
 and/or see below _____

Table 6. Interference Check Actions for ICP-MS Analysis - Summary

Interference Check Sample Results	Action for Samples
ICS not analyzed	Qualify detects and non-detects as unusable (R)
ICS not analyzed in proper sequence	Use professional judgment.
ICS %R>150%	Use professional judgment
ICS %R > 120% (or greater than true value + 2x the CRQL)	Qualify results that are \geq MDL as estimated high (J+)
ICS %R 80-12-%	No qualification
ICS %R 50-79% (or less than true value – 2x the CRQL)	Qualify results that are \geq MDL as estimated low (J-) Qualify non-detects as estimated (UJ)
ICSAB %R < 50%	Qualify detects as estimated low (J-) and non-detects as unusable (R)
Potential false positives in field samples with interferences	Qualify results that are \geq MDL as estimated high (J+)
Potential false negatives in field samples with interferences	Qualify results that are \geq MDL but < 10x the (negative value) as estimated low (J-) Qualify non-detects as estimated (UJ)

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

VI. MATRIX SPIKE (MS)

Sample # JC33477-3MS/-3MSD Matrix: Groundwater Units: ug/L

This data is generated to determine long term precision and accuracy in the analytical method for various matrices. Note that for Region 2, MS not required for: Ca, Mg, K, and Na for aqueous matrix.

Al, Ca, Fe, Mg, K, Na, for soil matrix

MS Recovery Criteria. List the percent recoveries for analytes which did not meet the %R criteria (75 – 125%); (85 – 115 % FOR Cr (VI)).

ANALYTE	SPIKE SAMPLE RESULT (SSR)	SAMPLE RESULT (SR)	SPIKE ADDED	% R	ACTION
MS/MSD recoveries and RPD within laboratory control limits.					

ACTIONS: Matrix spike actions apply to all samples of the same matrix. The qualification will also be applied to the results of all samples within a given area of the site, if deemed appropriate.

If the sample results $\geq 4x$ the spike concentration, no action is taken.

If any analyte does not meet the %R criteria, follow the actions stated below.

Table 9. Spike Sample Actions for ICP-MS Analysis

Spike Sample Results	Action for Samples
Matrix Spike %R < 30% Post-digestion spike %R < 75%	Qualify affected results that are \geq MDL as estimated low (J-) and affected non-detects as unusable (R)
Matrix Spike %R < 30% Post-digestion spike %R \geq 75%	Qualify affected results that are \geq MDL as estimated (J) and affected non-detects as estimated (UJ)
Matrix Spike %R 30-74% Post-digestion Spike %R < 75%	Qualify affected results that are \geq MDL as estimated low (J-) and affected non-detects as estimated (UJ)
Matrix Spike %R 30-74% Post-digestion spike %R \geq 75%	Qualify affected results that are \geq MDL as estimated (J) and affected non-detects as estimated (UJ)
Matrix Spike %R > 125% Post-digestion spike %R > 125%	Qualify affected results that are \geq MDL as estimated high (J+)
Matrix Spike %R > 125% Post-digestion spike %R \leq 125%	Qualify affected results that are \geq MDL as estimated (J)

DATA REVIEW WORKSHEETS

Spike Sample Results	Action for Samples
Matrix Spike %R < 30% No post-digestion spike performed	Qualify affected results that are \geq MDL as estimated low (J-) and affected non-detects as unusable (R)
Matrix Spike %R 30-74% No post-digestion spike performed	Qualify affected results that are \geq MDL as estimated low (J-) and non-detects as estimated (UJ)
Matrix Spike %R > 125% No post-digestion spike performed	Qualify affected results that are \geq MDL as estimated high (J+) Non-detects are not qualified

2. Frequency Criteria

A. Was a matrix spike prepared at the frequency stated in the method (1/20)? Yes
or No

If no, estimate positive results (J) for which analyte was not spiked.

If more than 20 samples/batch, qualification begins at the 21st sample.

B. Was a field blank used as spiked sample? Yes or No

If yes, estimate positive results (J) < 4x spike level added for the analyte.

A separate worksheet page should be used for each matrix spike

DATA REVIEW WORKSHEETS

All criteria were met N/A
 Criteria were not met
 and/or see below

VII. FIELD DUPLICATES

Sample #: - Matrix: - Units: ug/L

Field duplicate samples may be taken and analyzed as an indication of overall precision. Field duplicate analyses measure both field and lab precision; therefore, the results may have more variability than laboratory duplicates which measure only laboratory performance. It is also expected that soil duplicate results will have a greater variance than water matrices due to difficulties associated with collecting identical field duplicate samples.

List the concentrations and RPDs in the field duplicate pair. RPD criteria: $\pm 20\%$ for aqueous; $\pm 35\%$ for soil. For soil duplicates, if the % solids for the sample and its duplicate differ by more than 1%, report concentrations in ug/L and calculate RPD or difference for each analyte.

ANALYTE	SQL ug/L	SQL ug/Kg	SAMPLE RESULTS	DUPLICATE RESULTS	RPD	ACTION
Al						
Sb						
As	No field/laboratory duplicates analyzed with data set. MS/MSD % recoveries RPD used to assess precision. RPD within laboratory and generally acceptable control limits					
Ba						
Be						
Cd						
Ca						
Cr						
Co						
Cu						
Fe						
Pb						
Mg						
Mn						
Hg						
Ni						
K						
Se						
Ag						
Na						
Tl						
V						
Zn						
Cyanide						
Cr(VI)						

Field duplicate actions should be applied to only the sample and its duplicate.

DATA REVIEW WORKSHEETS

All criteria were met ___N/A___
 Criteria were not met
 and/or see below ___

Actions: Indicates which criterion was used to evaluate precision by circling either the RPD or SQL for each element. If both sample and duplicate are nondetects, the RPD is not calculated (NC), no action is needed.

Table 8. Duplicate Sample Actions for ICP-MS Analysis

Duplicate Sample Results	Action for Samples
<i>Aqueous:</i> Both original sample and duplicate sample > 5x the CRQL and 20% < RPD < 100%	Qualify those results that are ≥ CRQL as estimated (J)
<i>Aqueous:</i> Both original sample and duplicate sample > 5x the CRQL and RPD ≥ 100%	Qualify those results that are ≥ CRQL as unusable (R)
<i>Soil/Sediment:</i> Both original sample and duplicate sample > 5x the CRQL and 35% < RPD < 120%	Qualify those results that are ≥ CRQL as estimated (J)
<i>Soil/Sediment:</i> Both original sample and duplicate sample > 5x the CRQL and RPD ≥ 120%	Qualify those results that are ≥ CRQL as unusable (R)
Original sample or duplicate sample ≤ 5x the CRQL (including non-detects) and absolute difference between sample and duplicate > CRQL	Qualify those results that are ≥ MDL as estimated (J) and non-detects as estimated (UJ)

A separate worksheet page should be used for each laboratory duplicate analysis

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

VIII. LABORATORY DUPLICATES (Section 1)

Laboratory run duplicates samples to verify laboratory consistency and precision. They are a measure of laboratory performance. It is also expected that soil duplicate results will have a greater variance than water matrices due to difficulties associated with collecting identical field duplicate samples.

1. Difference Criteria

List the concentrations of any analyte not meeting the RPD criteria ($\pm 20\%$ for aqueous; $\pm 35\%$ for soil). For soil duplicates, if the % solids for the sample and its duplicate differ by more than 1%, report concentrations in $\mu\text{g/L}$ and calculate RPD or difference for each analyte.

Sample #

Matrix: -

Units: -

ANALYTE	SQL ug/L	SQL mg/Kg	SAMPLE RESULTS	DUPLICATE RESULTS	RPD	ACTION
Al						
Sb						
As						
Ba						
Be						
Cd						
Ca						
Cr						
Co						
Cu						
Fe						
Pb						
Mg						
Mn						
Hg						
Ni						
K						
Se						
Ag						
Na						
Tl						
V						
Zn						
Cr(VI)						
Sulfide						
Cyanide						

Note:

Laboratory duplicates actions should be applied to all other samples of the same matrix type. This qualification will also be applied to the results of all samples within a given area of the site, if deemed appropriate.

DATA REVIEW WORKSHEETS

All criteria were met ___N/A___
 Criteria were not met
 and/or see below _____

Actions: Indicates which criterion was used to evaluate precision by circling either the RPD or SQL for each element. If both sample and duplicate are non-detects, the RPD is not calculated (NC), no action is needed.

Table 8. Field Duplicate Sample Actions for ICP-MS Analysis

Sample Type	Field Duplicate Result	Action for Samples
Aqueous	Sample and its field duplicate $\geq 5x$ the CRQL and RPD > 20%	Qualify sample and its duplicate as estimated (J)
	Sample and/or its field duplicate < 5x the CRQL and absolute difference > the CRQL	Qualify results > the MDL as estimated (J) Qualify non-detects as estimated (UJ)
Soil/Sediment	Sample and its field duplicate $\geq 5x$ the CRQL and RPD > 50%	Qualify sample and its duplicate as estimated (J)
	Sample and/or its field duplicate < 5x the CRQL and absolute difference > 2x the CRQL	Qualify results > the MDL as estimated (J)
		Qualify non-detects as estimated (UJ)

2. Frequency Criteria

A. Was a laboratory duplicate prepared at the frequency stated in the method (1/20)? **Yes or No**

If no, estimate positive results (J) for the analyte which duplicate was not performed. If more than 20 samples/batch, qualification begins at the 21st sample.

B. Was a field blank used for laboratory duplicate analysis? **Yes or No**

If yes, estimate positive results (J) for the analyte if field blank was used for duplicate analysis.

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

IX. LABORATORY CONTROL SAMPLE (LCS/LCSD)

The assessment of the LCSs is to determine both intralaboratory contamination and matrix specific precision and accuracy. Note that for Region 2, LCS is not required for aqueous Hg and Cyanide.

LCS Recoveries Criteria

A. Aqueous LCS/Solid LCS

List any LCS recoveries not within %R criteria (80 – 120%) and the samples affected.

DATE	ELEMENT	% R	ACTION	SAMPLES AFFECTED
<u>Recoveries_within_laboratory_control_limits</u>				

ACTIONS: If analyte does not meet the %R criteria, follow the actions stated below:

Table 7. LCS Actions for ICP-MS Analysis

LCS Result	Action for Samples
%R 40-69%	Qualify results that are \geq MDL as estimated low (J-) Qualify non-detects as estimated (UJ)
%R > 130%	Qualify results that are \geq MDL as estimated high (J+)
%R 70-130%	No qualification
%R < 40%	Qualify results that are \geq MDL as estimated low (J-) Qualify non-detects as unusable (R)
%R > 150%	Qualify detects as unusable (R) ; non-detects no qualification

DATA REVIEW WORKSHEETS

All criteria were met __X__
Criteria were not met
and/or see below

2. Frequency Criteria

A. Was a laboratory control sample prepared at the frequency stated in the method (1/20)?
Yes or No

If no, estimate positive results (J) for the analyte if LCS was not performed.

If more than 20 samples/batch, qualification begins at the 21st sample.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below _____

X. ICP SERIAL DILUTION ANALYSIS (Section 1)

The assessment of the ICP serial dilution analysis is to determine the precision of the laboratory through a 5x dilution.

1. Percent Difference (%D) Criteria:

 X Serial dilutions were performed for each matrix and results for the diluted samples analysis agreed within 10% of the undiluted analysis for the analyte concentrations $\leq 50\times$ MDL.

Serial dilutions were not performed for the following target analytes:

_____ Serial dilutions were performed, but analytical results did not agree within 10% difference for analyte concentrations > 50x IDL before dilution.

List the %Ds for analytes which did not meet the %D criteria (10%/100%)

Sample # JC33384-3 Matrix: Groundwater Units: ug/L

ANALYTE	IDL	50x IDL	SAMPLE RESULTS	SERIAL DILUTION	%D	ACTION
Al						
Sb						
As (total/dissolved)						
Ba						
Be						
Cd						
Ca						
Cr						
Co						
Cu						
Fe	8.9	445	36.4	57.2	57.1	No action; sample concentration < 50 x IDL
Pb						
Mg						
Mn						
Hg						
Ni						
K						
Se						
Ag						
Na						
Tl						
V						
Zn						

Note: Serial dilution within method performance criteria.

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

ACTIONS: Actions apply to all samples of the same matrix. The qualification will also be applied to the results of all samples within a given area of the site, if deemed appropriate. Qualify only samples with raw results > 50x MDL.

Flag results with an (E) for elements exhibiting %D > 10%.

Estimate (J) positive results > 50x MDL for elements that exhibited %D > 10 but < 100.

Reject (R) positive results > 50x MDL for elements which exhibited %D ≥ 100%.

SERIAL DILUTION ANALYSIS (Section 2)

2. Frequency Criteria

A. Was a serial dilution analysis prepared as required by the method? **Yes or No**

If no, estimate positive results ≥ 50x MDL (J) for the analyte which serial dilution analysis was not performed.

B. Was a field blank used for serial dilution analysis? **Yes or No**

If yes, estimate positive results ≥ 50x MDL (J) for the analyte if field blank was used for serial dilution analysis.

Table 10. Serial Dilution Actions for ICP-MS Analysis

Serial Dilution Result	Action for Samples
<i>Aqueous:</i> Sample concentration > 50x MDL and 10% < %D < 100%	Qualify affected results whose raw data are > MDL as estimated (J)
<i>Aqueous:</i> Sample concentration > 50x MDL and %D ≥ 100%	Qualify affected results whose raw data are > MDL as unusable (R)
<i>Soil/Sediment:</i> Sample concentration > 50x MDL and 15% < %D < 120%	Qualify affected results whose raw data are > MDL as estimated (J)
<i>Soil/Sediment:</i> Sample concentration > 50x MDL and %D ≥ 120%	Qualify affected results whose raw data are > MDL as unusable (R)
Interferences present	Use professional judgment

A separate worksheet page should be used for each serial dilution analysis.

DATA REVIEW WORKSHEETS

All criteria were met ___N/A___
Criteria were not met
and/or see below _____

XI. ICP-MS INTERNAL STANDARDS

Are internal standard added to the sample? Yes_or No?

Are the proper number of internal standard added to the sample? Yes or No?

Is the % Relative Intensities for all internal standards in a sample is within 60-125% of the response in the calibration blank? Yes or No?

Note: _7_ internal standards used; relative intensities within the guidance document performance criteria. _____

Action:

NOTE: Apply the action to the affected analytes for each sample that does not meet the internal standard criteria.

1. If no internal standards were analyzed with the run, the sample data should be qualified as unusable (R). Record this in the Data Review Narrative and note for CLP Project Officer (CLP PO) action.
2. If less than five of the required internal standards were analyzed with the run, or a target analyte(s) is (are) not associated to an internal standard, the sample data, or analyte data not associated to an internal standard should be qualified as unusable (R). Record this in the Data Review Narrative and note for CLP PO action.
3. If the % Relative Intensities for all internal standards in a sample is within 60-125% of the response in the calibration blank, the sample data should not be qualified.
4. If the %RI for an internal standard in a sample is not within the 60-125% limit, qualify the data for those analytes associated with the internal standard(s) outside the limit as follows:
 - a. If the sample was reanalyzed at a two-fold dilution with internal standard %RI within the limits, report the result of the diluted analysis without qualification. If the %RI of the diluted analysis was not within the 60-125% limit, report the results of the original undiluted analyses and qualify the data for all analytes that are \geq Method Detection Limit (MDL) in the sample associated with the internal standard as estimated (UJ).
 - b. If the sample was not reanalyzed at a two-fold dilution, the reviewer should use professional judgment to determine the reliability of the data. The reviewer may determine that the results are estimated (J) or unusable (R).

DATA REVIEW WORKSHEETS

Table 11. Internal Standard Actions for ICP-MS Analysis

Internal Standard Results	Action for Samples
No internal standards	Qualify all results as unusable (R)
< 5 of the required internal standards	Qualify all results as unusable (R)
Target analyte not associated with internal standard	Qualify all analyte results not associated with an internal standard as unusable (R)
% RI < 60% or > 125%, original sample reanalyzed at 2-fold dilution, and % RI of diluted sample analysis is between 60% and 125%	Do not qualify the data
% RI < 60% or > 125%, original sample reanalyzed at 2-fold dilution, and % RI of diluted sample analysis is outside the 60% to 125% limit	Qualify analytes associated with the failed internal standard that are \geq MDL as estimated (J) and qualify associated non-detects as estimated (UJ)
Original sample not reanalyzed at 2-fold dilution	Use professional judgment Qualify sample results as estimated (J) or unusable ®

DATA REVIEW WORKSHEETS

XII. DETECTION LIMITS RESULTS

The detection limit assessment is to verify that samples results are within instrument calibration range or linear range (ICP).

Instrument Detection Limits (IDL). Note IDL is not required for Cyanide.

A. IDL/MDL (or lowest quantitation limit used) results were present and found to be at levels that meet the project objectives? Yes or No

B. IDL/MDL (or lowest quantitation limit used) were not met for the following elements: _____

2. Reporting Requirements

A. Were sample results on Form I (or equivalent) reported down to the IDL/MDL or lowest quantitation limit used for all analytes? Yes or No

B. Were sample weights, volumes, and dilutions taken into account when reporting results (positive and nondetects)? Yes or No

If no, the reported results may be inaccurate. Request the laboratory resubmit the corrected data.

3. Sediment Sample Percent Solids (% solids):

A. Were the % solids for any sediment samples $< 50\%$ but $\geq 10\%$? Yes or No
If yes, estimate positive results and nondetects (J/UJ) if the % solids is 10-50%. List the affected samples: _____

B. Were the % solids for any sediment samples $< 10\%$? Yes or No
If yes, reject all results (R) if the % solid is $< 10\%$. List the affected samples: N/A _____

XI. TOTAL/DISSOLVED OR INORGANIC/TOTAL ANALYTES

A. Were any analyses performed for dissolved as well as total analytes on the same sample(s)? Yes or No

B. Were any analyses performed for inorganic as well as total analytes on the same sample(s)? Yes or No

If yes, compare the differences between dissolved (or inorganic) and total analyte concentrations. Compute each difference as a percent of the total analyte only when both of the following conditions are fulfilled:

- (1) The dissolved (or inorganic) concentration is greater than total concentration, and
- (2) greater than or equal to 5xMDL.

DATA REVIEW WORKSHEETS

All criteria were met N/A
Criteria were not met
and/or see below _____

- C. Is any dissolved (or inorganic) concentration greater than its total concentration by more than 20%? Yes or No
- D. Is any dissolved (or inorganic) concentration greater than its total concentration by more than 50%? Yes or No

ACTION:

If the percent difference is greater than 20%, flag (J) both dissolved/inorganic and total concentrations as estimated. If the difference is more than 50%, reject (R) both the values.

XII. SAMPLE QUANTITATION

The sample quantitation evaluation is to verify laboratory quantitation results.

X Sample results fall within the linear range for ICP and within the calibration range for all other parameters.

_____ If samples results were beyond the linear range/calibration range of the instrument, were dilution performed?

List the affected samples/elements/dilution:

In the space below, please show a minimum of one sample calculation per method:

ICP/ICP-MS

Computer printout

Hg/Metals by AA

Hexavalent Chromium

Cyanide

Others

For soil samples, the following equation may be necessary to convert raw data values reported in ug/L to actual sample concentrations (mg/Kg):

$$\text{Conc. in ug/L} \times \frac{\text{Volume diluted to, mL}}{\text{Weight digested, g}} \times \frac{1\text{L}}{1000\text{ mL}} \times \frac{1000\text{ g}}{1\text{ Kg}} \times \frac{1\text{ mg}}{1000\text{ mg}} = \text{concentration in wet weight mg/Kg}$$

In addition the sample results are converted to dry weight by using the percent solid calculations:

Wet weight concentration x 100 = final concentration, dry weight (mg/Kg) % solids

DATA REVIEW WORKSHEETS

OVERALL ASSESSMENT

Action:

1. Use professional judgment to determine if there is any need to qualify data which were not qualified based on the QC criteria previously discussed.
2. Write a brief Data Review Narrative to give the user an indication of the analytical limitations of the data. Note any discrepancies between the data and the Sample Delivery Group (SDG) Narrative for Contract Laboratory Program Project Officer (CLP PO) action. If sufficient information on the intended use and required quality of the data is available, the reviewer should include an assessment of the data usability within the given context.
3. If any discrepancies are found, the laboratory may be contacted by the Region's designated representative to obtain additional information for resolution. If a discrepancy remains unresolved, the reviewer may determine that qualification of the data is warranted.

Note: _____

EXECUTIVE NARRATIVE

SDG No: **JC33384** Laboratory: **Accutest, New Jersey**
Analysis: **SW846-8015C** Number of Samples: **11**
Location: **BMSMC, Building 5 Area**
Humacao, PR

SUMMARY: Eleven (11) samples were analyzed for the low molecular weight alcohols (LMWAs) list following method SW846-8015C. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: "Test Methods for Evaluating Solid Waste, Physical/Chemical Methods SW-846 (Final Update III, December 1996)," specifically for Methods 8000/8015C are utilized. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

Results are valid and can be used for decision making purposes.

Critical issues: **None**
Major: **None**
Minor: **None**

Critical findings: **None**
Major findings: **None**
Minor findings: 1. Initial, continuing, and final calibration verifications meets method specific criteria in at least one of the two columns except for the cases described the Data Review Worksheet. Final calibration verification included in data packages.

Analytes not meeting the calibration performance criteria qualified (J) or (UJ) in affected samples.

COMMENTS: Results are valid and can be used for decision making purposes.

Reviewers Name: Rafael Infante
Chemist License 1888



Signature:
Date: January 12, 2017

SAMPLE ORGANIC DATA SAMPLE SUMMARY

Sample ID: JC33384-1
Sample location: BMSMC Building 5 Area
Sampling date: 12/6/2016
Matrix: AQ - Equipment Blank

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/l	1.0	-	U	Yes
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Propyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
sec-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
Methanol	200	ug/l	1.0	-	U	Yes

Sample ID: JC33384-2
Sample location: BMSMC Building 5 Area
Sampling date: 12/6/2016
Matrix: Groundwater

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/l	1.0	-	U	Yes
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Propyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
sec-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
Methanol	200	ug/l	1.0	-	U	Yes

Sample ID: JC33384-3
Sample location: BMSMC Building 5 Area
Sampling date: 12/6/2016
Matrix: AQ - Field Blank Water

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/l	1.0	-	U	Yes
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Propyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
sec-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
Methanol	200	ug/l	1.0	-	U	Yes

Sample ID: JC33384-4
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: AQ - Equipment Blank

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/l	1.0	-	U	Yes
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Propyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
sec-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
Methanol	200	ug/l	1.0	-	U	Yes

Sample ID: JC33384-5
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: Groundwater

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/l	1.0	-	UJ	Yes
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Propyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
sec-Butyl Alcohol	100	ug/l	1.0	-	UJ	Yes
Methanol	200	ug/l	1.0	-	U	Yes

Sample ID: JC33384-6
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: Groundwater

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/l	1.0	-	U	Yes
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Propyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
sec-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
Methanol	200	ug/l	1.0	-	U	Yes

Sample ID: JC33384-7
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: Groundwater

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/l	1.0	-	UJ	Yes /
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Propyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
sec-Butyl Alcohol	100	ug/l	1.0	-	UJ	Yes /
Methanol	200	ug/l	1.0	-	U	Yes

Sample ID: JC33384-8
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: Groundwater

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/l	1.0	-	UJ	Yes /
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Propyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
sec-Butyl Alcohol	100	ug/l	1.0	-	UJ	Yes /
Methanol	200	ug/l	1.0	-	U	Yes

Sample ID: JC33384-9
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: AQ - Field Blank Water

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	200	ug/l	1.0	-	UJ	Yes /
Isobutyl Alcohol	100	ug/l	1.0	-	U	Yes
Isopropyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Propyl Alcohol	100	ug/l	1.0	-	U	Yes
n-Butyl Alcohol	100	ug/l	1.0	-	U	Yes
sec-Butyl Alcohol	100	ug/l	1.0	-	UJ	Yes /
Methanol	200	ug/l	1.0	-	J	Yes

Sample ID: JC33384-6MS
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: Groundwater

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	4910	ug/l	1.0	-	-	Yes
Isobutyl Alcohol	5490	ug/l	1.0	-	-	Yes
Isopropyl Alcohol	5850	ug/l	1.0	-	-	Yes
n-Propyl Alcohol	5390	ug/l	1.0	-	-	Yes
n-Butyl Alcohol	5890	ug/l	1.0	-	-	Yes
sec-Butyl Alcohol	6510	ug/l	1.0	-	-	Yes
Methanol	4260	ug/l	1.0	-	-	Yes

Sample ID: JC33384-6MSD
Sample location: BMSMC Building 5 Area
Sampling date: 12/7/2016
Matrix: Groundwater

METHOD: 8015C

Analyte Name	Result	Units	Dilution Factor	Lab Flag	Validation	Reportable
Ethanol	4960	ug/l	1.0	-	-	Yes
Isobutyl Alcohol	5350	ug/l	1.0	-	-	Yes
Isopropyl Alcohol	4450	ug/l	1.0	-	-	Yes
n-Propyl Alcohol	5720	ug/l	1.0	-	-	Yes
n-Butyl Alcohol	6080	ug/l	1.0	-	-	Yes
sec-Butyl Alcohol	5180	ug/l	1.0	-	-	Yes
Methanol	4550	ug/l	1.0	-	-	Yes

DATA REVIEW WORKSHEETS

Project Number: JC33384
Date: 12/06-07/2016
Shipping Date: 12/08/2016
EPA Region: 2

REVIEW OF VOLATILE ORGANIC PACKAGE

The following guidelines for evaluating volatile organics were created to delineate required validation actions. This document will assist the reviewer in using professional judgment to make more informed decision and in better serving the needs of the data users. The sample results were assessed according to USEPA data validation guidance documents in the following order of precedence: "Test Methods for Evaluating Solid Waste, Physical/Chemical Methods SW-846 (Final Update III, December 1996)," specifically for Methods 8000/8015C are utilized. The QC criteria and data validation actions listed on the data review worksheets are from the primary guidance document, unless otherwise noted.

The hardcopied (laboratory name) Accutest data package received has been reviewed and the quality control and performance data summarized. The modified data review for VOCs included:

Lab. Project/SDG No.: JC33384 Sample matrix: Groundwater
No. of Samples: 11

Trip blank No.: -
Field blank No.: JC33384-3; JC33384-9
Equipment blank No.: JC33384-1; JC33384-4
Field duplicate No.: -

<input checked="" type="checkbox"/> Data Completeness ✓	<input checked="" type="checkbox"/> Laboratory Control Spikes ✓
<input checked="" type="checkbox"/> Holding Times ✓	<input checked="" type="checkbox"/> Field Duplicates ✓
<input type="checkbox"/> N/A GC/MS Tuning	<input checked="" type="checkbox"/> Calibrations ✓
<input type="checkbox"/> N/A Internal Standard Performance	<input checked="" type="checkbox"/> Compound Identifications ✓
<input checked="" type="checkbox"/> Blanks ✓	<input checked="" type="checkbox"/> Compound Quantitation ✓
<input checked="" type="checkbox"/> Surrogate Recoveries ✓	<input checked="" type="checkbox"/> Quantitation Limits ✓
<input checked="" type="checkbox"/> Matrix Spike/Matrix Spike Duplicate ✓	

Overall Comments: Low molecular weight alcohols by SW-846_8015C.

Definition of Qualifiers:

J- Estimated results
U- Compound not detected
R- Rejected data
UJ- Estimated nondetect

Reviewer: Rafael Infante
Date: January 12, 2017

DATA REVIEW WORKSHEETS

DATA COMPLETENESS

MISSING INFORMATION

DATE LAB. CONTACTED

DATE RECEIVED

This image shows a single sheet of white paper with horizontal grey ruling lines. A dashed grey diagonal line runs from the top-left corner towards the bottom-right corner. The paper appears to be a template or a piece of stationery.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

HOLDING TIMES

The objective of this parameter is to ascertain the validity of the results based on the holding time of the sample from time of collection to the time of analysis.

Complete table for all samples and note the analysis and/or preservation not within criteria

SAMPLE ID	DATE SAMPLED	DATE ANALYZED	pH	ACTION
All samples analyzed within the recommended method holding. All samples properly preserved.				

Criteria

Aqueous samples – 14 days from sample collection for preserved samples (pH \leq 2, 4°C), no air bubbles.

Aqueous samples – 7 days from sample collection for unpreserved samples, 4°C, no air bubbles.

Soil samples- 7 days from sample collection.

Cooler temperature (Criteria: 4 ± 2 °C): 5.2°C

Actions

If the VOCs vial(s) have air bubbles, estimate positive results (J) and reject nondetects (R).

If the % solids of soil samples is 10-50%, estimate positive results (J) and nondetects (UJ).

If the % solid of soil samples is < 10%, estimate positive results (J) and reject nondetects (R).

If holding times are exceeded but < 14 days beyond criteria, estimate positive results (J) and nondetects (UJ).

If holding times are exceeded but < 28 days beyond criteria, estimate positive results (J) and reject nondetects (R).

If holding times are grossly exceeded (> 28 days beyond criteria), reject all results (R).

If samples were not iced or if the ice were melted (> 10°C), estimate positive results (J) and nondetects (UJ).

DATA REVIEW WORKSHEETS

All criteria were met N/A
Criteria were not met see below _____

GC/MS TUNING

The assessment of the tuning results is to determine if the sample instrumentation is within the standard tuning QC limits

N/A The BFB performance results were reviewed and found to be within the specified criteria.

N/A BFB tuning was performed for every 12 hours of sample analysis.

If no, use professional judgment to determine whether the associated data should be accepted, qualified or rejected.

List the samples affected: _____

If mass calibration is in error, all associated data are rejected.

DATA REVIEW WORKSHEETS

All criteria were met _____
 Criteria were not met _____
 and/or see below X

CALIBRATION VERIFICATION

Compliance requirements for satisfactory instrument calibration are established to ensure that the instrument is capable of producing and maintaining acceptable quantitative data.

Date of initial calibration: 10/10/16
 Dates of continuing calibration: 12/14/16
 Dates of final calibration verification: 12/14/16
 Instrument ID number: GCGH
 Matrix/Level: Aqueous/low

DATE	LAB FILE ID#	CRITERIA OUT RFs, %RSD, %D, r	COMPOUND	SAMPLES AFFECTED
12/14/16	CC5519-10000	-61.2/-20.3	Ethanol	JC33384-5; -7; -8; and -9
		-25.1/-25.3	2-butanol	
	CC5519-5000	-37.3/-27.6	2-butanol	

Note: Initial, continuing, and final calibration verifications meets method specific criteria in at least one of the two columns except for the cases described in this document. Final calibration verification included in data packages. Analytes not meeting the calibration performance criteria qualified (J) or (UJ) in affected samples.

Criteria

All RFs must be > 0.05 regardless of method requirements for SPCC.

All %RSD must be $\leq 15\%$ regardless of method requirements for CCC.

All %Ds must be $\leq 20\%$ regardless of method requirements for CCC.

It should be noted that Region 2 SOP HW-24 does not specify criterion for the curve correlation coefficient (r). A limit for r of ≥ 0.995 has therefore been utilized as professional judgment.

Actions

If any compound has an initial RF or a continuing RF of < 0.05 , estimate positive results (J) and reject nondetects (R), regardless of method requirements.

If any compound has a %RSD $> 15\%$, estimate positive results (J) and use professional judgment to qualify nondetects.

If any compound has a %RSD $> 90\%$, estimate positive results (J) and reject nondetects (R).

If any compound has a % D $> 20\%$, estimate positive results (J) and reject nondetects (R).

If any compound has a % D $> 20\%$, estimate positive results (J) and nondetects (UJ).

If any compound has a % D $> 90\%$, estimate positive results (J) and reject nondetects (R).

If any compound has $r < 0.995$, estimate positive results and nondetects.

A separate worksheet should be filled for each initial curve

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

V A. BLANK ANALYSIS RESULTS (Sections 1 & 2)

The assessment of the blank analysis results is to determine the existence and magnitude of contamination problems. The criteria for evaluation of blanks apply only to blanks associated with the samples, including trip, equipment, and laboratory blanks. If problems with any blanks exist, all data associated with the case must be carefully evaluated to determine whether or not there is an inherent variability in the data for the case, or if the problem is an isolated occurrence not affecting other data.

List the contamination in the blanks below. High and low levels blanks must be treated separately.

Laboratory blanks

DATE ANALYZED	LAB ID	LEVEL/MATRIX	COMPOUND	CONCENTRATION UNITS
	All_method_blank_meeth_method_specific_criteria			

Field/Equipment/Trip blank

[illegible]

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

V B. BLANK ANALYSIS RESULTS (Section 3)

Blank Actions

Action Levels (ALs) should be based upon the highest concentration of contaminant determined in any blank. Do not qualify any blank with another blank. The ALs for samples which have been diluted should be corrected for the sample dilution factor and/or % moisture, where applicable. No positive sample results should be reported unless the concentration of the compound in the samples exceeds the ALs:

ALs = 10x the amount of common contaminants (methylene chloride, acetone, 2-butanone, and toluene)
ALs = 5x for any other compounds

Specific actions are as follows:

If the concentration is < sample quantitation limit (SQL) and \leq AL, report the compound as not detected (U) at the SQL.

If the concentration is \geq SQL but \leq AL, report the compound as not detected (U) at the reported concentration.

If the concentration is > SQL and > AL, report the concentration unqualified.

Notes:

High and low level blanks must be treated separately

Compounds qualified "U" for blank contamination are still considered "hits" when qualifying for calibration criteria.

[illegible]

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

SURROGATE SPIKE RECOVERIES

Laboratory performance of individual samples is established by evaluation of surrogate spike recoveries. All samples are spiked with surrogate compounds prior to sample analysis. The accuracy of the analysis is measured by the surrogate percent recovery. Since the effects of the sample matrix are frequently outside the control of the laboratory and may present relatively unique problems, the validation of data is frequently subjective and demands analytical experience and professional judgment.

List the percent recoveries (%Rs) which do not meet the criteria for surrogate recovery.

Matrix: solid/aqueous

SAMPLE ID	SURROGATE COMPOUND				ACTION
	Hexanol	DBFM	TOL-d8	BFB	
	S1 a	S1 b			
JC33384-1	121	120			
JC33384-2	125	120			
JC33384-3	118	117			
JC33384-4	119	121			
JC33384-5	120	113			
JC33384-6	90	88			
JC33384-7	112	108			
JC33384-8	114	123			
JC33384-9	126	113			
GGH5588-BS	102	102			
GGH5588-MB1	111	112			
GGH5588-MB2	109	117			
JC33384-6MS	94	93			
JC33384-6MSD	106	104			

(a) Recovery from GC signal #2

(b) Recovery from GC signal #1

Note: All surrogate recoveries within laboratory control limits.

QC Limits* (Aqueous)

____ LL to UL ____ 56 to 145 ____ to ____ to ____ to ____

QC Limits* (Solid-Low)

____ LL to UL ____ to ____ to ____ to ____ to ____

QC Limits* (Solid-Med)

____ LL to UL ____ to ____ to ____ to ____ to ____

1,2-DCA = 1,2-Dichloromethane-d4

DBFM = Dibromofluoromethane

TOL-d8 = Toluene-d8

BFB = Bromofluorobenzene

DATA REVIEW WORKSHEETS

- * QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.
- * If QC limits are not available, use limits of 80 – 120 % for aqueous and 70 – 130 % for solid samples.

Actions:

QUALITY	%R < 10%	%R = 10% - LL	%R > UL
Positive results	J	J	J
Nondetects results	R	UJ	Accept

Surrogate action should be applied:

If one or more surrogate in the VOC fraction is out of specification, but has a recovery of > 10%.
If any one surrogate in a fraction shows < 10 % recovery.

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

VII. A MATRIX SPIKE/MATRIX SPIKE DUPLICATE (MS/MSD)

This data is generated to determine long term precision and accuracy in the analytical method for various matrices. This data alone cannot be used to evaluate the precision and accuracy of individual samples. If any % R in the MS or MSD falls outside the designated range, the reviewer should determine if there are matrix effects, i.e. LCS data are within the QC limits but MS/MSD data are outside QC limit.

1. MS/MSD Recoveries and Precision Criteria

The laboratory should use one MS and a duplicate analysis of an unspiked field sample if target analytes are expected in the sample. If target analytes are not expected, MS/MSD should be analyzed.

List the %Rs, RPD of the compounds which do not meet the criteria.

Sample ID: JC33384-6MS/-6MSD Matrix/Level: Groundwater/low

MS OR MSD	COMPOUND	% R	RPD	QC LIMITS	ACTION
<u>MS/MSD % recoveries and RPD within laboratory control limits.</u>					

Note:

- * QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.
- * If QC limits are not available, use limits of 70 – 130 %.

Actions:

QUALITY	%R < LL	%R > UL
Positive results	J	J
Nondetects results	R	Accept

DATA REVIEW WORKSHEETS

All criteria were met X
 Criteria were not met
 and/or see below

MS/MSD criteria apply only to the unspiked sample, its dilutions, and the associated MS/MSD samples:

If the % R for the affected compounds were < LL (or 70 %), qualify positive results (J) and nondetects (UJ).

If the % R for the affected compounds were > UL (or 130 %), only qualify positive results (J).

If 25 % or more of all MS/MSD %R were < LL (or 70 %) or if two or more MS/MSD %Rs were < 10%, qualify all positive results (J) and reject nondetects (R).

VII. B MATRIX SPIKE/MATRIX SPIKE DUPLICATE

MS/MSD – Unspiked Compounds

It should be noted that Region 2 SOP HW-24 does not specify a MS/MSD criteria for the unspiked compounds in the sample. A %RSD of < 50% has therefore been utilized as professional judgment.

If all target analytes were spiked in the MS/MSD, this review element is not applicable.

List the %RSD of the compounds which do not meet the criteria.

Sample ID: _____ - _____ Matrix/Level/Unit: _____ - _____

COMPOUND	SAMPLE CONC.	MS CONC.	MSD CONC.	% RSD	ACTION

Actions:

* If the % RSD > 50, qualify the positive result in the unspiked samples as estimated (J).

* If the % RSD is not calculated (NC) due to nondetected value, use professional judgment to qualify the data.

A separate worksheet should be used for each MS/MSD pair.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below

VIII. LABORATORY CONTROL SAMPLE (LCS) ANALYSIS

This data is generated to determine accuracy of the analytical method for various matrices.

1. LCS Recoveries Criteria

Where LCS spiked with the same analyte at the same concentrations as the MS/MSD? **Yes**
or No. If no make note in data review memo.

List the %R of compounds which do not meet the criteria

LCS ID	COMPOUND	% R	QC LIMIT
Recoveries within laboratory control limits.			

Note:

- * QC limits are laboratory in-house performance criteria, LL = lower limit, UL = upper limit.
- * If QC limits are not available, use limits of 70 – 130 %.

Actions:

QUALITY	%R < LL	%R > UL
Positive results	J	J
Nondetects results	R	Accept

All analytes in the associated sample results are qualified for the following criteria.

If 25 % of the LCS recoveries were < LL (or 70 %), qualify all positive results (j) and reject nondetects (R).

If two or more LCS were below 10 %, qualify all positive results as (J) and reject nondetects (R).

2. Frequency Criteria:

Where LCS analyzed at the required frequency and for each matrix? Yes or No.

If no, the data may be affected. Use professional judgment to determine the severity of the effect and qualify data accordingly. Discuss any actions below and list the samples affected.

DATA REVIEW WORKSHEETS

All criteria were met _____
 Criteria were not met _____
 and/or see below _____ N/A _____

IX. FIELD/LABORATORY DUPLICATE PRECISION

Sample IDs: _____ - _____

Matrix: _____ - _____

Field/laboratory duplicates samples may be taken and analyzed as an indication of overall precision. These analyses measure both field and lab precision; therefore, the results may have more variability than laboratory duplicates which only laboratory performance. It is also expected that soil duplicate results will have a greater variance than water matrices due to difficulties associated with collecting identical field duplicate samples.

The project QAPP should be reviewed for project-specific information.

Suggested criteria: RPD \pm 30% for aqueous samples, RPD \pm 50 % for solid samples. If both samples and duplicate are <5 SQL, the RPD criteria is doubled.

COMPOUND	SQL	SAMPLE CONC.	DUPLICATE CONC.	RPD	ACTION
No laboratory/field duplicates analyzed with this data package. MS/MSD % recoveries RPD used to assess precision. RPD within laboratory, generally acceptable and guidance document performance criteria control limits.					

Actions:

Qualify as estimated positive results (J) and nondetects (UJ) for the compound that exceeded the above criteria. For organics, only the sample and duplicate will be qualified.

If an RPD cannot be calculated because one or both of the sample results is not detected, the following actions apply:

If one sample result is not detected and the other is greater than 5x the SQL qualify (J/UJ).

If one sample value is not detected and the other is greater than 5x the SQL and the SQLs for the sample and duplicate are significantly different, use professional judgment to determine if qualification is appropriate.

If one sample value is not detected and the other is less than 5x, use professional judgment to determine if qualification is appropriate.

If both sample and duplicate results are not detected, no action is needed.

DATA REVIEW WORKSHEETS

All criteria were met N/A
Criteria were not met
and/or see below _____

X. INTERNAL STANDARD PERFORMANCE

The assessment of the internal standard (IS) parameter is used to assist the data reviewer in determining the condition of the analytical instrumentation.

List the internal standard area of samples which do not meet the criteria.

- * Area of +100% or -50% of the IS area in the associated calibration standard.
- * Retention time (RT) within 30 seconds of the IS area in the associated calibration standard.

DATE	SAMPLE ID	IS OUT	IS AREA	ACCEPTABLE RANGE	ACTION
------	-----------	--------	---------	------------------	--------

[illegible]

Actions:

1. IS actions should be applied to the compound quantitated with the out-of-control ISs

QUALITY	IS AREA < -25%	IS AREA = -25 % TO - 50%	IS AREA > + 100%
Positive results	J	J	J
Nondetected results	R	UJ	ACCEPT

2. If a IS retention time varies more than 30 seconds, the chromatographic profile for that sample must be examined to determine if any false positive or negative exists. For shifts of a large magnitude, the reviewer may consider partial or total rejection of the data for the sample fraction.

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met _____
and/or see below _____

XII. SAMPLE QUANTITATION

The sample quantitation evaluation is to verify laboratory quantitation results. In the space below, please show a minimum of one sample calculation:

JC33384-1MS

Methanol

RF = 10.64

$$[] = (88969)/(10.64)$$

$$= 8,362 \text{ ppm OK}$$

DATA REVIEW WORKSHEETS

All criteria were met X
Criteria were not met
and/or see below _____

XII. QUANTITATION LIMITS

A. Dilution performed

[illegible]

B. Percent Solids

List samples which have $\leq 50\%$ solids

[illegible]

Actions:

If the % solids of a soil sample is 10-50%, estimate positive results (J) and nondetects (UJ)

If the % solids of a soil sample is $< 10\%$, estimate positive results (J) and reject nondetects (R)