

## MicroBioTest Protocol

### Efficacy Evaluation of Copper Enhanced Hard Surfaces as a Sanitizer

Testing Facility

MicroBioTest

Division of Microbac Laboratories, Inc.

105 Carpenter Drive

Sterling, VA 20164

Prepared for

Luminore, Inc.

6060 Corte del Cedro

Carlsbad, CA 92011

June 16, 2014



Page 15 of 32

MicroBioTest Protocol: LUM.1a.06.16.14

MicroBioTest Project: 872 - 102

## OBJECTIVE:

This test is designed to substantiate effectiveness claims for a substance containing copper with sanitizing claims intended to be registered with the Environmental Protection Agency as an inanimate hard surface other than those that come in contact with food or beverages. The test is consistent with the EPA Test Method for Efficacy of Copper Alloy Surfaces as a Sanitizer.

## TESTING CONDITIONS:

A total of five test replicates per challenge microorganism will be evaluated using carriers prepared from a copper enhanced hard surface. Three lots of the test surface will be evaluated. Prepared carriers of the test surface will be inoculated with *Staphylococcus aureus* and *Enterobacter aerogenes*, held for the stipulated contact time, transferred to a neutralizing solution and mixed. Dilutions of the neutralizer will be plated, incubated, and observed for growth.

## MATERIALS:

A. Test and control surfaces supplied by the sponsor: (see last page for details).

Test and control carriers: 1" x 1" coupons, also referred to as carriers

- The identity, strength, purity, and composition, or other characteristics which will appropriately define the test, control, or reference surfaces shall be determined for each batch and shall be documented by the sponsor before its use in a study. Methods of synthesis, fabrication, or derivation of the test, control, or reference surfaces shall be documented and retained by the sponsor.
- When relevant to the conduct of the study the solubility of each test, control, or reference agent shall be determined by the sponsor before the experimental start date. The stability of the test, control, or reference agent shall be determined by the sponsor before the experimental start date or concomitantly according to written standard operating procedures, which provide for periodic analysis of each batch.

The test and control surfaces will be tested as supplied by the sponsor unless directed otherwise. All operations performed on the surfaces such as dilution or specialized storage conditions must be specified by the sponsor before initiation of testing.

The sponsor assures MicroBioTest, Division of Microbac Laboratories, Inc. (MicroBioTest) testing facility management that the test surface has been appropriately tested for identity, strength, purity, stability, and uniformity as applicable.

MicroBioTest will retain all unused test and control surfaces after completion of the test, and then only discard them with client permission in a manner that meets the approval of the safety officer.

**B. Materials supplied by MicroBioTest including but not limited to:**

1. Challenge microorganisms, required by EPA and the sponsor:
  - a. *Staphylococcus aureus*, ATCC 6538
  - b. *Enterobacter aerogenes*, ATCC 13048
2. Media and reagents:
  - a. Tryptic Soy Broth (TSB)
  - b. Neutralizer: 2X Lethen Broth
  - c. Phosphate Buffer Saline dilution blanks (PBS)
  - d. Tryptic Soy Agar (TSA)
  - e. Heat-inactivated Fetal Bovine Serum (FBS)
  - f. Triton X-100 solution (1% solution)
  - g. Sterile deionized water
  - h. 70-85% Isopropyl alcohol
3. Miscellaneous laboratory equipment and supplies including: Control coupons, 1" x 1" (substrate material containing no active)

**TEST SYSTEM IDENTIFICATION:**

All test and control tube racks will be labeled with microorganism, test agent (if applicable) and project number prior to initiation of the study and during incubation. Petri dishes will be labeled with microorganism prior to initiation of the study and microorganism and project number during incubation.



## EXPERIMENTAL DESIGN:

### A. Inocula preparation:

For *Staphylococcus aureus*: Bacteria from stock cultures will be transferred into TSB and incubated at 35-37°C for 24±2 hours. Daily transfers will be made for at least three consecutive days (but no more than 10 days). For each transfer, tubes containing 10 mL of TSB will be inoculated using two loopfuls (4-mm inside diameter) of inoculum for each tube. A 48±4 hour culture will be used for the inocula on the day of testing.

For *Enterobacter aerogenes*: Bacteria from stock cultures will be transferred into TSB and incubated at 25-30°C for 24±2 hours. Daily transfers will be made for at least three consecutive days (but no more than 10 days). For each transfer, tubes containing 10 mL of TSB will be inoculated using two loopfuls (4-mm inside diameter) of inoculum for each tube. A 48±4 hour culture will be used for the inocula on the day of testing.

For both cultures: transfers more than 15 days away from the stock cultures will not be used for the inocula for the test.

For each microorganism, each culture will be thoroughly mixed on a vortex-mixer and allowed to settle for ≥15 minutes. The upper two-thirds of each culture will be aspirated and used as the inoculum.

### B. Addition of organic load:

To each prepared inocula, a 0.25 mL aliquot of FBS plus 0.05 mL of a 1% Triton X-100 solution to 4.70 mL of bacteria suspension to yield a 5% FBS and 0.01% Triton X-100 soil load.

### C. Test and Control Carrier preparation:

The test (three lots, five replicates per lot per microorganism) and control surfaces/carriers (three replicates per microorganism) plus additional test and control surfaces as required for the remaining controls will be cleaned by submersion in 70-85% in Isopropyl alcohol, rinsed with sterile deionized water, and allowed to air dry.



After drying completely, the carriers may be steam sterilized for 15 minutes at 121°C, or sterilized in a method approved by the sponsor. The carriers will be allowed to cool and held at ambient room temperature until use. Prior to use, each carrier will be aseptically transferred into plastic Petri dishes (one dish for each carrier) matted with two pieces of filter paper using sterile forceps.

Table 1: Test and Control Carrier Description and Count

Method	Lot	Test and Primary Controls				Miscellaneous Controls				Grand Total
		Reps	Organisms	Contact Time or Runs	TOTAL	NE	Viab	Sterility	TOTAL	
Sanitizer	1	5	2	1	10	2	0	1	3	13
	2	5	2	1	10	2	0	1	3	13
	3	5	2	1	10	2	0	1	3	13
	Control	3	2	1	6	2	2	1	5	11

D. Carrier inoculation:

A 0.02 mL aliquot of the inoculum will be transferred onto each sterile carrier using a calibrated micropipettor. The inoculum will be spread to within approximately 1/8" of the edge of the carrier. The carriers will be allowed to dry with lids ajar for 30-40 minutes under ambient conditions. The exposure period (contact time) begins immediately after drying.

E. Test:

For each microorganism per lot, five inoculated and dried carriers will be held for the exposure (contact) time. The contact time will begin immediately after drying in accordance with Section D, Carrier inoculation.

At the conclusion of the contact time, each carrier will be transferred to a jar containing 20 mL of neutralizer at the appropriate staggered intervals. Each jar will be sonicated for five minutes and then rotated by hand to mix. Within one hour after sonication, serial dilutions will be prepared using PBS ( $10^{-1}$  –  $10^{-4}$ ). Duplicate 1.0 mL aliquots from each jar/dilution ( $10^0$  –  $10^{-4}$ ) will be plated using TSA pour plates.

For *Staphylococcus aureus*: Plates will be incubated for  $48 \pm 4$  hours at 35-37°C, colonies will be counted and CFU/carrier calculated.

For *Enterobacter aerogenes*: Plates will be incubated for  $48 \pm 4$  hours at 25-30°C,

colonies will be counted and CFU/carrier calculated.

F. Controls:

1. Carrier quantitation control:

For each challenge microorganism, a parallel control will be run using the control carriers (surfaces) in the same manner as the test (including the contact time) with the exception that three replicates will be evaluated rather than five. All plates will be incubated appropriately in the same manner as the test plates as applicable for each challenge microorganism.

2. Culture purity control:

Each prepared culture will be streaked for isolation using TSA. All plates will be incubated appropriately in the same manner as the test plates as applicable for each challenge microorganism. The isolated cultures will be observed for purity.

3. Organic soil sterility control:

Duplicate 1.0 mL aliquots of the prepared organic soil will be plated in TSA pour plates. The plates will be incubated for  $48 \pm 4$  hours at  $35-37^{\circ}\text{C}$  and observed for growth or no growth.

4. Inoculum confirmation counts control:

Each prepared inoculum will be serially diluted using PBS and selected dilutions will be plated in duplicate using TSA pour plates. All plates will be incubated appropriately in the same manner as the test plates as applicable for each challenge microorganism.

5. Neutralizer sterility control:

A single jar of containing the neutralizer will be incubated for  $48 \pm 4$  hours at  $35-37^{\circ}\text{C}$ . The neutralizer will be observed for growth or no growth.

6. Carrier sterility control:



An uninoculated test (per lot) and control carrier will be subcultured into independent jars containing the neutralizer and incubated for  $48 \pm 4$  hours at  $35-37^{\circ}\text{C}$ . The neutralizer will be observed for growth or no growth.

7. Carrier viability control:

For each challenge microorganism, a single inoculated control carrier will be subcultured into a jar containing the neutralizer and incubated in the same manner as the test plates as applicable for each challenge microorganism. The neutralizer jars will be observed for growth or no growth.

8. Neutralizer effectiveness control:

For each challenge microorganism, per lot of the test article, a single sterile test carrier will be neutralized in the same manner as the test (transferred into individual jars containing 20 mL of neutralizer. To each jar, a 1.0 mL aliquot of the diluted inoculum will be added to yield  $\leq 100$  CFU/mL in the neutralizer.

The jar will be mixed and a 1.0 mL aliquot will be removed and plated in duplicate.

A numbers control will be performed in the same manner with the exception that a sterile control carrier will be used.

All plates will be incubated appropriately in the same manner as the test plates as applicable for each challenge microorganism.

9. Microorganism confirmation procedures:

A randomly selected colony from the carrier quantitation control plates, and if applicable, a randomly selected colony from a test plate will be confirmed by colony morphology and Gram stain according to extant SOPs. The same procedures will be performed using the culture purity control plates and the result regarding purity will be documented as well.

A handwritten signature in black ink, consisting of several overlapping, stylized strokes.

## TEST ACCEPTANCE CRITERIA:

The test will be acceptable for evaluation of the test results if the neutralizer is effective and non-toxic. The study director may consider other causes that may affect test reliability and acceptance. There are no proposed statistical methods for this test.

- The average recovery for the Carrier Quantitation Control must be at least  $2.0 \times 10^4$  CFU/carrier.
- The CFU recovered for the neutralizer effectiveness controls should be within  $1.0 \log_{10}$  of the parallel neutralization confirmation control.
- The carrier sterility controls must exhibit no growth.
- The carrier viability controls must exhibit growth.
- The purity controls must demonstrate pure cultures.
- The organic soil sterility control must exhibit no growth.
- The neutralizer sterility control must exhibit no growth.

## PRODUCT EVALUATION CRITERIA:

According to EPA guidelines, the test agent meets effectiveness requirements, if the test results exhibit a bacterial reduction of at least 99.9% over the Carrier Quantitation Control.

## DATA PRESENTATION:

The final report will include the following information in tabular form:

- The average colony-forming units (CFU)/carrier and percent reduction for each evaluation.
- The results for all the controls.

## PERSONNEL AND TESTING FACILITIES:

A study director will be assigned before initiation of the test. Resumes for technical personnel are maintained and are available on request. This study will be conducted at MicroBioTest, 105 Carpenter Drive, Sterling, VA 20164.



## **CONFIDENTIALITY:**

All data generated at MicroBioTest are held in strictest confidence and are available only to the sponsor and the sponsor designated authorities (if applicable). In turn, no reference to MicroBioTest's promotion of the evaluated test articles may be made public by the sponsor.

## **REPORT FORMAT:**

MicroBioTest employs a standard report format for each test design. Each final report provides the following information:

- Sponsor identification and test agent identification
- Type of test and project number
- Dates of study initiation and completion
- Interpretation of results and conclusions
- Test results
- Methods and evaluation criteria
- Signed Quality Assurance and Compliance Statements (for GLP studies, if provided by the sponsor)

## **REGULATORY COMPLIANCE AND QUALITY ASSURANCE** (applicable to GLP studies only)

This study will be performed in compliance with the US Environmental Protection Agency's Good Laboratory Practices regulations, 40 CFR 160. Note: information on the identity, strength, purity, stability, uniformity, and dose solution analysis of the test agent resides with the sponsor of the study unless otherwise stated.

The Quality Assurance Unit of MicroBioTest will inspect the conduct of the study for GLP compliance. The dates of the inspections and the dates that findings are reported to the study management and study director will be included in the final report.



## RECORDS TO BE MAINTAINED:

All raw data, protocol, protocol modifications, test agent records, final report, and correspondence between MicroBioTest and the sponsor will be stored in the archives at MicroBioTest, 105 Carpenter Drive, Sterling, Virginia 20164 or in a controlled facility off site.

All changes or revisions to this approved protocol will be documented, signed by the study director, dated and maintained with this protocol. The sponsor will be notified of any change, resolution, and impact on the study as soon as practical.

The proposed experimental start and termination dates; additional information about the test agent; challenge microorganism used; media and reagent identification; and the type of neutralizers employed in the test will be addressed in a project sheet issued separately for each study. The date the study director signs the protocol will be the initiation date. All project sheets will be forwarded to the study sponsor.

A handwritten signature in black ink, appearing to be 'J. J. J.', is located in the lower right quadrant of the page.

### MISCELLANEOUS INFORMATION:

The following information is to be completed by sponsor before initiation of study:

A. Name and address: Luminore, Inc.  
6060 Corte del Cedro  
Carlsbad, CA 92011

B. Test surface information:

Test surface name	LuminOre Copper-nickel		
Lot No.	Lot 1	Lot 2	Lot 3
	092314A	092414A	092414B
- Manufacture Date	09/23/2014	09/24/2014	09/24/2014
- Expiration Date	NA	NA	NA
Active ingredient	Copper-Nickel		
Substrate	aluminum magnesium (the sponsor will provide coupons that are not treated with the active ingredient for use as the control carriers as applicable)		

**Note: All three lots will be tested (therefore supplied) at or below the Lower Certified Limit (LCL)**

C. Test conditions:

Contact time: 2 (must be ≤ 2 hours)

Exposure temperature: Ambient room temperature (20±1C)

D. Organic load – serum added to achieve 5% in the inoculum: ☒ yes ☐ no

E. Precautions/storage – MSDS or certificate of analysis provided: ☒ yes ☐ no

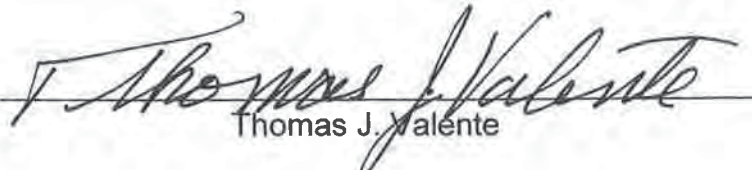
**MISCELLANEOUS INFORMATION: (continued)**

**REPORT HANDLING:** The sponsor intends to submit this information to: US EPA

**STUDY CONDUCT:** GLP


**PROTOCOL APPROVAL:**

Sponsor:  
LuminOre, Inc.  
A California Corporation

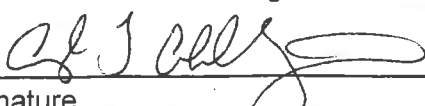
By:   
Thomas J. Valente

Date: Oct 8, 2014

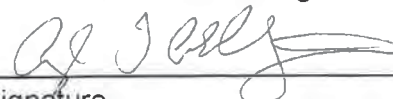
Title: President

Study Director Signature:   
Angela L. Hollingsworth

Date: 10/27/14

Date Issued: 10/27/14		Project Sheet No. 1		Page No. 1		Laboratory Project Identification No. 872-102	
<b>STUDY TITLE:</b> Efficacy Evaluation of Copper Enhanced Hard Surfaces as a Sanitizer				<b>STUDY DIRECTOR:</b> Angela L. Hollingsworth			
				 Signature		10/27/14 Date	
<b>TEST AND CONTROL ARTICLES:</b> LuminOre Copper/Nickel LuminOre Copper/Nickel LuminOre Copper/Nickel Non Treated Coupons				<b>LOT NO:</b> 092314A		<b>DATE RECEIVED:</b> 10/17/14	
				092414A		10/17/14	
				092414B		10/17/14	
				Not applicable		10/17/14	
<b>PERFORMING DEPARTMENT:</b> Applied Microbiology Laboratory				<b>STORAGE CONDITIONS:</b> Location: K4 <input checked="" type="checkbox"/> Dark <input checked="" type="checkbox"/> Ambient Room Temperature <input type="checkbox"/> Desiccator <input type="checkbox"/> Freezer <input type="checkbox"/> Refrigerator <input type="checkbox"/> Other:			
<b>PROTECTIVE PRECAUTION REQUIRED:</b> MSDS <input type="checkbox"/> Yes / <input checked="" type="checkbox"/> No (Certificate of Analysis was provided)							
<b>PHYSICAL DESCRIPTION:</b> <input checked="" type="checkbox"/> Solid <input type="checkbox"/> Liquid <input type="checkbox"/> Aerosol <input type="checkbox"/> Other:							
<b>PURPOSE:</b> See attached protocol. <b>AUTHORIZATION:</b> See client signature.							
<b>PROPOSED EXPERIMENTAL START DATE:</b> 10/28/14 <b>TERMINATION DATE:</b> 10/30/14							
<b>CONDUCT OF STUDY:</b> <input type="checkbox"/> FDA <input checked="" type="checkbox"/> EPA <input type="checkbox"/> R&D <input checked="" type="checkbox"/> GLP <input type="checkbox"/> GCP <input type="checkbox"/> Other:							
<b>SPONSOR:</b> Luminore, Inc. 6060 Corte del Cedro Carlsbad, CA 92011				<b>CONTACT PERSON:</b> Thomas J. Valente Phone: (760) 431-7705 ext: 101 E-mail: tom@luminore.com			
<b>TEST CONDITIONS:</b>							
Challenge organism(s):		<i>Staphylococcus aureus</i> , ATCC 6538 <i>Enterobacter aerogenes</i> , ATCC 13048					
Active ingredient(s):		Copper-Nickel					
Neutralizer(s):		Lethen Broth – 2X					
Contact Time(s):		2 hours					
Contact Temperature(s):		Ambient (20±1°C)		Dilution(s):		Ready to Use	
Organic Load:		<input checked="" type="checkbox"/> Yes / <input type="checkbox"/> No (Per the protocol to achieve 5% in the inoculum)					
Incubation Time(s):		48±4 hours					
Incubation Temperature(s):		35-37°C ( <i>Staphylococcus aureus</i> ), 25-30°C ( <i>Enterobacter aerogenes</i> )					
Comments:		The sponsor provided aluminum magnesium coupons that are not treated with the active ingredient for use as the control carriers (Non Treated Coupons).					

Date Issued: 10/27/14 Project Sheet No. 1 Page No. 2 Laboratory Project Identification No. 872-102

**STUDY TITLE:** Efficacy Evaluation of Copper Enhanced Hard Surfaces as a Sanitizer**STUDY DIRECTOR:** Angela L. Hollingsworth

 10/27/14  
 Signature Date
**TEST AND CONTROL ARTICLES:**

LuminOre Copper/Nickel

LuminOre Copper/Nickel

LuminOre Copper/Nickel

Non Treated Coupons

**LOT NO:**

092314A

092414A

092414B

Not applicable

**DATE RECEIVED:**

10/17/14

10/17/14

10/17/14

10/17/14

**DS NO:**

E529

E530

E531

E532

**PERFORMING DEPARTMENT:**

Applied Microbiology Laboratory

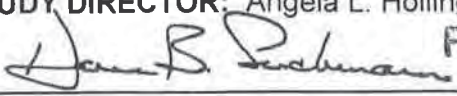
**STORAGE CONDITIONS:** Location: K4

■ Dark ■ Ambient Room Temperature

☐ Desiccator ☐ Freezer ☐ Refrigerator ☐ Other:**CONDUCT OF STUDY:** ☐ FDA ☒ EPA ☐ R&D ☒ GLP ☐ GCP ☐ Other:**SPONSOR:** Luminore, Inc.  
6060 Corte del Cedro  
Carlsbad, CA 92011**CONTACT PERSON:** Thomas J. Valente  
Phone: (760) 431-7705 ext: 101  
E-mail: tom@luminore.com**EXPLANATION:**

Protocol Amendment(s):

1. In reference to the Miscellaneous Information section of the protocol. The sponsor inadvertently did not indicate the units of measurement for the contact time. The contact time will be 2 hours. This amendment serves to clarify an omission in the protocol.

Date Issued: 02/04/15    Project Sheet No. 2    Page No: 1    Laboratory Project Identification No. 872-102																
<b>STUDY TITLE:</b> Efficacy Evaluation of Copper Enhanced Hard Surfaces as a Sanitizer	<b>STUDY DIRECTOR:</b> Angela L. Hollingsworth  Signature For ALH      Date FEB 04 2015															
<b>TEST AND CONTROL ARTICLES:</b> LuminOre Copper/Nickel LuminOre Copper/Nickel LuminOre Copper/Nickel Non Treated Coupons	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th style="width: 33%;">LOT NO:</th> <th style="width: 33%;">DATE RECEIVED:</th> <th style="width: 33%;">DS NO:</th> </tr> <tr> <td>092314A</td> <td>10/17/14</td> <td>E529</td> </tr> <tr> <td>092414A</td> <td>10/17/14</td> <td>E530</td> </tr> <tr> <td>092414B</td> <td>10/17/14</td> <td>E531</td> </tr> <tr> <td>Not applicable</td> <td>10/17/14</td> <td>E532</td> </tr> </table>	LOT NO:	DATE RECEIVED:	DS NO:	092314A	10/17/14	E529	092414A	10/17/14	E530	092414B	10/17/14	E531	Not applicable	10/17/14	E532
LOT NO:	DATE RECEIVED:	DS NO:														
092314A	10/17/14	E529														
092414A	10/17/14	E530														
092414B	10/17/14	E531														
Not applicable	10/17/14	E532														
<b>PERFORMING DEPARTMENT:</b> Applied Microbiology Laboratory	<b>STORAGE CONDITIONS:</b> Location: K4 <input checked="" type="checkbox"/> Dark <input checked="" type="checkbox"/> Ambient Room Temperature <input type="checkbox"/> Desiccator <input type="checkbox"/> Freezer <input type="checkbox"/> Refrigerator <input type="checkbox"/> Other:															
<b>CONDUCT OF STUDY:</b> <input type="checkbox"/> FDA <input checked="" type="checkbox"/> EPA <input type="checkbox"/> R&D <input checked="" type="checkbox"/> GLP <input type="checkbox"/> GCP <input type="checkbox"/> Other:																
<b>SPONSOR:</b> Luminore, Inc. 6060 Corte del Cedro Carlsbad, CA 92011	<b>CONTACT PERSON:</b> Thomas J. Valente Phone: (760) 431-7705 ext: 101 E-mail: tom@luminore.com															
<b>EXPLANATION:</b>  Protocol Amendment(s):  2. Page 11 of the protocol did not specify the percent of copper in each test surface. Per the sponsor, the percentage of copper in each test surface is as follows: <ul style="list-style-type: none"> <li>• Lot No. 092314A: 60.1% copper</li> <li>• Lot No. 092414A: 60.7% copper</li> <li>• Lot No. 092414B: 60.4% copper</li> </ul>																

## Certificate of Analysis

Material: Copper/Nickel  
Batch No.: 092314A

Parameter	Actual	Acceptable
Temperature	82°F	No less than 70°F
Humidity	36%	Less than or equal to 40%
Cross link	Pass	Pass
Mil thickness	Pass	No less than 12 mils

Passes all quality control standards for the LuminOre product.

APPROVED BY:



Date:

10-16-14

## Certificate of Analysis

Material: Copper/Nickel  
Batch No.: 092414A

Parameter	Actual	Acceptable
Temperature	81°F	No less than 70°F
Humidity	29%	Less than or equal to 40%
Cross link	Pass	Pass
Mil thickness	Pass	No less than 12 mils

Passes all quality control standards for the LuminOre product.

APPROVED BY:



Date:

10-16-14

## Certificate of Analysis

Material: Copper/Nickel  
Batch No.: 092414B

Parameter	Actual	Acceptable
Temperature	82°F	No less than 70°F
Humidity	31%	Less than or equal to 40%
Cross link	Pass	Pass
Mil thickness	Pass	No less than 12 mils

Passes all quality control standards for the LuminOre product.

APPROVED BY:



Date:

10-16-14